

# DRINK MIXER/BLENDER™


Model # DMB-790



Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685

Visit Us Online at  
[www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com)

©2009 Nostalgia Products Group LLC

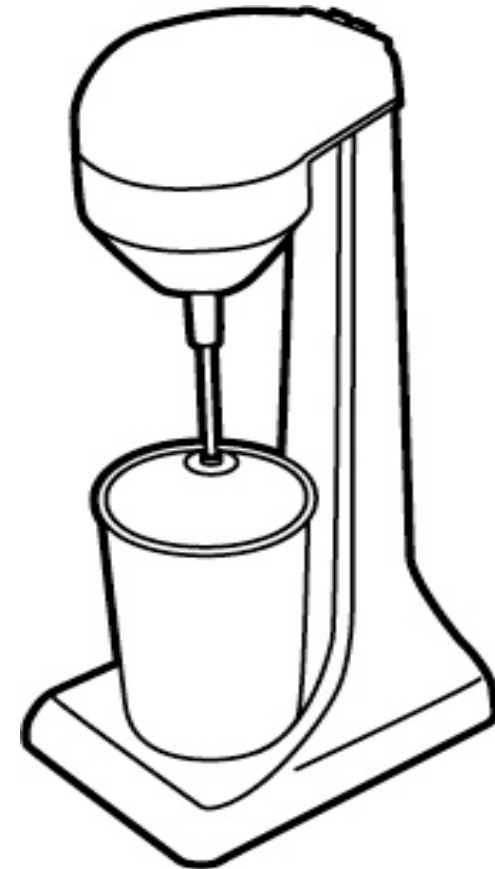

FOR HOUSEHOLD USE ONLY

**Read These  
Instructions  
Before Using  
This Unit!**

**Save These Instructions!**

## **RETURNS & WARRANTY**

---

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC  
1471 Partnership Dr.  
Green Bay, WI 54304-5685

### **Customer Service**

Phone: (920) 347-9122  
Web: [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com)

### **Customer Service Inquiry**

To submit a Customer Service inquiry, go to [www.nostalgiaelectrics.com](http://www.nostalgiaelectrics.com) and fill out the **Customer Service Inquiry** form and click the Submit button. A representative will contact you as soon as possible.

## **DRINK MIXER/BLENDER™**

Model # DMB-790

Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to Nostalgia Products Group, LLC at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

## **IMPORTANT SAFEGUARDS**

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH THE MIXING STEM while unit is running.
3. Do not place hands or fingers inside mixing cup while unit is running.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the main base unit in water or other liquids.
5. Close supervision is necessary when this or any appliance is used by or near children.
6. Unplug from outlet when not in use, before removing parts and before cleaning.
7. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair or send back to company as stated in this booklet in the warranty.
8. The appliance manufacturer does not recommend the use of any accessory attachments. This may cause injuries.
9. HOUSEHOLD USE ONLY. Do not use outdoors.
10. Do not let the cord hang over the edge of the table or counter top or touch hot surfaces.
11. Use this device only for its intended purpose.
12. Do not operate this machine with wet hands.

## IMPORTANT SAFEGUARDS (Continued)

---

13. DO NOT place on or near a hot gas or electric burner or in a heated oven.
14. Extreme caution must be used when moving this appliance.
15. DO NOT use this appliance for other than its intended use.
16. A unit that is plugged into an outlet should not be left unattended.
17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
18. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is indented to fit into a polarized outlet only one way.

### Appliance Specifications:

120 Volts  
40 Watts  
60 Hertz  
ETL Approved

**SAVE THESE INSTRUCTIONS!**

## RECIPES AND BLENDER DRINK IDEAS

---

### Shake Recipes

#### Chocolate Raspberry Shake

1 1/3 Cup Raspberries  
1 Cup Milk  
1 1/2 Cups Chocolate Fudge Ice Cream

#### Soda Fountain Shake

1 1/2 Cup Vanilla Ice Cream  
1/2 Banana (diced and slightly smashed with fork)  
1/2 Cup Milk  
4 Oz Black Cherry Soda or Root Beer

#### Butterscotch Coffee Shake

3 Cups Caramel Fudge Ice Cream  
1 Cup Whole Milk  
1 Tbs Chocolate Syrup  
1/4 Cup Strong Cold Coffee

#### Date Shake

1 Cup Pitted and finely chopped dates (Place in 1/4 Cup boiling hot water for 10 min prior to making shake)  
1 Cup Whole Milk  
1 1/2 Cups French Vanilla Ice Cream

#### Shake like Elvis

1/2 Banana (diced and slightly smashed with fork)  
1 1/2 Cups Peanut Butter Ice Cream  
1/4 Cup Honey  
2 Cups Vanilla Yogurt

### Smoothie Recipes

#### Orange Smoothie

2/3 Cup Frozen Orange Juice Concentrate  
1 Cup Whole Milk  
1 1/2 Cup Vanilla Yogurt

#### Berry Blueberry Smoothie

1/2 Banana (diced and slightly smashed with fork)  
1 1/2 Cups Fresh Organic Blueberries  
1/4 Cup Honey  
2 Cups Vanilla Yogurt

#### Tropical Fruit Smoothie

1/4 Cup Frozen strawberries (smashed with fork)  
1/2 Cup Frozen Orange Juice Concentrate  
1 Cup Banana Yogurt  
1 1/2 Cup Raspberry Sorbet

## CLEANING AFTER USE

---

1. Make sure the unit is unplugged before cleaning.
2. The motor unit has a plastic outer shell and can be easily wiped clean with non abrasive damp cloth or sponge and dried with soft towel.
3. NOTE: The mixing axle does not separate from the top motor unit. To clean the mixing axle, pour warm soapy water into the cup place the cup in the mixing position and turn on the switch for a few seconds. Fill the cup with clear warm water and repeat the process to rinse the mixing axle.

## BREAKDOWN

---

(See image, bottom of page 6.)

## IMPORTANT PRECAUTIONS

---

- A. NEVER immerse the main base unit in water.
- B. NEVER operate near water or hot temperatures.
- C. NEVER leave unattended while in use.
- D. NEVER try to force the locking mechanisms.
- E. Unplug unit from power outlet source when not in use and when cleaning.
- F. DO NOT put in dishwasher, microwave or oven.
- G. DO NOT operate this appliance with a damaged cord or plug or in the event the appliance ever malfunctions.
- H. Keep out of the reach of children.
- I. This appliance is NOT A TOY.
- J. This appliance is not intended for use by unsupervised children.
- K. Young children should be supervised to ensure that they do not play with this appliance.

## **ABOUT YOUR DRINK MIXER/BLENDER™**

---

Thank you for purchasing the DRINK MIXER/BLENDER™ MACHINE. This machine will quickly blend shakes, whipping cream, eggs, baby food, salad dressings and sauces. Use your DRINK MIXER/BLENDER™ MACHINE for making delicious coffee Mochas and Cappuccino drinks or mixing refreshing cocktail drinks and provide a fun addition to your family party or group gathering.

The Drink Mixer/Blender™ Machine mixes liquids placed into the 16 ounce stainless steel mixing cup (included). This machine is designed for kitchen or home bar use but can be used anywhere such as:

- Family Room
- Dorm Room
- Office
- Club House

The DRINK MIXER/BLENDER™ MACHINE is easy to use, and requires no assembly. Just follow the step by step instructions, in the following pages.

## **BEFORE FIRST USE**

---

It is recommended that after unpacking your Drink Mixer/Blender™ Machine, you wipe down the unit with a clean damp non abrasive sponge or cloth, to remove any post production soil or packing debris. Wash the 16 ounce Stainless Steel mixing cup in warm soapy water and towel dry.

## **USING YOUR DRINK MIXER/BLENDER™**

---

1. Place your DRINK MIXER/BLENDER™ on a flat level surface, near an electrical outlet.
2. Plug the electrical cord into the wall outlet making sure the chosen location is away from any water source.
3. Fill the Stainless Steel cup with a liquid of your choice, adding Flavored shake powder, sugar (or any other ingredients that you want to mix). NOTE: You may want to place the cup in the freezer or fill with ice for about 5 or 10 minutes (and then empty) before adding your liquid if having a cold temperature would enhance your drink.
4. Turn the switch on and raise the cup in place so that the mouth of the cup totally covers the mixing axle. By raising and lowering the cup as the axle is blending the ingredients, within minutes, you should have the desired results. (See page 5, Image A and B)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>