


Hard Disk Drive (HDD) Installation Instructions

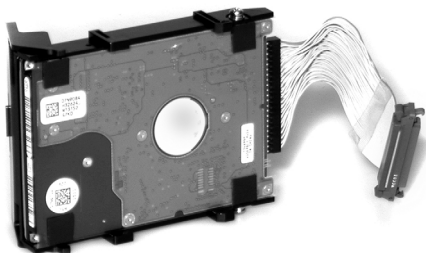

for HDD Part Number 70043502

59387901

OKI
PRINTING SOLUTIONS

Copyright Information

© 2006 by Oki Data Americas, Inc. All rights reserved.

Document Information

Hard Disk Drive (HDD) Installation Instructions

P/N 59387901

June, 2006

Disclaimer

Every effort has been made to ensure that the information in this document is complete, accurate, and up-to-date. The manufacturer assumes no responsibility for the results of errors beyond its control. The manufacturer also cannot guarantee that changes in software and equipment made by other manufacturers and referred to in this guide will not affect the applicability of the information in it. Mention of software products manufactured by other companies does not necessarily constitute endorsement by the manufacturer.

For the latest product information, printer drivers, manuals, special offers, etc., go to

www.okiprintingsolutions.com

Trademark Information

OKI is a registered trademark of Oki Electric Industry Company, Ltd.


Macintosh is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

Windows and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

Other product names and brand names are registered trademarks or trademarks of their proprietors.

Installation

1. Turn off the printer (1).
2. Unplug the power cord (2).
3. Detach the interface cable from the back of the printer (3).

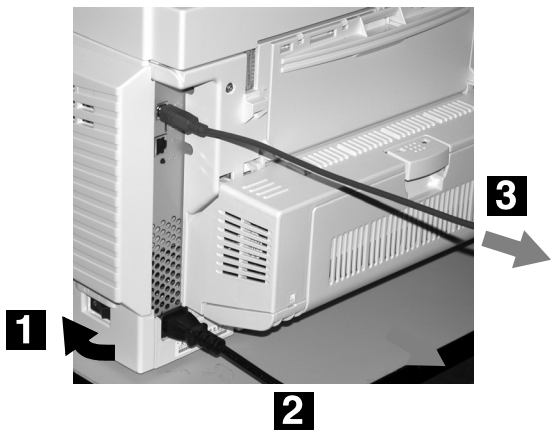

4. Open the top cover.



5. Open the front cover.




6. Loosen the thumbscrew holding the printer side cover in place.




7. Lift up on the ends. Remove the side panel from the printer.




8. Locate the slot (**1**) on the control board shield.

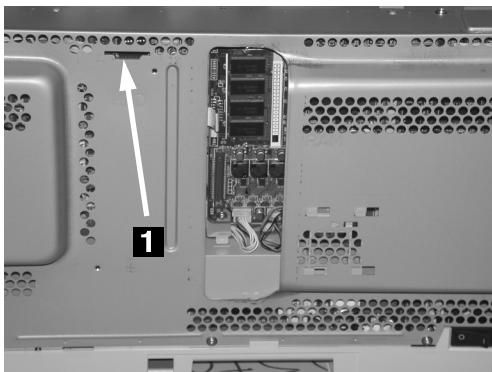

11. Tighten the thumbscrews (1) to secure the HDD.

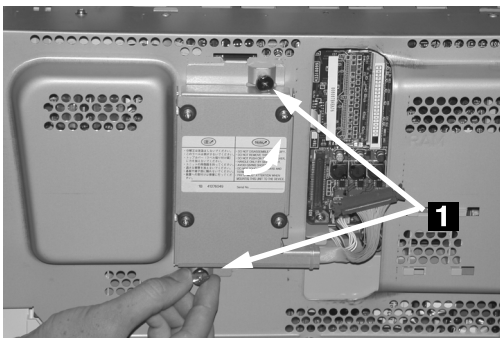

12. Insert the HDD cable firmly into the connector.

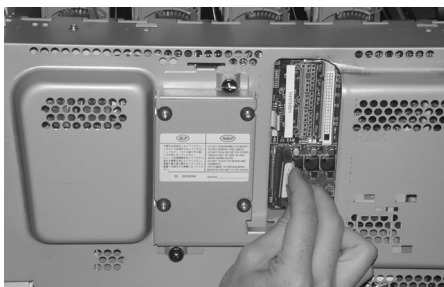


13. Replace the side panel on the printer.
Use the thumbscrew to secure the panel.



14. Close the front cover.



15. Close the top cover.

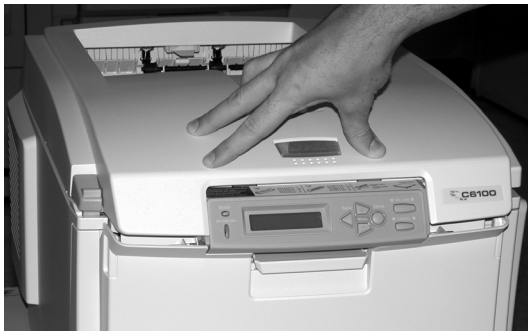

16. Attach the interface cable.


17. Plug in the power cord.

18. Turn on the printer.

Verify the Installation

Print the MenuMap

Note: The MenuMap is a list of the current menu settings.

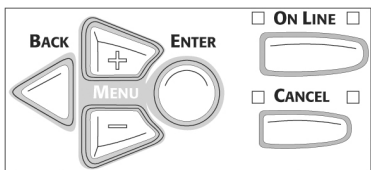

1. Press **+** one or more times until INFORMATION MENU appears on the display.
2. Press ENTER twice.
The MenuMap prints.
3. Look at the top of the printout.
"HDD: installed" should appear.
*If it doesn't (you see "HDD: **un**installed")*
Repeat the "Installation" steps until it does.

Change the Driver Setting

Windows®

Postscript Emulation Driver

1. Click Start → Settings → Printers [Printers and Faxes for XP].
2. Right click the appropriate printer icon. Click Properties.

Windows XP, 2000 and NT 4.0

- a. Click the Device Settings tab.
- b. Scroll down to Installable Options. Click Hard Disk.

Windows Me and 98

- a. Click the Device Options tab.
- b. Scroll down to Installable Options. Click Printer Hard Disk.

3. Select Installed
4. Click OK. Close the Printers (Printers and Faxes) dialog box.

PCL Driver

1. Click Start → Settings → Printers [Printers and Faxes for XP].
2. Right click the PCL printer icon. Click Properties.
3. Click the Device Option tab.
4. Click Printer Hard Disk.
5. Click OK. Close the Printers (Printers and Faxes) dialog box.

Macintosh®

Mac OS 9.1+

1. Activate Chooser from the Apple menu.
2. Select LaserWriter 8.
3. Click Printer → Setup.
4. Click Configure.
5. Select Hard Disk in the Change drop-down menu.
6. Change the setting of the next drop-down menu to Installed.
7. Click OK twice.
8. Close Chooser.

Mac OS X to X.1

No activation is required.

Mac OS X.2

1. Activate Print Center from Local Hard Drive → Applications → Utilities → Print Center.
2. Highlight the printer name. Select from the menu Printers → Show Info.
3. Choose Installable Options from the drop down menu.
4. Click the box next to Hard Disk to enable the option.
5. Click Apply Changes. Exit to the desktop.

Macintosh OS X.3+

1. Activate the Printer Setup Utility from Local Hard Drive → Applications → Utilities → Printer Setup Utility.
2. Highlight the printer name. Select from the menu Printers → Show Info.
3. Choose Installable Options from the drop down menu.
4. Click the box next to Hard Disk to enable the option.
5. Click Apply Changes. Exit to the desktop.

Oki Data Americas, Inc.
2000 Bishops Gate Blvd.
Mt. Laurel, NJ 08054-4620
Phone: (800) 654-3282
FAX: (856) 222-5320
www.okiprintingsolutions.com

59387901

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>