



User Manual for


Oliso™ Steam Iron with Auto-Lift System™

Models

TG-800 with Non-Stick Soleplate

TG-1000 with Stainless Steel Soleplate

Safer. Smarter. Simpler.

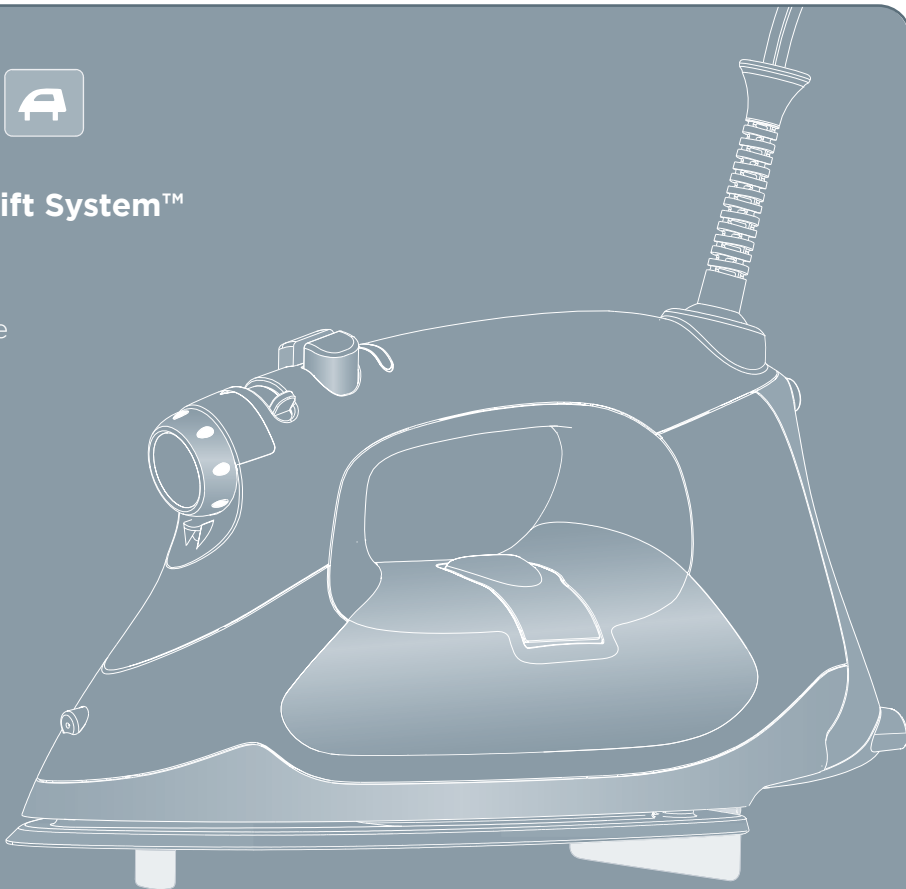

oliso™

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:
Read all instructions before using this product.

- 1) Use iron only for its intended use.
- 2) To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- 3) The iron should always be turned to "Off" before plugging or unplugging from the outlet. Never yank cord to disconnect from the outlet; instead, grasp plug and pull to disconnect.
- 4) Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- 5) Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
- 6) Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- 7) Do not allow children to use iron. Close supervision is necessary for any appliance being used near children. Do not leave iron unattended while connected or on an ironing board.
- 8) Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down - there may be hot water in the reservoir.
- 9) If the LED flashes orange (not red or green), the iron is not operating normally. Disconnect from the power supply and have the iron serviced by qualified service personnel.

SPECIAL INSTRUCTIONS

- 1) This is a 1440 watt appliance. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- 2) If an extension cord is absolutely necessary, a 12 ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS

Welcome

Thank you for purchasing the Oliso™ Iron, the only iron with the patented AUTO-LIFT SYSTEM™. You're just a few steps away from a new safer, easier way of ironing. Follow the instructions in this manual to learn about your new iron's features and care. We hope you enjoy your Oliso™ Iron.


Smart. Simple. Delightful.

oliso™

3 simple steps to start

1


FILL

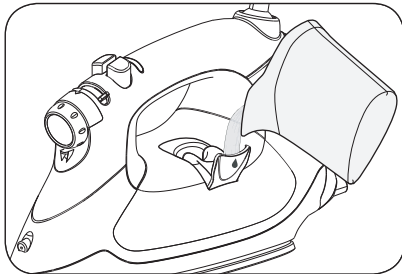

Open the Flip Funnel™ and add water to the tank with the fill cup or directly from a faucet.

2


SET UP

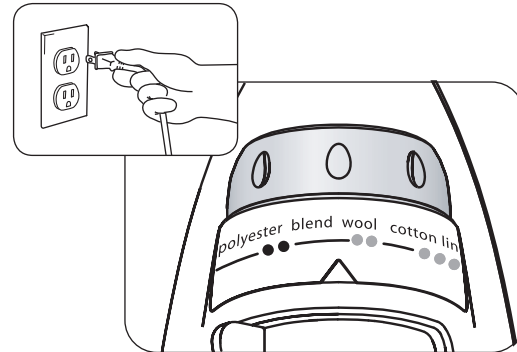

Plug in, then choose a fabric setting.

3


IRON

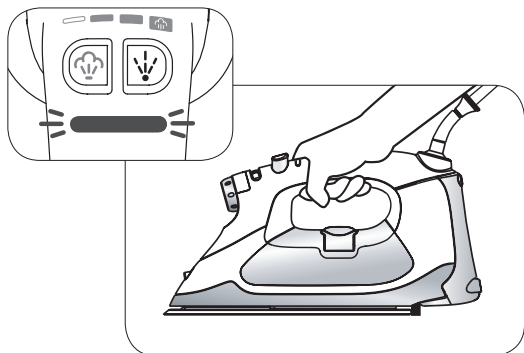


When the green light stops blinking and is constantly lit, the iron is ready for use. Touch the handle and begin.

Enjoy your Oliso™ iron


If you would like to learn more about your iron's unique features, please read on.

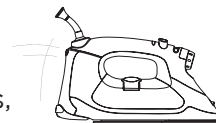


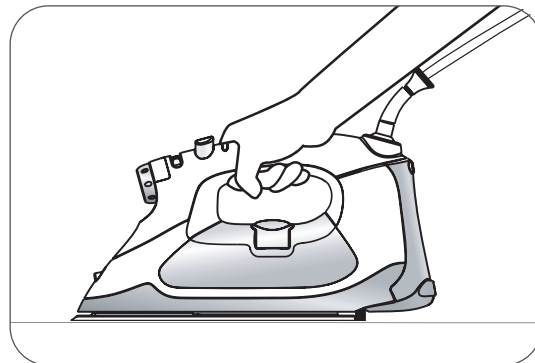
getting to know your Oliso™ iron

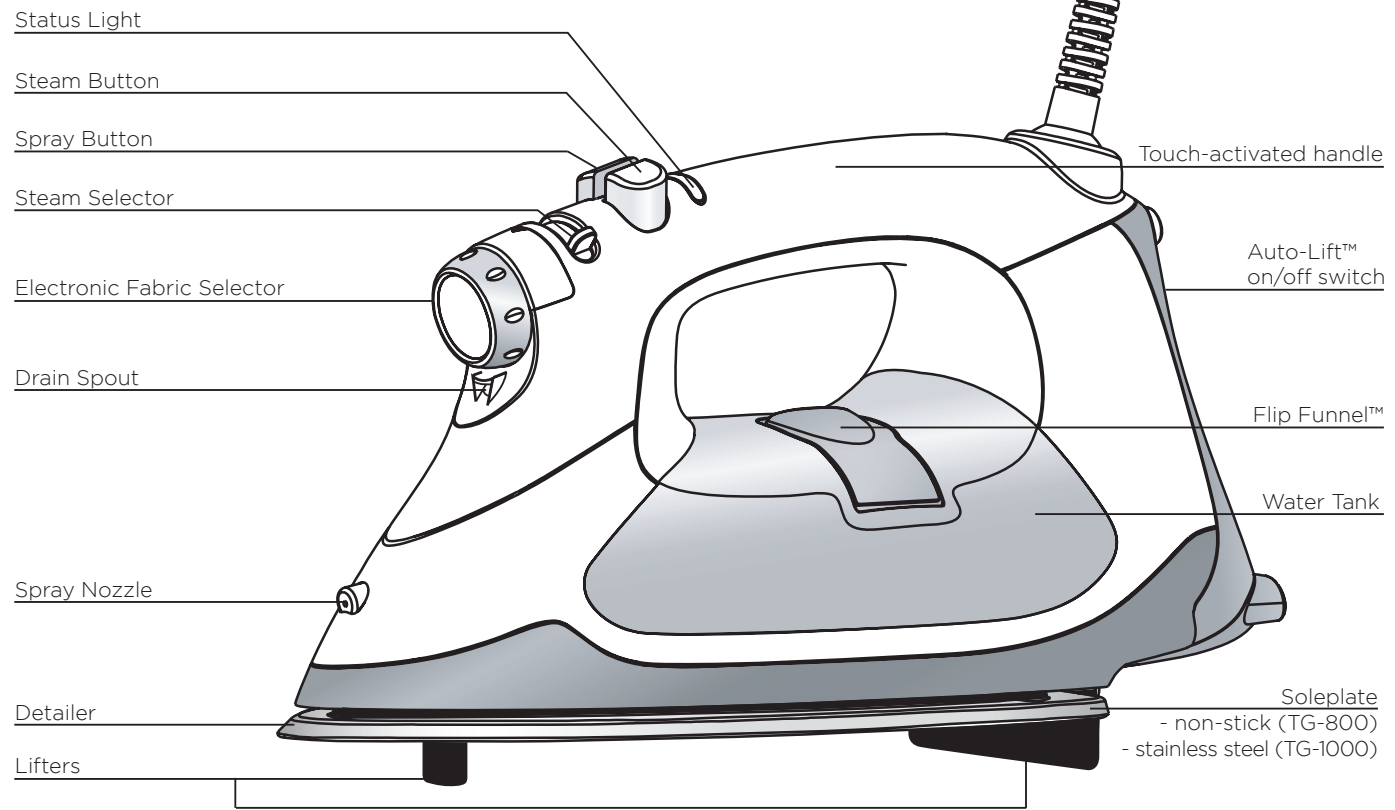


Auto-Lift System™

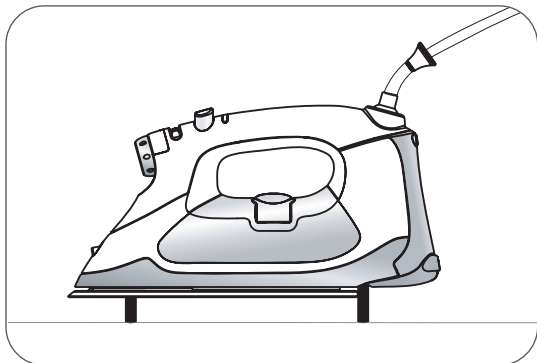



To operate, place the iron right side up on a flat surface. Plug the iron into an outlet and make sure the Auto-Lift switch is in the on () position.

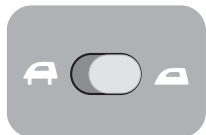


Touch the iron handle and the iron will sense your hand and lower. Let go and the iron's Lifters will automatically raise the iron above fabric.




OVERRIDING THE AUTO-LIFT SYSTEM™

If you wish to turn off the Auto-Lift system, move the switch on the back of the iron to the off () position. Your iron will now operate like a standard iron. If the iron is left in the horizontal position without being touched for more than 30 seconds, the Auto-Lift system will automatically raise the iron. This will prevent the iron from scorching or burning. Touch the iron handle, and the iron will lower. You can restore Auto-Lift by returning the switch to the on () position.


water tank

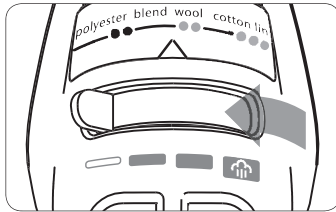


Before filling, slide the steam selector to off (⇔). Make sure the iron is unplugged.

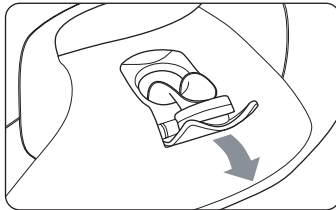

Open the Flip Funnel™.

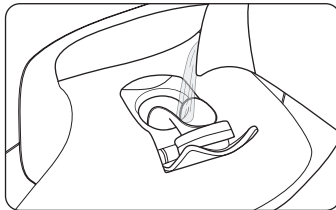

Leave the iron in a horizontal position and fill using the included fill cup. Two fill cups equal the maximum capacity of the water tank.

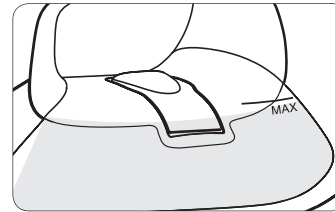



Alternatively, fill directly from a faucet holding the iron horizontally. Do not fill the tank past the MAX fill line on the side of the iron. Close the port when done.

If you need to add water during ironing, unplug the iron and repeat the above steps. After filling, make sure the iron is fully reheated before ironing.


water recommendations

This iron is designed to be used with regular tap water. If your water is over 12 grams of hardness we recommend using either inexpensive bottled spring water or mixing half tap water with half distilled water. Never use 100% distilled water as this can cause the iron to spit and leak.

 
fabric selector

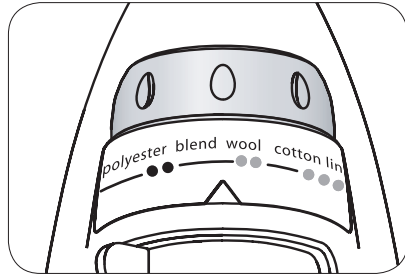

fabric selector

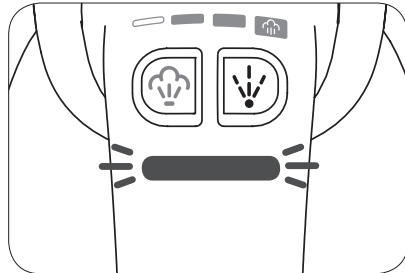

status light

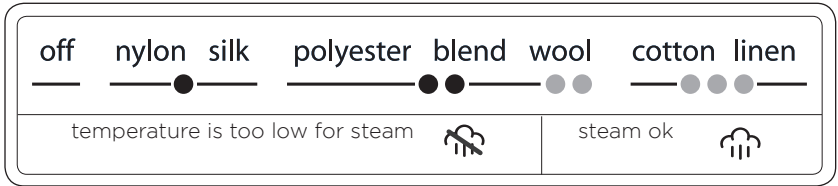


Turn the fabric selector to select a fabric setting. To use constant steam or steam burst, the temperature must be set to the wool, cotton, or linen range.

| red | flashing green | green | flashing red |
|-----|--------------------|-------------|--------------|
| off | heating or cooling | at set temp | auto off |

The Oliso iron uses a status light to display the iron's status. To ensure correct temperature, wait until the light displays steady green before ironing.



steam/spray system

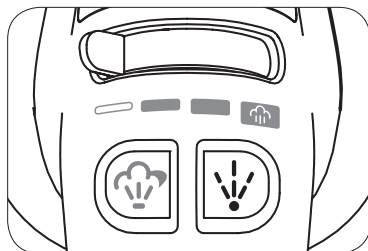

Steam Selector: Slide the steam selector to set the amount of constant steam. The iron can only produce steam when the fabric selector knob is set to the wool (**), cotton, or linen range (***). Allow the iron to heat up (steady green status light) before activating the steam control. Steam will be produced as soon as the iron is lowered.


Dry Ironing: To turn off the steam, slide the steam selector off (⇐).

Auto Anti-Drip: Your Oliso™ iron has an anti-drip feature which shuts off steam production any time the iron's Lifters are extended. This prevents unwanted steam while the iron is standing. To prevent dripping entirely, keep the steam selector in the off (⇐) position.

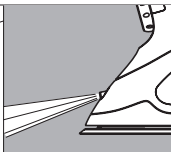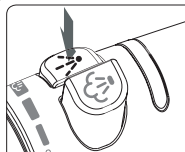


Spray

- press the spray button for a strong mist spray
- the spray will help remove wrinkles

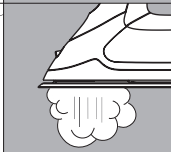

Burst of Steam

- firmly press the steam button for a strong burst of steam from the soleplate.
- the steam button can only be used when the iron is heated to the wool (**), cotton, or linen range (***).
- wait at least 3 seconds between each press of steam button.

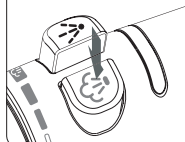










Vertical Steam

- to steam vertically press the steam button while holding the iron upright.
- this is useful for getting creases and wrinkles out of hanging clothes or curtains.
- wait at least 3 seconds between each press of the steam button.


auto shut-off system

If the Oliso™ iron is not being used while it is plugged in, the status light will flash red and the iron will turn itself off. The auto shut-off timing depends on whether the Auto-Lift System™ is turned on or off.

 
Touch the handle of the iron to restart it.

| Auto-Lift on  | | Auto-Lift off  | |
|--|-------------------------|---|-------------------------|
| iron position | auto shut-off timing | iron position | auto shut-off timing |
|  | 8 minutes unused |  30 seconds left untouched, lifters will raise iron, and iron will cool  | |
|  | 8 minutes vertical |  | 8 minutes vertical |
|  | 30 seconds knocked over |  | 30 seconds knocked over |

after ironing

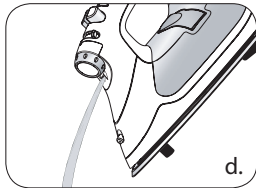

d.

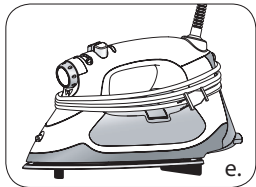

e.

- a.** Turn the fabric selector to off. Slide the steam selector to off (□).
- b.** Unplug the appliance (Do not hold iron while unplugging or the Lifters will not stay extended. Iron should always be stored with Lifters extended to prevent leaking).
- c.** Place iron on the Lifters and allow to cool.
- d.** Important: Empty water from the water tank after use. Tilt the iron forward to drain from the spout at the front of the iron. To drain faster, open the Flip Funnel™.
- e.** For easy storage, the power cord can be wound loosely around the iron once it has cooled.

maintenance

The soleplate should be cleaned if starch or other residue build up. When the iron is cool, wipe the soleplate with a soft, damp cloth. Do not use abrasive cleaners or scouring pads as this will damage the iron's soleplate.

Mineral deposits from tap water can occur in the soleplate vents. To clean, fill the water tank and heat the iron to the linen fabric setting. Once the iron is fully heated, unplug the iron and hold over a sink. Press the steam button repeatedly until water begins to drip out of the soleplate. Be careful, as this creates large amounts of steam.

To ensure optimal steam production, the steam valve should be regularly cleared of accumulated debris and minerals. This is done by moving the steam selector back and forth from the off (□) to the max (☰) steam settings several times.

trouble shooting guide

| PROBLEM | THINGS TO CHECK | SOLUTION |
|---|---|--|
| iron does not heat | fabric selector is set to off | Turn the fabric selector knob to a fabric setting. |
| | iron not plugged in correctly | Check to make sure the plug is fully plugged into the socket. |
| | auto shut-off system is activated | touch the handle. |
| Lifters do not come out | Auto-Lift switch set to off | Set the switch on the back of the iron to the on (☑) position. |
| | iron not plugged in correctly | Check to make sure the plug is fully plugged into the socket. |
| | handle activated | Move your hand away from the iron, and the Auto-Lift System will raise the sole-plate. |
| iron does not steam | iron is not hot enough | The fabric selector must be set to the wool, cotton or linen settings to produce constant steam. |
| | steam selector set to off | Steam selector must be turned to a setting. |
| | steam valve is clogged | Move the steam selector from off (⇐) to the max (☑) settings a few times to unclog. |
| iron leaks | Auto-Lift is off and iron is horizontal | When the Auto-Lift switch is set to off (☑), always store the iron in the vertical position. We recommend turning on the Auto-Lift system to store the iron. |
| | iron is not hot enough | Make sure the fabric selector knob is set to the cotton or linen range to ensure proper steam production. |
| | steam burst button is overused | Allow 3 seconds between uses of the steam burst function. |
| iron is emitting a brown or white substance | water hardness may be too high | Switch to either spring water or half tap/half distilled water mixture. See the "water tank" page for more information. |

One (1) Year Limited Warranty

Oliso, Inc. warrants that for a period of one year from the date of the original purchase, this product will be free from defects in material and workmanship, when utilized for normal household use. Oliso, Inc. will repair or replace this product or any component of the product found to be defective during the warranty period without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Oliso, Inc. dealers or retail stores selling Oliso, Inc. products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

The liability of Oliso, Inc. is limited solely to the cost of repair or replacement of the product at its option. This warranty does not cover normal wear of parts and does not apply to any product that has been tampered with or used for commercial purposes. This warranty does not cover damage caused by misuse, abuse, use on improper voltage or current, use contrary to the operating instructions, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by Oliso, Inc. Further, the warranty does not cover Acts of God such as fire, flood, hurricanes, and tornados.

This warranty is extended to the original purchaser of the product and excludes all other legal and/or conventional warranties. The responsibility of Oliso, Inc. is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event shall Oliso, Inc. be liable for any incidental or consequential damages caused by breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by law, any implied warranty or condition of merchantability or fitness for a particular purchase is limited in duration to the duration of the above warranty. Oliso, Inc. disclaims all other warranties, conditions, or representations, express, implied, statutory or otherwise. In no event shall Oliso, Inc. be liable for any indirect, special, incidental or consequential losses or damages (including but not limited to interruption of business or loss of business or profit) resulting from the use of or inability to use the product, any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

If you have any question regarding this warranty or would like to obtain warranty service, please email Oliso, Inc. at customerservice@oliso.com, and a service center address will be provided to you.

If you have further questions, you may call 1-800-899-5157.



For product questions:
Oliso Customer Service
customerservice@oliso.com
www.oliso.com
1.800.899.5157

© 2005 Oliso, Inc. All rights reserved. Touch&Glide™, Auto-Lift System™, Auto-Lift™, Flow Glide™, Flip Funnel™, and Smart Touch™ are trademarks of Oliso Inc. Printed in China

U.S. Patent No. #6,453,587 B1, #6,925,738 B2
Patent Pending

Thanks for shopping Oliso!

Visit www.oliso.com/registration.html to register your iron
or
www.oliso.com to buy a 5-year warranty



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>