

## QUICK START GUIDE

Digital Audio Player  
MR-F20 Series

OLYMPUS



m:robe

Thank you for purchasing the Olympus Digital Audio Player m:robe MR-F20 Series. This QUICK START GUIDE contains instructions for setup prior to use. You can start using this product immediately after reading this guide. For more details on operations and settings, refer to the supplied "USER'S MANUAL." For inquiries, contact an authorized Olympus service center.

## User registration

To stay informed of important updates and news regarding your OLYMPUS product, be sure to register your purchase online. Click [MR-F20 Manager] after inserting the supplied CD-ROM into your PC, then click [OK] on the registration screen to register your purchase.

## Checking the contents

### • m:robe



### • USB cable



### • Earphones



### • Line-in cable



- Neck strap
- CD-ROM
- USER'S MANUAL
- QUICK START GUIDE (this guide)
- Warranty card

## Trademarks

 
- m:robe is a trademark of OLYMPUS CORPORATION.
- Windows is a registered trademark of Microsoft Corporation.

## Transferring music/photos to your m:robe

### Connecting to your PC/Charging battery (using the USB cable)

Connect your PC and your m:robe.

- 1 Connect the USB cable to your PC and your m:robe. Your PC recognize your m:robe as a removable disk, and charging starts.

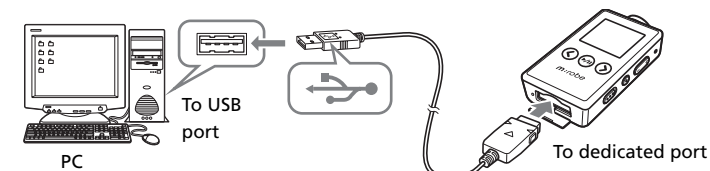

- 2 Transfer files from your PC to your m:robe. Drag and drop the desired file to m:robe on the screen display of your PC.

The following screen appears after charging completes.




### Tip

 The battery is fully charged after approximately 3 hours.

### Disconnecting your m:robe from your PC


#### For Windows Me/2000/XP users:

- 1 Click [Remove the hardware] icon on the system tray.
- 2 Click the displayed message.
- 3 [The USB storage device can now be safely removed from the system, remove the USB cable from computer] appears. Click [OK].

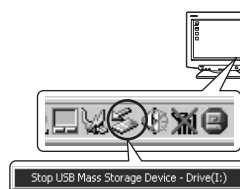

#### For Windows 98SE users:

 - 1 Double-click [My Computer] icon, then right-click [Removable Disk] to open a pop-up menu.
- 2 Click [Eject] on the menu.

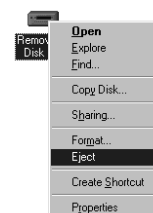

#### For Macintosh users:

Drag and drop [NO\_NAME] icon to [trash box]. The icon to indicate the connection of your PC and m:robe disappears, and your m:robe is disconnected from your PC.



 
Disconnect your m:robe from your PC after the following message is displayed.



## Basic Operations


### Connecting the earphones

Connect the supplied earphones to your m:robe.

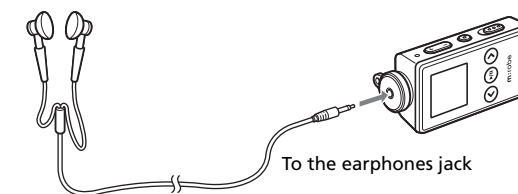

### Turning your m:robe on

 Press and hold the ►/|| button. The power is turned on.

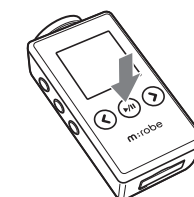


### To turn off the power

Press and hold the ►/|| button.

### Mode selection

 There are 5 modes, and available functions and setting items differ depending on the selected mode.

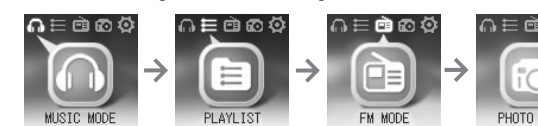- 1 Press and hold the M/▲ button. The mode select screen appears.
- 2 Press the </> button to select the desired mode. The mode changes in the following order.  

- 3 Press the OK/EQ button. The desired mode screen appears.

- MUSIC MODE: You can play back music files.
- PLAYLIST: You can play back the registered music files.
- FM MODE: You can receive radio program.
- PHOTO MODE: You can view image files.
- SETTINGS: You can set your m:robe.


### Setting the display language

You can set a desired display language.

- 1 Press and hold the M/▲ button. The mode select screen appears.
- 2 Press the </> button to select "SETTINGS" , then press the OK/EQ button.
- 3 Press the </> button to select "Settings," then press the OK/EQ button.
- 4 Press the </> button to select "Language," then press the OK/EQ button.
- 5 Press the </> button to select the desired language (한국어 / ENGLISH / 日本語 / 简体中文 / 繁體中文), then press the OK/EQ button.

 


### Setting the date and time

- 1 Press and hold the M/▲ button. The mode select screen appears.
- 2 Press the </> button to select "SETTINGS" , then press the OK/EQ button.
- 3 Press the </> button to select "Watch," then press the OK/EQ button.
- 4 Press the </> button to select "Watch," then press the OK/EQ button.
- 5 Press the </> button to select "Setting," then press the OK/EQ button.
- 6 Press the OK/EQ button to select the setting item (year/month/day/hour/minute), then press the </> button to adjust.


### To display the watch

Select "On/Off" → "On" in step 5, then press the OK/EQ button.

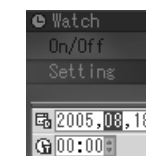

## Listening to music
 
### Playing back music file

- 1 Press and hold the M/↑ button.  
The mode select screen appears.
- 2 Press the </> button to select "MUSIC MODE ,
 then press the OK/EQ button.  
The playback screen appears.- 3 Press the ▶/|| button.  
Playback starts.



#### To control volume

Press the VOLUME +/- button.

#### To search the desired music

 
Press the </> button.

#### To pause/resume playback

Press the ▶/|| button.

### Searching for a file (Navigation search)

- 1 Press the ↵/□ button while the playback screen is displayed.  
The Navigation search screen appears.
- 2 Press the </> button to select the desired folder, then press the OK/EQ button.  
You can go to the next sublevel of the folder hierarchy.
- 3 Press the </> button to select the desired file, then press the ▶/|| button.  
Playback starts.

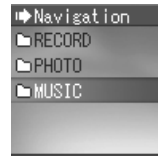

#### To go back to the previous folder

Press the ↵/□ button.


#### To finish Navigation search


Press and hold the ↵/□ button.

 
#### Tips

- After selecting the desired music file in Navigation search, press and hold the OK/EQ button to register the file to the playlist. Press and hold the OK/EQ button to cancel.
- You can play back the created playlist in Navigation search or the PLAYLIST mode.

## Playing back the playlist


To register to the playlist, refer to "Registering to the playlist" ( page 34) in the USER'S MANUAL.


- 1 Press and hold the M/↑ button.  
The mode select screen appears.
- 2 Press the </> button to select "PLAYLIST ,
 then press the OK/EQ button.  
The playback screen appears.- 3 Press the ↵/□ button.  
The playlist appears.
- 4 Press the </> button to select the desired music file, then press the ▶/|| button.  
Playback starts.

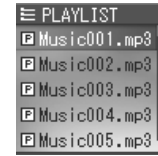

## Recording music/voice

### Recording voice

 - 1 Press and hold the M/↑ button.  
The mode select screen appears.
- 2 Press the </> button to select "MUSIC MODE ,
 then press the OK/EQ button.- 3 Press the M/↑ button to select "Record," then press the OK/EQ button.
- 4 Press the </> button to select "Source," then press the OK/EQ button.
- 5 Press the </> button to select "MIC In," then press the OK/EQ button.
- 6 Press and hold the REC/A·B button in playback stop mode.  
Recording starts.

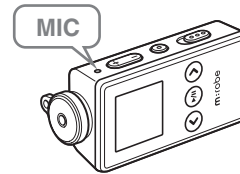

#### To pause/resume recording

Press the ▶/|| button.

#### To stop recording

 
Press the REC/A·B button.

 
#### To listen to recorded voice files

While the playback screen is displayed, press the ↵/□ button to display the Navigation search screen, select "RECORD" → "VOICE" → the desired voice file, then press the ▶/|| button.

## Recording over Line-in connection

- 1 Connect the line-in cable to your m:robe and the external audio device.

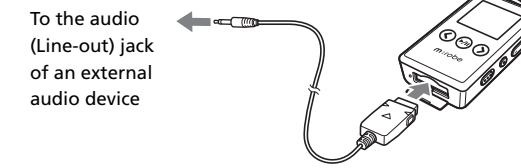

- 2 Press and hold the M/↑ button.  
The mode select screen appears.
- 3 Press the </> button to select "MUSIC MODE ,
 then press the OK/EQ button.- 4 Press the M/↑ button to select "Record," then press the OK/EQ button.
- 5 Press the </> button to select "Source," then press the OK/EQ button.
- 6 Press the </> button to select "Line In," then press the OK/EQ button.
- 7 In playback stop mode, play the external audio device, then press and hold the REC/A·B button.  
Recording starts.

#### To pause/resume recording

Press the ▶/|| button.

#### To stop recording

 
Press the REC/A·B button.

#### To listen to recorded music files

While the playback screen is displayed, press the ↵/□ button to display the Navigation search screen, select "RECORD" → "LINE-IN" → the desired music file, then press the ▶/|| button.

## Listening to FM radio

Be sure to connect the supplied earphones to your m:robe. The earphones cord works as an antenna.

- 1 Press and hold the M/↑ button.  
The mode select screen appears.
- 2 Press the </> button to select "FM MODE ,
 then press the OK/EQ button.  
The FM receiving screen appears.



#### To control volume

Press the VOLUME +/- button.

#### To search the desired frequency

Press and hold the </> button.

## Viewing photos

- 1 Press and hold the M/↑ button.  
The mode select screen appears.
- 2 Press the </> button to select "PHOTO MODE ,
 then press the OK/EQ button.  
The selecting photo screen appears.- 3 Press the </> button to select the desired photo file, then press the OK/EQ button.



#### To view the previous/next photo file

Press the </> button.

#### To finish displaying photos

Press the ↵/□ button.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>