

OMEGA PRODUCTS, INC

IMPORTANT SAFEGAURDS

- 1. When using electrical appliances, basic safety precautions should always be followed including the following.
 - Read all instructions.
- 2. To protect against risk of electrical shock, do not put the main body (motor) in water or any other liquid.
- 3. Close supervision is necessary when any appliance is used by or near children.
- 4. Unplug from outlet when not in use, before assembling or taking of parts and before cleaning.
- 5. Avoid contact moving parts.
- 6. Do not operate any appliance with a damaged cord or plug of after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- 8. Do not let cord hang over edge of table or counter.
- 9. Always make sure juicer locking clip is locked while juicer is in operation.
- 10. Be sure to turn switch to off position after each use of your juicer. Make sure the motor stops completely before disassembling.
- 11. Do not put your fingers or other objects into the juicer while it is in operation. If food becomes lodged in opening, use food plunger or another piece of fruit or vegetable to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
- 12. Do not use outdoors.
- 13. Do not place on or near a hot gas or electric burner or in a heated oven.
- 14. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

Omega Vert juicer USERS

The **Omega Vert Juicer** is a completely different mechanism where fresh juice comes from squeezing rather than grinding. **Omega Vert Juicer** is a newly developed patent product which is capable of making soy milk, vegetable extracting, fresh squeezed fruit juice, etc.


LSJS (Low Speed Juicing System) squeezes instead of grinding which allows the juice to maintain it's pure color, natural taste, nutrients and vitamins.

For better use and maintenance of the product please follow the instructions carefully.


Please refer to the user's guide when you are having technical difficulties or unsure of the usage of this product. **Omega Products, Inc** is not liable for any damages or injuries that may occur due to the lack of understanding of the user's guide.

Omega Vert juicer TABLE OF CONTENTS


Introduction	01
Attachment Listing	02
Assembly Instruction	03
How to use Vert juicer	05
Warning while operating	07
How to disassemble and clean	08
Before requesting for repair service	09
Product Specification	10

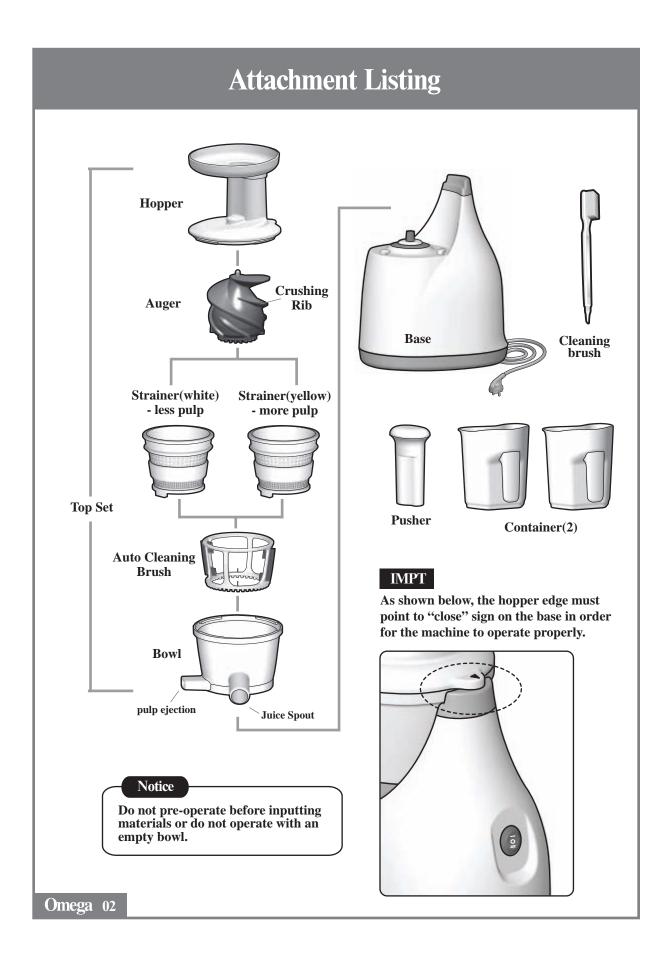

Assembly instruction

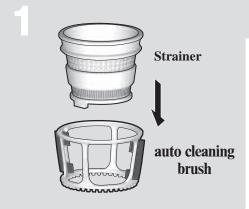


Place the strainer into the auto cleaning brush

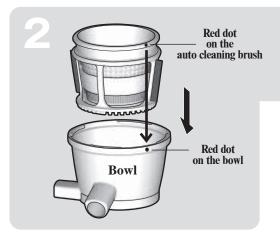


Place the strainer + auto cleaning brush into the bowl

make sure the red dot on the strainer and the red dot on the bowl is aligned

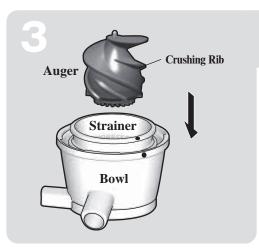


Push in the Auger into the strainer

Assembly instruction

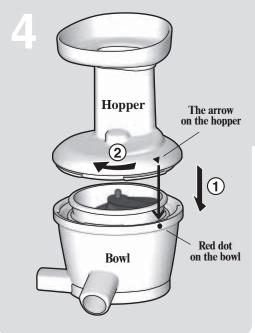

Assemble the hopper onto the bowl.

- ①Make sure the arrow on the hopper and the red dot on the bowl is aligned.
- ②Make sure the arrow on the hopper is pointing to close sign on the base.

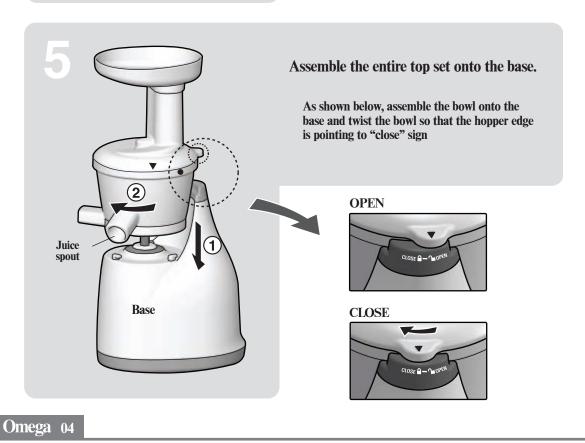

Assembly instruction




Must connect the power cord.


Place containers under both ejections. (Juice & pulp ejection)

Underneath the bowl, there is a yellow rubber gasket which allows all the juice to only discharge from the fresh juice spout.

The rubber gasket is removable, simply grab onto one side of the rubber pad and pull out.

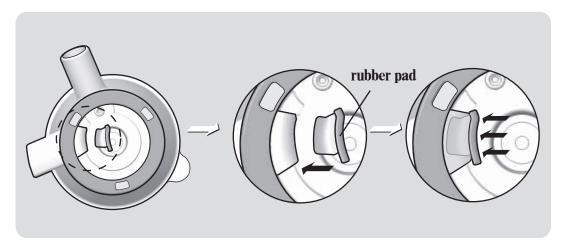


How to use Omega vert juicer

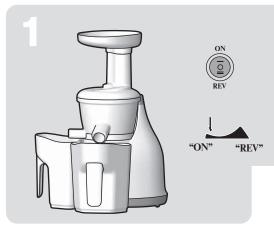

The machine has three(3) settings.


- "On" starts motor, Start making juice.
- "Rev" is reverse. Only use when something is stuck and you need to unclog.
- "Off" is at center position. This allow the machine to turn off.

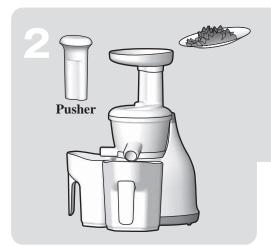

Please rinse everything thoroughly before putting into the machine.

After rinsing, put material into the machine using the pusher.

Please remove any hard seeds before using.

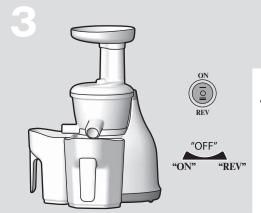

/ Warning -

Any unused juice should be refrigerated.

Do not operate with wet hands.

Do not pre-operate before inputting materials or do not operate with an empty bowl.

Warning while operating



Do not use longer than 30minutes at a time.

Violating the warning may cause serious damage to the product.



Do not use anything as a pusher (fork, chopsticks, spoons, etc) other than the pusher itself.

Violating the warning may cause serious damage to the product.



Remove any hard seeds.

Violating the warning may cause serious damage to the product especially the screw.



Do not operate with wet hands.

 
Violating the warning may cause serious injuries or electrocution.



Do not place the attachment parts in the dishwasher

Violating the warning may cause serious damage to the product.

When the machine is stuck and not operable, Please...




Turn off the machine and put it reverse for few seconds then try operating again.


When reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassemble, please try turning on the machine.

How to disassemble and clean

- Turn machine "Off".
- Twist the hopper to unlock by grabbing the two ejections.

 Make sure the arrow is aligned with the open sign before pulling off the bowl.

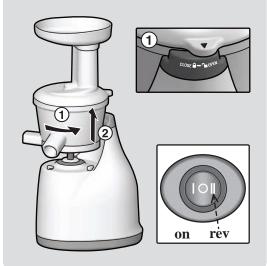

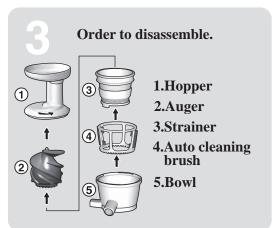


Use the brush to clean thoroughly after operating.



Do not use metal sponge to clean, it will damage the machine.

Do not use dishwasher to clean.

Do not rinse the base with direct water, use dry towel or wet towel to clean.

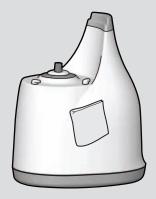

Please dry the attachments after cleaning.

Before requesting for repair service

Please check when

Machine does not operate.

- a. Check if the power cord has been plugged in correctly.
- b. Check if the assembly has been done correctly.
- c. Call customer service.

The juice does not disch -arge suffciently or there is juice discharging from the pulp ejector.

- a. Check if the rubber pad has been installed correctly.
- b. Check if the fruits, vegetables, etc is fresh material.

Machine is stopped.

- a. Check if there are too much materials put in at once.
- b. Check if the hard seeds are removed.
- Turn off the machine and try the reverse button for 2-3 seconds then try operating again.


Making "squeaking" noise when making juice.

This sound is perfectly normal when making juice. It is the sound of juice being squeezed by the squeezing screw.

The machine shakes.

This shaking is perfectly normal. It is the sign of the motor is working properly.

Product Specification

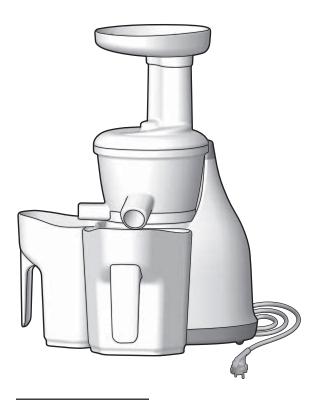


Specification

Product Name		Omega Vert Juicer	
Model Name		odel Name VRT330	
Voltage		120 V	
Frequency		requency 60Hz	
Power Consumption		150w	
RPM		† 70 rpm	
Electrical cord length		4.592 ft +	
Motor		Single –Phase induction	
Weight		11 lbs	
Dimensions	Width	7.08 in	
	Length	9.84 in	
	Height	10.74 in	
Standard usage time		Less than 30 minutes continuously	





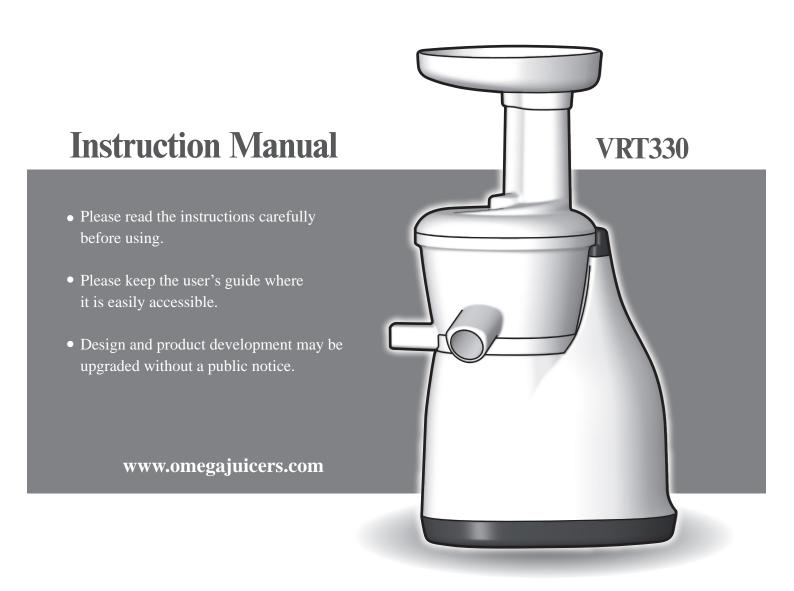

OMEGA PRODUCTS, INC



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com