



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for UNIVERSAL REMOTE CONTROL URC-1047. You'll find the answers to all your questions on the UNIVERSAL REMOTE CONTROL URC-1047 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual UNIVERSAL REMOTE CONTROL URC-1047**  
**User guide UNIVERSAL REMOTE CONTROL URC-1047**  
**Operating instructions UNIVERSAL REMOTE CONTROL URC-1047**  
**Instructions for use UNIVERSAL REMOTE CONTROL URC-1047**  
**Instruction manual UNIVERSAL REMOTE CONTROL URC-1047**



**URC-1047**  
Universal Remote Control  
(Control Remoto Universal)



**User's Guide**  
(Guía Del Usuario)



[Your user manual](#)

[UNIVERSAL REMOTE CONTROL URC-1047](#)

**Manual abstract:**

5 FEATURES AND FUNCTIONS Key Charts (continued) Use VOL+ (or VOL-) to raise (or lower) the audio volume. Use FAV to cycle through your favorite channels stored in your cable converter. Use CH+ (or CH-) to select the next higher (or lower) channel. For DVD players, use these keys to skip forward (or reverse) through chapters. For amplifiers/receivers, use these keys to select the next higher (or lower) preset station. A, B, and C are reserved for future services. Use the keypad (1~9, and 0) to directly select channels (e.g., 09). For amplifiers/receivers, use the keypad to select inputs 1 through 10. Press LAST once to recall the last channel. For PVRs, use LAST to select live or recorded video. Use MUSIC to access digital music channels. In all modes except CBL, use these keys to control a VCR, DVD player, or PVR. To record in the VCR mode, press REC twice. In the CBL mode, use these keys (except REC) for iCONTROL (i.e., Video On Demand or VOD). Use the orange (On Demand) key to access iCONTROL (i.e., Video On Demand) options. Use BYPASS to view other video sources (A or B) instead of cable. Use TV/VCR to view TV or video programs. For amplifiers/receivers, use this key for input or output. 6 INSTALLING BATTERIES 1. 2. On the back of the remote control, push the tab and lift off the battery cover. Locate the two (2) enclosed AA batteries. Match the + and - marks with those in the battery case, then insert them. Align the cover's keys with the case's holes and press the cover back into place.

The tab should click when the cover is locked. Test the unit by pressing POWER and any mode key (e.g., TV). If the batteries are inserted correctly, the selected mode key will blink once. 3. 4. NOTE: When batteries need replacement, the remote control will cease to operate. Replace the batteries and the unit will be restored to its full functionality, complete with your favorite settings. 7 PROGRAMMING DEVICE CONTROL The URC-1047 Universal Remote Control is preprogrammed to operate a Motorola interactive digital terminal, an RCA TV, an RCA VCR, and a Pioneer audio receiver. To control devices other than the default brands, perform the following steps; otherwise skip this section: NOTES: To control a DVD player, program the VCR key. To control a PVR, program the VCR key. To control a stereo amplifier or receiver, program the AUD key. For TV/VCR Combo control, skip this section and perform the instructions on page 10. 1.

Turn on a device and, if applicable, insert video media, (e.g., cassette or disc). NOTE: Please read steps 2 through 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

2. On the remote control, press a device key once (e.g., AUD, VCR, or TV). Press and hold SETUP until the selected mode key blinks twice, then release SETUP. Use the Manufacturer's Codes (starting on page 38) to locate the the type of device and brand name and then enter the first four-digit code for your device. If performed correctly, the selected mode key will blink twice. NOTE: If the selected mode key emits a long blink, the entry is invalid. Repeat steps 2 through 3 and try entering the same code again. 3.

4. Aim the remote control at the device and press POWER once. The device should turn off. If it does not, repeat steps 2 through 3, trying each code for your brand until you find one that works. If it still does not respond, try searching for the code (see Searching For Your Code on page 11). NOTE: If the device does not have a POWER key, press the (Play) key. 8 5. Repeat steps 1 through 4 for each device you want the remote control to control. For future reference, write down each working device code in the following boxes: AUD Code VCR Code TV Code 9 PROGRAMMING TV/VCR COMBO CONTROL If you own a TV/VCR Combo, perform the following instructions to control this device: 1. 2.

Turn on your TV/VCR Combo and insert a video cassette. On the remote control, press VCR once. Press and hold SETUP until the VCR key blinks twice, then release SETUP. Use the Setup Codes For TV/VCR Combos (on page 43) to locate the brand name and then enter the first four-digit code for your TV/VCR Combo. If you perform this procedure correctly, the VCR key will blink twice.



[Your user manual](#)

[UNIVERSAL REMOTE CONTROL URC-1047](#)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>