



URC 4063 Easy 4

User Manual


Previous Model Name: Big Easy Select

Overview

Thank you for purchasing the *One For All® Easy 4* universal remote control. Before you can use your new remote, you will need to program it to operate the specific home entertainment components you wish to control. Follow the instructions detailed in this manual to set up your *One For All® Easy 4* and enjoy your new remote control.

Features and Functions

The illustration below and the chart immediately after describe the features and functions of the *One For All® Easy 4* universal remote control. Use the drawing to locate each key on the remote, then refer to the chart for a description of the corresponding function each key performs.

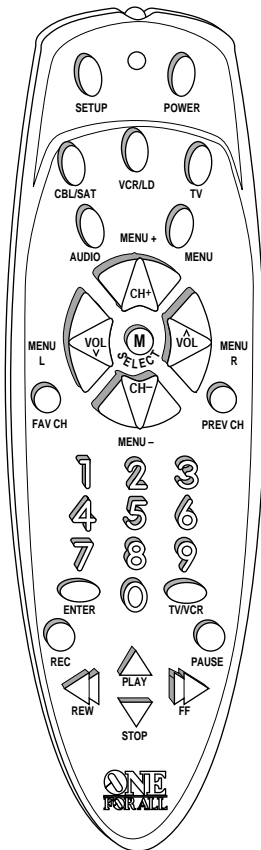

Feature Function



The **Red Light (LED)** flashes red to show that the remote is working.



The **SETUP** key is used to program your *One For All® Easy 4*.



The **GLOW keys: VOL +/-** (Volume Up and Down), **CH +/-** (Channel Up and Down), **M** (Mute), **POWER, TV/VCR, ENTER** and the **Digit Keys (0-9)** operate the same as on your original remote. These keys are made of a phosphorescent material that Glows-in-the-dark. To activate the "GLOW" Feature, you must expose the **GLOW Keys** to bright light. The length of time the **GLOW Keys** remain illuminated will be determined by the length of time the remote is exposed to bright light.



POWER



The **TV, VCR/LD, CBL/SAT, and AUDIO** keys are used to select the home entertainment component you want to control.



The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. When you press the **MENU** key, your *One For All® Remote Control* enters the menu mode and enables the **CH +/-** and **VOL +/-** keys to navigate through your menu. Pressing one of the device keys will exit the remote control's menu mode and revert **CH +/-** and **VOL +/-** to their original functions. If your original remote control had a **SELECT** key, for use in your menu, try **M** (Mute) or **ENTER**. Please consult the original owners manual of your home entertainment component for more detailed instructions on accessing and navigating your on-screen menus.



SEE BELOW



The **FAV CH** (Favorite Channel) key allows you to program your *One For All® Easy 4* with up to 10 of your favorite channels.



The **PREV CH** (Previous Channel) key operates the same as the LAST CHANNEL or RECALL key on your original remote.



The **REC** (Record), **PAUSE**, **REW** (Rewind), **PLAY**, **FF** (Fast Forward), and **STOP** keys operate the same as the keys on your original VCR and CD Player remote. **As a safety feature on the One For All® Easy 4, you must press the REC key twice.**



Installing the Batteries

Your *One For All® Easy 4* requires four (4) new AAA alkaline batteries. To install the batteries:

- 1 On the back of the *One For All® Easy 4*, push down on the tab and lift the battery cover off.
- 2 Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- 3 Press the battery cover back into place.
- 4 Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light (LED) will blink once.

NOTE: Removing the batteries for more than 15 minutes will require you to reprogram your remote.

Setting Up Your Components

Programming the *One For All® Easy 4* to operate your TV:

Locate the brand name of your TV and then write it in the space below.

TV Brand: _____

Locate the brand name of your TV in the "SETUP CODES FOR TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *One For All Easy 4* to operate your TV.

To program the *One For All Easy 4* to operate your TV:

- 1 Turn on your TV.
- 2 Press **TV** and release. Press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP**.
- 3 Enter the first three-digit TV code listed for your brand in the "Set-Up Codes for TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- 4 Aim the *One For All® Easy 4* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
- 5 Your *One For All® Easy 4* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *One For All® Easy 4* to operate your TV, press the **TV** key first.

Set-Up Codes for TVs

A-Mark	003	Anam	
Admiral	093, 016, 180, 165, 179	National	055
Adventura	046	AOC	030, 019, 185, 137, 003, 180, 056
Aiko	092	Archer	003
Akai	030, 056, 145, 151	Audiovox	180, 003
Alleron	179	Belcor	019, 030
Ambassador	177	Bell &	
Amstrad	171, 177	Howell	016, 154, 179, 180
Anam	180	Blue Star	282
		BPL	282
		Bradford	180



Attention Consumers

DO NOT USE the **MENU-** key on your *One For All® Easy 4* remote control with TVs manufactured by **Mitsubishi** in **1996** or **1997**, or on any TV manufactured in 1996 or 1997 using **TV code 150**. In 1996, Mitsubishi changed the frequency used to operate the menu down feature on these TVs. Consequently, using the **MENU-** key on your *One For All® Easy 4* remote control with these Mitsubishi TVs or with TVs using TV Code 150 will put your TV in a service mode. Universal Electronics Inc. assumes no responsibility for this change in the manufacturer's design or for any damage to your TV or any other damages that you incur as a result of these changes.

Setup Codes for URC 4063

Set-Up Codes for TVs

Mark 003
 Admiral 093, 016, 180, 165, 179
 Adventura 046
 Aiko 092
 Akai 030, 056, 145, 151
 Alleron 179
 Ambassador 177
 Amstrad 171, 177
 Anam 180
 Anam National 055
 AOC 030, 019, 185, 137, 003, 180, 056
 Archer 003
 Audiovox 180, 003
 Belcor 019, 030
 Bell & Howell 016, 154, 179, 180
 Blue Star 282
 BPL 282
 Bradford 180
 Brockwood 019
 Broksonic 236, 463, 003, 180
 Candle 030, 056, 186, 046
 Carver 054, 187
 Celebrity 000
 Citizen 092, 060, 030, 056, 280, 186, 046, 039
 Clairtone 185
 Concerto 056
 Contec 180, 185
 Craig 180
 Crown 180, 039
 Curtis Mathes 047, 060, 054, 154, 030, 039
 CXC 180
 Daewoo 451, 092, 019, 039
 Daytron 019, 056, 092
 Dumont 017, 019
 Electroband 000, 185
 Electrohome 150, 056, 000, 154, 185, 039
 Emerson 463, 236, 180, 177, 179, 280, 178, 282, 154, 019, 039, 185
 Envision 030
 Finlux 179
 Fisher 154, 159
 Fujitsu 179
 Funai 171, 179, 180
 Futuretech 180
 GE 047, 451, 051, 021, 027, 282, 178, 135, 174
 Gibraltar 019, 030, 017
 Goldstar 060, 056, 030, 019, 178
 Goodmans 179
 Granada 145, 151, 178
 Grandin 282, 180
 Grunpy 179, 180
 Hallmark 178, 179, 236, 019
 Harvard 180, 236, 178, 179
 HCM 282
 Hinari 179
 Hisawa 282
 Hitachi 151, 145, 056
 Hypson 282
 Ima 180
 Infinity 054
 Janeil 046
 JBL 054, 046
 JCB 000
 JVC 053
 Kaisui 282
 KEC 180, 060
 Kenwood 030, 019
 Kloss 046, 024, 030
 KTV 180, 030, 280, 185, 039
 Logik 016, 180, 236
 Luxman 056
 LXI 047, 054, 154, 178, 156
 Magnavox 054, 096, 030, 186, 187, 024, 171, 179
 Majestic 016, 017
 Marantz 054, 030, 096, 187
 Matsui 177, 039
 Megatron 178, 145, 003, 151
 MEI 185
 Memorex 150, 154, 056, 016, 178
 MGA 150, 030, 019, 178
 Midland 047, 051, 017, 135, 039
 Minutz 021, 027
 Mitsubishi 150, 019, 178, 093
 Motorola 093, 055, 054, 150, 051
 MTC 060, 056, 030, 019, 185
 Multitech 180, 179
 NAD 156, 166, 178, 019
 NEC 030, 056, 019
 Nesco 179
 Nikko 092, 030, 178
 NTC 092
 Onwa 180
 Optimus 166, 154, 150, 165
 Optonica 093, 165
 Orion 236, 463, 180, 179
 Panasonic 250, 051, 055, 054
 Penney 047, 051, 060, 019, 018, 030, 156, 021, 027, 178, 003, 135, 039, 250
 Philco 054, 096, 030, 019, 187
 Philips 054, 096, 030, 019, 187
 Pilot 030, 019, 039, 060, 178, 051
 Pioneer 166
 Portland 092, 019, 039

Priceclub 060
 Prism 051, 055
 Proscan 047
 Proton 466, 178, 003
 Pulsar 017, 092, 019
 Pulser 019, 017, 092
 Quasar 250, 051, 055
 RadioShack 180, 165, 039, 056, 047, 030
 RCA 047, 018, 135, 090, 019, 174, 093
 Realistic 154, 165, 056, 030, 019, 178, 180, 039
 Rhapsody 185
 Runco 060, 494, 030, 017
 Saisho 177
 Sampo 030, 039
 Samsung 060, 427, 056, 030, 019, 178
 Samsux 039
 Sanyo 154, 159, 146
 Scimitsu 019
 Scotch 178
 Scott 236, 019, 178, 180, 179
 Sears 047, 054, 154, 171, 056, 156, 178, 179, 146, 451
 SEI 177
 Sharp 093, 491, 165, 039
 Shogun 019
 Signature 2000 016, 047, 054, 019
 Simpson 186, 187, 030
 Sinudyne 177
 Sony 000, 080
 Soundesign 178, 180, 179, 186
 Spectricon 003, 137, 180, 030, 019, 056
 Squareview 171
 SSS 019, 180, 236
 Starlite 180, 236, 019
 Supra 039
 Supre-Macy 046, 039, 186
 Supreme 000
 Sylvania 054, 096, 030, 187, 186
 Symphonic 171, 179, 180
 Tandy 093, 165, 039, 054, 047
 Tatung 055, 003, 051
 Technics 250, 051, 055
 Technol Ace 179
 Techwood 051, 056, 003, 055, 250
 Teknika 092, 054, 060, 056, 019, 016, 180, 179, 186, 039
 Tera 178
 TMK 156, 177, 178, 236
 Tomashi 282
 Toshiba 156, 154, 060
 Tosonic 185
 Totevision 039
 Triumph 177
 Universal 027, 021, 047
 Vector Research 030
 Victor 053
 Vidikron 054
 Vidtech 019, 178
 Viking 046
 Wards 054, 016, 096, 030, 174, 056, 165, 019, 021, 027, 020, 178, 179, 080
 Yamaha 030, 019
 Zenith 017, 092, 016
 Zonda 003

Set-Up Codes for VCRs

Admiral 048
 Action 317
 Adventura 000
 Aiko 278
 Aiwa 000, 307, 406, 468
 Akai 041, 061, 315
 Akiba 072
 Alba 020, 278
 American High 035, 081
 Amstrad 000, 325
 Anitech 072
 ASA 037, 081
 Asha 240
 Asuka 037
 Audiovox 037, 038
 Baird 000, 041, 104
 Basic Line 072, 020, 278
 Beaumark 240
 Bell & Howell 104, 048, 046
 Blaupunkt 162, 034
 Brandt Electric-tronique 041
 Broksonic 184, 121, 211, 295, 361
 Bush 072, 278
 Calix 037
 Candle 037, 038
 Canon 035
 Capehart 020
 Carver 081
 CCE 278, 072
 CGE 000
 Cimline 072
 Citizen 037, 278, 240, 035, 000
 Clatronics 020
 Colt 072
 Condor 020
 Craig 240, 072, 037, 047, 271

Crown 072, 020, 278
Curtis
Mathes 035, 060, 202, 041
Cybernex 240
Daewoo 278, 020, 045, 046
Dansai 072
Daytron 020, 278
De Graaf 042
Decca 081, 000
Dual 041
Dumont 038, 240, 045
Dynatech 000
Electro-
home 037, 240, 043
Electro-
phonic 037
Emerex 032
Emerson 278, 184, 479, 000, 002, 121, 211, 037, 043, 061, 208, 295, 361
Ferguson 041
Fidelity 000
Finlandia 081, 110, 104
Finlux 000, 042, 104, 081
Firstline 072, 043, 045, 037
Fisher 104, 046, 047, 066, 054
Frontech 020
Fuji 033, 035, 032, 034
Funai 000, 278, 072, 325, 240
GAB 072
Garrard 000, 325
GE 060, 202, 035,
GEC 081
Go Video 232, 350, 240
Goldstar 037, 038, 278
Goodmans 278, 000, 020, 072, 037, 062
Gradiente 000
Granada 048, 035
Grandin 072, 000, 037
Grundig 081
Harley
Davidson 000
Harman/
Kardon 038
Harvard 072
Harwood 072
Head-
quarter 046
Hi-Q 047
Hinari 072, 240
Hitachi 042, 000, 041
Imperial 000
Interfunk 081
ITT 041, 104, 046, 240
Jensen 041, 067
JVC 067, 008, 041
Kaisui 072
KEC 037, 278
Kenwood 067, 008, 041, 038
KLH 072
Kodak 035, 037
Lloyd's 000, 208, 072, 038
Logik 072
Luxor 043, 104, 046, 062
LXI 037, 000
Magnavox 035, 081, 039, 110, 149
Magnin 240
Marantz 035, 081, 110
Marta 037
Matsushita 035, 081
Matsui 208, 295
MEI 035
Memorex 000, 035, 048, 104, 037, 039, 240, 047, 046, 307
Metz 162, 454
MGA 043, 061
MGN
Technology 240
Minolta 042
Mitsubishi 043, 061, 067, 008, 173
Motorola 035, 048
MTC 000, 240
Multitech 000, 072
NEC 038, 041, 067, 008, 104
Nikko 037
Noblex 240
Nokia 104, 240, 046, 041
Olympus 035
Optimus 048, 037, 104
Optonica 062
Orion 184, 278, 479, 121, 211, 295, 208
Panasonic 162, 035, 454
Penney 035, 037, 240, 042, 162, 038, 454
Pentax 042
Philco 035, 081
Phillips 081, 035, 062, 110
Pilot 037
Pioneer 067, 162
Portland 020
Profitronic 240
Proline 000
Proscan 060, 202
Protec 072
Pulsar 039, 240, 278
Quarter 046
Quartz 046
Quasar 162, 035
RadioShack 000, 035, 037, 048
Radix 037
Randex 037

RCA 060, 202, 042, 035, 149, 048, 240
Realistic 000, 035, 048, 240, 104, 037, 046, 047, 066, 062
Ricoh 035, 034
Runco 039
Samsung 240, 045
Sanky 048, 039
Sansui 041, 000, 067, 072, 271
Sanyo 104, 047, 046, 240
Scott 184, 043, 045, 211, 121
Sears 104, 035, 000, 037, 042, 046, 047, 066, 054
SEI 081
Semp 045
Sharp 048, 062
Shintom 072, 000, 240
Shogun 240
Singer 072, 037, 240
Sony 032, 033, 034, 000, 035
STS 042
Sylvania 081, 035, 043, 110, 000
Symphonic 000
Tatung 041, 067, 000
TEAC 000, 041
Technics 162, 035
Teknika 035, 000, 037
Thomas 000
TMK 240
Toshiba 043, 045, 066
Totevision 240, 037
Triumph 208
Unitech 240
Vector 045
Vector Research 038
Video Concepts 045, 061
Videosonic 240, 000, 072
Videotronic 035
Wards 048, 000, 035, 042, 047, 060, 202, 072, 081, 240, 149, 062
White Westinghouse 278
XR-1000 000, 035, 072
Yamaha 038
Zenith 000, 039

Set-Up Codes for TV/VCR Combos

American
High 035*
Brocksonic 002, 294, 479
Colt 072
Curtis
Mathes 035*
Daewoo 278
Emerson 002, 294, 479
Funai 000
GE 035*, 060*, 048*, 240
Hitachi 035*, 000
HQ 000
Lloyds 000
MGA 240
Magnavox 000, 035*, 081*
Magnin 240
Memorex 037, 162*
Mitsubishi 048*
Orion 002, 294, 479
Panasonic 035*, 162*
Penney's 035*, 240, 162*
Quasar 035*, 162*
RCA 060*, 035*, 048*
Sansui 000, 479
Sanyo 240
Sears 000, 037
Symphonic 000
Zenith 000

Set-Up Codes for Cable Converters

ABC 001, 003, 007, 008, 011, 013, 014, 017
Allegro 153, 315
Antronix 022
Archer 022, 153
Belcor 056
Cable Star 056
Cabletenna 022
Cableview 022
Century 153
Citizen 153, 315
Colour Voice 025
Comtronics 040
Contec 019
Eastern 002
Everquest 015, 040
Focus 400
GC
Electronics 056
Garrard 153
Gemini 015
General
Instruments 011, 476
Goldstar 040, 144
Hamlin 009, 020, 034, 259
Hitachi 011
Hytex 007
Jasco 153, 315
Jerrold 003, 011, 012, 014, 015, 476
Movie Time 063, 156
NSC 063, 156
Novaplex 618
Oak 007, 019

Optimus	021
Panasonic	021, 107
Philips	025, 153
Pioneer	144
Popular	
Mechanics	400
RCA	021
RadioShack	015, 315
Recoton	400
Regal	020, 259
Regency	002
Rembrandt	011
SL Marx	040
Samsung	040, 144
Scientific	
Atlanta	008, 017, 477
Signal	015, 040
Signature	011
Sprucer	021
Starcom	003, 015
Stargate	015, 040
Starquest	015
Sylvania	001
TV86	063
Tandy	258
Televue	040
Texscan	001
Tocom	012, 013
Tusa	015
Unika	022, 153
United Artists	007
United Cable	003
Universal	022, 056, 153
Videoway	250
Viewstar	063, 258
Zenith	525
Zentek	400

Set-Up Codes for Satellites

Channel	
Master	018
Chaparral	053
Citoh	164
Drake	018, 064
Echostar	775, 269, 280
ExpressVu	775
General	
Instruments	547, 038, 050, 361
HTS	775
Homecable	238
Hughes	
Network	
Systems	749
IQ	210
Janeil	152
Jerrold	361, 627
Legend	269
Macom	018, 050
Memorex	269
Panasonic	152, 701
Primestar	627, 361
RCA	566
Realistic	052
STS	210

Set-Up Codes for CD Players

Aiwa	124, 157
California	
Audio Lab	029
Carver	57, 179
DKK	000
Denon	003
Emerson	305
Fisher	048, 088, 179
Garrard	393
Genexxa	032, 305
Hitachi	032
JVC	072
Kenwood	028, 037, 048, 190
Krell	157
LXI	305
Linn	157
MCS	029
Magnavox	157, 305
Marantz	029, 157
Mission	157
NSM	157
Onkyo	101
Optimus	000, 032, 037, 048, 145, 179, 305, 468
Panasonic	029
Philips	157
Pioneer	032, 305, 468
Proton	157
QED	157
Quasar	029
RCA	053, 179, 305
Realistic	179
Rotel	157
SAE	157
Sansui	157, 305
Sanyo	179
Scott	305
Sears	305
Sharp	037
Sony	000, 185, 490, 604, 605
Soundesign	145
TEAC	393
Technics	029, 303
Victor	072
Wards	157
Yamaha	036, 187

highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the One For All Easy 4 to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 035 may require TV code 051 for volume control.

TV/VCRs working on VCR code 048 may require TV code 093 for volume control.

TV/VCRs working on VCR code 060 may require TV code 047 for volume control.

TV/VCRs working on VCR code 081 may require TV code 054 for volume control.

TV/VCRs working on VCR code 162 may require TV code 250 for volume control.

Programming the One For All Easy 4 to operate your Cable Converter or DBS Satellite:

Set-Up Codes for Laser Discs

Carver 194	Pioneer 059, 023
Disco Vision 023	Quasar 204
Hitachi 023	Sega 023
Magnavox 194	Sony 201
Marantz 194	Theta Digital 194
Mitsubishi 059	
NAD 059	
Panasonic 204	
Philips 194	

Locate the brand name of your Cable Converter or Satellite and then write it in the space below.

Cable or Satellite Brand: _____

Locate the brand name of your Cable Converter or Satellite in the "SETUP CODES FOR CABLE CONVERTERS" or "SETUP CODES FOR SATELLITES" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your Cable Converter or Satellite.

To program the One For All Easy 4 to operate your Cable Converter or Satellite:

- 1 Turn on your Cable Box, Satellite or DSS.
- 2 Press **CBL/SAT** and release. Press and hold **SETUP** until the *One For All Easy 4*'s red light blinks twice, then release **SETUP**.
- 3 Enter the first three-digit Cable Box, Satellite or DSS code you wrote down in the "Looking Up Set-Up Codes for Your Components" section. If you perform this procedure correctly, the red light will blink twice.
- 4 Aim the *One For All Easy 4* at your Cable Box, Satellite or DSS and press **POWER**. Your Cable Box, Satellite or DSS should turn off. If your Cable Box, Satellite or DSS does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Box, Satellite or DSS.
- 5 Your *One For All Easy 4* is now programmed to operate your Cable Box, Satellite, or DSS. Write your Cable Box, Satellite, or DSS code in the boxes to the left for future reference.

NOTE: If your original Cable Box remote control did not have an "ON" key, press **CH+** on the *One For All Easy 4* to turn your Cable Box ON.

Set-Up Codes for Cable Converters

ABC 001, 003, 007, 008, 011, 013, 014, 017

Remember, if you want to use your *One For All Easy 4* to operate your Cable Box, Satellite, or DSS, press the **CBL/SAT** key first.

Allegro 153, 315	Stargate 015, 040
Antronix 022	Starquest 015
Archer 022, 153	Sylvania 001
Belcor 056	TV86 063
Cable Star 056	Tandy 258
Cabletenna 022	Televue 040
Cableview 022	Texscan 001
Century 153	Tocom 012, 013
Citizen 153, 315	Tusa 015
Colour Voice 025	Unika 022, 153
Comtronics 040	United Artists 007
Contec 019	United Cable 003
Eastern 002	Universal 022, 056, 153
Everquest 015, 040	Videoway 250
Focus 400	Viewstar 063, 258
GC	Zenith 525
Electronics 056	Zentek 400
Garrard 153	
Gemini 015	

Set-Up Codes for Satellites

Channel	Master 018
Chaparral	053
Citoh	164
Drake	018, 064
Echostar	775, 269, 280
ExpressVu	775
General	Instruments 547, 038, 050, 361
HTS	775
Homecable	238
Hughes	Network
Systems	749
IQ	210
Janeil	152
Jerrold	361, 627
Legend	269
Macom	018, 050
Memorex	269
Panasonic	152, 701
Primestar	627, 361
RCA	566
Realistic	052
STS	210

Programming the One For All Easy 4 to operate your CD Player:

Locate the brand

name of your CD Player and then write it in the space below.

CD Player Brand: _____

Locate the brand name of your CD Player in the "SETUP CODES FOR CD PLAYERS" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your One For All Easy 4 to operate your CD Player.

To program the One For All Easy 4 to operate your CD Player:

- 1 Turn on your CD Player and insert a compact disc.
- 2 Press **AUDIO** and release. Press and hold **SETUP** until the *One For All Easy 4*'s red light blinks twice, then release **SETUP**.
- 3 Enter the first three-digit CD Player code you wrote down in the "Looking Up Set-Up Codes for Your Components" section. If you perform this procedure correctly, the red light will blink twice.
- 4 Aim the *One For All Easy 4* at your CD Player and press **PLAY**. Your CD Player should play your disc. If your CD Player does not respond, repeat Steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.
- 5 Your *One For All Easy 4* is now programmed to operate your CD Player. Write your CD Player code in

the boxes to the left for future reference.

Remember, if you want to use your *One For All Easy 4* to operate your CD Player, press the **AUDIO** key first.

Set-Up Codes for CD Players

Aiwa 124, 157	Panasonic 029
California Audio Lab 029	Philips 157
Carver 57, 179	Pioneer 032, 305, 468
DKK 000	Proton 157
Denon 003	QED 157
Emerson 305	Quasar 029
Fisher 048, 088, 179	RCA 053, 179, 305
Garrard 393	Realistic 179
Genexxa 032, 305	Rotel 157
Hitachi 032	SAE 157
JVC 072	Sansui 157, 305
Kenwood 028, 037, 048, 190	Sanyo 179
Krell 157	Scott 305
LXI 305	Sears 305
Linn 157	Sharp 037
MCS 029	Sony 000, 185, 490, 604, 605
Magnavox 157, 305	Soundesign 145
Marantz 029, 157	TEAC 393
Mission 157	Technics 029, 303
NSM 157	Victor 072
Onkyo 101	Wards 157
Optimus 000, 032, 037, 048, 145, 179, 305, 468	Yamaha 036, 187

Reassigning Device Keys




You can use the *One For All Easy 4* to operate a second TV or a second VCR or any combination of four home entertainment components. For example, you may want your *One For All Easy 4* to control 1 TV, 1 CD Player and 2 VCRs. To accomplish this, you would reassign the **CBL/SAT** key to operate the desired component, in this case, a second VCR. The chart below shows you how to reassign a particular device key and then set up your new component.


TV to VCR/LD	SETUP* + 992 + VCR/LD + TV + TV + SETUP* + VCR or Laser Disc code.
TV to CBL/SAT	SETUP* + 992 + CBL/SAT + TV + TV + SETUP* + Cable or Satellite code.
TV to AUDIO	SETUP* + 992 + AUDIO + TV + TV + SETUP* + CD Player code.
VCR/LD to TV	SETUP* + 992 + TV + VCR/LD + VCR/LD + SETUP* + TV code.
VCR/LD to CBL/SAT	SETUP* + 992 + CBL/SAT + VCR/LD + VCR/LD + SETUP* + Cable or Satellite code.
VCR/LD to AUDIO	SETUP* + 992 + AUDIO + VCR/LD + VCR/LD + SETUP* + CD Player code.
CBL/SAT to TV	SETUP* + 992 + TV + CBL/SAT + CBL/SAT + SETUP* + TV code.
CBL/SAT to VCR/LD	SETUP* + 992 + VCR/LD + CBL/SAT + CBL/SAT + SETUP* + VCR or Laser Disc code.
CBL/SAT to AUDIO	SETUP* + 992 + AUDIO + CBL/SAT + CBL/SAT + SETUP* + CD Player code.
AUDIO to TV	SETUP* + 992 + TV + AUDIO + AUDIO + SETUP* + TV code.
AUDIO to VCR/LD	SETUP* + 992 + VCR/LD + AUDIO + AUDIO + SETUP* + VCR or Laser Disc code.
AUDIO to CBL/SAT	SETUP* + 992 + CBL/SAT + AUDIO + AUDIO + SETUP* + Cable or Satellite code.

***NOTE:** Here you must hold **SETUP** until the *One For All Easy 4*'s red light blinks twice.


Using the Favorite Channel Key

Your *One For All® Easy 4* is equipped with a favorite channel key (FAV CH). You can set up the FAV CH key with a list of up to 10 of your favorite channels for either your TV, VCR, Cable Box, Satellite or DSS. Please note, the FAV CH key can only be set up for one device key (TV, VCR/LD or CBL/SAT) at a time. You cannot set up a favorite channel list for another device key until you have cleared the FAV CH key of your original list.


-  Press the device key (TV, VCR/LD, or CBL/SAT) for the home entertainment component that will contain your favorite channel list.
 - 
 - 


-  Press and hold **SETUP** until *One For All® Easy 4*'s red light blinks twice. Release **SETUP** and press 9-9-6.

9-9-6

-  Enter the channel number of the first channel you would like to add to your favorite channel list. Then press **SETUP**.


- If you are entering a single digit channel number, you must press 0 first.
- If you are entering a channel that is three digits long, such as 103, you do not have to press **SETUP** after you have entered the channel number.
- If your original remote control required you to use an **ENTER** key to change channels, press **ENTER** instead of **SETUP** after entering your channel number. For example, if you want to add TV channel "4" to your favorite channel list, you would: Press TV, then press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP** and press 9-9-6. Press 0-4, followed by **ENTER**. Then, add your second channel, followed by **ENTER** and continue adding your favorite channels until you have added the 10 channels you desire in your favorite channel list.

-  Continue adding your favorite channels, up to 10 channels. Once you have finished, press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice.

-  To scan through your favorite channel list, press **FAV CH**. Your *One For All® Easy 4* will automatically scan through your favorite channel list, stopping at each channel for three seconds.

- To stop at one of your favorite channels, press any key on the *One For All® Easy 4*.

To clear an entire favorite channel list from the FAV CH key:

-  Press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice, then release **SETUP**.

- Press 9-9-6, then press and hold **SETUP** until the *One For All® Easy 4*'s red light blinks twice.



Troubleshooting

Problem	Solution
Red light not blinking when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>One For All® Easy 4</i> at your home entertainment component and that you are within 15 feet of the component you are trying to operate before using your remote.
The <i>One For All® Easy 4</i> does not operate your home entertainment component or is not performing commands properly?	Try all the codes listed for your home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow for partial functionality, however, only one set-up code will operate your home entertainment component properly. Make sure that all of the components you are setting up are able to be operated with an infrared remote control.
Problems programming a TV/VCR combo?	Use the VCR set-up codes for your brand. Some combo units may require both a TV code to control volume and a VCR code for full operation.
VCR not recording?	As a safety feature on the <i>One For All® Easy 4</i> , you must press the REC key twice.
No volume when in the Cable mode or when operating a second TV or TV/VCR combination?	Press and hold SETUP until the <i>One For All® Easy 4</i> 's red light blinks twice. Release SETUP and enter 9-9-3 followed by VOL + .
Channel +/- and RECALL not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions. However, using the FAV CH key will allow you to run through a list of up to 10 of your favorite channels.
Problems changing channels?	If your original remote control required a ENTER keystroke when changing channels, press the ENTER key on the <i>One For All® Easy 4</i> after you enter the channel number.
Keypad scrambled?	Press and hold SETUP until the <i>One For All® Easy 4</i> 's red light blinks twice. Release SETUP and enter 9-6-9.

World Wide Web: <http://www.oneforall.com>

This product has been discontinued and is no longer supported.

One For All® is a trademark of Universal Electronics Inc.

Copyright 1996 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

This *One For All®* product is designed for compatibility in North America excluding Mexico.

URC-4063 - *One For All® Big Easy Select Easy 4*.
M4022

5/98

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>