

ONE
FOR ALL[®]



ZAPPERTM

URC-6512
701594

UK Universal remote

D

F

E

P

I

NL



Table of Contents

UK

PICTURE OF THE ZAPPER REMOTE	3
INSTALLING THE BATTERIES	4
FEATURES AND FUNCTIONS	4
SETTING UP THE ZAPPER	
Direct Set-Up	5
Search Method	7
Code Blink Out	8
SET-UP CODES	
Television	59
ADVANCED OPERATION	
Controlling Colour & Brightness	9
Scan	9
TROUBLE-SHOOTING	
Helpful Hints	10

About Your ZAPPER

Thank you for purchasing the ZAPPER universal remote control (URC-6512). Your ZAPPER package contains:

- The ZAPPER remote control
- The ZAPPER User Guide & Code Book

The User Guide & Code Book explains in simple steps how to set up and operate your new universal remote control. **You may need this guide again in the future, so please be sure to keep it.**

Your ZAPPER needs 2 new "AAA/LR03" batteries.

Your ZAPPER is designed to let you use one remote to operate your Television.



Installing The Batteries

The ZAPPER needs 2 new "AAA/LRO3" alkaline batteries.

- 1 Remove the battery cover from the back of the ZAPPER by pressing down on the tab.
- 2 Match the batteries to the +/- marks inside the battery case, then insert the batteries.
- 3 Press the battery cover back into place.

Important notes:

- In order to avoid having to reprogram your ZAPPER after you remove the batteries, you will need to insert new batteries within 5 minutes. Also, it is best that you do not use rechargeable batteries.
- **On the inside of the battery compartment door you will find a label on which to write your set-up code after your ZAPPER is set up for your television. Please write down your code for easy, future reference.**

Features and Functions

See picture of the ZAPPER remote on page 3.

1 MAGIC

The MAGIC key is used to set up your ZAPPER and to access special features.

2 Power

The POWER key operates the same function it did on your original remote control. The LED (Light Emitting Diode) flashes red to show the remote is working.

3 Mute

The Mute key operates the same function it did on your original remote control. It is also used to activate the Scan feature (see page 9).

 


4 Volume +/-, Programme +/-



The Volume and Programme keys operate just as those on your original remote control. These keys are also used to program the ZAPPER for your devices and to control the Colour and Brightness settings of your television (see page 9).



Setting Up The ZAPPER


Direct Set-Up

To set up the ZAPPER for your Television follow the instructions below. To set up your Television:

-  Find your Television code in the Set-Up Code section (page 59-68). Codes are listed by brand name. The most popular codes are listed first.
-  Press and hold the **MAGIC key until the POWER key (LED) blinks twice** (the POWER key (LED) will blink once then twice).
-  **Enter your 5-digit code** according to the chart below. The POWER key (LED) will blink twice.

Volume +		=	1
Volume -		=	2

 
Programme +		=	3
Programme -		=	4

-  Now, aim the ZAPPER at your Television and press **POWER**. If your Television switches off, your ZAPPER should be ready to operate your device.
- Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- Write the codes for your TV in the boxes provided on page 6 and inside the battery compartment for easy future reference.**

Important notes:

- Some codes are quite similar. If your television does not respond or is not functioning properly with one of the codes, follow steps 1-5 with each code listed for your brand.
- If none of the codes listed for your brand operate your television, follow the Search Method described in the next section. The Search Method can be used even if your brand is not listed at all.
- **Write the code for your TV in the boxes provided below and inside the battery compartment for easy future reference.**

TV Code

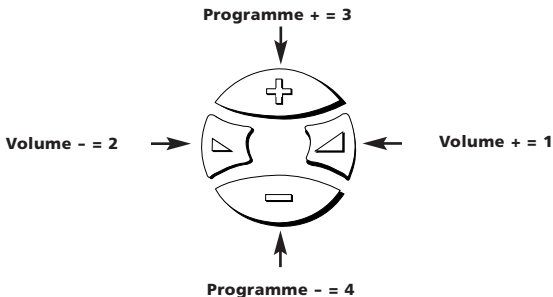





Example: To enter the Sony TV code 24432, you would press Volume(-), Programme(-), Programme(-), Programme(+), Volume(-).

If your television does not respond to the ZAPPER after you have tried all the codes listed for your brand, try the Search Method described on page 7.

Make sure you write your correct 5 digit code in the boxes provided inside the battery compartment and in the boxes provided on this page.

Search Method

If your Television does not respond to the ZAPPER after trying all the codes listed for your brand, try searching for your code. To search for your TV code:

- 1** Turn on your TV and aim your ONE FOR ALL at your television.
- 2**  Press and hold the **MAGIC key until the POWER key (LED) blinks twice** (the POWER key (LED) will blink once then twice).
- 3**  Next, press the **Programme(-) key three times**.
- 4**  Next, alternate between **Programme(-)** and **POWER** until your Television turns off. You may have to press these keys many times, so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.
- 5**  When your device turns off, press and release **MAGIC**. Don't forget, press MAGIC as soon as your device turns off.


 





The ZAPPER should now be ready to operate your Television. Turn your device back on and try all the remote's functions to ensure they are working properly. If some of the ZAPPER'S commands are not operating correctly, try the search method again, you may be using the wrong code.

Important notes: During step 4, you may have to press these keys many times (up to 150!), so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.

Code Blink Out

After you have used the Search Method, you can find out which code the ZAPPER responded to by blinking back the code. It's handy to know your Television code for future reference. Remember, you can only blink back your code after the ZAPPER is operating your device.

To blink out your TV code:









-  Press and hold the **MAGIC** key until the **POWER** key **(LED) blinks twice** (the POWER key (LED) will blink once then twice).
-  Next, press **Programme(-)**, **Programme(-)**, **Programme(+)**.
-  For the first digit of your 5-digit code, press **Volume + (▲)** and count the red blinks.
-  For the second digit, press **Volume - (▼)** and count the red blinks.
-  For the third digit, press **Programme(+)** and count the red blinks.
-  For the fourth digit, press **Programme(-)** and count the red blinks.
-  For the fifth digit, press **MUTE** and count the red blinks.

Write the codes for your TV in the boxes provided on page 6 and inside the battery compartment for easy future reference.

Advanced Operation

Controlling Colour & Brightness

Depending on the functions of your original remote control, the ZAPPER can operate the colour and brightness settings of your Television.



Colour up =	Press		then hold	
Colour down =	Press		then hold	
Brightness up =	Press		then hold	
Brightness down =	Press		then hold	

Note: You have 5 seconds to press the Volume or Channel keys for colour or brightness adjustment after pressing MAGIC.

Scan

Your ZAPPER comes with a special Scan function which lets you "scan" through every programme available on your TV.

To scan the programmes on your TV:

-  Aim the ZAPPER at your TV. Press and release MAGIC then press the MUTE key.
 The ZAPPER will send the command to advance through all the programmes available on your Television stopping at each programme for about three seconds. Remember, you must aim the ZAPPER at your device the entire time you are using scan.
- When you find a programme you would like to watch, simply press **any key** to stop the Scan feature.

Important notes: Scan may not function with a television that did not have a programme +/- key on the original remote.

Trouble-Shooting

Helpful Hints

Problem:	Solution:
Your brand is not listed in the ONE FOR ALL code section?	Try the search method.
The ONE FOR ALL does not operate your television?	A) Try all the codes listed for your brand. B) Try the search method.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try Direct Set-Up again trying each code listed under your brand or start the search method over again to locate the proper code.
Your TV switches to programme 1 when you press the power key before switching off OR you must press Power twice to switch on your TV?	Press MAGIC until the light blinks twice. Then press: (Programme-) (Programme+) (Programme-)
You cannot reach channel 10 and above on your TV.	If your original remote did not have channel +/- keys, the ZAPPER may not operate this function.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
POWER key (LED) does not blink when you press a key?	Replace batteries with 2 new "AAA/LR03" alkaline batteries

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

4510991	A.R. Systems	22311		
4511271	Abex	11311		
4512089	Acec	11141		
4510010	Admiral	12224	12242	23313
		14222	21131	
4510012	Adyson	14232	14231	
4511080	Agashi	14231	21131	
4510015	AGB	31121		
4510997	Agef	12224		
4510017	Aiko	14231	11132	22414
		11314	23412	12131
		22332	21131	14232
4510018	Aim	21213		
4510020	Akai	22332	14211	22414
		23412	11314	11132
		12131	14233	13314
		31121	32233	31341
		32122	24311	14232
		32424	14231	21131
		24111	13413	22432
		32243		
4510021	Akiba	14233	21233	24124
4510023	Akura	14233	21233	21221
		11132	22323	23241
		13334	21131	33241
4511267	Aaron	14231		
4510024	Alba	14233	14334	11132
		23313	22413	22314
		22414	14231	14424
		13314	32122	24324
		11321	33241	32114
4510026	Alcyon	12141		
4510029	Allorgan	14143	21323	14232

4510041	Amplivision	14232	23211	22111
		22413		
4510042	Amstrad	13412	11132	31121
		21131	14233	22414
		23412	13334	22333
		23241	33131	
4511094	Anam	11132		
4510044	Anglo	11132	21131	
4510045	Anitech	11132	12141	21131
4510047	Ansonic	22413	21321	12323
		11132	22423	13314
		23234	21114	14424
		11141	23341	
4510050	Apollo	24232		
4510053	Arc en Ciel	23144	12342	14121
		31431	22142	14123
4510054	Arcam	14231	23144	14232
4510057	Aristona	31341	11141	
4510059	Arthur Martin	13314	23211	
4510060	ASA	12332	22233	12123
		12331	12224	
4510062	Asberg	12141		
4511095	Asora	11132		
4510070	Asuka	14233	21131	14231
		21233	14232	
4510072	Atlantic	14231	14143	21114
		22111		
4510074	Atori	11132		
4510075	Auchan	13314	23211	
4510080	Audiosonic	12342	14232	22413
		22212	21131	14233
		23341		
4510081	Audioton	14232	22413	21131
4510084	Ausind	12141		
4510085	Autovox	12224	14143	14342
		12141	14232	14424
4511156	AWA	11134	11321	11132
		13242	22423	23241
		14231	32243	
4511081	Ayomi	14343		
4511098	AYR	31224		
4510091	Baird	12342	14112	22224
		13443	14111	12131
		12132	14232	14211
4510093	Bang & Olufsen	31422	12224	
4510094	Barco	22441	13314	
4510097	Basic Line	14233	11132	22423
		13314	21233	

4510098	Bastide	14232		
4510099	Baur	13213	21344	31224
		14114	22332	24432
4511082	Bazin	14232		
4511079	Beaumarck	13413		
4510103	Beko	22413	32243	
4510105	Beon	23313	11311	
4510106	Best	22212	22413	23322
4510107	Bestar	22413	22423	
4510108	Binatone	14232		
4510110	Black Star	14424		
4510111	Blacktron	21233		
4510112	Blackway	21233		
4510113	Blaupunkt	31224	14114	14131
		14222	22124	24111
4510114	Blue Sky	14233	21233	24124
		24324	33241	
4510115	Blue Star	21233		
4510118	Bondstec	14424		
4510119	Boots	14232		
4510121	BPL	21233		
4510123	Brandt	12342	23144	14342
		22142	14121	14123
		21244	22144	31431
		32412		
4510126	Brinkmann	23313		
4511030	Brionvega	12224	22333	
4510128	Britannia	14231	14232	
4511444	Brother	21131		
4510133	Bruns	12224	21332	
4510134	BSR	13314	21323	
4510138	BTC	14233		
4510139	Bush	14233	14334	13314
		11132	11321	21233
		22314	22414	22423
		21131	22332	24324
		14211	32122	21323
		14232	33241	
4510149	Capsonic	21131		
4511455	Carad	32313		
4510150	Carena	24124		
4510151	Carrefour	11321	12123	11432
4510153	Carver	13333		
4510998	Cascade	11132		
4511231	CCE	14232		
4510161	Century	12224	14222	14424
		14343		

4510162	CGE	12133	12141	14424
		13314	21221	23313
		22413		
4510167	Cimline	11132	14334	14233
4510168	Citizen	31224		
4510169	City	11132		
4511073	Clarivox	23313	12123	
4510172	Clatronic	14233	21131	22413
		22414	14232	12141
		14424	11132	12323
		22111	32114	
4510173	Clayton	23112		
4511308	CMS hightec	14232		
4510186	Concorde	11132		
4510187	Condor	14231	14424	21233
		22111	22413	11132
		12323	23234	23313
4510188	Conic	11311		
4510191	Contec	14231	11132	13242
		11134	11321	
4510192	Continental			
	Edison	12342	14342	14121
		14123	23144	22142
		21244	24324	31431
4510194	Cosmel	11132	22212	
4510195	Crezar	14222		
4510196	Crosley	12224	14424	12133
		12141	13314	14222
4510197	Crown	11132	22413	12141
		23322	32114	23313
		14211	24324	11422
4510200	CS Electronics	14424	14231	14233
4510201	CTC	14424		
4510202	Curtis Mathes	12242	13212	
4510203	Cybertron	14233		
4511309	Daas	21332		
4510205	Daewoo	11132	14231	22423
		14233	14232	32411
4510206	Dainichi	14233	14231	
4510207	Dansai	21131	11311	11314
		14231	11132	
4511160	Dansette	23241		
4511083	Dantax	22413		
4511102	Datsura	14211		
4510210	Daytron	11132	22423	
4510216	de Graaf	14211	11341	13314
4510214	Decca	12131	31121	14232
4510999	Denko	21131		
4510217	Denon	13212		

4511103	DER	14112	13443			
4510220	Desmet	22111				
4510232	Dixi	11132	21332	14424		
		14232				
4510235	Domland	23133				
4510239	DTS	11132				
4510240	Dual	14232	11432	22224		
		21114	22311	23133		
		23144	21344	13314		
4510243	Dumont	12224	12331	12323		
		14222	14232	12123		
		12131				
4511162	Dux	11141				
4510252	Elbe	23414	14343	21114		
		22333	21321	22413		
		13314	14233	23234		
		32313				
4510254	Elcit	12224	14424	31121		
		12323	13314			
4510255	Elekta	21131	21233			
4510259	Elin	14231	12332	12331		
		22332	24111	13314		
		11132				
4510260	Elite	14233				
4510261	Elman	12323				
4510263	Elta	11132	21131	14231		
4510265	Emerson	13412	14222	12224		
		13413	14424	22414		
		12123	21233	22111		
4510267	Emperor	21233				
4510271	Erres	11141				
4510273	Etron	11132	13314			
4511632	Eurofeel	21131				
4510278	Euroman	14231	21131	14232		
		23322	22413			
4510280	Europhon	31121	12323	14222		
		14232	14424	13314		
4510291	Expert	14143	23211	21114		
		13314				
4511001	Exquisit	14424				
4510294	Fenner	22423	11132			
4510296	Ferguson	12132	21244	14111		
		13443	22144	14343		
		14112	12342	31411		
		32412				
4510299	Fidelity	14112	14231	22414		
		13314	21131			
4511164	Filsai	14232				
4510301	Finlandia	14211	22233	22332		
4510302	Finlux	12332	12331	22233		
		14232	12131	13314		
		12141	31121	12123		
		12224	12323	23234		
		32424	24341	24311		
4510304	Firstline	21323	22112	14231		
		22423	23112	14424		
		11132	13314	12323		
		14232	23234	14343		
		12131	14334	33241		
		14211	32411			
4510305	Fisher	12331	14232	11321		
		11432	14211	22413		
		31334	21332	11342		
		12224	13242	22332		
		13314	21344	12131		
4510307	Flint	24124	12131	14233		
4511002	FNR	12323				
4510308	Forgestone	14112				
4510309	Formenti	12224	14222	14231		
		22111	13314	12141		
4510310	Fortress	12242	12224			
4510313	Fraba	22413				
4511106	Friac	11132	12323	23322		
4510319	Frontech	14424	21131	24111		
		14232	11132			
4510322	Fujitsu	14143	12131	12323		
		14232	13314	11132		
		22311				
4511457	Fujitsu					
	General	11132	14232			
4510323	Funai	21131	21323			
4510326	Galaxi	12323				
4510327	Galaxis	22413	23313	12323		
4510331	GBC	14222	13314	11132		
		22423	14233			
4510333	GE	31411	12342	13413		
		21233	21244	22144		
		22224				
4511003	Geant Casino	13314	23211			
4510335	GEC	11334	12131	13314		
		22332	31121	14232		
4510336	Geloso	14222	14424	11132		
		13314	22423			
4510337	General	12342	21244	24224		
4510338	General					
	Technic	11132				
4510339	Genexxa	14233	23241			
4510341	Germanvox	14222				

4510345	Goldhand	14231			
4510346	Goldline	22212			
4510347	GoldStar	22413	11311	21313	
		11132	22432	14232	
		14424	14231	13314	
		13413	22332	11341	
4510349	Goodmans	11321	12131	11132	
		21131	31121	21313	
		22423	24324	22341	
		22414	31341	22224	
		14334	11314	24311	
		31411	11311	14232	
		32411	22144		
4510350	Gorenje	22413	23322		
4510351	GPM	14233			
4511248	Gradiente	11422	13333		
4510352	Graetz	22332	22414		
4510353	Granada	23211	14313	11141	
		11342	12131	13213	
		12341	14211	14232	
		12141	11321	22214	
		31121	24232	22144	
		31411			
4510354	Grandin	21233	14233	23211	
		11132	22111	13314	
		24124	32114	32313	
4511107	Gronic	12323	14232		
4510355	Grundig	31224	14114	24324	
		12123	12141	14342	
		31341			
4510359	Halifax2	1131	14231	14232	
4510360	Hampton	14231	14232		
4511108	Hanimex	21323			
4510362	Hanseatic	21321	21233	13314	
		22332	23133	14222	
		22111	11432	23341	
		22413	11132	21323	
		14232	21221	12224	
4510363	Hantarex	11132	14222	21331	
		12323			
4511084	Harwood	11132	23241	11311	
4510370	HCM	21131	11132	21233	
		23241	14232	14233	
		23313			
4510372	Hema	14232	11132		
4510374	Hifivox	12342	14121	23144	
		31431			
4511682	Highline	21131			
4511110	Hikona	14233			
4510377	Hinari	14211	11321	14233	
		11132	13314	22341	
		22314	23434	24324	
		14334	21323		
4510380	Hisawa	21233	14233	23211	
		24124			
4511004	Hit	12224			
4510381	Hitachi	14312	11321	11341	
		11334	24232	13314	
		22224	14121	14123	
		14232	11311	21221	
		31121	12131	13212	
		12332	13413	31341	
4511684	Hitachi Fujian	12341			
4511170	Hitsu	11132	24124	14233	
4511085	Hornophone	11141			
4510384	Hoshai	14233	24124		
4511086	Huanyu	22423	14231		
4510388	Hygashi	14232	14231		
510389	Hyper	11132	14231	14232	
		14424			
4510390	Hypersonic	22332			
4510391	Hypson	21131	14232	21233	
		24124	23211	14343	
4510393	ICE	21131	14232	22414	
		14233	14231	11132	
4511006	Ices	14233	14231		
4510395	Imperial	14424	22413	23313	
		13314	12133	12141	
		14121			
4510396	Indesit	14342	14222		
4511343	Ingelen	24324	32313		
4510398	Ingersoll	11132			
4510401	Inno Hit	11132	12131	14233	
		21313	14232	12141	
		31121	14424		
4511312	Interactive	23234			
4510404	Interbuy	11132	21131	14424	
4510405	Interfunk	11141	12224	21214	
		22124	13314	22332	
		22413	12342	31431	
4510408	Intervision	21233	14232	24124	
		22414	22432	24111	
		22413	23133	24324	
		14233	12323	13314	
		21131	14424		
4510410	Irradio	11132	14233	14424	
		21313	12141		
4510412	Isukai	14233	21233		

4510413	ITC	14232			
4510414	ITS	22414	14233	21233	
		21131	14231		
4510415	ITT	13314	24311	22332	
		24232	14112	22233	
		22214	14211		
4510416	ITT Nokia	22332	13314	24232	
		24311	22233	14211	
		22214	32243	32313	
		32424			
4510417	ITV	21131	14424		
4511314	Jean	11321			
4510420	JEC	11314			
4510425	JVC	11422	13443	11321	
		14111	14112	22414	
		14233	32243		
4510427	Kaisui	14233	21233	14231	
		24124	14232	11132	
4510428	Kamp	14231			
4510429	Kapsch	14143	13314	22332	
		21114	12331		
4510430	Karcher	23322	22413	21233	
		12323	32313	21131	
4511283	Kawasho	14231			
4511177	KB Aristocrat	13314			
4510432	Kendo	22333	14334	14424	
		12323	23341	22413	
		23234	32313	22432	
4510433	Kennedy	14143	14222	13314	
		23414			
4510437	Kingsley	14231			
4510438	Kneissel	23414	21114	21321	
		22413	14343	23234	
		32313			
4510441	Kolster	12323			
4510442	Konka	14233	22414		
4511315	Kontakt	24324			
4510444	Korting	12224	23322	22413	
		22111			
4511181	Kotron	23241	21131		
4511350	Kraking	14343			
4511287	KTV	14232			
4511117	Kyoshu	21131	23241	11311	
		23313			
4510451	Kyoto	23112	11311	13314	
4511451	Lemair	23234			
4510454	Lenco	11132	12331	13314	
4510456	Lenoir	11132			
4510458	Lesa	14424			
4510461	Leyco	21131	12131	21323	
		32114			
4511072	LG	22413	21313	11311	
		11132	22432	14232	
		14424	14231	13314	
		13413	22332		
4511008	Liesenkotter	22124	11141		
4510463	Lifetec	11132	21131	22423	
		14233	33241		
4511240	Lloyd's	11132			
4510471	Lloytron	11311			
4510472	Loewe	12224	21321	22413	
4510474	Logik	11134	14112	22414	
4511456	Logix	33241			
4510478	Luma	14143	22333	13314	
		21114	23234	22423	
		11132			
4511009	Lumatron	14143	22333	13314	
		21114	22332	14232	
		21131	12132		
4510481	Lux May	11132			
4510485	Luxor	14342	21313	24311	
		24341	22332	14211	
		13314	22233	24232	
4511241	LXI	13413			
4510490	Magnadyne	12224	14424	31121	
		12323	13314		
4510491	Magnafon	31121	14222	12141	
		12323	14231		
4510492	Magnavox	11321			
4511071	Magnum	33131			
4510495	Mandor	21131			
4510496	Manesth	14334	14232	21131	
		22111	21221	11314	
		21323			
4510497	Manhattan	33241			
4510503	Marelli	12224			
4510504	Mark	14232	14231	22423	
		11132			
4511342	Masuda	14233	11132	22414	
4510508	Matsui	14334	13412	11132	
		22314	11134	12131	
		11321	31341	24324	
		14232	21323	22414	
		23412	23434	32114	
		24124	31121	11314	
		13314	14211	11342	
		14114	22144		
4510513	McMichael	11334			

4510517	Mediator	31341	11141	
4510518	Medion	33241		
4511121	Megas	32313		
4511291	Megatron	13212	13413	
4510487	Melectronic	22233	12342	22224
		11432	14424	12332
		12331	22423	11132
		14232	24311	24341
		14231	23234	
4511010	Melvox	23211		
4510520	Memorex	11132	13413	14433
4510521	Memphis	22212	12131	11132
		23112		
4510522	Mercury	11132		
4510525	Metz	12224	14114	31224
		23444	14344	14222
		21214	22344	23121
4510526	MGA	13413		
4511317	Micromaxx	33241		
4511295	Midland	11311		
4510531	Minerva	24324	31224	14114
		12123	12141	14342
4510532	Minoka	23241		
4510535	Mitsubishi	12341	12242	13413
		12224	11321	14342
		22323	14112	
4510538	Mivar	21321	21313	21314
		22413	12141	14231
4511186	Monaco	11132		
4510541	Motion	12141		
4511297	Motorola	12242		
4510543	MTC	22413	14231	
4511786	MTEC	11311		
4511187	Multi-			
	broadcast	14112		
4510545	Multi-			
	standard	12323		
4511452	Multitec	33241		
4510547	Multitech	14232	11132	14231
		14424	12323	22413
4510551	Murphy	12331	14231	12131
		13314		
4511791	Musikland	14233		
4510553	NAD	22332	13413	
4511125	Nakimura	22423		
4512099	NAT	14313	22221	
4510562	National	14342	14313	22221

4510564	NEC	13333	11321	22111
		24124	11132	22423
		14232	11134	
4510565	Neckermann	22413	24432	14131
		31341	13314	22124
		23313	12224	14222
		14424	14232	23234
4510566	NEI	22212	22414	
4510567	Nesco	14424		
4510568	Network	11311	22212	
4511012	Neufunk	11132	31341	32313
4510572	New Tech	11132	31341	22224
		14232	24111	
4510571	New World	14233		
4510574	Nicamagic	14231		
4510576	Nikkai	12131	14233	14232
		21131	11311	11314
		22212	14231	11132
		11321		
4510577	Nikko	13413		
4511249	Noblex	21131		
4510578	Nobliko	12323	12141	12123
		14231		
4510579	Nogamatic	23144	12342	14121
		31431		
4510580	Nokia	22332	13314	24311
		24341	24232	22214
		14211	22423	32424
		32243	22233	
4510582	Nordmende	12342	21244	23144
		14121	22224	14123
		14222	31431	31411
		14114	22144	
4511013	Novatronic	12332	22423	
4510588	Oceanic	13314	23211	22332
		21323	14211	
4512100	Odeon	21131		
4510590	Okano	22413	21131	12131
4511014	Omega	21131		
4510595	Onwa	22414	14233	23412
		32122		
4510598	Optimus	14433		
4511299	Optonica	12242		
4510602	Orion	14334	21323	13412
		22111	22314	11134
		11132	22112	22341
		21331	12323	23434
		31341	21131	23241
4511015	Orline	14233		

4511192	Ormond	23112	33241			
4510605	Osaki	12131	14233	11311		
		14232	21131	21221		
		23241	22423			
4510607	Oso	14233				
4510608	Osume	13242	12131	11321		
		11311	14233			
4510610	Otto Versand	24432	11321	12242		
		31341	31224	14114		
		22332	14334	12342		
		14222	21323	14313		
		14424	21344	22111		
		14232				
4510614	Pael	14231				
4510616	Palladium	22413	24432	14131		
		23313	31341	14424		
		22124	12224	13314		
		14222	14232	23234		
4511129	Palsonic	21131	23241	14232		
		22432				
4510619	Panama	11132	14232	21131		
		14231	14424			
4510620	Panasonic	14313	14433	21213		
		14222	22332	14342		
		22344	22221	31121		
		13314				
4510622	Panavision	23234				
4510628	Pathe Cinema	13314	14343	14231		
		23211	22111	21321		
4510629	Pathe					
	Marconi	14222	12342	14121		
		14123	22142	23144		
		14342	31431			
4510631	Pausa	11132				
4510632	Perdio	12131	22111	13314		
4511460	Pershin	23211				
4511131	Phase	11311				
4510634	Philco	12224	12133	23313		
		12141	14222	14424		
		13314	22413	13212		
4510635	Philharmonic	14232				
4510636	Philips	31341	11141	11334		
		12224	14112	22224		
		22423				
4510639	Phoenix	12224	22111	22413		
		23112	14231	13314		
		12131				
4510640	Phonola	31341	11141	12224		
		14112	14231			
4510642	Pioneer	23341	22413	22224		
		22332	12342			
4511132	Pionier	22413				
4510644	Plantron	21131	11132			
4511066	Playsonic	14232				
4510645	Policom	31431				
4510647	Poppy	11132				
4510648	Portland	22423				
4511846	Powerpoint	24324				
4510650	Prandoni-					
	Prince	14424	31121	22332		
		14222	12141			
4510651	Precision	14232				
4510655	Prima	11311	11132	21131		
4510656	Prinz	12131	11432			
4510658	Profex	11132	13314			
4510660	Profitronic	12323				
4510662	Proline	22112	12131	11141		
		32412				
4510664	Prosonic	14231	22413	22423		
		32114	22414	33241		
4510665	Protech	14232	11132	14424		
		12323	21131	23313		
		22212	33241			
4510667	Proton	13413				
4510672	Pye	22423	31341	11141		
		12224				
4510673	Pymi	11132				
4511067	Quadra					
	Vision	23211				
4510677	Quasar	14424	14433			
4510678	Quelle	11134	12342	31224		
		22332	11311	11321		
		14232	14424	12133		
		22124	12123	12331		
		12332	13242	14114		
		14131	14222	21131		
		21313	33241			
4510679	Questa	11321	11311			
4510682	Radialva	12342	14233	13314		
4510684	Radiola	31341	11141			
4510685	Radiomarelli	12224	31121	14424		
4511088	RadioShack	11311	13413			
4510686	Radiotone	11132	23341	22413		
		32114	23313	21131		
		23241	33131			
4510688	Rafena	21332				
4510690	Rank	12123				

4510691	RCA	31411	32412	22144	4510746	Schneider	31341	11141	11432
		12242					21344	23133	22311
4510693	Realistic	11311	13413				21114	22224	14232
4510695	Rediffusion	22332	11321				14424	22414	14233
4510698	Revox	22413					22332	13314	33241
4510699	Rex	14143	23234	14424			33131		
		13314	21114		4510750	Scott	13413		
4510700	RFT	21332	12224	21321	4511324	Sears	13334	13413	
		22413	23341	12131	4510753	SEG	21332	14232	21131
		21131					11132	14424	11321
4511338	Rhapsody	14231					12323	22333	13314
4510701	Roadstar	11132	21131	14233			14231	33241	24324
		23313			4510754	SEI	12224	12323	13314
4510703	Robotron	12224					31121	14222	21323
4511197	Roxy	24111					21331	14143	
4510711	Royal Lux	23322	22413	23241	4510756	Seleco	14143	21114	22333
4510715	Saba	21244	14222	12224			13314	23234	
		23144	13314	12342	4510757	Sencora	11132		
		31121	22224	22332	4510759	Sentra	21221	11314	14233
		24413	14121	14123			11132		
		22144	31431	32412	4511265	Serie Dorada	13413		
4510718	Sagem	24124	32313	21233	4511019	Serino	24124	32313	
4510720	Saisho	14334	31121	13412	4510762	Sharp	12242	13242	11321
		11132	11134	14232			21323	11422	14112
		13314	21131		4510769	Shorai	21323		
4510722	Salora	21313	13314	22332	4510772	Siarem	13314	12224	12323
		22341	31121	22214			14222		
4510723	Sambers	14222	31121	12141	4510773	Siemens	31224	14131	14114
		12323					14222	22124	13242
4511340	Sampo	11311					11311	13213	
4510724	Samsung	31341	32134	11132	4511916	Siera	31341	11141	
		14232	13413	24111	4510776	Siesta	22413		
		22413	21131	12233	4510780	Silva	14231		
		14231	21313	11311	4510781	Silver	11321	22332	
		12131	14211	33121	4510782	Singer	12224	12323	14424
4510726	Sandra	14231	14232				23211	23414	11132
4511139	Sanela	14343			4510783	Sinudyne	13412	12224	14334
4510727	Sansui	22414					12323	14222	21323
4512102	Santon	11132					21331	13314	22332
4510729	Sanyo	14211	13242	21321			31121	14143	
		11321	11134	22413	4510795	Sogera	22111		
		22214	12131	14231	4510797	Solavox	11311	22332	12131
		14232	12331	14222			13314		
		11342	13213	11132	4511927	Sonawa	14233		
		13314	31334		4510801	Sonitron	14211	22413	22214
4510743	SBR	31341	11141				14232		
4510745	Schaub Lorenz	32243			4510802	Sonoko	11132	21131	21233
							14232		

4510803	Sonolor	14211	13314	23211
		24432	22332	
4510804	Sontec	22413	21323	
4510805	Sony	24432	11134	11321
		12323	12133	
4510806	Sound & Vision	12323	14233	22423
4510807	Soundesign	13413		
4510809	Soundwave	22111	23313	11311
4511143	Ssanyong	11311	11132	
4510812	Stag	11311		
4510813	Standard	14233	11132	14232
		22111	22423	
4510817	Starlite	11132	13314	21131
4510822	Stenway	21233	14233	
4510823	Stern	14143	21114	13314
4511020	Strato	21131	11132	
4510828	Sunkai	21323	22314	22112
		24124	14233	14334
		24324		
4510831	Sunstar	22414	11132	32114
4510833	Sunwood	11132		
4510835	Superla	31121	14231	
4510838	SuperTech	11132	14231	31341
		14233		
4510839	Supra	22423	11132	
4510840	Susumu	22144		
4510841	Sutron	11132		
4511319	Swissline	14424		
4510842	Sydney	14231	14232	
4510843	Symphonic	13334		
4511021	Sytong	14231		
4510849	Tandberg	22344	23234	12342
		22212	14121	22333
		22332		
4510850	Tandy	14233	12131	14232
		14424	21221	12242
4510852	Tashiko	11321	11334	14232
		13213	13333	11311
		14231	13314	
4510853	Tatung	12131	31121	14232
		11134		
4510854	Teac	24124	21131	11132
		13334	23241	13413
4510855	TEC	14232	21221	11132
		14424	24224	22144
		22212	21114	
4511320	Tech Line	33241		
4512107	Techica	14233		

4510856	Technema	22111		
4510857	Technics	14433		
4511453	Tedalex	14232		
4511978	Teiron	11132		
4510866	Teleavia	12342	21244	14121
		23144	22142	31431
4510870	Telecor	13314	14233	14232
		21114	23133	
4510872	Telefunken	12342	24413	24224
		23144	21244	12133
		12322	22144	21123
		12132	22224	14121
		31431	32412	
4510874	Telegazi	13314	21114	14233
		21131		
4510878	Telemeister	22111		
4510884	Teletech	11132	14424	22212
		33241		
4510885	Teleton	14232	21214	14143
		13314	21114	11321
4510887	Televideon	22111	13314	14231
4511022	Televiso	23211		
4510889	Temco	21323		
4511334	Tempest	11132		
4510891	Tensai	12331	14233	14232
		21323	22111	11132
		12332	22423	22414
		22432	14424	
4511023	Tenson	22111	11132	
4511461	Tevion	33131	33241	
4510892	Textet	14232	22423	11132
4510895	Thomson	21244	23144	12342
		22142	24224	22144
		14121	14123	14342
		22224	31431	31411
		32412		
4510897	Thorn	14112	12132	13443
		14343	14111	12133
		12331	22144	22423
		11314		
4511329	TMK	13413		
4510900	Tokai	12131	24111	22212
		13314	14232	22423
		11132		
4510901	Tokyo	14231	11314	24111
4510902	Tomashi	21233	14233	
4510905	Toshiba	11314	24441	14414
		11321	12123	12323
		14232		

4510906	Towada	12323	14232	
4512109	Toyoda	11132		
4512110	Trakton	21131		
4510908	Trans			
	Continens	14232		
4512111	Transonic	24124	32134	
4512008	Transtec	14231		
4510913	Trident	31121	14232	
4510915	Tristar	14233	14112	
4510916	Triumph	13412	31121	22233
		31341	14414	
4510919	Uher	12141	11432	14143
		22111	21344	22423
		23313	22413	21114
4511148	Ultra	14111		
4510920	Ultravox	12224	12323	22423
		14424	14231	13314
		14222		
4511024	Unic Line	24232		
4510929	Universum			
4510930	Univox	22212	12224	13314
		14343		
4510937	Vestel	13314	14232	
4510938	Vexa	11132		
4510939	Victor	11422		
4510942	Videologique	14231	14233	14232
4510944	Videotechnic	14231	22111	14232
		22423		
4511025	Videoton	13314		
4511322	Vidikron	12323		
4511330	Vidtech	11321	13413	
4510947	Viper	22212		
4510949	Visiola	14231		
4510950	Vision	22111		
4510954	Vistar	21221	14143	22332
4510957	Voxson	12224	12141	23313
4510958	Waltham	14232	21221	23313
		21244	23112	
4510959	Watson	22111	13314	14233
		14222	32114	23133
		11132	33241	
4510960	Watt Radio	14222	12323	13314
		14231		
4510961	Wega	14222	11321	12224
4511026	Wegavox	11132		
4510963	Weltblick	22111		
4510967	White			
	Westinghouse	22111	14231	22212
4511264	Winco	23241		

4511027	Windstar	21233		
4510979	Yamishi	21233	24124	14233
		14232		
4510981	Yoko	14232	14233	21131
		11132	23322	22413
		22214	14231	14424
4510983	Yorx	14233		
4510984	Zanussi	14143	14232	
4511219	Zenor	22214		

* Excludes a few models in the LS, LX and MX series.

* Ausschließlich einige Modelle der LX, LS und MX Serie.

* Exclut quelques modèles de la serie LX, LS et MX.

* Excluye unos pocos modelos de la serie LX, LS y MX modelos.

* Exclui alguns modelos da série LX, LS y MX.

* Sono esclusi modelli della serie LX, LS e MX.

* Exclusief een paar modellen in de LX, MX en LS serie.

GARANTIA E UNIVERSAL ELECTRONICS/ONE FOR ALL garantiza al comprador que este producto estará libre de defectos materiales o de fabricación, al menos durante 1 año desde la fecha actual de su adquisición, y en caso de que se utilice de un modo normal y correcto. Este producto será sustituido de forma gratuita siempre y cuando se pueda demostrar que es defectuoso y que esto haya sucedido dentro del año de garantía, corriendo a cuenta del comprador los gastos de su devolución. Esta garantía no cubre embalajes, maletines, envoltorios, pilas, armarios u otros objetos utilizados en conexión con este producto. Se excluyen otras obligaciones, cualesquiera que sean, además de las mencionadas más arriba. Por favor, asegúrese de tener su recibo o ticket de compra para que podamos establecer su legitimidad a este servicio.


GARANTIA P A UNIVERSAL ELECTRONICS INC./ONE FOR ALL garante ao cliente a a protecção deste produto no que respeita a defeitos de fabrico de material, dentro de um período de uso correcto e normal de 1 ano a partir da data da compra do mesmo produto. Este produto será substituído sem qualquer encargo no caso de ter sido comprovada qualquer avaria dentro do período de 1 ano e após o seu retorno (custos de envio da responsabilidade do consumidor) dentro deste mesmo prazo.


Esta garantia não cobre embalagens de cartão, caixas, pilhas, ou outros itens usados em conjunto com este produto. Qualquer outra obrigação para além daquela acima descrita não será tida em consideração. Por favor tome nota que se lhe á pedido o comprovativo de compra, de forma a que possamos confirmar a sua legitimidade para este serviço.


GARANTIA I La compagnia Universal Electronics inc./ ONE FOR ALL garantisce l' acquisto originale che questo prodotto sarà esente da difetti di mano d' opera dietro l' utilizzo proprio di 1 anno. Questo prodotto sarà sostituito gratuitamente se verrà provato che è difettoso entro l' anno di garanzia e ovviamente accompagnato dalla prova dello scontrino che assicura la data d' acquisto. La garanzia non copre la scatola, l' imballaggio, le pile o ogni altro articolo che abbia a che vedere con il prodotto. Non ci sono ulteriori obblighi di qui sopra elencati. Vi chiediamo cortesemente di conservare lo scontrino affinché noi possiamo stabilire la vostra credibilità, per richiedere un nostro servizio.

GARANTIE NL UNIVERSAL ELECTRONICS INC./ONE FOR ALL garanteert de klant, dat dit produkt bij normaal en correct gebruik vrij van materiële of technische defecten zal blijven voor een periode van één jaar, gerekend vanaf de datum van aankoop. Als aangetoond kan worden dat binnen de periode van één jaar een defect is ontstaan, zal dit produkt gratis vervangen worden als het genoemde produkt op kosten van de klant binnen de garantieperiode teruggestuurd wordt. Deze garantie is niet van toepassing voor verpakkingen, dozen voor transport, batterijen, gebroken of beschadigde kasten of enig ander object, dat in verbinding met dit produkt gebruikt wordt. Elke andere verplichting dan het bovengenoemde wordt uitgesloten. Wij maken u erop attent dat wij uw bewijs van aankoop nodig hebben om vast te stellen of u voor deze garantieservice in aanmerking komt.

Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands

Guarantee  UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

GARANTIE  UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantiert dem Kunden, dass dieses Produkt bei sachgemäsem und ordentlichem Gebrauch für die Dauer eines Jahres vollkommen frei von Defekten materieller oder technischer Art bleiben wird, gerechnet ab Kaufdatum. Falls erwiesen werden kann, dass innerhalb der Garantiezeit eines Jahres ein Defekt entstanden ist, wird dieses Produkt gebührenfrei ersetzt, falls besagtes Produkt innerhalb der Garantiezeit auf Kosten des Kunden zurückgeschickt wird. Diese Garantie erstreckt sich nicht auf Verpackungen, Transportbehältnisse, Batterien, zerbrochene oder beschädigte Gehäuse oder andere Objekte, die in Verbindung mit dem Produkt verwendet werden. Jegliche weitere Verpflichtung als die oben aufgeführte wird ausgeschlossen. Bitte beachten Sie, dass wir Ihren Kaufbeleg brauchen und fest zu stellen ob Sie Anspruch auf unseren Garantieservice erheben können.

GARANTIE  UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantit à l'acheteur d'origine que ce produit est certifié franc de défauts matériels et de main d'œuvre durant une période d'un (1) an à partir de la date d'achat original à la condition exclusive que ce produit ait été utilisé de manière normale et correcte. Ce produit sera remplacé gratuitement s'il s'est révélé défectueux pendant ladite période d'un (1) an, produit devant être retourné à la charge du client durant la période de garantie. Cette garantie ne saurait couvrir d'aucune manière que ce soit emballages en carton, coffrets portables quelconques, piles, corps d'appareil cassé ou endommagé ou tout autre article utilisé en combinaison avec ce produit. Nous nous réservons le droit de rejeter tout autre engagement que ceux cités plus haut. Veuillez noter que la preuve d'achat est obligatoire afin de pouvoir déterminer votre droit à ce service.

Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands



Printed on Recycled Paper

DD-0402

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>