




**URC 7200 / 7201
Cinema 7**

User Manual

FEATURES AND FUNCTIONS

Here are the features and functions of the *Cinema 7* universal remote control. Use the drawing to locate each feature of the remote, then refer to the chart for a description of what function each feature performs.

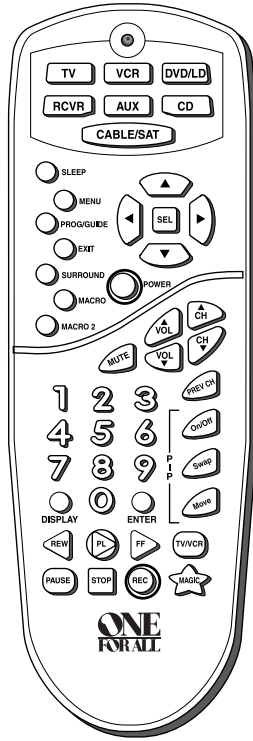

FEATURES AND FUNCTIONS

- The Light (LED) flashes red to show that the remote is working and is sending a signal.
- The **MAGIC** key is used to program your *Cinema 7*.
- The **POWER** key controls power ON and OFF the same as the POWER key on your original remote. Please note that most CD Players do not have an ON/OFF function on the original remote control. If this is the case with your CD Player, then **POWER** will have no effect on your CD Player.
- The **TV**, **VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** and **CABLE/SAT** keys are used to select the home entertainment component you want to control. If your component does not respond when you press a key on the remote control, press the appropriate device key (**TV**, **VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CABLE/SAT**) first to tell the remote control which component you would like the remote to operate.
- The **VOL▲** (Volume Up), **VOL▼** (Volume Down) and **MUTE** keys control the volume the same as the Volume Up and Down and Mute keys on your original remote.
- The **CH▲** (Channel Up) and **CH▼** (Channel Down) keys change channels the same as the Channel Up and Down keys on your original remote. The **CH▲/▼** keys also control the following functions in other modes: **DVD/LD** mode = Skip Forward/ Skip Reverse, **RCVR**, **AUX** and **CD** mode = Preset Up/Preset Down.
- The Digit keys (**0-9**) control direct channel access the same as the Digit keys on your original remote. The Digit keys (**0-9**) also control the following functions in other modes: **RCVR** and **AUX** modes = Input Selections.
- The **ENTER** key operates the same as the Enter key on your original remote. If your original remote control required you to use an Enter key to change channels, use the **ENTER** key on the *Cinema 7* after entering your channel number. The **ENTER** key also controls the following functions in other modes: **RCVR** and **AUX** modes = TAPE MON.



- The **PREV CH** (Previous Channel) key operates the same as the Last Channel or Recall key on your original remote. The **PREV CH** key also controls the following functions in other modes: **DVD/LD**, **RCVR**, **AUX** and **CD** mode = Random.
- The **CH▲/▼**, **VOL▲/▼**, **MUTE**, **PREV CH** and Digit (**0-9**) keys are made of a phosphorescent material that glows-in-the-dark. Expose the keys to bright light to activate the glow-in-the-dark feature. The length of time the keys remain illuminated will be determined by the length of time the remote is exposed to bright light.
- The **SLEEP** key accesses the Sleep Timer of your home entertainment components (**TV**, **CABLE/SAT**, **RCVR** and **AUX** modes only). Even if your component does not have a Sleep Timer, the *Cinema 7* may access its own built-in sleep timer.
- The **REW** (Rewind), **PL** (PLAY), **FF** (Fast Forward) **REC** (Record), **STOP** and **PAUSE** keys operate the same as the transport keys on your original VCR, Laser Disc, DVD and CD Player remote. As a safety feature of the *Cinema 7*, you must press the **REC** key twice before recording.
- The **TV/VCR** key operates the same as the TV/VCR key on your original VCR remote. The **TV**, **VCR** key also controls the following functions in other modes: **TV** mode = TV/VIDEO, **CBL/SAT** mode = A/B or TV/SAT, **DVD/LD** mode = TV/LD, **RCVR** mode = Input Select, **CD** mode = A/B.
- The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. Use **▲**, **▼**, **◀**, and **▶** (Menu Up, Down, Left and Right) to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.
- The **▲**, **▼**, **▲**, and **▼** (Menu Up, Down, Left and Right) keys are used to navigate your On-Screen menus. The **◀**, **▶**, **▲**, and **▼** keys also control the following functions in other modes: **RCVR** and **AUX** mode = Rear Level +/- and Balance Left/Right, **CD** mode = Track +/- and Disc +/-.
- The **SEL** (Select) key selects options in your On-Screen menus. The **SEL** key also controls the following functions in other modes: **RCVR** and **AUX** mode = Surround mode, **CD** mode = Disc Select, **DVD/LD** mode = Chapter.
- The **EXIT** key exits or clears your on-screen menus. The **EXIT** key also controls the following functions in other modes: **RCVR**, **AUX** and **CD** mode = Open/Close.
- The **PROG/GUIDE** key operates your components secondary menus as well as your DBS system's and Cable Converter's Guide function. Use the **▲**, **▼**, **▲**, and **▼** (Menu Up, Down, Left and Right) keys to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.
- The **DISP** key operates the Display function of your home entertainment components.
- The **PIP On/Off** key accesses your TV's Picture-in-Picture feature. The **PIP On/Off** key also controls the following functions in other modes: **CD** mode = Disk Skip, **DVD/LD** mode = Subtitle On/Off, **CBL/SAT** mode = View.
- The **SWAP** key swaps the Picture-in-Picture window and the TV's main picture. The **SWAP** key also controls the following functions in other modes: **CBL/SAT** mode = SAT.
- The **MOVE PIP** key moves the Picture-in-Picture window around your TV screen. The **MOVE PIP** key also controls the following

- functions in other modes: **DVD/LD** mode = Angle, **CBL/SAT** mode = Next.
 - The **SURROUND** key operates the same as the Surround On/Off key on your original remote. The **SURROUND** key also controls the following functions in other modes: **VCR** mode = Auto Tracking, **DVD/LD** mode = Disc, **CBL/SAT** mode = Favorite Channel, **CD** mode = 10+.
 - The **MACRO** and **MACRO 2** keys can memorize up to 15 keystrokes per key that can be accessed in sequence with a single key press. These keys are not mode specific.
- ### INSTALLING THE BATTERIES
- Your *Cinema 7* requires four (4) new AAA alkaline batteries. To install the batteries:
- On the back of the *Cinema 7*, pull back on the tab and lift the battery cover off.
 - Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
 - Press the battery cover back into place.
 - Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light will blink.
- NOTE:** Removing the batteries will not require you to reprogram your remote control because the *Cinema 7* has unlimited memory backup.
- ### SETTING UP YOUR COMPONENTS
- #### Programming the *Cinema 7* to operate your TV:
- Locate the brand name of your TV and then write it in the space below.
- TV Brand: _____
- Locate the brand name of your TV in the "Setup Codes For TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your TV.
- To program the *Cinema 7* to operate your TV:
- Turn on your TV.
 - Press **TV** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit TV code listed for your brand in the "Setup Codes For TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
 - Your *Cinema 7* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.
- Remember, if you want to use your *Cinema 7* to operate your TV, press the **TV** key first.
- #### Programming the *Cinema 7* to operate your VCR:
- Locate the brand name of your VCR and then write it in the space below.
- VCR Brand: _____
- Locate the brand name of your VCR in the "Setup Codes For VCRs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your VCR.
- To program the *Cinema 7* to operate your VCR:
- Turn on your VCR and insert a tape.
 - Press **VCR** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit VCR code listed for your brand in the "Setup Codes For VCRs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a POWER key, press **PL** (Play). Your VCR should start to play. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.
 - Your *Cinema 7* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

- Remember, if you want to use your *Cinema 7* to operate your VCR, press the **VCR** key first.
- NOTE:** If your TV/VCR is working on one of the above codes highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the *Cinema 7* to Operate Your TV" section to program the supplied TV code. TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control. TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control. TV/VCRs working on VCR code 0048 may require TV code 0093 for volume control. TV/VCRs working on VCR code 0060 may require TV code 0047 for volume control. TV/VCRs working on VCR code 0081 may require TV code 0054 for volume control. TV/VCRs working on VCR code 0162 may require TV code 0250 for volume control. TV/VCRs working on VCR code 0278 may require TV code 0451 for volume control.
- #### Programming the *Cinema 7* to operate your DVD or Laser Disc Player:
- Locate the brand name of your DVD or Laser Disc Player and then write it in the space below.
- DVD/LD Brand: _____
- Locate the brand name of your DVD or Laser Disc Player in the "Setup Codes For DVD or Laser Disc Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your DVD or Laser Disc Player.
- To program the *Cinema 7* to operate your DVD or Laser Disc Player:
- Turn on your DVD or Laser Disc Player and insert a disc.
 - Press **DVD/LD** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit DVD or Laser Disc Player code listed for your brand in the "Setup Codes For DVD or Laser Disc Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your DVD or Laser Disc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If your DVD or Laser Disc Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your DVD or Laser Disc Player.
 - Your *Cinema 7* is now programmed to operate your DVD or Laser Disc Player. Write your DVD or Laser Disc Player code in the boxes to the left for future reference.
- Remember, if you want to use your *Cinema 7* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.
- #### Programming the *Cinema 7* to operate your Receiver/Tuner:
- Locate the brand name of your Receiver/Tuner and then write it in the space below.
- Receiver/Tuner Brand: _____
- Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receivers/Tuners" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Receiver/Tuner.
- To program the *Cinema 7* to operate your Receiver/Tuner:
- Turn on your Receiver/Tuner.
 - Press **RCVR** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your Receiver/Tuner and press **POWER**. Your Receiver/Tuner should turn off. If your Receiver/Tuner does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Receiver/Tuner.
 - Your *Cinema 7* is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.
- Remember, if you want to use your *Cinema 7* to operate your Receiver/Tuner, press the **RCVR** key first.
- #### Programming the *Cinema 7* to operate your CD Player:
- Locate the brand name of your CD Player and then write it in the space below.
- CD Player Brand: _____

- Locate the brand name of your CD Player in the "Setup Codes For CD Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your CD Player.
- To program the *Cinema 7* to operate your CD Player:
- Turn on your CD Player and insert a disc.
 - Press **CD** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit CD Player code listed for your brand in the "Setup Codes For CD Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your CD Player and press **PL** (Play). Your CD Player should play your disc. If your CD Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.
 - Your *Cinema 7* is now programmed to operate your CD Player. Write your CD Player code in the boxes to the left for future reference.
- Remember, if you want to use your *Cinema 7* to operate your CD Player, press the **CD** key first.
- #### Programming the *Cinema 7* to operate your Cable Converter or Satellite:
- Locate the brand name of your Cable Converter or Satellite and then write it in the space below.
- Cable Converter Brand: _____
or
Satellite Brand: _____
- Locate the brand name of your Cable Converter or Satellite in the "Setup Codes For Cable Converters or Satellites" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Cable Converter or Satellite.
- To program the *Cinema 7* to operate your Cable Converter or Satellite:
- Turn on your Cable Converter or Satellite.
 - Press **CABLE/SAT** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit Cable Converter or Satellite code listed for your brand in the "Setup Codes For Cable Converters or Satellites" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your Cable Converter or Satellite and press **POWER**. Your Cable Converter or Satellite should turn off. If your Cable Converter or Satellite does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite.
 - Your *Cinema 7* is now programmed to operate your Cable Converter or Satellite. Write your Cable Converter or Satellite code in the boxes to the left for future reference.
- Remember, if you want to use your *Cinema 7* to operate your Cable Converter or Satellite, press the **CABLE/SAT** key first.
- #### Programming the AUX Key:
- The **AUX** key is already set up to accept codes for a second Receiver/Tuner, Amplifier or other audio component. If you would like to set up the **AUX** key for an audio component, follow the instructions listed below. If you would like the **AUX** key to control a second TV, VCR, Cable Converter or other component, follow the instructions in the "Re-assigning Device Keys" section to re-assign the **AUX** key to accept codes for other components. For example, if you are setting up an Amplifier: Locate the brand name of your Amplifier and then write it in the space below.
- Amplifier Brand: _____
- Locate the brand name of your Amplifier in the "Setup Codes For Amplifiers" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Amplifier.
- To program the *Cinema 7* to operate your Amplifier:
- Turn on your Amplifier.
 - Press **AUX** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - Enter the first four-digit Amplifier code listed for your brand in the "Setup Codes For Amplifiers" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your Amplifier and press **POWER**. Your Amplifier should turn off. If your

- Amplifier does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Amplifier.
- Your *Cinema 7* is now programmed to operate your Amplifier. Write your Amplifier code in the boxes to the left for future reference.
- Remember, if you want to use your *Cinema 7* to operate your Amplifier, press the **AUX** key first.
- ### SEARCHING FOR YOUR CODE
- If your TV, VCR or Cable Converter does not respond to the *Cinema 7* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *Cinema 7* to operate your TV, then:
- Turn on your TV.
 - Press **TV** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - 9 - 9 - 1** Press **9 - 9 - 1**.
 - Slowly alternate between pressing **POWER*** and **TV** until your TV turns OFF. Make sure that the *Cinema 7* is aimed at your TV during the search. You may have to press this sequence of buttons (**POWER*** then **TV**) up to 100 times to search the entire library of codes.
 - When your TV turns OFF, press and release **MAGIC** to lock in the code for your TV. Your *Cinema 7* is now programmed to operate your TV.
- *If you are searching for your VCR, CD, LD or DVD Player code, you may want to use the **PL** (Play) key instead of the **POWER** key to search for your code. When your VCR starts to play, press **MAGIC** to lock in your code.
- NOTE:** To search for the codes of your other components, repeat Steps 1 through 4, only substitute the appropriate device key (**VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CABLE/SAT**) for the component you are searching for.
- ### LEARNING THE CODES PROGRAMMED INTO THE CINEMA 7
- If you have set up the *Cinema 7* using the "SEARCHING FOR YOUR CODE" procedure, you may want to figure out which three-digit code is operating your equipment. Use this procedure after you have set up your components to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "SEARCHING FOR YOUR CODE" procedure:
- Press **TV** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.
 - 9 - 9 - 0** Press **9 - 9 - 0**.
 - 1** For the first digit of your four-digit code, press 1 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 1, the digit is zero.
 - 2** For the second digit, press 2 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 2, the digit is zero.
 - 3** For the third digit, press 3 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 3, the digit is zero.
 - 4** For the fourth and final digit, press 4 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 4, the digit is zero. Now you have your four-digit code.
- NOTE:** To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (**VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CABLE/SAT**) for the component code you wish to learn.
- ### SETTING UP OTHER COMPONENTS
- In addition to the components labeled on the device keys (**TV**, **VCR**, **DVD/LD**, **CBL/SAT**, etc.), the *Cinema 7* can also operate the following components: Cassette Decks, Infrared Home Automation, Video Accessories and Miscellaneous Audio Components (Graphic Equalizers and Digital Music Service Boxes).
- The Setup Codes for these components can be accessed under the following device keys:
- | | |
|----------------------|---------------------------------------|
| Cassette Decks: | Use the VCR Key |
| IR Home Automation: | Use the CD Key |
| Video Accessories: | Use the CBL/SAT Key |
| Miscellaneous Audio: | Use the AUX or RCVR Key |
- For example, to set up a Cassette Player on the VCR key:
- Turn on your Cassette Player and insert a tape.
 - Press **VCR** and release. Press and hold **MAGIC** until the *Cinema 7*'s red light blinks twice, then release **MAGIC**.

- Enter the first four-digit Cassette Player code listed for your brand in the "Setup Codes For Audio Cassettes" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
 - Aim the *Cinema 7* at your Cassette Player and press **PL** (Play). Your Cassette Player should play your tape. If your Cassette Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cassette Player.
 - Your *Cinema 7* is now programmed to operate your Cassette Player. Remember, if you want to use your *Cinema 7* to operate your Cassette Player, press the **VCR** key first.
- ### RE-ASSIGNING DEVICE KEYS
- You can use the *Cinema 7* to operate a second TV or a second VCR or any combination of seven home entertainment components. For example, you may want your *Cinema 7* to control 1 TV, 1 Cable Converter, 1 Receiver, 1 CD Player, 1 DVD Player and 2 VCRs. To accomplish this, you must re-assign one of the device keys to operate the desired component, in this case, a second VCR. The chart below shows you how to re-assign a particular device key and then set up your new component.
- | | |
|-------------------|---|
| TV to VCR | MAGIC* + 992 + VCR + TV + TV + MAGIC* + VCR code |
| TV to DVD/LD | MAGIC* + 992 + DVD/LD + TV + TV + MAGIC* + DVD or LD Player code |
| TV to RCVR | MAGIC* + 992 + RCVR + TV + TV + MAGIC* + Audio code |
| TV to AUX | MAGIC* + 992 + AUX + TV + TV + MAGIC* + Audio code |
| TV to CD | MAGIC* + 992 + CD + TV + TV + MAGIC* + CD Player code |
| TV to CBL/SAT | MAGIC* + 992 + CBL/SAT + TV + TV + MAGIC* + Cable/DBS code |
| VCR to TV | MAGIC* + 992 + TV + VCR + VCR + MAGIC* + TV code |
| VCR to DVD/LD | MAGIC* + 992 + DVD/LD + VCR + VCR + MAGIC* + DVD or LD Player code |
| VCR to RCVR | MAGIC* + 992 + RCVR + VCR + VCR + MAGIC* + Audio code |
| VCR to AUX | MAGIC* + 992 + AUX + VCR + VCR + MAGIC* + Audio code |
| VCR to CD | MAGIC* + 992 + CD + VCR + VCR + MAGIC* + CD Player code |
| VCR to CBL/SAT | MAGIC* + 992 + CBL/SAT + VCR + VCR + MAGIC* + Cable/DBS code |
| DVD/LD to TV | MAGIC* + 992 + TV + DVD/LD + DVD/LD + MAGIC* + TV code |
| DVD/LD to VCR | MAGIC* + 992 + VCR + DVD/LD + DVD/LD + MAGIC* + VCR code |
| DVD/LD to RCVR | MAGIC* + 992 + RCVR + DVD/LD + DVD/LD + MAGIC* + Audio code |
| DVD/LD to AUX | MAGIC* + 992 + AUX + DVD/LD + DVD/LD + MAGIC* + Audio code |
| DVD/LD to CD | MAGIC* + 992 + CD + DVD/LD + DVD/LD + MAGIC* + CD Player code |
| DVD/LD to CBL/SAT | MAGIC* + 992 + CBL/SAT + DVD/LD + DVD/LD + MAGIC* + Cable/DBS code |
| RCVR to TV | MAGIC* + 992 + TV + RCVR + RCVR + MAGIC* + TV code |
| RCVR to VCR | MAGIC* + 992 + VCR + RCVR + RCVR + MAGIC* + VCR code |
| RCVR to DVD/LD | MAGIC* + 992 + DVD/LD + RCVR + RCVR + MAGIC* + Audio code |
| RCVR to CD | MAGIC* + 992 + CD + RCVR + RCVR + MAGIC* + CD Player code |
| RCVR to CBL/SAT | MAGIC* + 992 + CBL/SAT + RCVR + RCVR + MAGIC* + Cable/DBS code |
| AUX to TV | MAGIC* + 992 + TV + AUX + AUX + MAGIC* + TV code |
| AUX to VCR | MAGIC* + 992 + VCR + AUX + AUX + MAGIC* + VCR code |
| AUX to DVD/LD | MAGIC* + 992 + DVD/LD + AUX + AUX + MAGIC* + DVD or LD Player code |
| AUX to CD | MAGIC* + 992 + CD + AUX + AUX + MAGIC* + CD Player code |
| AUX to CBL/SAT | MAGIC* + 992 + VCR + AUX + AUX + MAGIC* + Cable/DBS code |
| CD to TV | MAGIC* + 992 + TV + CD + CD + MAGIC* + TV code |
| CD to VCR | MAGIC* + 992 + VCR + CD + CD + MAGIC* + VCR code |
| CD to DVD/LD | MAGIC* + 992 + DVD/LD + CD + CD + MAGIC* + DVD or LD Player code |
| CD to RCVR | MAGIC* + 992 + RCVR + CD + CD + MAGIC* + Audio code |
| CD to AUX | MAGIC* + 992 + AUX + CD + CD + MAGIC* + Audio code |
| CD to CBL/SAT | MAGIC* + 992 + CBL/SAT + CD + CD + MAGIC* + Cable/DBS code |
| CBL/SAT to TV | MAGIC* + 992 + TV + CBL/SAT + CBL/SAT + MAGIC* + TV code |
| CBL/SAT to VCR | MAGIC* + 992 + VCR + CBL/SAT + CBL/SAT + MAGIC* + VCR code |
| CBL/SAT to DVD/LD | MAGIC* + 992 + DVD/LD + CBL/SAT + CBL/SAT + MAGIC* + DVD or LD code |
| CBL/SAT to RCVR | MAGIC* + 992 + RCVR + CBL/SAT + CBL/SAT + MAGIC* + Audio code |
| CBL/SAT to AUX | MAGIC* + 992 + AUX + CBL/SAT + CBL/SAT + MAGIC* + Audio code |
| CBL/SAT to CD | MAGIC* + 992 + CD + CBL/SAT + CBL/SAT + MAGIC* + CD Player code |
- *NOTE:** Here (*) you must hold **MAGIC** until the *Cinema 7*'s red light blinks twice.

PROGRAMMING THE MACRO KEYS

The *Cinema 7* has two Macro keys (**MACRO** and **MACRO2**) that allow the user to play back a series of keystrokes, at any time, with the press of one key. For example, to set up a sequence that will turn on your components and change the components to the proper inputs:

- Press and hold **MAGIC** until the *Cinema 7*s red light blinks twice, then release **MAGIC**.
- 9-9-5** Press **9-9-5**. The *Cinema 7*s red light will blink twice.
- MACRO** Press and release one of the **MACRO** keys. This will be the key that will play back the series of keystrokes assigned to that key.
OR
MACRO2
- Begin entering the sequence of keystrokes, up to 15, that you wish to be played back when you press the **MACRO** key. For example:

RCVR + POWER + TV + POWER + TV/VCR
(To change the input on the TV to VIDEO 1) + **CBL/SAT + POWER**.

- Once your sequence is entered, press and hold **MAGIC** until the *Cinema 7*s red light blinks twice.

Now, using the example above, whenever the programmed **MACRO** key is pressed, the Receiver would power ON, the TV will power ON and change the input to VIDEO 1 and then the Satellite would power ON. Repeat steps 1 - 5 to then setup a second sequence on the **MACRO2** key.

VOLUME LOCK

Volume Lock allows the user to designate which component will control the volume in the **TV, DVD/LD** and **CBL/SAT** modes. To set the Volume Lock to the **TV mode**:

- Press and hold **MAGIC** until the *Cinema 7*s red light blinks twice, then release **MAGIC**.

- 9-9-3** Press **9-9-3**. The *Cinema 7*s red light will blink twice.

- TV** Press and release **TV**. The *Cinema 7*s red light will blink twice.

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** in the **VCR, DVD/LD** and **CBL/SAT** modes your TV will control the volume. If you would like to change the Volume Lock setting to the **VCR, DVD/LD** or **CBL/SAT** modes repeat steps 1-3, only substitute the appropriate device key. Setting the Volume Lock to the **TV, VCR, DVD/LD** or **CBL/SAT** mode will not effect the volume control in the **RCVR, AUX** and **CD** mode.

You can also change the Volume Lock setting so that an Audio component controls the volume in all device modes. To change the Volume Lock setting on the *Cinema 7* to the **RCVR** or **AUX** mode:

- Press and hold **MAGIC** until the *Cinema 7*s red light blinks twice, then release **MAGIC**.

- 9-9-3** Press **9-9-3**. The *Cinema 7*s red light will blink twice.

- RCVR** Press and release **RCVR** or **AUX**. The *Cinema 7*s red light will blink twice.
OR
AUX

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** your Audio component will control the volume in all device modes.

You can also change the Volume Lock setting so that each component controls its own volume. However, some components do not have volume control. Using this setting may eliminate volume control in some device modes. To change the Volume Lock setting on the *Cinema 7* so each mode controls its own volume:

- Press and hold **MAGIC** until the *Cinema 7*s red light blinks twice, then release **MAGIC**.

- 9-9-3** Press **9-9-3**. The *Cinema 7*s red light will blink twice.

- VOL▲** Press and release **VOL▲**. The *Cinema 7*s red light will blink twice.

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** on the *Cinema 7* each component will control its own volume, provided each component has volume control.

USING THE SLEEP KEY

The **SLEEP** key allows you to access the sleep timer of your TV, Cable Converter/DBS Satellite or Audio component. You can access your TV, Cable Converter, DBS Satellite or Audio component's Sleep Timer by pressing the **SLEEP** key. Most Sleep Timers advance in increments of 10 or 15 minutes, however, for specific instructions on setting your components Sleep Timer, please consult your original owners manual.

Even if your original Cable Converter remote control did not have a sleep timer, your *Cinema 7* has its own built-in sleep timer. If your Cable Converter does not have a sleep timer, press the **SLEEP** key to activate the *Cinema 7*s built-in sleep timer. For example:

- Press and release the **CBL/SAT** key then press the **SLEEP** key once to set the *Cinema 7*s built-in sleep timer for 15 minutes. The red light will blink once.
- Each additional press of the **SLEEP** key will add 15 more minutes to the Sleep Timer, up to a maximum of 60 minutes. The LED will blink twice when the sleep timer is set for 30 minutes, 3 times for 40 minutes, or 4 times for 60 minutes.

NOTE: The sleep timer starts 10 seconds after the last press of the **SLEEP** key. Once you have activated the *Cinema 7*s built-in sleep timer, you must keep the remote control aimed directly at the component.

- To de-activate the built-in sleep timer, press **POWER**.

NOTE: Plugging your TV into the outlet on the back of the Cable Converter may allow you to turn both your Cable Converter and your TV ON and OFF.

TROUBLE SHOOTING

Problem	Solution
Red light does not blink when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The <i>Cinema 7</i> does not operate your home entertainment components or is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Setup Codes" section. Many setup codes may allow for partial functionality, however, only one setup code will operate your home entertainment component correctly. Make sure that all of the components you are setting up can be operated with an infrared remote control.
The <i>Cinema 7</i> is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow some degree of operation. However, only one set-up code will work correctly with your home entertainment component.
Problems programming a TV/VCR combo?	Try the VCR set-up codes for your brand. However, some combo units may require both a TV code for volume control and a VCR code for the remaining functions.
VCR not recording?	As a safety feature on the <i>Cinema 7</i> , you must press the REC key twice.
CH ▲/▼ and PREV CH not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions.
Problems changing channels?	If your original remote control required an Enter keystroke when changing channels, press the ENTER key on the <i>Cinema 7</i> after you enter the channel number.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>Cinema 7</i> at your home entertainment component and that you are within 15 feet before using your remote.

Consumer Help Line: 1-330-405-8601

World Wide Web: www.oneforall.com

ONE FOR ALL® PRODUCTS 90-DAY Limited Warranty

One For All® warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This limited warranty is valid only on ONE FOR ALL® product purchased and used in the United States of America or Canada, and does not apply to products used for industrial or commercial purpose.

The limited warranty does not cover damage or failure caused by products or services not supplied by ONE FOR ALL®, or which result from accident, misuse, abuse, neglect, mishandling, mis-application, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. ONE FOR ALL® SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330) 405-8655

One For All® is the registered trademark of Universal Electronics Inc. Computime International LTD. is the Licensee of the ONE FOR ALL® brand for the United States of America and Canada.

Copyright 2000 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All is designed for compatibility in North America excluding Mexico.

URC-7200 Cinema 7		01/01	
Setup Codes For TVs			
Abex	0032	Curtis	0030, 0060,
Admiral	0093, 0179, 0180, 0016, 0047	Mathes	0154, 0039
Adventura	0046	CXC	0180
Aiko	0092	Daewoo	0451, 0092, 0019, 0039
Akai	0030	Daytron	0019
Alaron	0179	Denon	0145
A-Mark	0003	Dumont	0017, 0019
Ambassador	0177	Electroband	0000, 0185
Anam	0047, 0156, 0051, 0030, 0019, 0003, 0180, 0021, 0027, 0060, 0135, 0178, 0032, 0039	Emerson	0463, 0236, 0180, 0019, 0154, 0177, 0178, 0179, 0185, 0280, 0282, 0038, 0039
Archer	0003	Envision	0030
Audiovox	0451, 0092, 0180, 0003	Fisher	0154, 0159
Baysonic	0180	Fujitsu	0179
Belcor	0019	Funai	0171, 0179, 0180
Bell & Howell	0154, 0016	Futuretech	0180
Bradford	0180	GE	0047, 0051, 0451, 0021, 0027, 0055, 0178, 0282, 0135
Brockwood	0019	Gradiente	0053, 0056
Broksonic	0003	Grunpy	0179, 0180
Candle	0056, 0030, 0186, 0046	Hallmark	0178
Carnivale	0030	Harvard	0180
Carver	0054	Hitachi	0119, 0030, 0178, 0032, 0039
Celebrity	0000	Goldstar	0019, 0030, 0178, 0032, 0039
Cineral	0451, 0092	Goldstar	0019, 0030, 0178, 0032, 0039
Citizen	0060, 0092, 0030, 0056, 0186, 0280, 0039, 0046	Gradiente	0053, 0056
Clairtone	0185	Grunpy	0179, 0180
Concerto	0056	Hallmark	0178
Contec	0180, 0185	Harvard	0180
Craig	0180	Hitachi	0145, 0151, 0038, 0056,
Crown	0180, 0039	Infinity	0032, 0054

Janeil	0046	Scimitsu	0019	Daytron	0045	Quartz	0046	MGA	0240	Denon	0003	Oak	0007, 0019	DBS	0790
JBL	0054	Scotch	0178	Denon	0020	Quasar	0162, 0035, 0077, 0454	Mitsubishi	0048*	DKK	0000	Optimus	0021	Toshiba	0082
JCB	0000	Scott	0236, 0019, 0178, 0179, 0180	Dynatech	0042	RadioShack	0000, 0037	Orion	0002, 0294, 0479	Emerson	0305	Panasonic	0021, 0107, 0000	Uniden	DBS 0724, Uniden 0052, 0074, 0393
Kaypani	0052			Electrohme	0000	Radix	0037	Panasonic	0035*, 0162*	Fisher	0048, 0174, 0179	Panther	0637		
KEC	0180	Sears	0047, 0054, 0056, 0154, 0156, 0171, 0178, 0159, 0179	Electrophonic	0037	Randex	0037	Penney's	0035*, 0240, 0162*	Garrard	0032, 0305	Paragon	0000	Setup Codes For Amplifiers	
Kenwood	0019, 0030	Emerex	0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0212, 0295, 0361	Emerex	0032	RCA	0060, 0202, 0240, 0042, 0035, 0048, 0077, 0105, 0106, 0149	Quasar	0035*, 0162*, 0035*, 0240, 0162*	Harman/Kardon	0173	Philips	0153, 0025, 0027, 0031	Carver	0269
Kloss	0030, 0180, 0185, 0280, 0032	Emerson	0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0212, 0295, 0361	Emerson	0032			RCA	0035*, 0060*, 0048*	Hitachi	0032	Pioneer	0753, 0144, 0023	Denon	0160
KTV	0032			Semivox	0180			Sansui	0000, 0479	JVC	0072			GE	0078
LG	0056			Semp	0156			Sanyo	0000, 0035, 0037, 0046, 0047, 0048, 0062, 0066, 0104	Kenwood	0028, 0037, 0048, 0190	Popular	0400	JVC	0331
Logik	0016			Sharp	0093, 0165, 0056			Sears	0000, 0037	Krell	0157	Mechanics	0770	Kenwood	0356
Luxman	0056			Shogun	0019			Sony	0032*	Linn	0157	Pulsar	0000	Linn	0269
LXI	0047, 0054, 0154, 0156, 0178			Signature	0016			Symphonic	0000	LXI	0305	RadioShack	0015, 0315, 0180	Magnavox	0269
Magnavox	0054, 0096, 0186, 0187, 0020, 0024, 0030, 0386			Simpson	0186, 0187	Fisher	0104, 0047, 0054, 0066	Setup Codes for DVD Players		Magnavox	0157, 0305	RCA	0021	Nakamichi	0321
Majestic	0054, 0030			Sony	0000, 0080	Fisher	0054, 0066	JVC	0558	Marantz	0029, 0157	MCS	0029	NEC	0264
Marantz	0250			Soundesign	0178, 0179, 0180, 0186	Fuji	0033, 0035	Mitsubishi	0534	Mission	0157	Recoton	0400	Optimus	0013, 0300, 0395
Matsushita	0054, 0030			Spectricon	0003	Funai	0000	Panasonic	0490	MTC	0420	Regal	0259, 0020	Philips	0269
Megatron	0145, 0003, 0178			Squareview	0171	Garrard	0000	Philips	0521	Nikko	0174	Rembrandt	0000	Pioneer	0013, 0300
MEI	0185			SSS	0019, 0180	Garrard	0000	Philips	0539	NSM	0157	Runco	0000	Realistic	0395
Memorex	0056, 0150, 0154, 0016, 0178			Starlite	0180	GE	0240	Pioneer	0525	Onkyo	0101	Samsung	0144, 0040	Sansui	0321
				Supre-Macy	0046	Goldstar	0037, 0038	RCA	0522	Optimus	0000, 0032, 0007, 0048, 0145, 0179, 0305, 0420, 0437, 0468	Scientific		Shure	0264
				Supreme	0000	Go-Video	0432, 0526	Sony	0533	Sony	0000, 0032, 0037, 0048, 0145, 0179, 0305, 0420, 0437, 0468	Atlanta	0477, 0008, 0017	Soundesign	0788, 0211
				Sylvania	0054, 0096, 0020, 0030	Gradiente	0000, 0008	Scott	0043, 0045, 0121, 0184, 0210, 0212	Zenith	0503	Seam	0510	Technics	0308
				Symphonic	0171	Davidson	0000	Sears	0000, 0035, 0037, 0042, 0046, 0047, 0054, 0066, 0104, 0105			Signal	0015, 0040	Victor	0331
				Tandy	0093	Harman/Kardon	0038		0039			Signature	0011	Wards	0013, 0078, 0211
				Tatung	0055, 0003	Harwood	0072, 0068, 0072		0046, 0047, 0054, 0066, 0104, 0105			SL Marx	0040	Yamaha	0133, 0143, 0354, 0504
				Technics	0250, 0051	Headquarter	0046		0193, 0201			Sprucer	0021		
				Technol Ace	0179	Hi-Q	0047		0193, 0201			Starcom	0003, 0015	Setup Codes For Audio Cassette Decks	
				Techwood	0051, 0056, 0003	Hi-Q	0047		0193, 0201			Stargate	0770, 0015, 0040	Aiwa	0029, 0197
				Teknika	0054, 0056, 0060, 0092, 0150, 0016, 0093, 0055	Hitachi	0041, 0105, 0000, 0042		0193, 0201			Starquest	0015	Carver	0029
				Minut	0021	Jensen	0041		0121, 0158, 0189			TEAC	0029	Denon	0076
				Mitsubishi	0150, 0093, 0019, 0178	JVC	0008, 0041, 0067		0189			TEC	0040	Harman/Kardon	0182
				Motorola	0093, 0055	KEC	0037, 0278		0032, 0033, 0034, 0000, 0067			Telexscan	0001	JVC	0244, 0273
				MTC	0060, 0019, 0030, 0056, 0185	Kenwood	0038, 0041, 0067		0034, 0000, 0035, 0253			TFC	0310	Kenwood	0070
				Multitech	0180	KLH	0072	STS	0042			Timeless	0418	Magnavox	0029
				NAD	0156, 0166, 0178	Kodak	0035, 0037	Sunpak	0253						

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>