

# URC 7200 / 7201 Cinema 7

**User Manual** 

### **FEATURES AND FUNCTIONS**

Here are the features and functions of the *Cinema 7* universal remote control. Use the drawing to locate each feature of the remote, then refer to the chart for a description of what function each feature performs.



### FEATURES AND FUNCTIONS

TV

VCR

DVD/LD

RCVR

AUX

 
CD

CABLE/SAT

VOL

MUTE

The Light (**LED**) flashes red to show that the remote is working and is sending a signal.



R The **POWER** key controls power ON and OFF the same as the POWER key on your original remote. Please note that most CD Players do not have an ON/OFF function on the original remote control. If this is the case with your CD Player, then **POWER** will have no effect on

The TV, VCR, DVD/LD, RCVR, AUX, CD and CABLE/SAT keys are used to select the home entertainment component you want to control. If your component does not respond when you press a key on the remote control, press the

appropriate device key (TV, VCR, DVD/LD, RCVR, AUX, CD or CABLE/SAT) first to tell the remote control which component you would like the remote to operate.

The CH▲ (Channel Up) and CH▼ (Channel

mode = Skip Forward/ Skip Reverse, RCVR

AUX and CD mode = Preset Up/Preset Dowr

original remote. The Digit keys (0-9) also control the following functions in other modes:

original remote control required you to use an Enter key to change channels, use the **ENTER** 

channel number. The ENTER key also controls

the following functions in other modes: RCVR

remote. The CHA/▼ keys also control the

access the same as the Digit keys on your

RCVR and AUX modes = Input Selections

The ENTER key operates the same as the

Enter key on your original remote. If your

key on the Cinema 7 after entering your

 
and AUX modes = TAPE MON.

O - 9 The Digit keys (0-9) control direct channel

Down) keys change channels the same as the Channel Up and Down keys on your original

ring functions in other modes: DVD/LD

keys on your original remote



The **VOL**▲ (Volume Up), **VOL**▼ (Volume Down) and **MUTE** keys control the volume the same as the Volume Up and Down and Mute

The **PROG/GUIDE** key operates your components secondary menus as well as your DBS system's and Cable Converter's Guide function. Use the ◀,▶, ♠, and ▼ (Menu Up, Down, Left and

AUX and CD mode = Open/Close

The PREV CH (Previous Channel) key

operates the same as the Last Channel

Recall key on your original remote. The PREV CH key also controls the following functions in

other modes: DVD/LD, RCVR, AUX and CD

The CH ▲/▼, VOL ▲/▼, MUTE, PREV CH

and Digit (0-9) keys are made of a phosphorescent material that glows-in-the-dark.

VOL

MUTE

PREV CH

REC

STOP

PAUSE

 $\overline{\phantom{a}}$ 

SEL

**EXIT** 

 $\overline{\mathbf{v}}$ 

 $\overline{\langle \mathbf{v} \rangle}$ 

0 - 9

briaht liaht.

Expose the keys to bright light to activate the

kevs remain illuminated will be determined by

The SLEEP kev accesses the Sleep Timer of

Even if your component does not have a Sleep

Timer, the Cinema 7 may access its own built-

your home entertainment components (TV, CABLE/SAT, RCVR and AUX modes only).

The REW (Rewind), PL (PLAY), FF (Fast

Forward) REC (Record), STOP, and PAUSE

keys operate the same as the transport keys on your original VCR, Laser Disc, DVD and CD

Cinema 7, you must press the REC key twice

The **TV/VCR** key operates the same as the TV/VCR key on your original VCR remote. The **TV/** 

VCR key also controls the following functions in

other modes: TV mode = TV/VIDEO. CBL/SAT

The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. Use ▲, ▼, ◀, and ▶ (Menu Up, Down, Left and Right) to navigate

your menus. If your original remote control had a SELECT key to select options in your menus,

use SEL. Use the EXIT key to exit/clear your

entertainment component's original owner's

manual for more detailed instructions on

accessing and navigating your On-Screen

On-Screen menus. Please consult your home

The ◀, ▶, ▲ , and ▼ (Menu Up, Down, Left and

Right) keys are used to navigate your On-Screen

menus. The ◀, ▶, ▲, and ▼ keys also control

the following functions in other modes: RCVR

and **AUX** mode = Rear Level +/- and Balance Left/Right, **CD** mode = Track+/- and Disc +/-.

The **SEL** (Select) key selects options in your On-Screen menus. The **SEL** key also controls the following functions in other modes: **RCVR** 

and AUX mode = Surround Mode, CD mode =

The **EXIT** key exits or clears your on-screen

following functions in other modes: RCVR,

Disc Select, **DVD/LD** mode = Chapter.

menus. The **EXIT** key also controls the

mode = A/B or TV/SAT. **DVD/LD** mode = TV/LD

the length of time the remote is exposed to

■, ▶, ▲, and ▼ (Menu Up, Down, Left and Right) keys to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use SEL. Use the EXIT key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.

The **DISPLAY** key operates the Display function of your home entertainment components

The **PIP On/Off** key accesses your TV's Picture-in-Picture feature. The **PIP On/Off** key also controls the following functions in other modes: **CD** mode = Disk Skip, **DVD/LD** mode = Subtitle On/Off, **CBL/SAT** mode = View.

The **SWAP** key swaps the Picture-in-Picture window and the TV's main picture. The **SWAP** key also controls the following functions in other modes: **CBL/SAT** mode = SAT.

The MOVE PIP key moves the Picture-in-Picture window around your TV screen. The MOVE PIP key also controls the following functions in other modes: **DVD/LD** mode = Angle, **CBL/SAT** mode = Next.

The **SURROUND** key operates the same as the Surround On/Off key on your original remote. The **SURROUND** key also controls the following functions in other modes: **VCR** mode = Auto Tracking, **DVD/LD** mode = Disc, **CBL/SAT** mode = Favorite Channel, **CD** mode = 10+.

The MACRO and MACRO2 keys can memorize up to 15 keystrokes per key that can be accessed in sequence with a single key press. These keys are not mode specific.

### **INSTALLING THE BATTERIES**

Your Cinema 7 requires four (4) new AAA alkaline batteries. To install the batteries:

1. On the back of the Cinema 7, pull back on the tab

On the back of the *Cinema 7*, pull back on the tall and lift the battery cover off.

- Match the + and marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- 3. Press the battery cover back into place.
- Test the unit by pressing POWER. If the batteries are inserted correctly, the red light will blink.

**NOTE:** Removing the batteries will not require you to reprogram your remote control because the Cinema 7 has unlimited memory backup.

### SETTING UP YOUR COMPONENTS

Programming the *Cinema 7* to operate your TV: Locate the brand name of your TV and then write it in the space below.

TV Brand:

Locate the brand name of your TV in the "Setup Codes For TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your TV.

To program the *Cinema 7* to operate your TV: 1. Turn on your TV.

2. TV Press TV and release. Press and hold MAGIC until the *Cinema 7's* red light blinks twice, then release MAGIC.

Enter the first four-digit TV code listed for your brand in the "Setup Codes For TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4. Aim the Cinema 7 at your TV and press POWER. Your TV should turn off. If your TV does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.

Your Cinema 7 is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your Cinema 7 to operate your TV, press the **TV** key first.

Programming the *Cinema 7* to operate your VCR: Locate the brand name of your VCR and then write it in the space below.

VCR Brand

Locate the brand name of your VCR in the "Setup Codes For VCRs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your VCR.

To program the *Cinema 7* to operate your VCR: 1. Turn on your VCR and insert a tape.

2. VCR Press VCR and release. Press and hold MAGIC until the Cinema 7's red light blinks twice, then release MAGIC.

Enter the first four-digit VCR code listed for your brand in the "Setup Codes For VCRs" section. If you perform this procedure correctly,

the red light will blink twice when you enter the final digit of your code.

4. Aim the Cinema 7 at your VCR and press POWER. Your VCR should turn off. If your original VCR remote control did not have a POWER key,

or VCR remote control did not have a POWER key press **PL** (Play). Your VCR should start to play. I your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.

Your Cinema 7 is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your Cinema 7 to operate your VCR, press the **VCR** key first.

NOTE: If your TV/VCR is working on one of the above codes highlighted with an asterisk (\*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the Cinema 7 to Operate Your TV" section to program the supplied TV code. TV/VCRs working on VCR code 0032 may require

TV/VCRs working on VCR code 0032 may require
TV code 0000 for volume control.
TV/VCRs working on VCR code 0035 may require
TV code 0051 for volume control.

TV/VCRs working on VCR code 0048 may require
TV code 0093 for volume control.

TV/VCRs working on VCR code 0060 may require
TV code 0047 for volume control.
TV/VCRs working on VCR code 0081 may require

TV code 0054 for volume control.

TV/VCRs working on VCR code 0162 may require

TV code 0250 for volume control.

TV/VCRs working on VCR code 0278 may require

V/VCRs working on VCR code 0278 may require TV code 0451 for volume control.

# Programming the Cinema 7 to operate your DVD or Laser Disc Player:

Locate the brand name of your DVD or Laser Disc Player and then write it in the space below.

DVD/LD Brand:\_\_\_

Locate the brand name of your DVD or Laser Disc Player in the "Setup Codes For DVD or Laser Disc Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your DVD or Laser Disc Player.

To program the *Cinema* 7 to operate your DVD or Laser Disc Player:
Turn on your DVD or Laser Disc Player and

insert a disc.

2. Press DVD/LD and release. Press and hold MAGIC until the *Cinema 7's* red light blinks twice, then release MAGIC.

Enter the first four-digit DVD or Laser Disc Player code listed for your brand in the "Setup Codes For DVD or Laser Disc Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4. Aim the Cinema 7 at your DVD or Laser Disc Player and press POWER. Your DVD or Laser Disc Player should turn off. If your DVD or Laser Disc Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your DVD or Laser Disc Player.

5. Your Cinema 7 is now programmed to operate your DVD or Laser Disc Player.
Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first. **Programming the** *Cinema 7* **to operate your Receiver/** 

Tuner:
Locate the brand name of your Receiver/Tuner and then
write it in the space below

write it in the space below.

Receiver/Tuner Brand:

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receivers/Tuners" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Receiver/Tuner. To program the *Cinema 7* to operate your Receiver/Tuner:

1. Turn on your Receiver/Tuner.

2. RCVR Press RCVR and release. Press and hold MAGIC until the *Cinema 7*'s red light blinks twice, then release MAGIC.

Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4. POWER Aim the Cinema 7 at your Receiver/Tuner and press POWER. Your Receiver/Tuner should turn off. If your Receiver/Tuner does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Receiver/Tuner.

5. Your Cinema 7 is now programmed to operate your Receiver/Tuner. Write your Receiver/ Tuner code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your Receiver/Tuner, press the **RCVR** key first. **Programming the** *Cinema 7* **to operate your CD Player:**Locate the brand name of your CD Player and then write

it in the space below. CD Player Brand: Locate the brand name of your CD Player in the "Setup Codes For CD Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 7 to operate your CD Player.

To program the *Cinema 7* to operate your CD Player:

1. Turn on your CD Player and insert a disc.

2. Press CD and release. Press and hold MAGIC until the *Cinema 7*'s red light blinks twice, then release MAGIC.

Enter the first four-digit CD Player code listed for your brand in the "Setup Codes For CD Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

Aim the Cinema 7 at your CD Player and press

PL (Play). Your CD Player should play your

disc. If your CD Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.

5. Your Cinema 7 is now programmed to operate your CD Player. Write your CD Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your CD Player, press the **CD** key first.

Programming the Cinema 7 to operate your Cable Converter or Satellite:

Converter or Satellite:
Locate the brand name of your Cable Converter or
Satellite and then write it in the space below.

Cable Converter Brand: \_

Satellite Brand:

Locate the brand name of your Cable Converter or Satellite in the "Setup Codes For Cable Converters or Satellites" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7* to operate your Cable Converter or Satellite.

To program the *Cinema 7* to operate your Cable Converter or Satellite:

1. Turn on your Cable Converter or Satellite.

Press CABLE/SAT and release. Press and hold MAGIC until the Cinema 7's red light blinks twice, then release MAGIC.

Enter the first four-digit Cable Converter or Satellite code listed for your brand in the "Setup Codes For Cable Converters or Satellites" section. If you perform this procedure correctly, the red light will blink twice when you enter the

final digit of your code.

4. POWER Aim the Cinema 7 at your Cable Converter or Satellite and press POWER. Your Cable Converter or Satellite should turn off. If your Cable Converter or Satellite does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite.

Your Cinema 7 is now programmed to operate your Cable Converter or Satellite. Write your Cable Converter or Satellite code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your Cable Converter or Satellite, press the **CABLE/SAT** key first.

Programming the AUX Key:

The AUX key is already set up to accept codes for a second Receiver/Tuner, Amplifier or other audio component. If you would like to set up the AUX key for an audio component, follow the instructions listed below. If you would like the AUX key to control a second TV, VCR, Cable Converter or other component, follow the instructions in the "Re-assigning Device Keys" section to reassign the AUX key to accept codes for other components. For example, if you are setting up an Amplifier: Locate the brand name of your Amplifier and then write it in the space below.

Amplifier Brand:

Locate the brand name of your Amplifier in the "Setup Codes For Amplifiers" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 7 to operate your Amplifier.

To program the Cinema 7 to operate your Amplifier:

1. Turn on your Amplifier.

Turn on your Amplifier.
 Press AUX and release. Press and hold

MAGIC until the Cinema 7s red light blinks twice, then release MAGIC.

Enter the first four-digit Amplifier code listed for your brand in the "Setup Codes For Amplifiers" section. If you perform this procedure correctly, the red light will blink twice when you enter the

final digit of your code.

4. O A Aim the Cinema 7 at your Amplifier and press POWER. Your Amplifier should turn off. If your

Amplifier does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Amplifier.

Your *Cinema 7* is now programmed to operate your Amplifier. Write your Amplifier code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7* to operate your Amplifier, press the **AUX** key first.

### SEARCHING FOR YOUR CODE

If your TV, VCR or Cable Converter does not respond to the *Cinema 7* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *Cinema 7* to operate your TV, then:

Turn on your TV.

2. TV Press TV and release. Press and hold MAGIC until the *Cinema 7*'s red light blinks twice, then release MAGIC.

3. **9 - 9 - 1**Press **9 - 9 - 1**.

4. POWER Slowly alternate between pressing POWER\* and TV until your TV turns OFF. Make sure that the Cinema 7 is aimed at your TV during the search. You may have to press this sequence of buttons (POWER\* then TV) up to 100 times to search the entire library of codes.

5. When your TV turns OFF, press and release

MAGIC to lock in the code for your TV. Your

Cinema 7 is now programmed to operate your TV.

\*If you are searching for your VCR, CD, LD or DVD Player code, you may want to use the **PL** (Play) key instead of the **POWER** key to search for your code. When your VCR starts to play, press **MAGIC** to lock in your code. **NOTE:** To search for the codes of your other components, repeat Steps 1 through 4, only substitute the appropriate device key (VCR, DVD/LD, RCVR, AUX, CD or CABLE/SAT) for the component you are searching for.

# LEARNING THE CODES PROGRAMMED INTO THE CINEMA 7

If you have set up the Cinema 7 using the "SEARCHING FOR YOUR CODE" procedure, you may want to figure out which three-digit code is operating your equipment. Use this procedure after you have set up your components to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "SEARCHING FOR YOUR CODE" procedure:

YOUR CODE procedure:

1. TV Press TV and release. Press and hold MAGIC until the Cinema 7's red light blinks twice, then release MAGIC.

2.9 - 9 - OPress 9 - 9 - 0.

For the first digit of your four-digit code, press 1 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 1, the digit is zero.

4. For the second digit, press 2 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 2, the digit is zero.

5. 3 For the third digit, press 3 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 3, the digit is zero.

For the fourth and final digit, press 4 and count the number of times the red light (LED) blinks on the *Cinema 7*. If the light does not blink when you press the number 4, the digit is zero. Now you have your four-digit code.

NOTE: To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (VCR, DVD/LD, RCVR, AUX, CD or CABLE/SAT) for the component code you wish to learn.

# SETTING UP OTHER COMPONENTS

In addition to the components labeled on the device keys (TV, VCR, DVD/LD, CBL/SAT, etc.), the *Cinema 7* can also operate the following components: Cassette Decks, Infrared Home Automation, Video Accessories and Miscellaneous Audio Components (Graphic Equalizers and Digital Music Service Boxes).

The Setup Codes for these components can be accessed under the following device keys:

Cassette Decks:

IR Home Automation:
Video Accessories:
Wise the CD Key
Use the CD Key
Use the CBL/SAT Key
Use the AUX or RCVR Key
For example, to set up a Cassette Player on the VCR key:
Turn on your Cassette Player and insert a tape.

2. VCR Press VCR and release. Press and hold MAGIC until the Cinema 7's red light blinks twice, then release MAGIC.

Enter the first four-digit Cassette Player code listed for your brand in the "Setup Codes For Audio Cassettes" section. If you perform this procedure correctly, the red light will blink twic when you enter the final digit of your code.

Aim the Cinema 7 at your Cassette Player and press PL (Play). Your Cassette Player should play your tape. If your Cassette Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cassette Player.

Your Cinema 7 is now programmed to operate your Cassette Player. Remember, if you want to use your Cinema 7 to operate your Cassette Player, press the VCR key first.

### RE-ASSIGNING DEVICE KEYS

You can use the Cinema 7 to operate a second TV or a second VCR or any combination of seven home entertainment components. For example, you may want your Cinema 7 to control 1 TV, 1 Cable Converter, 1 Receiver, 1 CD Player, 1 DVD Player and 2 VCRs. To accomplish this, you must re-assign one of the device keys to operate the desired component, in this case, a second VCR. The chart below shows you how to re-assign a particular device key and then set up your new component.

TV to VCR

MAGIC\* + 992 + VCR + TV + TV +

MAGIC\* + VCR code TV to DVD/LD MAGIC\* + 992 + DVD/LD + TV + TV + MAGIC\* + DVD or LD Player code TV to RCVR MAGIC\* + Audio code MAGIC\* + 992 + AUX + TV + TV + TV to AUX MAGIC\* + Audio code TV to CD MAGIC\* + 992 + CD + TV + TV + MAGIC\* + CD Player code MAGIC\* + 992 + CBL/SAT + TV + TV + MAGIC\* + Cable/DBS code TV to CBL/SAT MAGIC\* + 992 + TV + VCR + VCR + MAGIC\* + TV code VCR to TV VCR to DVD/LD MAGIC\* + 992 + DVD/LD + VCR + VCR MAGIC\* + DVD or LD Player code VCR to RCVR MAGIC\* + 992 + RCVR + VCR + VCR VCR to AUX MAGIC\* + 992 + AUX + VCR + VCR · MAGIC\* + Audio code MAGIC\* + 992 + CD + VCR + VCR + VCR to CD MAGIC\* + CD Player code MAGIC\* + 992 + CBL/SAT + VCR + VCR to CBL/SAT DVD/LD to TV MAGIC\* + 992 + TV + DVD/LD + DVD/ D + MAGIC\* + TV MAGIC\* + 992 + VCR + DVD/LD + DVD/LD to VCR DVD/LD + MAGIC\* + VCR co DVD/LD to RCVR MAGIC\* + 992 + RCVR + DVD/LD + DVD/LD + MAGIC\* + Au DVD/LD to AUX MAGIC\* + 992 + AUX + DVD/LD + DVD/LD + MAGIC\* + AUDIO code DVD/LD to CD MAGIC\* + 992 + CD + DVD/LD + DVD/I D + MAGIC\* + CD Playe DVD/LD to CBL/SAT MAGIC\* + 992 + CBL/SAT + DVD/LD + DVD/LD + MAGIC\* + Cable/DBS code RCVR to TV MAGIC\* + 992 + TV + RCVR + RCVR HAGIC\* + TV code RCVR to VCR MAGIC\* + 992 + VCR + RCVR + RCVR + MAGIC\* + VCR code RCVR to DVD/LD MAGIC\* + 992 + DVD/LD + RCVR + RCVR + MAGIC\* + DVD or LD Player MAGIC\* + 992 + CD + RCVR + RCVR RCVR to CD + MAGIC\* + CD Player code

RCVR to CBL/SAT MAGIC\* + 992 + CBL/SAT + RCVR + RCVR + MAGIC\* + Cable/DBS code MAGIC\* + 992 + TV + AUX + AUX + AUX to TV MAGIC\* + TV code MAGIC\* + 992 + VCR + AUX + AUX + MAGIC\* + VCR cod MAGIC\* + 992 + DVD/LD + AUX + AUX AUX to DVD/LD + MAGIC\* + DVD or LD Player cod AUX to CD MAGIC\* + 992 + CD + AUX + AUX + MAGIC\* + CD Player code AUX to CBL/SAT MAGIC\* + 992 + VCR + AUX + AUX + MAGIC\* + Cable/DBS code CD to TV MAGIC\* + 992 + TV + CD + CD + MAGIC\* + TV code CD to VCR MAGIC\* + 992 + VCR + CD + CD + CD to DVD/LD MAGIC\* + 992 + DVD/LD + CD + CD CD to RCVR MAGIC\* + 992 + RCVR + CD + CD +

\*NOTE: Here (\*) you must hold MAGIC until the Cinema 7's red light blinks twice.

MAGIC\* + 992 + AUX + CD + CD +

+ MAGIC\* + Cable/DBS code MAGIC\* + 992 + TV + CBL/SAT +

CBL/SAT + MAGIC\* + TV co

CBL/SAT + MAGIC\* + VCR cod

CBI /SAT to VCB MAGIC\* + 992 + VCR + CBL/SAT +

CBL/SAT to DVD/LD MAGIC\* + 992 + DVD/LD + CBL/SAT

CBL/SAT to RCVR MAGIC\* + 992 + RCVR + CBL/SAT +

CBL/SAT to AUX MAGIC\* + 992 + AUX + CBL/SAT +

MAGIC\* + 992 + CBI /SAT + CD + CD

+ CBL/SAT + MAGIC\* + DVD or LD

CBL/SAT + MAGIC\* + Audio code

CBL/SAT + MAGIC\* + Audio code

MAGIC\* + 992 + CD + CBL/SAT + CBL/SAT + MAGIC\* + CD Player code

CBL/SAT to CD

CD to AUX

CD to CBL/SAT

CBL/SAT to TV

# PROGRAMMING THE MACRO KEYS

The Cinema 7 has two Macro keys (MACRO and MACRO2) that allow the user to play back a series of keystrokes, at any time, with the press of one key. For example, to set up a sequence that will turn on your components and change the components to the proper inputs:

1. Press and hold MAGIC until the Cinema 7's

red light blinks twice, then release **MAGIC**.

2.9-9-5Press 9-9-5. The Cinema 7's red light will blink twice.

3. OMACRO Press and release one of the MACRO keys. This will be the key that will play back the MACRO 2 series of keystrokes assigned to that key.

Begin entering the sequence of keystrokes, up to 15, that you wish to be played back when you press the MACRO key. For example:

RCVR + POWER + TV + POWER + TV/VCR (To change the input on the TV to VIDEO 1) + CBL/SAT + POWER.

Once your sequence is entered, press and hold MAGIC until the Cinema 7's red light blinks twice.

Now, using the example above, whenever the programmed **MACRO** key is pressed, the Receiver would power ON, the TV will power ON and change the input to VIDEO 1 and then the Satellite would power ON.
Repeat steps 1 - 5 to then setup a second sequence on

the **MACRO2** key.

### **VOLUME LOCK**

Volume Lock allows the user to designate which component will control the volume in the TV, DVD/LD and CBL/ SAT modes. To set the Volume Lock to the TV mode: Press and hold MAGIC until the Cinema 7's

red light blinks twice, then release MAGIC.

2.9 - 9 - 3 Press 9 - 9 - 3. The Cinema 7's red light will blink twice.

3. TV Press and release **TV**. The *Cinema 7*'s red light will blink twice.

Now, whenever you press VOL▲, VOL▼ or MUTE in the VCR, DVD/LD and CBL/SAT modes your TV will control the volume. If you would like to change the Volume Lock setting to the VCR, DVD/LD or CBL/SAT modes repeat steps 1-3, only substitute the appropriate device key. Setting the Volume Lock to the TV, VCR, DVD/LD or CBL/ **SAT** mode will not effect the volume control in the **RCVR**,

You can also change the Volume Lock setting so that an Audio component controls the volume in all device modes. To change the Volume Lock setting on the *Cinema 7* to the RCVR or AUX mode:

1. Press and hold MAGIC until the Cinema 7's red light blinks twice then related to the red light blinks twice then related to the red light blinks twice then related to the red light blinks twice the related to the red light blinks twice the related to the red light blinks twice the red li red light blinks twice, then release MAGIC.

2.9-9-3 Press 9-9-3. The *Cinema 7's* red light will blink twice.

3. RCVR Press and release RCVR or AUX. The Cinema 7's red light will blink twice. AUX

Now, whenever you press VOL▲, VOL▼ or MUTE your Audio component will control the volume in all device

You can also change the Volume Lock setting so that each component controls its own volume. However, some components do not have volume control. Using this setting may eliminate volume control in some device modes. To change the Volume Lock setting on the *Cinema 7* so each mode controls its own volume:

1. Press and hold MAGIC until the Cinema 7's

red light blinks twice, then release

2.9 - 9 - 3 Press 9 - 9 - 3. The Cinema 7's red light will blink twice.

Press and release VOL▲. The Cinema 7's red light will blink twice.

Now, whenever you press VOL, VOL or MUTE on the Cinema 7 each component will control its own volume, provided each component has volume control.

## **USING THE SLEEP KEY**

The **SLEEP** key allows you to access the sleep timer of your TV, Cable Converter/DBS Satellite or Audio component. You can access your TV. Cable Converter. DBS Satellite or Audio component's Sleep Timer by pressing the SLEEP key. Most Sleep Timers advance in increments of 10 or 15 minutes, however, for specific instructions on setting your components Sleep Timer, please consult your

original owners manual.

Even if your original Cable Converter remote control did not have a sleep timer, your *Cinema 7* has its own built-in sleep timer. If your <u>Cable Converter does not have a sleep</u> timer, press the **SLEEP** key to activate the *Cinema 7*'s built-in sleep timer. For example:

1. Press and release the **CBL/SAT** key then press the **SLEEP** key once to set the *Cinema 7*'s builtin sleep timer for 15 minutes. The red light will

2. Osleep Each additional press of the **SLEEP** key will add 15 more minutes to the Sleep Timer, up to a maximum of 60 minutes. The LED will blink twice when the sleep timer is set for 30 minutes, 3 times for 40 minutes, or 4 times for 60 minutes.

NOTE: The sleep timer starts 10 seconds after the last press of the **SLEEP** key. Once you have activated the Cinema 7's built-in sleep timer, you must keep the remote control aimed directly at the component.

3. Optomer To de-activate the built-in sleep timer, press POWER.

**NOTE:** Plugging your TV into the outlet on the back of the Cable Converter may allow you to turn both your Cable Converter and your TV ON and OFF.

converter and your TV	ON and Of 1.
TROUBLE SHO	OTING
Problem	Solution
Red light does not blink when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The Cinema 7 does not operate your home entertainment components or is not performing com- mands properly?	Try all of the codes listed for your brand of home entertainment component in the "Setup Codes" section. Many setup codes may allow for partial functionality, however, only one setup code will operate your home entertainment component correctly. Make sure that all of the components you are setting up can be operated with an infrared remote control.
The Cinema 7 is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Set-Up Codes" section. Many set-up codes may allow some degree of operation. However, only one set-up code will work correctly with your home entertainment component.
Problems programming a TV/VCR combo?	Try the VCR set-up codes for your brand. However, some combo units may require both a TV code for volume control and a VCR code for the remaining functions.
VCR not recording?	As a safety feature on the Cinema 7, you must press the REC key twice.
CH ▲/▼ and PREV CH not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions.
Problems changing channels?	If your original remote control required an Enter keystroke when changing channels, press the ENTER key on the Cinema 7 after you enter the channel number.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your Cinema 7 at your home entertainment component and that you are within 15 feet before using your remote.

his product has been discontinued and is no longer upported
One For All® is the registered trademark of Universal Electronics Inc. Computime International LTD. is the Licensee of the ONE FOR ALL® brand for the United States of America and Canada.
Copyright 2000 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any

in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All is designed for compatibility in North America excluding Mexico.

URC-7200 Cir	ierma 7		01/01
Setup Cod Abex	es For TVs 0032	Curtis	
Admiral	0093, 0179, 0180, 0016,	Mathes	0030, 0060, 0154, 0039
Adventura	0047 0046	CXC	0180
Aiko	0092	Daewoo	0451, 0092, 0019, 0039
Akai Alaron	0030 0179	Daytron Denon	0019 0145
A-Mark Ambassado	0003	Dumont	0017, 0019
Anam		Electroband Emerson	0463, 0236,
National Anam	0055 0180		0180, 0019, 0154, 0177,
AOC	0030, 0019, 0185, 0003,		0178, 0179, 0185, 0280,
Archer	0052 0003		0282, 0038, 0039
Audiovox	0451, 0092, 0180, 0003	Envision	0030
Baysonic	0180	Fisher Fujitsu	0154, 0159 0179
Belcor Bell &	0019	Funai	0171, 0179, 0180
Howell Bradford	0154, 0016 0180	Futuretech GF	0180 0047, 0051,
Brockwood Broksonic	0019 0003	GL.	0451, 0021,
Candle	0056, 0030,		0027, 0055, 0178, 0282,
Carnivale	0186, 0046 0030	Gibralter	0135 0019, 0030,
Carver Celebrity	0054 0000	Goldstar	0017 0019, 0030,
Cineral Citizen	0451, 0092 0060, 0092,		0178, 0032, 0039
	0030, 0056, 0186, 0280,	Gradiente	0053, 0056
Olaimhana	0039, 0046	Grunpy Hallmark	0179, 0180 0178
Clairtone Concerto	0185 0056	Harvard Hitachi	0180 0145, 0151,
Contec Craig	0180, 0185 0180		0038, 0056, 0032
Crown	0180, 0039	Infinity	0054

Janeil	0046	Scimitsu	0019		0045	Quartz	0046
JBL JCB	0054 0000	Scotch Scott	0178 0236, 0019,	Daytron Denon	0020 0042	Quasar	0162, 0035, 0077, 0454
JVC	0053	Coott	0178, 0179,	Dynatech	0000	RadioShack	0000, 0037
Kaypani KEC	0052 0180	Sears	0180 0047, 0054,	Electrophonic		Radix Randex	0037 0037
Kenwood	0019, 0030		0056, 0154,	Emerex	0032	RCA	0060, 0202,
Kloss KTV	0024, 0046 0030, 0180,		0156, 0171, 0178, 0159,	Emerson	0209, 0184, 0479, 0278,		0240, 0042, 0035, 0048,
	0185, 0280,	Semivox	0179		0000, 0002,		0077, 0105,
LG	0032 0056	Semp	0180 0156		0036, 0037, 0043, 0061,	Realistic	0106, 0149 0000, 0035,
Logik Luxman	0016 0056	Sharp	0093, 0165, 0039, 0386		0068, 0121, 0184, 0208,		0037, 0046, 0047, 0048,
LXI	0047, 0054,	Shogun	0019		0212, 0295,		0062, 0066,
	0154, 0156, 0178	Signature Simpson	0016 0186, 0187	Fisher	0361 0104, 0047,	Ricoh	0104 0034, 0253
Magnavox	0054, 0096,	Sony	0000, 0080		0054, 0066	Runco	0039
	0186, 0187, 0020, 0024,	Soundesign	0178, 0179, 0180, 0186	Fuji Funai	0033, 0035 0000	Samsung Sanky	0240, 0045 0048, 0039
Majostio	0030, 0386	Spectricon Squareview	0003	Garrard GE	0000	Sansui	0000, 0041,
Majestic Marantz	0016 0054, 0030	SŚS	0019, 0180	GE	0060, 0202, 0035, 0048,		0067, 0271, 0479
Matsushita Megatron	0250 0145, 0003,	Starlite Supre-Macy	0180	Goldstar	0240 0037, 0038	Sanyo	0104, 0046, 0047, 0054,
· ·	0178	Supreme	0000	Go-Video	0432, 0526		0240
MEI Memorex	0185 0056, 0150,	Sylvania	0054, 0096, 0020, 0030	Gradiente Harley	0000, 0008	Scott	0043, 0045, 0121, 0184,
	0154, 0016,	Symphonic	0171	Davidson		0	0210, 0212
MGA	0178 0150, 0019,	Tandy Tatung	0093 0055, 0003	Harman/Kar Harwood	don 0038 0072, 0068,	Sears	0000, 0035, 0037, 0042,
Midland	0030, 0178 0017, 0047,	Technics Technol Ace	0250, 0051	Headquarte	0072		0046, 0047, 0054, 0066,
Midiand	0051, 0135,	Techwood	0051, 0056,	HI-Q	0047		0104, 0105
Minutz	0032, 0039 0021	Teknika	0003 0054, 0056,	Hitachi	0041, 0105, 0000, 0042	Semp Sharp	0045 0048, 0062
Mitsubishi	0150, 0093,	Toruma	0060, 0092,	Jensen	0041	Shintom	0072
Motorola	0019, 0178 0093, 0055		0150, 0016, 0019, 0179,	JVC	0008, 0041, 0067	Shogun Singer	0240 0072
MTC	0060, 0019,		0180, 0186,	KEC	0037, 0278	Sony	0032, 0033,
	0030, 0056, 0185	Telefunken	0039 0056	Kenwood	0038, 0041, 0067		0034, 0000, 0035, 0253
Multitech NAD	0180 0156, 0166,	TMK	0056, 0177, 0178	KLH Kodak	0072 0035, 0037	STS Sunpak	0042 0253
	0178	Toshiba	0156, 0060,	Lloyd's	0000, 0208	Sylvania	0035, 0081,
NEC	0019, 0030, 0056	Tosonic	0154 0185	Logik LXI	0072 0037		0043, 0000, 0110
Nikko	0030, 0092,	Totevision	0039 0027	Magnasonic			0000 0041
Noshi	0178 0018	Universal Vector	0027	Magnavox	0035, 0081, 0000, 0039,	Tatung TEAC	0000, 0041
NTC Onwa	0092 0180	Research Victor	0030 0053	Magnin	0110, 0149 0240	Technics Teknika	0162, 0035 0000, 0035,
Optimus	0250, 0154,	Vidikron	0054	Marantz	0035, 0081		0037
Optonica	0166 0093, 0165	Vidtech Viking	0019, 0178 0046	Marta Matsushita	0037 0162, 0035,	Thomas TMK	0000 0240, 0036,
Orion Panasonic	0236, 0436 0250, 0051,	Wards	0016, 0019, 0030, 0054,	MEI	0454 0035	Toshiba	0208 0043, 0045,
	0055		0056, 0080,	Memorex	0162, 0240,	Toomba	0066, 0210,
Penney	0047, 0156, 0051, 0030,		0096, 0165, 0178, 0179,		0035, 0037, 0104, 0000,	Totevision	0212 0037, 0240
	0019, 0003, 0018, 0021,		0020, 0021, 0027		0039, 0046,	Unitech Vector Rese	0240 arch
	0018, 0021, 0027, 0060,	White		MGA	0047, 0048 0043, 0061,		0038, 0040
	0135, 0178, 0032, 0039	Westingho	use 0451, 0463, 0236, 0180	MGN	0240	Vector Video Conce	0045 epts 0040
Philco	0054, 0145,	Yamaha	0019, 0030	Technology			0045, 0061
	0096, 0019, 0020, 0030	Zenith	0017, 0092, 0016	Minolta Mitsubishi	0042, 0105 0043, 0048,	Videosonic Wards	0240 0000, 0035,
Philips Pilot	0054 0019, 0030,	Zonda	0003 es For VCRs	Motorola	0061, 0067 0035, 0048		0042, 0047, 0048, 0060,
	0039	Admiral	0048, 0121,	MTC	0240, 0000		0062, 0072,
Pioneer Portland	0166, 0038 0092, 0019,		0184, 0039, 0060, 0202	Multitech NEC	0000, 0072 0038, 0040,		0081, 0149, 0212, 0240
	0039	Adventura	0000		0041, 0067,	White	·
Prism Proscan	0051 0047	Aiko Aiwa	0278 0037, 0000	Nikko	0104 0037	Westingho	0479, 0209,
Proton	0003, 0052, 0178	Akai	0041, 0061, 0106	Nikon Noblex	0034, 0253 0240	XR-1000	0184 0000, 0035,
Pulsar	0017, 0019	American		Olympus	0035		0072
Quasar	0250, 0051, 0055, 0165	High Asha	0035 0240	Optimus	0162, 0048, 0037, 0104,	Yamaha Zenith	0038 0039, 0000,
RadioShack	0047, 0056,	Audiovox	0037	0	0454		0033, 0034
	0154, 0019, 0030, 0165,	Beaumark Bell &	0240	Optonica Orion	0062 0209, 0184,	Setup Code VCR Comb	
	0178, 0180,	Howell	0104		0479, 0002,	American	
RCA	0032, 0039 0047, 0018,	Broksonic	0184, 0209, 0479, 0002,	Panasonic	0295 0162, 0035,	High Brocksonic	0035* 0002, 0294,
	0019, 0038, 0090, 0135		0121, 0295, 0361		0077, 0225, 0454	Colt	0479 0072
Realistic	0056, 0154,	Calix	0037	Penney	0035, 0037,	Curtis Mathe	es 0035*
	0019, 0030, 0165, 0178,	Canon Capehart	0035 0020		0038, 0040, 0042, 0054,	Daewoo Emerson	0278* 0002, 0294,
	0180, 0032,	Carver	0081	Dontov	0240		0479
Rhapsody	0039 0185	CCE Cineral	0072, 0278 0278	Pentax Philco	0042, 0105 0035, 0209,	Funai GE	0000 0035*, 0060*,
Runco Sampo	0017, 0030 0030, 0052,	Citizen Colt	0037, 0278 0072	Philips	0479 0035, 0081,	Hitachi	0048*, 0240 0035*, 0000
·	0032, 0039	Craig	0072, 0240,	·	0062, 0110	HQ	0000
Samsung	0060, 0019, 0030, 0056,		0037, 0047, 0271	Pilot Pioneer	0037 0067, 0162	Lloyds Magnavox	0000 0000, 0035*,
	0178, 0032,	Curtis		Portland Proscan	0020	Magnin	0081*
Samsux	0039 0039	Mathes	0035, 0041, 0060, 0202	Protec	0060, 0202 0072	Memorex	0240 0037, 0162*
Sansei Sanyo	0451 0154, 0159	Cybernex Daewoo	0240 0278, 0020,	Pulsar Quarter	0039 0046		
, _	,		, ,		22.2		

MGA Mitsubishi	0240 0048*	Denon DKK Emerson	0003 0000	Oak Optimus	0007, 0019 0021	DBS Toshiba Uniden DBS	0790 0082
Orion Panasonic	0002, 0294, 0479 0035*, 0162*	Fisher	0305 0048, 0174, 0179	Panasonic Panther	0021, 0107, 0000 0637	Uniden	0052, 0074 0076, 0238
Penney's	0035*, 0240, 0162*	Garrard Genexxa	0393, 0420 0032, 0305	Paragon Philips	0000 0153, 0025,	Setup Code Amplifiers	es For
Quasar RCA	0035*, 0162* 0035*, 0060*,	Harman/Kar Hitachi	don 0173 0032	Pioneer	0027, 0031 0753, 0144,	Carver Denon	0269 0160
Sansui	0048* 0000, 0479	JVC Kenwood	0072 0028, 0037,	Popular	0023	GE JVC	0078 0331
Sanyo	0240		0048, 0190	Mechanics	0400	Kenwood	0356
Sears Sony	0000, 0037 0032*	Krell Linn	0157 0157	Prelude Pulsar	0770 0000	Linn Luxman	0269 0165
Symphonic	0000	LXI	0305		0015, 0315,	Magnavox	0269
Zenith Setup Code	0000 es for DVD	Magnavox Marantz	0157, 0305 0029, 0157,	RCA	0797 0021	Marantz Nakamichi	0269, 0321 0321
<b>Players</b> JVC	0550	MCC	0180	Realistic	0207	NEC	0264
Kenwood	0558 0534	MCS Mission	0029 0157	Recoton Regal	0400 0259, 0020	Optimus	0013, 0300 0395
Mitsubishi Panasonic	0521 0490	MTC Nikko	0420 0174	Regency	0002	Philips Pioneer	0269 0013, 0300
Philips	0539	NSM	0157	Rembrandt Runco	0011	Realistic	0395
Pioneer RCA	0525 0522	Onkyo Optimus	0101 0000, 0032,	Samsung	0144, 0040	Sansui Shure	0321 0264
Sony	0533	Оршназ	0037, 0048,	Scientific Atlanta	0477, 0008,	Sony	0220, 0689
Toshiba Zenith	0503 0503		0145, 0179, 0305, 0420,	Coom	0017	Soundesign Technics	0078, 0211 0308
Setup Code	es for Laser		0437, 0468	Seam Signal	0510 0015, 0040	Victor	0331
<b>Disc Player</b> Mitsubishi	' <b>s</b> 0059	Panasonic Philips	0029 0157	Signature SL Marx	0011 0040	Wards	0013, 0078 0211
NAD	0059	Pioneer	0032, 0468,	Sprucer	0040	Yamaha	0133, 0143
Pioneer Sony	0059 0193, 0201	Proton	0244, 0305 0157	Starcom	0003, 0015	Setup Code	0354, 0504 es For Aud
Setup Code	es For	QED	0157	Stargate	0770, 0015, 0040	Cassette D	ecks
<b>Receivers/</b> ADC	Tuners 0531	Quasar RCA	0029 0764, 0053,	Starquest Sylvania	0015 0001	Aiwa Carver	0029, 0197 0029
Aiwa	0121, 0158,		0179, 0305	Tandy	0258	Denon	0076
Capetronic	0189 0531	Realistic	0179, 0180, 0420	Teleview Texscan	0040 0001	Harman/Kar JVC	0244, 0273
Carver	0008, 0042,	Rotel SAE	0157, 0420 0157	TFC	0310	Kenwood	0070 0029
Casio	0189, 0360 0195	Sansui	0157, 0305	Timeless Tocom	0418 0012, 0013	Magnavox Marantz	0029
Clarinette Denon	0195 0004	Sanyo Scott	0179 0305	Toshiba	0000	Onkyo Optimus	0135, 0282 0027, 0220
Emerson	0424	Sears	0305	Tusa TV86	0015 0063	Philips	0029
Fisher	0042, 0219, 0360	Sharp Sherwood	0037, 0180 0180	Unika	0153, 0022,	Pioneer	0027, 0099 0220
Garrard	0424, 0463	Sony	0000, 0185	United	0207	Sansui	0029
Harman/Kar JVC	don 0110 0074	Soundesign Tascam	0145 0420	Artists United	0007	Sony	0170, 0243 0291
Kenwood	0027, 0313,	TEAC	0174, 0180,	Cable	0003	Technics	0229
	0314, 0077, 0186	Technics	0393, 0420 0029	Universal	0153, 0022, 0056, 0191,	Victor Wards	0273 0027
Koss	0424	Victor	0072		0207	Yamaha	0094, 0097
Linn Lloyd's	0189 0195	Wards Yamaha	0157 0036, 0187	Videoway Viewstar	0250 0063, 0027,	Setup Code Home Auto	
_XÍ Magnavox	0181 0189, 0195,	Yorx	0461 es for Cable		0258	GE LiteTouch	0240 0084
J	0531	Converters		Zenith Zentek	0525, 0000 0400	Lutron	0318, 0597
Marantz MCS	0039, 0189 0039	ABC	0003, 0008, 0014, 0007,	Setup Code Satellites	es for	One For All RadioShack	
Modulaire	0195		0001, 0011,	AlphaStar		Security Sys	stem
NAD Nakamichi	0320 0347	Allegro	0013, 0017 0153, 0315	DBS Chaparral	0772 0053, 0216	Universal X1	0167 IO 0167
Onkyo Optimus	0135 0042, 0080,	Antronix Archer	0022, 0207 0797, 0153,	Echostar	•	X10 Setup Code	0167
Optimus	0177, 0181,	Archer	0022, 0207	DBS Echostar	0775 0159, 0269,	Accessorie	
	0186, 0219, 0531, 0670	Belcor Cable Star	0056 0056	_	0280	Archer GC Electronics	0160
Panasonic	0039	Cabletenna	0022	Express Vu DBS	0775	Jebsee	0160
Penney Philips	0195 0189	Cableview Century	0022 0153	General	0001	Rabbit RadioShack	0081
Pioneer	0014, 0080,	Citizen	0153, 0315	Instrument Hitachi DBS		Roctec	0456
	0150, 0531, 0630	Colour Voice Comtronics		Homecable HTS DBS		SuperGuide TeleCaption	
Quasar	0039	Contec	0019	Hughes	0110	Setup Code	es For
RCA	0054, 0360, 0531	Digi Eastern	0637 0002	Network Systems		<b>Miscellane</b> Aiwa	<b>ous Audio</b> 0010, 0159
Realistic	0163, 0181,	Emerson	0797	DBS	0749	Fisher	0052
Sansui	0195 0189	Everquest Focus	0015, 0040 0400	IQ Prism IQ	0210 0210	Harman/Kar Jerrold	don 0477 0459, 0520
Sanyo	0219	Garrard GC	0153	Janeil	0152	JVC Nikko	0073 0376
Scott Sharp	0163, 0322 0186	Electronics	0056, 0207	Jerrold Primestar	0627	Paramount	
Sherwood Sony	0491, 0502 0158, 0474	Gemini General	0015	Jerrold	0361	Pictures RCA	0317 0056
Soundesign	0670		0476, 0003,	Legend Magnavox	0269	Schneider	0376
	0163, 0463	Goldstar	0014, 0011 0144, 0040	DBS	0722, 0724	Scientific Atlanta	0460
TEAC	0039 0309	Goodmind	0797	Memorex DBS	0724	Sony	0010, 0159
TEAC Technics	0039, 0309, 0518	1.1	0259, 0009,	Memorex Panasonic	0269 0152	Soundesign SSI	0376 0317
TEAC Technics Victor	0518 0074	Hamlin	0020. 0034	ranasonic.	UIJE		
TEAC Technics Victor	0518 0074 0014, 0042, 0054, 0080,	Hitachi	0020, 0034 0011	Panasonic		Starcom	0459
TEAC Technics Victor Wards Yamaha	0518 0074 0014, 0042,			Panasonic DBS	0701 0722, 0724	Starcom Yorx	0459 0376
TEAC Technics Victor Wards Yamaha Yorx	0518 0074 0014, 0042, 0054, 0080, 0158, 0189 0176, 0186 0195	Hitachi Hytex	0011 0007 0153, 0315 0476, 0003,	Panasonic DBS Philips DBS Primestar	0722, 0724 0361, 0627		
TEAC Technics Victor Wards  Yamaha Yorx Setup Code	0518 0074 0014, 0042, 0054, 0080, 0158, 0189 0176, 0186 0195	Hitachi Hytex Jasco	0011 0007 0153, 0315 0476, 0003, 0014, 0011, 0012, 0015	Panasonic DBS Philips DBS Primestar RCA DSS	0722, 0724 0361, 0627 0566		
TEAC Technics Victor Wards  Yamaha Yorx Setup Code Players Aiwa	0518 0074 0014, 0042, 0054, 0080, 0158, 0189 0176, 0186 0195 es For CD	Hitachi Hytex Jasco Jerrold Linsay	0011 0007 0153, 0315 0476, 0003, 0014, 0011, 0012, 0015 0440	Panasonic DBS Philips DBS Primestar RCA DSS Realistic Sony DBS	0722, 0724 0361, 0627		
TEAC Technics Victor Wards  Yamaha Yorx Setup Code Players Aiwa Burmester California	0518 0074 0014, 0042, 0054, 0080, 0158, 0189 0176, 0186 0195 es For CD	Hitachi Hytex Jasco Jerrold Linsay Magnavox Memorex	0011 0007 0153, 0315 0476, 0003, 0014, 0011, 0012, 0015 0440 0027 0000	Panasonic DBS Philips DBS Primestar RCA DSS Realistic	0722, 0724 0361, 0627 0566 0052		
TEAC Technics Victor Wards  Yamaha Yorx Setup Code Players Aiwa Burmester	0518 0074 0014, 0042, 0054, 0080, 0158, 0189 0176, 0186 0195 es For CD	Hitachi Hytex Jasco Jerrold Linsay Magnavox	0011 0007 0153, 0315 0476, 0003, 0014, 0011, 0012, 0015 0440 0027 0000	Panasonic DBS Philips DBS Primestar RCA DSS Realistic Sony DBS Star Choice	0722, 0724 0361, 0627 0566 0052 0639		

Download from Www.Somanuals.com. All Manuals Search And Download

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com