

## ONE FOR ALL 3

English

Instructions manual ..... P. 2

Deutsch

Français

Español

Português

Italiano

Nederlands



### URC-7730

Universal remote

Universal Fernbedienung

Télécommande universelle

Mando a Distancia Universal

Telecomando Universal

Telecomando Universale

Universele Afstandsbediening

<b>PICTURES OF THE ONE FOR ALL 3 REMOTE</b> .....	3
<b>BATTERIES</b> .....	4
<b>THE KEYPAD</b> .....	4

## INSTALLATION

### **SETTING UP THE ONE FOR ALL 3** ..... **Page 6**

(How to set up the ONE FOR ALL 3 to control your devices)

- Direct code set up ..... 6
- Search Method ..... 7

### **SET UP CODES**

- Televisions ..... 12
- Video Recorders ..... 19
- DVD Players ..... 21

<b>CODE BLINK OUT</b> .....	8
(To find out which code is currently programmed)	

<b>QUICK CODE REFERENCE</b> .....	8
-----------------------------------	---

### **EXTRA FEATURES**

- Mode re-assignment (Changing a device mode) ..... 9
- Colour and Brightness ..... 10
- Volume Punch Through ..... 10

### **TROUBLE-SHOOTING**

- Problem & Solution ..... 11

## About Your ONE FOR ALL 3

Congratulations on your purchase of the ONE FOR ALL 3 Universal Remote Control. By choosing the ONE FOR ALL 3 remote you have opted for the User Friendly remote control solution. Made according to the highest quality, the ONE FOR ALL 3 will provide you with long-term satisfaction. Please read these enclosed instructions carefully before putting your ONE FOR ALL 3 to use.


Your ONE FOR ALL 3 Remote Package contains:

- Your ONE FOR ALL 3 Remote
- Your ONE FOR ALL 3 Manual

Your Manual is divided into two parts: the set-up instructions and the device codes.

**PLEASE DO NOT DISCARD THIS MANUAL AS YOU MAY NEED IT AGAIN IN THE FUTURE!**

Your ONE FOR ALL 3 can operate three devices: a Television, a Video Recorder and a DVD Player.

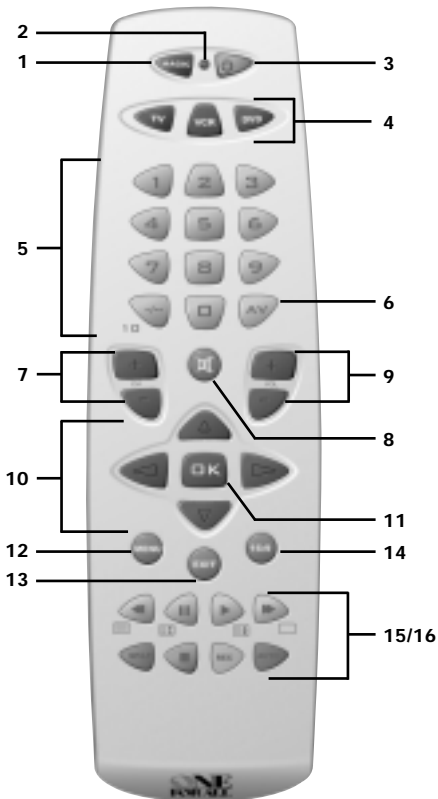

## Batteries

Your ONE FOR ALL 3 Remote needs 2 new "AA/LR6" Alkaline batteries.

- 1 Push the battery door upwards and lift it up to remove it.
2. Match the batteries to the (+) and (-) marks inside the battery case, then insert the batteries.
3. Replace the battery cover by pushing downwards and allowing it to click back into position.

- 
- In order to avoid having to re-program your ONE FOR ALL 3 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is recommended that you do not use rechargeable batteries.
  - On the inside of the battery compartment door you will find a label on which to write your Set-Up Codes for future reference. This you will do after setting up your ONE FOR ALL 3 remote for your devices.
- 

## The Keypad

Please refer to the picture of the ONE FOR ALL 3 Remote Control on Page 3.

- 1 **Magic Key:**  
The Magic key is used to set-up your ONE FOR ALL 3 Remote Control and to access special functions.
- 2 **LED:**  
During the use of your ONE FOR ALL 3, the LED will light up red.
- 3 **Power Key:**  
The Power key controls the same function as it did on your original remote.
- 4 **Device Keys:**  
The TV, VCR & DVD keys select the home entertainment device you wish to control. For example, pressing the TV key allows the remote to control the functions of your television, etc.
- 5 **Number Keys:**  
The Number keys (0-9, -/--(10)) provide the functions just like your original remote, such as the direct access to program/channel selection. If your original remote uses a 10 key, this function can be found by pressing the -/-- key.
- 6 **AV**  
The AV key operates the same function it did on your original remote control.
- 7 **Channel Up / Down Control:**  
These keys control the same functions as your original remote control. In DVD mode the Channel Up key operates the "Next Track" function, and the Channel down key operates the "Previous Track" function.
- 8 **Mute Key:**  
The Mute key operates the same function it did on your original remote.
- 9 **Volume Up / Down Control:**  
These keys operate just as those on your original remote.
- 10 **Directional Keys**  
If available on your original remote, these keys will allow you to navigate through the menu of your device.

# The Keypad

## 11 OK key

If your original remote control required that you press an "OK" or "ENTER" key during Menu operation, this key can be used for this function.

## 12 Menu Key:

Controls the same function as it did on your original remote control.

## 13 Exit Key:

The Exit key will exit the Menu.

## 14 16:9 key

In TV mode this key allows you to access the wide screen (16:9) view option of your television (if available on your original remote). In VCR mode it obtains the TV/VCR function.

## 15 VCR / DVD keys (PLAY, STOP, REW etc.)

After pressing the VCR mode key, the Playback keys operate the same functions of your Video Recorder Keys. To prevent accidental recording, the RECORD key must be pressed **twice**. After pressing the DVD mode key, the Playback keys will operate the same functions of your DVD Players.

In VCR mode the SP/LP key controls the tape speed function, the AUTO key controls the auto tracking function, just like on your original remote.

## 16 Teletext Functions:

After pressing the TV key, the transport keys (REW, PLAY, FF, PAUSE) are used to operate the main Teletext functions. The symbols below the keys are for Teletext. The text keys are used to access the Teletext functions of your television. Of course, your television must have Teletext capability.



**TEXT ON:** Puts your television in the teletext mode.



**HOLD/STOP:** Stops the television changing text pages.



**EXPAND:** Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to the regular teletext viewing, press the Expand key again, or press the Text key, depending on your television.



**TEXT OFF:** Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT key several times.

After pressing the TV key and accessing the text mode, the bottom row of the Video Recorder keys marked **red, green, yellow** and **blue**, allow you to access the Fasttext functions of your television. **If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fasttext keys may operate in the same way.**

---

- For a more detailed explanation of the Teletext and Fasttext functions, please refer to the manual of your television. Remember, different televisions control Teletext and Fasttext in different ways. Not all Teletext functions may be available for your particular model.




 

---

# Setting up the ONE FOR ALL 3

(How to set-up the ONE FOR ALL 3 to control your devices)

## Direct code set-up

**Example: To set up the ONE FOR ALL 3 for your television:**

1. **Make sure your device (television) you wish to operate is switched on** (not in standby).
2.  **Find the code for your device in the Code List (page 12 - 23).** The device codes are listed per device type and brand name. Also the most popular code for each brand is listed first. **If your brand is not listed at all, try the Search Method on page 7.**
3.  **Press the device mode key (TV)** on the ONE FOR ALL 3 remote for the device you wish to set up.
4.  **Press and hold down MAGIC** until the red light blinks twice (the red light will blink once then twice).
5.  **Enter your four-digit device code** using the number keys. The red light will blink twice.
6.  **Now aim the ONE FOR ALL 3 remote at your device (television) and press POWER.** If your device switched off, the ONE FOR ALL 3 is ready to operate your device.

- Most TV's do not switch back on pressing the POWER key, please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- If your device does not respond, follow steps 1 through 6 with each code listed for your brand. If none of the codes listed for your brand operate your device, then try the Search Method described on page 7, even if your brand is not listed at all.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- If the original remote control from your Video Recorder / DVD player did not have a POWER key, press PLAY instead of POWER during step 6.
- To set up your other devices, follow the same instructions above, only press the appropriate device key during step 3.
- Remember to press the correct device key before operating your device. Only one device can be assigned to a device key.
- **Write your device code in the applicable four digit boxes provided in the battery compartment and on page 8 for future reference.**

Devices can be found under the following keys:



To set up for a second TV, VCR or DVD (See mode re-assignment, Page 9).






# Setting up the ONE FOR ALL 3

## Search method

- > If your device does not respond to the ONE FOR ALL 3 after you have tried all the codes listed for your brand.
- > If your brand is not listed at all.


The Search Method allows you to scan through all the codes contained in the memory of the ONE FOR ALL 3.

### Example: To search for your television code:

1. Switch your television on (not in standby).
2.  Press the **TV** key on the ONE FOR ALL 3.
3.  Press and hold down **MAGIC** until the ONE FOR ALL 3 red light blinks twice (the red light will blink once then twice).
4.  Press **9 9 1**. The red light will blink twice.
5.  Next, press **POWER**.
6.   
**CH** Aim the ONE FOR ALL 3 at your Television. Now press **CH+** over and over, until your Television turns off (every time you press the CH+ key the ONE FOR ALL 3 will send out a POWER signal from the next code contained in the memory). **You may have to press this key many times (up to 150 times) so please be patient.**  

---

If you skip past a code, you can go to the previous code(s) by pressing the CH- key. Remember to keep pointing the ONE FOR ALL 3 at your Television while pressing this key.

---
7.  As soon as your television turns off, press **MAGIC** to store the code.








- Most TV's do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- If you cannot control your Television properly, please continue the Search Method, you may be using the wrong Code.
- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.
- If the original remote control of your Video recorder or DVD player does not have a POWER key, press PLAY instead of POWER during step 5.

## Code blink out

(To find out which code is currently programmed)

Once you have Set-Up your ONE FOR ALL 3, you can blink back your Set-up Code for future reference.

**Example: to blink out your television code:**

-  Press the **TV** key once.
-  Press and hold down **MAGIC** until the ONE FOR ALL 3 red light blinks twice (the red light will blink once then twice).
-  Press **9 9 0**. The red light will blink twice.
-  For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is „0“.
-  For the second digit of your four-digit code, press **2** and count all the red blinks. If there are no blinks, the digit is „0“.
-  For the third digit of your four-digit code, press **3** and count all the red blinks. If there are no blinks, the digit is „0“.
-  For the fourth digit of your four-digit code, press **4** and count all the red blinks. If there are no blinks, the digit is „0“. **Now you have your four-digit code.**

---

- To blink back the code for your other devices, press the appropriate device key during step 1.

---

## Quick Code Reference

Make sure you write down the codes for your devices in the boxes below and in the battery compartment for future easy reference.

Device Type

1 .....

--	--	--	--	--

2 .....

--	--	--	--	--

3 .....

--	--	--	--	--



## Extra Features

### Mode re-assignment

(Changing a device mode)

It is possible to change the mode of any device key. This is useful if you want to set up two of the same devices on the ONE FOR ALL 3. The code can be set up using "Direct code set up" (p. 6) or "Search method" (p. 7). To change a device key, see the three examples below.

**Example 1** if you like to program a second TV on the DVD key.

**Example 2** if you like to program a second TV on the VCR key.

**Example 3** if you like to program a second VCR on the DVD key.

#### Example 1:

To program a second Television on the DVD key (for example), you need to change the DVD key into a TV key, so press:



**The DVD key has now become a second TV key.**

Now enter the Set-Up code for your second TV by pressing:



#### Example 2:

To program a second Television on the VCR key (for example), you need to change the VCR key into a TV key, so press:



**The VCR key has now become a second TV key.**

Now enter the Set-Up code for your second TV by pressing:



#### Example 3:

To program a second Video Recorder on the DVD key (for example), you need to change the DVD key into a VCR key, so press:



**The DVD key has now become a second VCR key.**

Now enter the Set-Up code for your second VCR by pressing:



### Resetting a Device key

Example: To reset the DVD key to its original mode, press:



Example: To reset the VCR key to its original mode, press:



(\*) Press and hold down the MAGIC key until the red light (LED) blinks twice.

(\*\*) The red light (LED) will blink once then twice.

## Extra Features

### Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 3 may operate the colour and brightness settings of your television.

Colour (+) = Press and release **MAGIC** then hold **Volume (+)**  
Colour (-) = Press and release **MAGIC** then hold **Volume (-)**

Brightness (+) = Press and release **MAGIC** then hold **Channel (+)**  
Brightness (-) = Press and release **MAGIC** then hold **Channel (-)**

### Volume Punch Through

You may be able to use some functions of your Television, Video recorder, DVD player at the same time. For example: if you are watching a program on your video recorder, you can adjust the volume (a TV function) without pressing the TV mode key on your ONE FOR ALL 3. The table below lists some of the possibilities.




#### Last Device Mode Key Pressed:

VCR  
DVD

#### You Can Control:





TV volume up and down, mute  
TV volume up and down, mute

#### To punch through to TV volume while in the VCR or DVD mode:

-  Press and hold **MAGIC** until the red light blinks twice.
-  Press **9 9 3**.
-  Then press the **TV** key and the red light will blink twice.




#### To cancel the "Volume Punch Through" per mode:

(Example: to cancel the "Volume Punch Through" for the VCR mode)

-  Press **VCR** once.
-  Press and hold down the **MAGIC** key until the red light blinks twice.
-  Press **9 9 3**.
-  Then press the **Volume (-)** key and the red light will blink four times.

Example: being in VCR mode, you will be able to control VOL+/- or MUTE functions of your VCR (provided it has volume control).

#### To cancel the „Volume Punch Through“:

-  Press and hold **MAGIC** until the red light blinks twice.
-  Press **9 9 3**.
-  Press the **Volume (+)** key and the red light will blink four times.

# Trouble Shooting

## Problem & Solution

<b>Problem:</b>	<b>Solution:</b>
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL 3 does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL 3 is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the program number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL 3, you must press the Record key twice.
The ONE FOR ALL 3 does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL 3 at your device.
The red light (LED) does not blink when you press a key?	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.

## Televisions

## Fernseher

## Téléviseurs

## Televisores

## Televisões

## Televisori

## Televisies

A.R. Systems	0037	0556							
Accent	0037	0556							
Accuphase	0556	1909							
Acec	0012								
Adcom	0625								
Admiral	0093	0418	0087	0163	0264				
Adyson	0217	0216							
AEA	0037	0556							
Agashi	0216	0264	0217						
AGB	0516								
Agef	0087								
Aiko	0009	0037	0556	0216	0371	0035	0433		
	0072	0361	0191	0264	0217				
Aim	0037	0072	0412	0556					
Aiwa	0701								
Akai	0361	0208	0371	0037	0433	0191	0035		
	0009	0072	0218	0714	0163	0516	0715		
	0602	0556	0548	0581	0480	0217	0631		
	0216	0264	0178	0377	0606	1037			
Akiba	0218	0282	0455	0037	0556	0294			
Akito	0037	0556							
Akura	0037	0556	0668	0412	0493	0009	0218		
	0282	0264							
Alaron	0216								
Alba	0009	0418	0370	0235	0371	0668	0037		
	0556	1037	0355	0218	0216	0247	0163		
	0487	0581	0036	0579					
Alkos	0035								
Allorgan	0206	0294	0217						
Allstar	0037	0556							
Ambassador	0177								
Amplivision	0217	0370	0320						
Amstrad	0177	0009	0516	0264	0371	0218	0037		
	0556	0433	0412	1037	0648	0581			
Anam	0037	0556	0009						
Anam									
National	0037	0556	0650						
Anglo	0009	0264							
Anitech	0009	0264	0037	0556	0282	0102			
Ansonic	0370	0037	0556	0009	0668	0374	0163		
	0292	0102	0411	0259	0247	0012	0104		
Apollo	0473								
Arc en Ciel	0109								
Arcam	0216	0217							
Ardem	0486	0714	0037	0556					
Aristona	0556	0037	0012						
Arthur Martin	0163								
ASA	0105	0346	0104	0087					
Asberg	0037	0556	0102						

Asora	0009								
Astra	0037	0556							
Asuka	0218	0217	0216	0264	0282				
Atlantic	0037	0556	0216	0206	0320	0259			
Atori	0009								
Auchan	0163								
Audiosonic	0009	0037	0374	0556	0109	0714	0715		
	0217	0370	0337	0264	0218	0486			
Audioton	0217	0486	0370	0264					
Autovox	0087	0206	0349	0217	0247				
AWA	0011	0036	0009	0157	0374	0412	0037		
	0556	0216	0606	0217	0108	0264			
Axxent	0009								
Axxon	0714								
Baird	0109	0193	0343	0190	0072	0073	0217		
	0208								
Bang & Olufsen	0565	0087							
Barco	0380	0163							
Basic Line	0374	0037	0163	0668	0556	0009	0218		
	0282	0217	0455						
Bastide	0217								
Baur	0195	0512	0037	0556	0191	0361	0349		
	1505								
Bazin	0217								
Beaumont	0178								
Beko	0486	0035	0714	0370	0037	0556	0606		
	0715								
Beon	0037	0556	0418						
Berthen	0668								
Best	0337	0370							
Bestar	0037	0556	0370	0374					
Bestar- Daewoo	0374								
Binatone	0217								
Black Diamond	1037	0556							
Black Panther	0102								
Black Star	0247								
Blacktron	0282								
Blackway	0282	0218							
Blaupunkt	0191	0195	0455	0170					
Blue Sky	0037	0714	1037	0487	0668	0715	1909		
	0556	0218	0282	0455					
Blue Star	0282								
Bondstec	0247								
Boots	0217	0009							
Bosch	0320								
BPL	0037	0556	0282						
Brandt	0625	0109	0287	0335	0471	0343			
Brandt Electronique	0287	0335							
Brinkmann	0037	0556	0668	0519	0418	0486			
Brionvega	0037	0556	0087						
Britannia	0216	0217							
Brother	0264								
Bruns	0087								
BSR	0163	0294	0361						
BTC	0218								
Bush	0668	0218	0163	0349	0009	0036	0037		
	0371	0235	0282	0355	0374	0519	0264		
	0361	1037	0487	0208	0217	0698	0581		
	0294	0556	0714						
Canton	0218								

Capsonic 0264  
 Carad 0610 0037 0556 0668  
 Carena 0455 0037 0556  
 Carrefour 0036 0037 0556  
 Carver 0170  
 Cascade 0009 0037 0556  
 Casio 0037 0556 0163 0349  
 Cathay 0037 0556  
 CCE 0037 0556 0217  
 Centrum 1037  
 Centurion 0037 0556  
 Century 0087 0247 0238  
 CGE 0418 0247 0370 0163  
 Cimline 0009 0235 0218  
 City 0009  
 Clarivox 0418 0037 0556 0102  
 Clatronic 0037 0370 0371 0714 0218 0264 0556  
 0217 0247 0009 0102 0320 0579 0648  
 Clayton 1037  
 CMS 0216  
 CMS hightec 0217  
 Concorde 0009  
 Condor 0320 0037 0556 0370 0216 0009 0282  
 0102 0247 0418 0411 0163 0264  
 Conrad 0037 0556  
 Contec 0216 0009 0157 0011 0036 0264 0037  
 0556  
 Continental  
 Edison 0109 0287 0487  
 Cosmel 0009 0337 0037 0556  
 Crosley 0087 0247 0163  
 Crown 0009 0370 0486 0037 0556 0487 0714  
 0606 0715 0418 0579 0208 0339  
 CS Electronics 0216 0218 0247  
 CTC 0247  
 Curtis Mathes 0093 0166  
 Cybertron 0218  
 D-Vision 0037 0556  
 Daewoo 0634 0374 1909 0499 0037 0556 0009  
 0216 0218 0217 1137  
 Dainichi 0218 0216  
 Dansai 0037 0556 0264 0035 0216 0009 0036  
 0217  
 Dansette 0412  
 Dantax 0370 0486 0714 0606 0715  
 Datsura 0208  
 Dawa 0037 0556  
 Daytron 0009 0374 0037 0556  
 de Graaf 0208 0044 0163 0548  
 Decca 0072 0516 0037 0556 0217 1137  
 Deitron 0037 0556 0374 0218  
 Denko 0264  
 Denver 0037 0556 0606  
 DER 0193 0190  
 Desmet 0320 0037 0556 0009 0087  
 Diamant 0037 0556  
 Diamond 0264 0698 0696  
 Digatron 0037 0556  
 Digiline 0037 0556  
 Digitor 0037 0556  
 Digivision 0361  
 DIK 0037 0556  
 Dixi 0009 0037 0556 0247 0217 0087  
 Domeos 0668

Doric 0349  
 DTS 0009  
 Dual 0349 0217 0343 0519 0037 0556 0259  
 0163  
 Dumont 0087 0104 0102 0217 0072  
 Dunai 0163  
 Dux 0037 0556 0012  
 Dynatron 0037 0556 0012  
 E-Elite 0218  
 Edison-  
 Minerva 0487  
 Elbe 0435 0238 0259 0292 0370 0163 0037  
 0556 0218 0191 0411 0610 0217 0516  
 0361  
 Elbe-Sharp 0516  
 Elcit 0087 0247 0516 0102 0163  
 Elekta 0009 0037 0556 0264 0282  
 ELG 0037 0556  
 Elin 0216 0037 0556 0105 0104 0548 0361  
 0349 0163 0009  
 Elite 0218 0037 0556 0320  
 Elman 0102  
 Elta 0009 0264 0216  
 Emco 0247  
 Emerson 0177 0178 0087 0247 0037 0556 0371  
 0282 0320 0361 1909 0486 0370 0163  
 0321  
 Emperor 0282  
 Enzer 0696  
 Erres 0037 0556 0012  
 ESC 0037 0556 0217  
 Estèle 0163  
 Etron 0037 0556 0009 0163  
 Eurofeel 0264 0217  
 Euroman 0216 0264 0037 0556 0217 0370  
 Europa 0037 0556  
 Europhon 0037 0516 0102 0163 0217 0556 0247  
 0216  
 Excel 0037 0556  
 Expert 0206 0259 0163  
 Exquisit 0037 0556 0247  
 Fagor 0037 0556  
 Family Life 0037 0556  
 Fenner 0374 0009  
 Ferguson 0073 0625 0287 0190 0335 0238 0193  
 0109 0560 0037 0556 0035 0343 0104  
 0108 0361 0471  
 Fidelity 0163 0512 0037 0556 0371 0412 0193  
 0216 0264  
 Filsai 0217  
 Finlandia 0208 0346 0548 0361 0163 0072 0287  
 0343 0045  
 Finlux 0105 0104 0037 0556 0714 0346 0217  
 0072 0163 0516 0715 0087 0102 0411  
 0631 0492 0480 0473 0418 0606  
 Firstline 0037 0556 0374 0668 0714 0163 0009  
 0294 0321 0216 0247 1909 0102 0217  
 0411 0349 0238 0072 0235 0208 0361  
 Fisher 0104 0217 0036 0208 0370 0045 0087  
 0157 0361 0163 0349 0072  
 Flint 0037 0556 0610 0072 0218 0455 0264  
 FNR 0102  
 Forgestone 0193  
 Formenti 0163 0037 0556 0486 0216 0087 0320



Jean	0036	Lumatron	0206 0037 0556 0163 0259 0361 0217
JEC	0035		0264 0073
JMB	0037 0499 0634 0374 0556 0443	Lux May	0037 0009 0556 0581
Jocel	0712	Luxman	0579
Jubilee	0556	Luxor	0194 0480 0492 0349 0361 0208 0356
JVC	0653 0190 0036 0193 0371 0218 0606		0548 0163 0346 0473 0217 0631
	0418	LXI	0178
Kaisui	0218 0282 0037 0556 0216 0455 0217	Madison	0037 0556
	0009	Magnadyne	0087 0247 0516 0102 0163
Kamp	0216	Magnafon	0516 0102 0216 0073
Kapsch	0163 0361 0206 0259 0104	Magnavox	0037 0556 0036
Karcher	0037 0556 0370 0610 0163 0282 0102	Magnum	0648 0714 0037 0556 0715
	0264	Mandor	0264
Kathrein	0556 0037	Manesth	0037 0556 0235 0217 0264 0320 0035
Kawa	0371		0294 0163
Kawasho	0216	Manhattan	0037 0556 0668 1037 0163
KB Aristocrat	0163	Marantz	0037 0556 0412
Kendo	0610 0037 0556 0163 0519 0512 0370	Marelli	0087
	0377 0411 0102 0235 0247	Mark	0037 0556 0217 0216 0374 0009 0714
Kennedy	0163 0206 0435		0715
Kenwood	0105	Masuda	0218 0371 0009 0264 0037 0217 0556
Kingsley	0216	Matsui	0037 0556 0487 0009 0235 0177 0011
Kiton	0556 0037		0355 0072 0036 0217 0294 0371 0433
Kneissel	0037 0370 0610 0411 0374 0499 0556		0443 0579 0455 0163 0349 0516 0035
	0435 0259 0292 0238		0208 0045 0195 0191 0335
Kolster	0037 0556 0102 0349	Matsushita	0650
Konka	0037 0556 0371 0714 0418 0218	Matsuviama	0587
Kontakt	0487	Mediator	0037 0556 0012
Korpel	0037 0556	Medion	0037 0668 0519 0512 0556 1137 0698
Korting	0087 0370 0320	Megas	0610
Kosmos	0037 0556	Megatron	0178
Kotron	0412 0264	Meletronic	0346 0037 0512 0109 0343 0247 0105
Koyoda	0009		0104 0374 0009 0217 0480 0492 0216
Kraking	0238		0411 0349 0163 0287 0556 0634 0361
Kriesler	0012		0191 0195
KTV	0217	Memorex	0009 0178
Kuba	0349 0163	Memphis	0337 0072 0009
Kuba		Mercury	0037 0009 0556
Electronic	0349 0163	Metz	0195 0447 0191 0367 0037 0087 0556
Kyoshu	0412 0418 0264		0587 0668 1037
Kyoto	0163 0216 0217	MGA	0178 0037 0556 0218 0104
LaSAT	0486 0370	Micromaxx	0037 0556 0668 1037
Leader	0009	Minato	0037 0556
Lecson	0037 0556	Minerva	0487 0195 0191 0516 0108
Lemair	0411	Minoka	0412 0037 0556
Lenco	0037 0009 0163 0374 0556 0104	Mistral	
Lenoir	0009	Electronics	0193
Lesa	0247	Mitsubishi	0108 0093 0512 0037 0178 0087 0036
Levis Austria	0037 0556		0193 0556 0208
Leyco	0264 0072 0037 0556 0294 0579	Mitsuri	
LG	0037 0370 0009 0377 0217 0556 0714	General	0163
	0247 0216 0163 0178 0361 0606 0109	Mivar	0292 0370 0216 0609 0516 0217
Liesenk & Tter	0037 0556	Monaco	0009
Liesenkotter	0037 0012 0556	Morgan's	0037 0556
Lifetec	0037 0009 0519 0374 0668 0512 0655	Motorola	0093
	1037 1137 0556 0218 0264	MTC	0370 0349 0512 0163 0216 0361
Lloyd's	0009	Multi-	
Loewe	0512 0037 0556 0655 0370 0633 0087	broadcast	0193
	0292	Multistandard	0102
Logik	0011 0698 0037 0193 0556 0371	Multitec	0037 0556 0486 0668 1037
Logix	0668	Multitech	0349 0009 0486 0037 0370 0556 0217
Luma	0037 0206 0163 0411 0556 0374 0009		0216 0247 0102 0264
	0259	Murphy	0104 0216 0072 0163
		Musikland	0037 0218 0247 0556

Myryad	0556 0037
NAD	0166 0178 0361 0163
Naiko	0037 0606 0556
Nakimura	0374 0037 0556
Naonis	0163
NAT	0226
National	0226
NEC	0170 0036 0320 0455 0009 0374 0217 0037 0556 0011 0499
Neckermann	0037 0191 0370 1505 0556 0163 0418 0349 0087 0247 0217 0411 0320 0512
NEI	0037 0556 0337 0371 0163
Nesco	0247
Netsat	0037 0556
Network	0337
Neufunk	0037 0009 0556 0610 0218 0282 0714
New Tech	0037 0009 0556 0343 0217
New World	0218
Nicamagic	0216
Nikkai	0072 0218 0037 0556 0217 0264 0035 0337 0216 0009 0036
Nikko	0178
Nobliko	0102 0216
Nogamatic	0109
Nokia	0361 0163 0480 0349 0548 0492 0473 0339 0208 0374 0631 0606 0346 0320 0610 0109
Nordic	0217
Nordmende	0109 0714 0287 0343 0560 0195 0037 0556 0335 0163 0471
Norfolk	0163
Normerel	0037 0556
Novak	0012
Novatronic	0037 0105 0374 0556
Nurnberg	0163 0361
Oceanic	0163 0361 0294 0208 0473 0548 0480
Odeon	0264
Okano	0370 0037 0556 0264 0072 0009
Omega	0264
Onwa	0371 0602 0218 0433 0581 0102
Opera	0037 0556
Optimus	0650 0166
Optonica	0093
Orbit	0037 0556
Orion	0037 0355 0556 0655 0714 0235 0294 0177 0320 0011 0009 0321 0443 0102 0264 0412 0516
Orline	0037 0218 0556
Ormond	0668 1037 0037 0556
Orsowe	0516
Osaki	0072 0218 0217 0264 0493 0037 0412 0374 0355 0556
Osio	0037 0556
Oso	0218
Osume	0157 0072 0036 0218 0037 0556
Otto Versand	1505 0036 0093 0512 0037 0556 0195 0349 0191 0361 0235 0109 0294 0226 0247 0320 0217 0009 0282 0343 0516 0519
Pacific	0037 0556 1137
Pael	0216
Palladium	0370 0037 0191 1505 0418 0556 0247 0349 0087 0163 0217 0411 0655 0519
Palsonic	0264 0412 0037 0217 0377 0218 0698 0556
Panama	0009 0217 0264 0216 0037 0556 0247
Panasonic	0650 0226 0361 0367 0516 0037 0556 0163 0548
Panavision	0037 0411 0556
Pathe Cinema	0163 0238 0216 0320 0292 0349 0370
Pathe Marconi	0109
Pausa	0009
Perdio	0072 0320 0163 0037 0216 0282 0556
Perfekt	0037 0556
Philco	0087 0418 0247 0163 0370 0037 0556 0519
Philex	0193 0163
Philharmonic	0217
Phillips	0556 0037 0238 0012 0191 0087 0193 0343 0374
Phoenix	0037 0556 0370 0486 0163 0087 0072 0216 0320
Phonola	0037 0556 0012 0087 0193 0216
Pilot	0556 0037 0712
Pioneer	0166 0037 0556 0370 0343 0361 0109 0163 0287 0486 0512
Pionier	0370 0486
Plantron	0037 0556 0264 0009
Playsonic	0217 0714
Policom	0102 0109 0206 0238 0361 0163 0087
Polytron	0697
Poppy	0009
Portland	0374 1909
Powerpoint	0487
Prandoni-Prince	0247 0516 0361
Precision	0217
Premier	0009
Prima	0009 0264 0412
Prinz	0072 0349 0361 0194
Profex	0009 0163 0361
Profi	0009
Profitronic	0037 0556 0102
Proline	0037 0556 0625 0634 0411 0012 0321 0072
Prosonic	0037 0556 0370 0374 0371 0668 0714 0216 0579
Protech	0037 0556 0217 0009 0247 0349 0102 0264 0418 0337 0668 0282 0163 0486
Proton	0178
Provision	0499 0037 0556 1037
Pye	0037 0556 0012 0087 0374 0349 0412
Pymi	0009
Quadral	0218
Quasar	0247 0650 0009
Quelle	0037 1505 0011 0109 0512 0349 0191 0361 0036 0217 0247 0104 0105 0668 0556 0157 0195 0264 0294 0346 0009
Questa	0036
R-Line	0037 0556 0163
Radialva	0109 0218 0163 0037 0556 0287
Radiola	0037 0556 0012 0217
Radiomarelli	0087 0516 0247 0037 0556
RadioShack	0037 0556 0178
Radiotone	0009 0037 0556 0370 0579 0418 0412 0648 0668 0264
Rank Arena	0036 0157



RCA	0625 0093 0560 0335 0343	Sharp	0093 1193 0157 0036 0294 0653 0193
Realistic	0178		0516
Recor	0037 0556	Shintoshi	0037 0556
Rectilligne	0037 0556	Shivaki	0037 0556 0443 0374
Rediffusion	0361 0548 0036 0346	Shorai	0294
Redstar	0037 0556	Siarem	0163 0087 0102 0516
Reflex	0037 0556 1037 0668	Siemens	0191 0195 0157 0037 0556 0361
Reoc	0714 0634 1909	Siera	0037 0556 0012
Revox	0037 0556 0370	Siesta	0370
Rex	0206 0411 0247 0163 0259 0264	Silva	0037 0556 0216 0361 0648
RFT	0087 0292 0370 0072 0264 0037 0556	Silver	0036 0037 0455 0361 0556 0715 0163
Rhapsody	0216	Singer	0009 0087 0037 0556 0102 0247 0435
Ricoh	0037 0556		0335 0163
Roadstar	0009 0418 0037 1037 0556 0218 0264	Sinudyne	0177 0087 0235 0102 0294 0163 0361
	0282		0516 0349 1505 0206 0037 0556
Robotron	0087	Skantic	0356
Rodex	0037 0556	Sky	0037 0556
Rowa	0264 0698 0217 0712	Skymaster	0105
Royal Lux	0370 0412 0335	Skysonic	0696
Rukopir	0556 0037	SLX	0668
Saba	0625 0287 0087 0163 0109 0516 0343	Smaragd	0487
	0361 0498 0335 0548 0471 0560	Sogera	0320
Saccs	0238	Solavox	0361 0072 0163 0548 0037 0556
Sagem	0610 0455 0282	Sonawa	0218
Saisho	0235 0516 0177 0009 0011 0217 0163	Soniko	0037 0556
	0264	Sonitron	0208 0370 0339 0217
Saivod	0037 0556	Sonneclair	0037 0556
Sakai	0163	Sonoko	0037 0556 0009 0264 0282 0217
Salora	0194 0349 0163 0356 0361 0516 0548	Sonolor	0208 0163 1505 0548 0361 0282
	0339 0208	Sontec	0037 0556 0370 0294 0009
Salsa	0335	Sony	1505 1651 0011 0036 0102 0037 0556
Sambers	0516 0102	Sound & Vision	0102 0218 0374 0037 0556
Samsung	0618 0587 0037 0178 0556 0009 0217	Soundesign	0178
	0370 0264 0216 0644 0072 0208 0519	Soundwave	0037 0556 0320 0418
	0163	Spectra	0009
Sandra	0216 0217	Ssangyong	0009
Sanela	0238	Staksonic	0009
Sansui	0037 0556 0371 0655 0602 0455	Standard	0037 0556 1037 0218 0009 0217 0320
Santon	0009		0374
Sanyo	0208 0157 0292 0036 0011 0370 0339	Starlite	0009 0163 0037 0556 0264 0412
	0072 0216 0217 0104 0045 0009 0163	Stenway	0282 0218
	0037 0108 0556 0486	Stern	0206 0259 0163 0264 0411 0435
Save	0037 0556	Strato	0037 0556 0264 0009
SBR	0037 0556 0012 0193	Stylandia	0217
Schaub		Sunic Line	0037 0556
Lorenz	0349 0548 0714 0606 0361 0486 0374	Sunkai	0294 0355 0321 0455 0218 0235 0610
Schneider	1137 0037 0556 0519 0012 0349 0259		0037 0556 0487
	0343 0217 0247 0371 0361 0218 0668	Sunstar	0371 0037 0556 0009 0579 0264
	1037 0163 0648 0714 1909	Sunwood	0037 0556 0009
Scotland	0163	Superla	0516 0216 0217
Scott	0178	SuperTech	0009 0037 0556 0216 0218
Sears	0178	Supra	0374 0009
SEG	0037 0556 1037 0668 0217 0487 0009	Susumu	0335 0218 0287
	0349 0163 0264 0634 0036 0102 0247	Sutron	0009
	0216 0218 1909	Swissline	0247
SEI	0087 0102 1505 0163 0516 0349 0294	Sydney	0216 0217
	0206 0037 0556 0177	Sysline	0037 0556
Sei-Sinudyne	0102 0206 0294 0516 1505 0037 0556	Sytong	0216
	0087	T+A	0447
Seleco	0206 0259 0163 0411 0371 0036 0264	Tandberg	0367 0411 0109 0337 0361 0163
	0346	Tandy	0218 0072 0217 0247 0093 0163
Sencora	0009	Tashiko	0036 0217 0170 0216 0163
Sentra	0035 0218 0009 0349	Tatung	0037 0556 0072 0516 0217 0011
Serino	0610 0455 0216 0093		



## Video Recorders

## Videorecorder

## Magnétoscopes

## Vídeos

## Vídeo Gravadores

## Videoregistratori

## Videorecorders

Accuphase	0637
Adyson	0072
Aiwa	0307 0000 0348 0352 0037 0041
Akai	0106 0315 0041 0352 0240
Akashi	0072
Akiba	0072
Akura	0072 0041
Alba	0278 0072 0352 0000 0315 0348 0081
Allorgan	0240
Allstar	0081
Amstrad	0000 0278 0072
Anitech	0072
Ansonic	0000
Aristona	0081
ASA	0037 0081
Asuka	0072 0037 0081 0000 0038
Audiosonic	0278
AVP	0352 0000
AWA	0037 0278 0642 0043
Baird	0106 0278 0104 0041 0000
Bang & Olufsen	0499
Basic Line	0278 0072
Bestar	0278
Black Diamond	0642 0278
Black Panther	0278
Blaupunkt	1562 0226 0081
Blue Sky	0037 0348 0072 0352 0278 0000
Bondstec	0072
Brandt	0041 0320 0321
Brandt Electronique	0041
Brinkmann	0348
Bush	0072 0278 0315 0352 0000 0348 0081
Carena	0081
Carrefour	0045
Casio	0000
Cathay	0278
CGE	0041 0000
Cimline	0072
Clatronic	0072 0000
Combitech	0352
Condor	0278
Crown	0278 0072
Cyrus	0081
Daewoo	0278 0642 0637 0348 0352 0045
Dansai	0072 0278
Daytron	0278

de Graaf	0042 0081 0104 0048
Decca	0000 0041 0081 0067 0348
Deitron	0278
Denko	0072
Diamant	0037
Dual	0041 0081 0278 0000
Dumont	0000 0081 0104
Elbe	0278 0038
Elcotech	0072
Elin	0240
Elsay	0072
Elta	0072 0278
Emerson	0072 0045 0000
ESC	0278 0240
Etzuko	0072
Ferguson	0041 0320 0321 0000 0278
Fidelity	0000 0072 0240
Finlandia	0104 0081 0042 0000 0048 0384
Finlux	0000 0081 0104 0042
Firstline	0072 0348 0043 0037 0045 0042 0278
Fisher	0047 0104 0038
Frontech	0072
Fujitsu	0000
Funai	0000
Galaxi	0000
Galaxis	0278
GE	0320
GEC	0081
General Technic	0348
Genexxa	0104
Goldhand	0072
GoldStar	0037 0000
Goodmans	0000 0072 0240 0278 0037 0081 0348 0637 0352 0642
Graetz	0041 0104 0240
Granada	0104 0048 0081 0240 0037 0226 0042 0000
Grandin	0072 0037 0000 0278
Grundig	0081 0347 0226 0320 0348 0072
Haaz	0348
Hanimex	0352
Hanseatic	0037 0278 0081 0038
Harwood	0072
HCM	0072
Hinari	0072 0352 0041 0278 0240
Hisawa	0352
Hischito	0045
Hitachi	0042 0041 0000 0240 0081 0104 0384
Hornophone	0081
Hypson	0072 0278 0352
Imperial	0000 0240
Ingersoll	0240
Inno Hit	0240 0278 0072
Interbuy	0037 0072
Interfunk	0081 0104
Internal	0278 0637
International	0278 0037
Intervision	0000 0278 0037 0348
Irradio	0072 0037 0081
ITT	0106 0041 0384 0104 0240
ITT Nokia	0048
ITV	0278 0037
JMB	0352

Joyce 0000  
 JVC 0041 0067 0384  
 Kaisui 0072  
 Karcher 0278  
 Kendo 0106 0315 0348 0072 0037  
 Kenwood 0041 0038  
 KIC 0000  
 Kimari 0047  
 Kneissel 0352 0348 0037  
 Kolster 0348  
 Korpel 0072  
 Kuba 0047  
 Kuba Electronic 0047  
 Kuwa 0226  
 Kyoto 0072  
 Lenco 0278  
 Leyco 0072  
 LG 0037 0000 0278  
 Lifetec 0348  
 Loewe 0081 1562 0226 0037  
 Logik 0240 0072 0106  
 Lumatron 0278  
 Luxor 0106 0043 0072 0104 0047 0048  
 Magnavox 0081  
 Manesth 0072 0045 0081  
 Marantz 0081 0038  
 Mark 0278  
 Matsui 0348 0037 0240 0352 0000  
 Mediator 0081  
 Medion 0348 0352  
 Melectronic 0000 0037 0038  
 Memorex 0104 0000 0037 0048 0047  
 Memphis 0072  
 Metz 1562 0347 0081 0226 0037  
 Micormay 0348  
 Migros 0000  
 Mitsubishi 0043 0067 0081  
 Multitec 0037  
 Multitech 0000 0072 0104  
 Murphy 0000  
 Myryad 0081  
 NAD 0104  
 National 1562 0226  
 NEC 0041 0038 0067 0104 0037  
 Neckermann 0041 0081  
 Nesco 0072 0000 0352  
 Nikkai 0072 0278  
 Nokia 0104 0106 0315 0041 0278 0240 0048  
 0042 0081  
 Nordmende 0041 0384 0320 0321 0067  
 NU-TEC 0348  
 Oceanic 0000 0048 0106 0081 0104 0041  
 Okano 0315 0348 0072 0278  
 Orbit 0072  
 Orion 0352 0348  
 Orson 0000  
 Osaki 0000 0037 0072  
 Osume 0072  
 Otto Versand 0081  
 Palladium 0072 0315 0037 0041 0240 0348 0432  
 Palsonic 0072 0000  
 Panasonic 1562 0226  
 Pathe Cinema 0043

Pathe Marconi 0041  
 Perdio 0000  
 Philco 0038 0072  
 Phillips 0081 0384  
 Phoenix 0278  
 Phonola 0081  
 Pioneer 0067 0081 0042  
 Portland 0278 0637  
 Prinz 0000  
 Profitronic 0081 0240  
 Proline 0000 0320 0321  
 Proscoc 0278  
 Prosonic 0278 0000  
 Protech 0081  
 Provision 0278  
 Pye 0081  
 Quasar 0278  
 Quelle 0081  
 Radialva 0037 0072 0081 0048  
 Radiola 0081  
 Rank 0041  
 Reoc 0348 0637 0278  
 Rex 0041 0384  
 RFT 0072  
 Roadstar 0240 0072 0037 0278  
 Royal 0072  
 Saba 0041 0320 0321 0384 0278  
 Saisho 0348  
 Salora 0043 0106 0104  
 Samsung 0240 0432 0620  
 Sansui 0041 0067 0106 0072 0348  
 Sanyo 0104 0047 0048 0067  
 Saville 0352 0278 0240  
 SBR 0081  
 Scan Sonic 0240  
 Schaub Lorenz 0041 0104 0000 0106 0315  
 Schneider 0072 0000 0037 0081 0278 0240 0042  
 Seaway 0278  
 SEG 0072 0240 0278 0642 0081  
 SEI 0081  
 Sei-Sinudyne 0081  
 Seleco 0041 0384 0037  
 Sentra 0072  
 Setron 0072  
 Sharp 0048 0037 0569  
 Shintom 0072 0104  
 Shivaki 0037  
 Siemens 0037 0104 0081 0320 0347  
 Siera 0081  
 Silva 0037  
 Silver 0278  
 Singer 0045  
 Sinudyne 0081  
 Smaragd 0348  
 Sonitron 0047  
 Sonneclair 0072  
 Sonoko 0278  
 Sonolor 0048  
 Sontec 0037 0278  
 Sony 0032 0106 1032  
 Soundwave 0037 0348  
 Ssangyong 0072  
 Standard 0278  
 Starlite 0037 0104

VCR

VCR

Stern 0278  
 Sunkai 0348 0278  
 Sunstar 0000  
 Suntronic 0000  
 Sunwood 0072  
 Supra 0037 0240  
 Symphonic 0000 0072  
 T+A 0226  
 Tandberg 0278  
 Tashiko 0000 0048 0240 0081 0037  
 Tating 0000 0041 0081 0048 0043 0348 0352  
 Teac 0072 0041 0000 0278 0642 0037 0081  
 0307  
 TEC 0278 0072  
 Tech Line 0072  
 TechniSat 0348  
 Teleavia 0041  
 Telefunken 0041 0320 0321 0384 0278  
 Teletech 0072 0278 0000  
 Tenosal 0072  
 Tensai 0000 0037 0072  
 Tevion 0348  
 Thomson 0320 0722 0321 0041 0067 0384 0278  
 Thorn 0041 0104 0037  
 Thorn-  
 Ferguson 0320  
 Tokai 0072 0037 0041 0104  
 Tokiwa 0072  
 Topline 0348  
 Toshiba 0045 0041 0384 0043 0081  
 Towada 0072  
 Tredex 0278  
 Uher 0037 0240  
 Ultravox 0278  
 Unitech 0240  
 United Quick  
 Star 0278  
 Universum 0000 0081 0240 0037 0106 0348 0104  
 Victor 0067  
 Watson 0081 0352 0278 0642  
 Weltblick 0037  
 Yamaha 0041  
 Yamishi 0072 0278  
 Yokan 0072  
 Yoko 0037 0072 0240  
 Zenith 0637

## DVD

3DLAB 0539  
 A-Trend 0714  
 Acoustic  
 Solutions 0730  
 AEG 0788 0770  
 Aiwa 0641 0695  
 Akai 0790 0788 0690 0716 0713 0705  
 AKI 0718  
 Akira 0699  
 Alba 0717 0699 0713 0723 0695  
 All-Tel 0790  
 Amitech 0770  
 Amstrad 0713  
 Ansonic 0774  
 Apex Digital 0672

Audiosonic 0690  
 AWA 0730  
 Black  
 Diamond 0713  
 Blaupunkt 0717  
 Blue Sky 0699 0695 0713 0672  
 Boman 0783  
 Brain Wave 0770  
 Brandt 0651  
 Bush 0699 0690 0689 0717 0713 0774 0818  
 0695 0723  
 C-Tech 0768  
 Cambridge  
 Audio 0696  
 Cambridge  
 Soundworks 0696  
 CAT 0699  
 Celestial 0672  
 Centrex 0672 1004  
 Centrum 0713  
 cineULTRA 0699  
 Classic 0730  
 Clatronic 0788  
 Clayton 0713  
 Coby 0730  
 Conia 0672  
 Crown 0770 0651 0690  
 Cybercom 0774  
 CyberHome 0714 0816  
 Cytron 0716 0651 0705  
 Daewoo 0770 0705 0714  
 Daewoo  
 International 0699  
 Dansai 0770 0783  
 Dantax 0723  
 DEC 0699 0818  
 Decca 0770  
 Denon 0490 0634  
 Denver 0699 0788  
 Denzel 0665  
 Diamond 0651 0768 0723  
 Digihome 0713  
 digiRED 0717  
 Digitrex 0672  
 DIK 0774  
 Dinamic 0788  
 DIViDo 0705  
 DK digital 0774  
 DMTECH 0783 0790  
 Dragon 0774  
 Dual 0665 0651 0713 0730 0783 0790 0774  
 E-Boda 0723  
 Eclipse 0723  
 Electrohome 0770  
 Elin 0770  
 Elta 0690 0770 0788 0790  
 Emerson 0591 0705  
 Enzer 0665  
 Ferguson 0651  
 Finlux 0741 0770 0783  
 Funai 0695  
 GE 0717  
 Global  
 Solutions 0768

Global Sphere 0768  
 Go Video 0783  
 GoldStar 0591 0741  
 Goodmans 0651 1004 0790 0690 0783 0723 0818  
 Graetz 0665  
 Grandin 0716  
 Grundig 0539 0695 0651 0775 0705 0790 0713  
 0670 0723  
 Grunkel 0770  
 H&B 0818 0713  
 Haaz 0768  
 Hanseatic 0741  
 HCM 0788  
 HDT 0705  
 HE 0730  
 Henß 0713  
 Hitachi 0664 0665 0573  
 Hiteker 0672  
 Hoher 0774  
 Home  
 Electronics 0730  
 Hyundai 0783  
 Ingelen 0788  
 ISP 0695  
 Jeken 0699  
 JMB 0695  
 JVC 0623 0539 0503 1940  
 Karcher 0783  
 Kendo 0699  
 Kenwood 0534 0490 0737  
 Kiiro 0718 0770  
 Kingavon 0818  
 Kiss 0665  
 Koda 0818  
 Koss 0651  
 Lawson 0705 0716 0768  
 Lecson 0696  
 Lenco 0699 0774 0651 0770 0818  
 Lenoxx 0690  
 Lexia 0699  
 LG 0591 0741 1906  
 Lifetec 0651 0774  
 Limit 0716 0768  
 Loewe 0539  
 LogicLab 0768  
 Logix 0705 0783  
 Lumatron 0705  
 Luxman 0573  
 Luxor 1004  
 Magnavox 0503 0818  
 Magnex 0723  
 Manhattan 0705  
 Marantz 0539  
 Mark 0713  
 Matsui 0651 0695  
 MBO 0690 0730  
 MDS 0699  
 Medion 0651 0774 0783 0716  
 Memorex 0774  
 Metz 0571 0713  
 MICO 0723  
 Microboss 0718  
 Micromaxx 0695  
 Micromedia 0503 0539

Micromega 0539  
 Microsoft 0522  
 Microstar 0774  
 Minax 0713  
 Minoka 0770  
 Mitsubishi 0713  
 Mizuda 0818  
 Monyka 0665  
 Mustek 0730  
 Mix Onda 0651 0723  
 NAD 0741  
 Naiko 0770  
 Neufunk 0665  
 Nordmende 0774  
 Omni 0690 0699  
 Onkyo 0627 0503  
 Optimus 0571  
 Orava 0818  
 Orion 0695  
 Oritron 0651  
 P&B 0818  
 Pacific 0768 0790 0774 0713  
 Palladium 0695  
 Palsonic 0689 0672  
 Panasonic 0490 1908  
 Panda 0783  
 Phillips 0539 0646 0503 1914  
 Phonotrend 0699  
 Pioneer 0571 1902  
 Pointer 0770  
 Powerpoint 0718  
 Proline 0651 0686 0672 0790 1004  
 Proscan 0522  
 Prosonic 0699  
 Provision 0699  
 Radionette 0741  
 Raite 0665  
 Rank Arena 0718  
 RCA 0522 0651  
 REC 0689 0490  
 Red Star 0770 0788  
 Reoc 0768  
 Revoy 0699  
 Roadstar 0699 0690 0689 0713 0818  
 Rotel 0623  
 Rowa 1004  
 Saba 0651  
 Sabaki 0768  
 Salora 0741  
 Samsung 0573 0490  
 Sansui 0695 0716 0768 0723 0770  
 Sanyo 0670 0695 0790  
 Scan 0705  
 ScanMagic 0730  
 Schaub Lorenz 0788 0770  
 Schneider 0651 0783 0705 0790 0788  
 Scientific Labs 0768  
 Scott 0718 0651 0672  
 SEG 0665 0713 0768  
 Shanghai 0672  
 Sharp 0630 0695  
 Sherwood 0717 0741 0633  
 Shinco 0717  
 Silva 0788

DVD

DVD

SilvaSchneider 0774  
Singer 0690 0716 0723  
Skymaster 0730 0768  
Slim Art 0770  
SM Electronic 0730 0768 0690  
Smart 0718 0705 0713  
Sonashi 0716  
Sony 0533 0573 1903 1904  
Soundmaster 0768  
Soundmax 0768  
Soundwave 0783  
Standard 0651 0768  
Starmedia 0818  
Sunwood 0788  
Supervision 0730 0768  
SVA 0672  
Synn 0768  
Tatung 0770  
Teac 0717 0741 0571 0591 0768 0790  
Technics 0490 1908  
Technika 0770  
Techwood 0713  
Tensai 0690 0651  
Tevion 0651 0768  
Theta Digital 0571  
Thomson 0551 0522  
Tokai 0665 0788  
Tokiwa 0705 0716  
Toshiba 0503  
Umax 0690  
United 0788 0730 0790  
Universum 0741 0713 0591  
Venturer 0790  
Vieta 0705  
Voxson 0774 0730  
Walkvision 0717  
Welkin 0774  
Wesder 0699  
Wharfedale 0686 0696 0723  
Windy Sam 0573  
XBox 0522  
XLogic 0770 0768  
XMS 0788 0689  
Yamada 1004  
Yamaha 0490 0539 0646  
Yamakawa 0665 0710 0765  
Yelo 0718  
Yukai 0730  
Zenith 0503 0591 0741

DVD

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>