




URC 7800 Cinema 7+ User Guide

Previous Model Name: Cinema 7

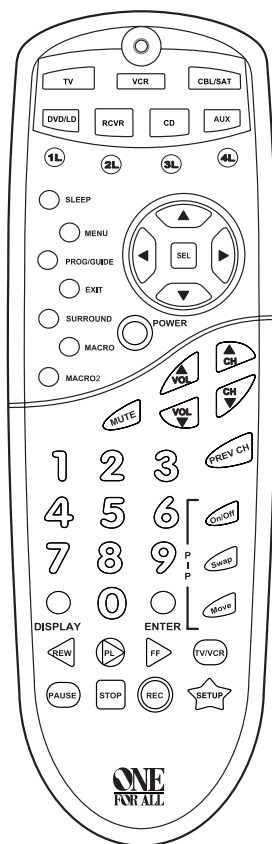

CONTENTS

OVERVIEW	3
FEATURES AND FUNCTIONS	4
INSTALLING THE BATTERIES	8
SETTING UP YOUR COMPONENTS	8
Programming the Cinema 7+™ to operate your TV	8
Setup Codes For TVs	9
Programming the Cinema 7 to operate your VCR.....	11
Setup Codes For VCRs	11
Programming the Cinema 7 to operate your TV/VCR Combo	13
Setup Codes For TV/VCR Combos.....	14
Programming the Cinema 7 to operate your DVD or Laser Disc Player.....	15
Setup Codes for DVD Players	15
Setup Codes for Laser Disc Players	15
Programming the Cinema 7+™ to operate	
your Receiver/Tuner	16
Setup Codes For Receivers/Tuner.....	16
Programming the Cinema 7+™ to operate your CD Player.....	17
Setup Codes For CD Players	18
Programming the Cinema 7+™ to operate your Cable Converter or Satellite.....	18
Setup Codes for Cable Converters	19
Setup Codes for Satellites	20
Programming the AUX Key	21
Setup Codes For Integrated Amplifiers, etc.	21
SEARCHING FOR YOUR CODE.....	22
RETRIEVING THE CODES PROGRAMMED	
INTO THE Cinema 7+™	22
LEARNING FUNCTIONS ONTO THE 1L~4L KEYS	23
Deleting Functions from the L Keys.....	24
SETTING UP OTHER COMPONENTS.....	24
Setup Codes For Audio Cassettes	25
Setup Codes For IR Home Automation.....	25
Setup Codes For MiniDisc.....	25
Setup Codes For Video Accessories.....	25
Setup Codes For Miscellaneous Audio	25
RE-ASSIGNING DEVICE KEYS	26
PROGRAMMING THE MACRO KEYS	27
VOLUME LOCK	28
USING THE SLEEP KEY.....	29
TROUBLE SHOOTING	30
ONE FOR ALL® PRODUCTS Limited Warranty	32


OVERVIEW

Thank you for purchasing the One For All® *Cinema 7+™* universal remote control with learning. Along with being a complete Home Theater universal remote, the Cinema 7+™'s sophisticated technology will allow you to finally consolidate the clutter of all of the original remotes in your home entertainment system. Through patented learning technology, you can teach your Cinema 7+™ the unique features of your original remotes and create the complete universal remote control – only from One For All.

Before you can use your new remote control, you will need to program it to operate the specific home entertainment components you wish to control. Follow the instructions detailed in this manual to set up your *Cinema 7+™* and enjoy your new remote control.

FEATURES AND FUNCTIONS

The illustration below and the chart on the next three pages describe the features and functions of the *Cinema 7+™* universal remote control. Use the drawing to locate each feature of the remote, then refer to the chart for a description of what function each feature performs.

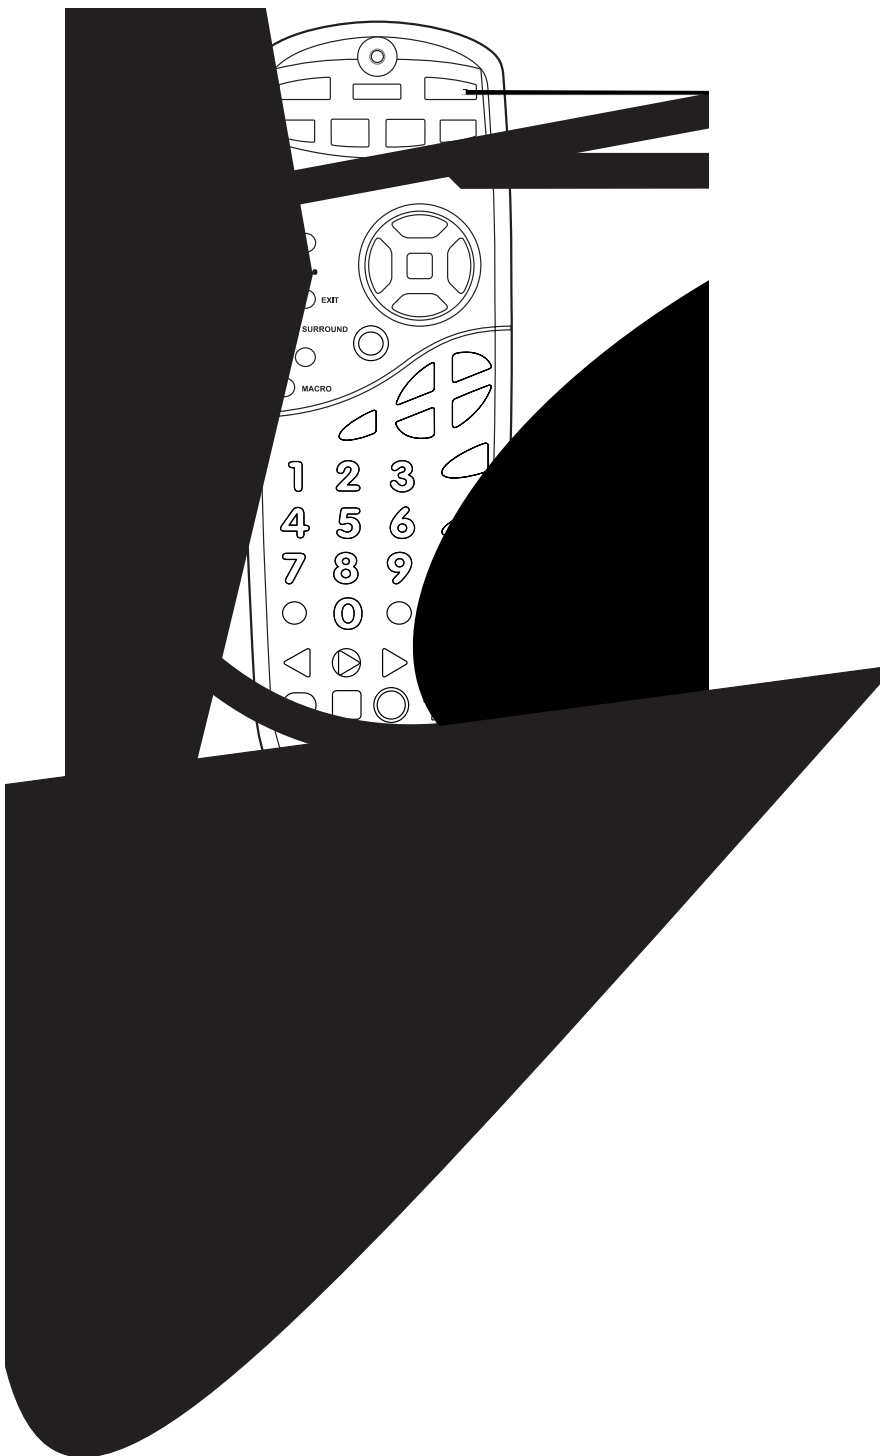

FEATURE - FUNCTION

The Light (**LED**) flashes red to show that the remote is working and is sending a signal.

The **SETUP** key is used to program your *Cinema 7+™*.

The **POWER** key controls power ON and OFF the same as the POWER key on your original remote. Please note that most CD Players do not have an ON/OFF function on the original remote control. If this is the case with your CD Player, then **POWER** will have no effect on your CD Player.

The **TV**, **VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** and **CBL/SAT** keys are used to select the home entertainment component you want to control. If your component does not respond when you press a key on the remote control, press the appropriate device key (**TV**, **VCR**, **DVD/LD**, **RCVR**, **AUX**, **CD** or **CBL/SAT**) first to tell the remote control which component you would like the remote to operate.

The **VOL ▲** (Volume Up), **VOL ▼** (Volume Down) and **MUTE** keys control the volume the same as the Volume Up and Down and Mute keys on your original remote.

The **CH ▲** (Channel Up) and **CH ▼** (Channel Down) keys change channels the same as the Channel Up and Down keys on your original remote. The **CH /** keys also control the following functions in other modes: **DVD/LD** mode = Skip Forward/ Skip Reverse, **RCVR**, **AUX** and **CD** mode = Preset Up/Preset Down.

The Digit keys (**0-9**) control direct channel access the same as the Digit keys on your original remote. The Digit keys (**0-9**) may also control the following functions in other modes: **RCVR** and **AUX** modes = Input Selections.

The **ENTER** key operates the same as the Enter key on your original remote. If your original remote control required you to use an Enter key to change channels, use the **ENTER** key on the *Cinema 7+™* after entering your channel number. The **ENTER** key may also control the following functions in other modes: **RCVR** and **AUX** modes = TAPE MON.

 
The **PREV CH** (Previous Channel) key operates the same as the Last Channel or Recall key on your original remote. The **PREV CH** key may also control the following functions in other modes: **DVD/LD**, **RCVR**, **AUX** and **CD** mode = Random.



The **CH ▲/▼**, **VOL ▲/▼**, **MUTE**, **PREV CH** and Digit **(0-9)** keys are made of a phosphorescent material that glows-in-the-dark. Expose the keys to bright light to activate the glow-in-the-dark feature. The length of time the keys remain illuminated will be determined by the length of time the remote is exposed to bright light.



The **SLEEP** key accesses the Sleep Timer of your home entertainment components (**TV**, **CBL/SAT**, **RCVR** and **AUX** modes only). Even if your component does not have a Sleep Timer, the *Cinema 7+™* may access its own built-in sleep timer. See page 29 for additional information.



The **REW** (Rewind), **PL** (PLAY), **FF** (Fast Forward) **REC** (Record), **STOP**, and **PAUSE** keys operate the same as the transport keys on your original VCR, Laser Disc, DVD and CD Player remote. As a safety feature of the *Cinema 7+™*, you must press the **REC** key twice before recording.



The **TV/VCR** key operates the same as the TV/VCR key on your original VCR remote. The **TV/VCR** key may also control the following functions in other modes: **TV** mode = TV/VIDEO, **CBL/SAT** mode = A/B or TV/SAT, **DVD/LD** mode = TV/LD, **RCVR** mode = Input Select, **CD** mode = A/B.



The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. Use **▲**, **▼**, **◀** and **▶** (Menu Up, Down, Left and Right) to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on using On-Screen menus.



The **▲**, **▼**, **◀** and **▶** (Menu Up, Down, Left and Right) keys are used to navigate your On-Screen menus. The **▲**, **▼**, **◀** and **▶** keys may also control the following functions in other modes: **RCVR** and **AUX** mode = Rear Level +/- and Balance Left/Right, **CD** mode = Track +/- and Disc +/-.



The **SEL** (Select) key selects options in your On-Screen menus. The **SEL** key may also control the following functions in other modes: **RCVR** and **AUX** mode = Surround Mode, **CD** mode = Disc Select, **DVD/LD** mode = Chapter.



The **EXIT** key exits or clears your on screen menus. The **EXIT** key may also control the following functions in other modes: **RCVR**, **AUX** and **CD** mode = Open/Close.



The **PROG/GUIDE** key operates your components secondary menus as well as your DBS system's and Cable Converter's Guide function. Use the **▲**, **▼**, **◀** and **▶** (Menu Up, Down, Left and Right) keys to navigate your menus. If your original remote control had a SELECT key to select options in your menus, use **SEL**. Use the **EXIT** key to exit/clear your On-Screen menus. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.



The **DISPLAY** key operates the Display function of your home entertainment components.



The **PIP On/Off** key accesses your TV's Picture-in-Picture feature. The **PIP On/Off** key may also control the following functions in other modes: **CD** mode = Disk Skip, **DVD/LD** mode = Subtitle On/Off, **CBL/SAT** mode = View.

The **SWAP** key swaps the Picture-in Picture window and the TV's main picture. The **SWAP** key may also control the following functions in other modes: **CBL/SAT** mode = SAT.

The **MOVE PIP** key moves the Picture in-Picture window around your TV screen. The **MOVE PIP** key may also control the following functions in other modes: **DVD/LD** mode = Angle, **CBL/SAT** mode = Next.

The **SURROUND** key operates the same as the Surround On/Off key on your original remote. The **SURROUND** key may also control the following functions in other modes: **VCR** mode = Auto Tracking, **DVD/LD** mode = Disc, **CBL/SAT** mode = Favorite Channel, **CD** mode = 10+.


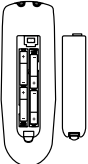
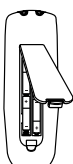

The **MACRO** and **MACRO2** keys can sequentially memorize up to 15 key strokes per key for access with a single key press. These keys are not mode specific. See page 27 for more details.

1L, **2L**, **3L**, and **4L** are mode-specific learning keys that allow you to customize your *Cinema 7+™* for unique functions not found on your new remote control. They will accept up to four new functions per device mode for a total of 28 new functions. See page 23 for addi-

tional details.

INSTALLING THE BATTERIES

Your *Cinema 7+™* requires four (4) new AAA alkaline batteries. To install the batteries:

1. On the back of the *Cinema 7+™*, pull back on the tab and lift the battery cover off.

2. Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.

3. Press the battery cover back into place.

4.  Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light will blink.

NOTE: Removing the batteries will not require you to reprogram your remote control because the *Cinema 7+™* has unlimited memory backup.

SETTING UP YOUR COMPONENTS




Programming the *Cinema 7+™* to operate your TV:

NOTE: If you are trying to program a TV/VCR combination, do not perform these instructions. Instead, follow the steps in "Programming the *Cinema 7+™* to operate your TV/VCR Combo" starting on page 13.

Locate the brand name of your TV in the "Setup Codes For TVs" section (starting on the next page), and write it in the space below.

TV Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your TV as follows:

1. Turn on your TV.
2.  On the *Cinema 7+™*, press **TV** and release. Press and hold **SETUP** until the red light blinks twice, then release **SETUP**.

3. Enter the first four-digit TV code listed for your brand. If performed correctly, the red light will blink twice when you enter the final digit.
4.  Aim the *Cinema 7+™* at your TV and press

POWER. The TV should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.

NOTE: If you have tried all the codes listed for your brand and your TV does not respond, try using the search method found on page 22.

-
5. Your *Cinema 7+™* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your TV, press the **TV** key first.

Setup Codes For TVs

Admiral	0093, 0179, 0180, 0016, 0047
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177
Ampro	0751
Anam	0180
AOC	0019, 0185, 0003
Audiovox	0451, 0092, 0180, 0003
Baysonic	0180
Beaumarck	0017, 0030, 0179
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Candle	0056, 0030
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0092, 0030, 0056, 0039
Clairtone	0185
Concerto	0056
Contec	0180, 0185
Craig	0180
Crown	0180, 0039
Curtis Mathes	0030, 0060, 0154, 0039, 0466, 1147, 1347
CXC	0180
Daewoo	0451, 0092, 0019, 0039, 0624
Daytron	0019
Denon	0145
Dumont	0017, 0019
Dwin	0720, 0774
Electroband	0000, 0185
Emerson	0463, 0236, 0180, 0019, 0154, 0177, 0178, 0179, 0185, 0282, 0039, 0624
Envision	0030
Fisher	0154, 0159
Fujitsu	0179
Funai	0171, 0179, 0180
Futuretech	0180
GE	0047, 0051, 0451, 0021, 0178, 0282, 0135, 1147, 1347
Gibralter	0019, 0030, 0017
Goldstar	0019, 0030, 0178, 0039
Gradiente	0053, 0056
Grunpy	0179, 0180
Hallmark	0178
Harvard	0180
Hitachi	0145, 0151, 0056
Infinity	0054
JBL	0054
JCB	0000

JVC	0053
KEC	0180
Kenwood	0019, 0030
Kloss	0024
KTV	0030, 0180, 0185, 0032
Setup Codes For TVs (continued)	
LG	0056
Logik	0016
Luxman	0056
LXI	0047, 0054, 0154, 0156, 0178
Magnasonic	0179, 0030, 0092, 0093, 0019, 0003, 0054, 0156
Magnavox	0054, 0096, 0187, 0030, 0179, 0171
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0145, 0178
MEI	0185
Memorex	0056, 0150, 0154, 0016, 0178
MGA	0150, 0019, 0030, 0178
Midland	0017, 0047, 0051, 0135, 0039
Minut	0021
Mitsubishi	0150, 0093, 0019, 0178
Motorola	0093
MTC	0060, 0019, 0030, 0056, 0185
Multitech	0180
NAD	0156, 0166, 0178
NEC	0019, 0030, 0056
Nikko	0030, 0092, 0178
NTC	0092
Onwa	0180
Optimus	0250, 0154, 0166
Optonica	0093, 0165
Orion	0236, 0436
Panasonic	0250, 0051
Penney	0047, 0156, 0051, 0030, 0019, 0021, 0060, 0135, 0178, 0039, 1347
Philco	0054, 0145, 0096, 0019, 0030
Philips	0054
Pilot	0019, 0030, 0039
Pioneer	0166
Portland	0092, 0019, 0039
Prism	0051
Proscan	0047
Proton	0178, 0466
Pulsar	0017, 0019
Quasar	0250, 0051, 0165
RadioShack	0047, 0056, 0154, 0019, 0030, 0165, 0178, 0180, 0039
RCA	0047, 0019, 0090, 0135, 1047, 1147, 1247, 1347
Realistic	0056, 0154, 0019, 0030, 0165, 0178, 0180, 0039
Rhapsody	0185
Runco	0017, 0030, 0603
Sampo	0030, 0039
Samsung	0060, 0019, 0030, 0056, 0178, 0039
Samsux	0039
Sansei	0451
Sanyo	0154, 0159
Scimitsu	0019
Scotch	0178
Scott	0236, 0019, 0178, 0179, 0180
Sears	0047, 0054, 0056, 0154, 0156, 0171, 0178, 0159, 0179
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0039
Shogun	0019
Signature	0016
Simpson	0187
Sony	0000
Soundesign	0178, 0179, 0180
Squareview	0171
SSS	0019, 0180
Starlite	0180
Supreme	0000
Sylvania	0054, 0096, 0030
Symphonic	0171
Tandy	0093
Technics	0250, 0051
Technol Ace	0179
Techwood	0051, 0056

Web Site : <http://www.oneforall.com>


Teknika	0054, 0056, 0060, 0092, 0150, 0016, 0019, 0179, 0180, 0039
Telefunken	0056
TMK	0056, 0177, 0178
Toshiba	0156, 0060, 0154
Setup Codes For TVs (continued)	
Tosonic	0185
Totevision	0039
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0019, 0178
Viking	0046
Wards	0016, 0019, 0030, 0054, 0056, 0096, 0165, 0178, 0179, 0021
White	
Westinghouse	0451, 0463, 0236, 0180, 0624
Yamaha	0019, 0030
Zenith	0017, 0092, 0016

Programming the *Cinema 7+™* to operate your VCR:

Locate the brand name of your VCR in the "Setup Codes For VCRs" section (starting below), and write it in the space below.

VCR Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your VCR as follows:

1.  Turn on your VCR and play a tape.
 2. On the *Cinema 7+™*, press **VCR** and release. Press and hold **SETUP** until the red light blinks twice, then release **SETUP**.
 3. Enter the first four-digit VCR code listed for your brand. If you perform this procedure correctly, the red light will blink twice when entering the final digit.
 4. or Aim the *Cinema 7+™* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a POWER key, press **STOP**. Your VCR should stop. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.
- NOTE:** If you have tried all the codes listed for your brand and your VCR does not respond, try using the search method found on page 22.
5. Your *Cinema 7+™* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your VCR, press the **VCR** key first.

Setup Codes For VCRs

Admiral	0048, 0121, 0184, 0039, 0060, 0202
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
Akai	0041
American High	0035
Asha	0240

Web Site : <http://www.oneforall.com>

Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0209, 0479, 0002, 0121
Calix	0037

Setup Codes For VCRs (continued)

Canon	0035
Carver	0081
CCE	0072, 0278
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0072, 0240, 0037, 0047, 0271
Curtis Mathes	0035, 0041, 0060, 0202
Cybernex	0240
Daewoo	0278, 0045
Denon	0042
Dynatech	0000
Electrohome	0037
Electroponic	0037
Emerex	0032
Emerson	0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0068, 0121, 0184, 0212
Fisher	0104, 0047, 0066
Fuji	0033, 0035
Funai	0000
Garrard	0000
GE	0060, 0035, 0048, 0240
Goldstar	0037, 0038
Go-Video	0432, 0526
Gradiente	0000
Harley Davidson	0000
Harman/Kardon	0038
Harwood	0072, 0068, 0072
Headquarter	0046
HI-Q	0047
Hitachi	0041, 0000, 0042
Jensen	0041
JVC	0041, 0067
KEC	0037, 0278
Kenwood	0038, 0041, 0067
KLH	0072
Kodak	0035, 0037
Lloyd's	0000, 0208
Logik	0072
LXI	0037
Magnasonic	0278, 0179, 0171, 0020, 0037, 0072, 0240
Magnavox	0035, 0081, 0000, 0039, 0110, 0149
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0162, 0035, 0454
MEI	0035
Memorex	0162, 0240, 0035, 0037, 0104, 0000, 0039, 0046, 0047, 0048, 1037, 1062, 1162, 1262
MGA	0043, 0240
MGN Technology	0240
Minolta	0042
Mitsubishi	0043, 0048, 0067
Motorola	0035, 0048
MTC	0240, 0000
Multitech	0000, 0072
NEC	0038, 0041, 0067, 0104
Nikko	0037
Noblex	0240
Olympus	0035
Optimus	0162, 0048, 0037, 0104, 0454, 1037, 1062, 1162, 1262
Orion	0209, 0184, 0479, 0002
Panasonic	0162, 0035, 0077, 0225, 0454, 1062, 1162, 1262
Penney	0035, 0037, 0038, 0042, 0240
Pentax	0042
Philco	0035, 0209, 0479
Philips	0035, 0081, 0110
Pilot	0037
Pioneer	0067, 0162
Proscan	0060, 0202
Protec	0072
Pulsar	0039

Web Site : <http://www.oneforall.com>

Quarter	0046
Quartz	0046
Quasar	0162, 0035, 0077, 0454, 1062, 1162, 1262
RadioShack	0000, 0037, 1037, 1062, 1162, 1262
Radix	0037

Setup Codes For VCRs (continued)




Randex	0037
RCA	0060, 0240, 0042, 0035, 0048, 0077, 0149
Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0066, 0104
Runco	0039
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0041, 0067, 0271, 0479
Sanyo	0104, 0046, 0047, 0054, 0240
Scott	0043, 0045, 0121, 0184, 0210
Sears	0000, 0035, 0037, 0042, 0046, 0047, 0066, 0104
Semp	0045
Sharp	0048
Shintom	0072
Shogun	0240
Singer	0072
Sony	0032, 0033, 0000, 0035
STS	0042
Sylvania	0035, 0081, 0043, 0000, 0110
Symphonic	0000
Tatung	0041
TEAC	0000, 0041
Technics	0162, 0035
Teknika	0000, 0035, 0037
Thomas	0000
TMK	0240, 0036, 0208
Toshiba	0043, 0045, 0066, 0210
Totevision	0037, 0240
Unitech	0240
Vector Research	0038
Vector	0045
Video Concepts	0040, 0045
Videosonic	0240
Wards	0000, 0035, 0042, 0047, 0048, 0060, 0072, 0081, 0149, 0240
White	
Westinghouse	0278, 0479, 0209, 0184
XR-1000	0000, 0035, 0072
Yamaha	0038
Zenith	0039, 0000, 0033

Programming the *Cinema 7+™* to operate your TV/VCR Combo:

Locate the brand name of your TV/ VCR Combo in the "Setup Codes For TV/ VCR Combos" section (starting on the next page), and write it in the space below.

TV/VCR Combo Brand: _____

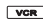The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your TV/VCR Combo as follows:

1.  Turn on your TV/VCR Combo.
2.  Press **VCR** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit TV/VCR code listed for your brand in the "Setup Codes For TV/VCR Combos" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit  of your code.
4. Aim the *Cinema 7+™* at your TV/VCR Combo and

Web Site : <http://www.oneforall.com>

press **POWER**. The unit should turn off. If it does not respond, Repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV/VCR Combo.

NOTE: If you have tried all the codes listed for your brand and your TV/VCR Combo does not respond, try using the search method found on page 22.

5. Your *Cinema 7+™* is now programmed to operate your TV/VCR Combo. Write your TV/VCR Combo code in the boxes to the left for future reference.

Remember, to use your *Cinema 7+™* to operate your TV/VCR Combo, press the **VCR** key first.

Setup Codes For TV/VCR Combos

American High	0035*
Brocksonic	0002, 0294, 0479
Colt	0072
Curtis Mathes	0035*
Daewoo	0278*
Emerson	0002, 0294, 0479
Funai	0000
GE	0035*, 0060*, 0048*, 0240
Hitachi	0035*, 0000
HQ	0000
Lloyds	0000
Magnavox	0000, 0035*, 0081*
Magnin	0240
Memorex	0037, 0162*
MGA	0240
Mitsubishi	0048*
Orion	0002, 0294, 0479
Panasonic	0035*, 0162*
Penney's	0035*, 0240, 0162*
Quasar	0035*, 0162*
RCA	0035*, 0060*, 0048*
Sansui	0000, 0479
Sanyo	0240
Sears	0000, 0037
Sony	0032*
Symphonic	0000
Zenith	0000

NOTE: If your TV/VCR works with one of the above codes highlighted with an asterisk (*), you may need to program a separate TV code to control the volume. Check the list of codes below and follow the instructions in the "Programming the *Cinema 7+™* to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control.

TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control.

TV/VCRs working on VCR code 0048 may require TV code 0093 for volume control.

TV/VCRs working on VCR code 0060 may require TV code 0047 for volume control.

TV/VCRs working on VCR code 0081 may require TV code 0054 for volume control.

TV/VCRs working on VCR code 0162 may require TV code 0250 for volume control.




TV/VCRs working on VCR code 0278 may require TV code 0451 for volume control.

Programming the *Cinema 7+™* to operate your DVD or Laser Disc Player:

Locate the brand name of your DVD or Laser Disc Player in the DVD or Laser Disc Player setup codes (starting below), and write it in the space below.

DVD/LD Player Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your DVD or Laser Disc Player as follows:

- Turn on your DVD or Laser Disc Player and insert a disc. 
-  Press **DVD/LD** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
- Enter the first four-digit DVD or Laser Disc Player code listed for your brand. If performed correctly, the red light will blink twice when entering the final digit. 
- Aim the *Cinema 7+™* at your DVD or LaserDisc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that works.

NOTE: If you have tried all the codes listed for your brand and your DVD or Laser Disc Player does not respond, try using the search method found on page 22.

- Your *Cinema 7+™* is now programmed to operate your DVD or Laser Disc Player. Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, to use *Cinema 7+™* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.

Setup Codes for DVD Players

JVC	0558
Kenwood	0534
Magnavox	0503
Mitsubishi	0521
Onkyo	0503
Panasonic	0490
Philips	0539, 0503
Pioneer	0525, 0571
Proscan	0522
RCA	0522
Samsung	0573
Sony	0533
Technics	0490
Toshiba	0503
Yamaha	0490, 0545
Zenith	0503

Setup Codes for Laser Disc Players



Denon	0059
Mitsubishi	0059
NAD	0059
Pioneer	0059
Sony	0193, 0201

Programming the Cinema 7+™ to operate your Receiver/Tuner:

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receiver/Tuners" section (starting below), and write it in below.

Receiver/Tuner Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 7+™ to operate your Receiver/Tuner as follows:

1.  Turn on your Receiver/Tuner.
2.  Press **RCVR** and release. Press and hold **SETUP** until the Cinema 7+™'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If performed correctly, the red light will blink twice when you enter the final digit.
4. Aim the Cinema 7+™ at your Receiver/Tuner and press **POWER**. The unit should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find one that works.



NOTE: If the unit still does not respond, try using the search method on page 22.

5. Your Cinema 7+™ is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.

Remember, to use your Cinema 7+™ to operate your Receiver/Tuner, press the **RCVR** key first.

Setup Codes For Receivers/Tuners

ADC	0531
Akai	0076
Aiwa	0121, 0158, 0189, 0405
Bang & Olufsen	0898
Capetronic	0531
Carver	0008, 0042, 0189, 0360
Casio	0195
Clarinette	0195
Curtis Mathes	0039, 0080
Denon	0004
Fisher	0042, 0360
Garrard	0463
Harman/Kardon	0110, 0891, 0189
JBL	0110
JVC	0074
Kenwood	0027, 0313, 0314, 0186, 0042
Linn	0189
Lloyd's	0195
LXI	0181
Magnavox	0189, 0195, 0531, 0391
Marantz	0039, 0189
MCS	0039

Modulaire	0195
NAD	0320
Nakamichi	0097
Onkyo	0135, 0380
Optimus	0042, 0080, 0181, 0186, 0531, 0670, 0738, 0801
Panasonic	0039, 0309, 0518

Setup Codes For Receivers/Tuners (continued)

Penney	0195
Philips	0189
Pioneer	0014*, 0080*, 0150, 0531, 0630, 1023
Quasar	0039
RCA	0054, 0360, 0531, 0530
Realistic	0181, 0195
Sansui	0189
Scott	0322
Sharp	0186
Sherwood	0491, 0502
Sony	0158**, 0474
Soundesign	0670
TEAC	0463
Technics	0039, 0309, 0518
Victor	0074
Wards	0014, 0042, 0054, 0080, 0158, 0189
Yamaha	0176, 0186
Yorx	0195
Zenith	0857

*May use Amplifier code 0013 for power and volume. See page 21 for amplifier setup and codes.



**May use Misc. Audio code 0159 to operate surround and tuner presets. See page 24 for misc. audio setup and codes.

Programming the Cinema 7+™ to operate your CD Player:

Locate the brand name of your CD Player in the "Setup Codes For CD Players" section (starting on the next page), and write it in the space below.

CD Player Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your Cinema 7+™ to operate your CD Player as follows:

1.  Turn on your CD Player and insert a disc.
2.  Press **CD** and release. Press and hold **SETUP** until the Cinema 7+™'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit CD Player code listed for your brand. If performed correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the Cinema 7+™ at your CD Player and press **PL** (Play). Your CD Player should play your disc. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your CD Player.



NOTE: If you have tried all the codes listed for your brand and your CD Player does not respond, try using the search method found on page 22.

5. Your Cinema 7+™ is now programmed to operate your CD Player. Write your CD Player code in the



boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your CD Player, press the **CD** key first.

Setup Codes For CD Players

Aiwa	0124, 0157	
Bang & Olufsen	0212	
Burmester	0420	
California Audio Lab	0029	
Carver	0157, 0179, 0437	
Denon	0003, 0873	
DKK	0000	
Emerson	0305	
Fisher	0174, 0179	
Garrard	0393, 0420	
Genexxa	0032, 0305	
Harman/Kardon	0173	
Hitachi	0032	
H/K	0157	
JVC	0072	
Kenwood	0028, 0037, 0190, 0826, 0681	
Krell	0157	
Linn	0157	
LXI	0305	
Magnavox	0157, 0305	
Magnavox CD-R	0626	
Marantz	0029, 0157, 0180	
MCS	0029	
Mission	0157	
MTC	015 T9n0029, 0157ik,6 T44 0 er	0157

Satellite Receiver Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your Cable Converter or Satellite Receiver as follows:

1. Turn on your Cable Converter or Satellite Receiver.
2. Press **CBL/SAT** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Cable Converter or Satellite Receiver code listed. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the *Cinema 7+™* at your Cable Converter or Satellite Receiver and press **POWER**. Your Cable Converter or Satellite Receiver should turn off. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite Receiver.

NOTE: If you have tried all the codes listed for your brand and your Cable Converter or Satellite Receiver does not respond, try using the search method found on page 22.

5. Your *Cinema 7+™* is now programmed to operate your Cable Converter or Satellite Receiver. Write your Cable Converter or Satellite Receiver code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your Cable Converter or Satellite Receiver, press the **CBL/SAT** key first.

Setup Codes for Cable Converters

ABC	0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017
Allegro	0153, 0315
Gantronix	0022, 0207
Archer	0797, 0153, 0022, 0207
Belcor	0056
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0031
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
Garrard	0153
GC Electronics	0056, 0207
Gemini	0015
General Instrument	0476, 0003, 0014, 0011, 0276, 0810
Goldstar	0144, 0040
Goodmind	0797
Hamlin	0259, 0009, 0020, 0034
Hitachi	0011

Hytex	0007
Jasco	0153, 0315, 0015
Jerrold	0476, 0003, 0014, 0011, 0012, 0015, 0810
Linsay	0440
Magnavox	0027, 0014
Memorex	0000
Movie Time	0063, 0156
Novaplex	0618

Setup Codes for Cable Converters (continued)

NSC	0063, 0156
Oak	0007, 0019
Optimus	0021
Panasonic	0021, 0107, 0000
Panther	0637
Paragon	0000
Philips	0153, 0027, 0031
Pioneer	0144, 0023, 0533
Popular	
Mechanics	0400
Prelude	0770
Pulsar	0000
RadioShack	0015, 0315, 0797, 0833
RCA	0021
Realistic	0207
Recoton	0400
Regal	0259, 0020
Regency	0002
Rembrandt	0011
Runco	0000
Samsung	0144, 0040
Scientific Atlanta	0477, 0008, 0017
Seam	0510
Signal	0015, 0040
Signature	0011
SL Marx	0040
Sprucer	0021
Starcom	0003, 0015
Stargate	0015, 0040, 0797
Starquest	0015
Sylvania	0001
Tandy	0258
Televue	0040
Texscan	0001
TFC	0310
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
TV86	0063
Unika	0153, 0022, 0207
United Artists	0007
United Cable	0003
Universal	0153, 0022, 0056, 0191, 0207
Videoway	0250
Viewstar	0063, 0027, 0258
Zenith	0525, 0000, 0015, 0207, 0008
Zentek	0400

Setup Codes for Satellites

AlphaStar DBS	0772
Chaparral	0216
Echostar DBS	0775
ExpressVu DBS	0775
General	
Instrument	0361, 0627, 0869
Hitachi DBS	0819
HTS DBS	0775
Hughes Network	
Systems DBS	0749
Jerrold Primestar	0627
Jerrold	0361
JVC	0775
Magnavox DBS	0722, 0724
Memorex DBS	0724
Panasonic DBS	0701
Philips DBS	0722, 0724
Primestar	0361, 0627
Proscan	0566

Web Site : <http://www.oneforall.com>

RCA DSS	0566, 0143, 0855
Sony DBS	0639
Star Choice DBS	0869
STS	0210
Toshiba DBS	0790
Uniden DBS	0724, 0722
Zenith	0856

Programming the AUX Key:



The **AUX** key is already set up to accept codes for a second Receiver/Tuner, Amplifier or other audio component. If you would like to set up the **AUX** key for an audio component, follow the instructions listed below. If you would like the **AUX** key to control a second TV, VCR, Cable Converter or other component, follow the instructions in the "Re-assigning Device Keys" section to re-assign the **AUX** key to accept codes for other components. For example, if you are setting up an Amplifier:

Locate the brand name of your Amplifier and then write it in the space below.

Amplifier Brand: _____

Locate the brand name of your Amplifier in the "Setup Codes For Integrated Amplifiers/ Preamplifiers/Amplifiers" section (starting below), and write it in below.

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 7+™* to operate your Amplifier as follows:

1.  Turn on your Amplifier.
2.  Press **AUX** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Amplifier code listed for your brand in the "Setup Codes For Amplifiers" section. If performed correctly, the red light will blink twice when you enter the final digit of your code.



4. Aim the *Cinema 7+™* at your Amplifier and press **POWER**. Your Amplifier should turn off. If your Amplifier does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Amplifier.

NOTE: If you have tried all the codes listed for your brand and your Auxiliary Component does not respond, try using the search method found on page 22.

5. Your *Cinema 7+™* is now programmed to operate your Amplifier. Write your Amplifier code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 7+™* to operate your Amplifier, press the **AUX** key first.

Setup Codes For Integrated Amplifiers/ Preamplifiers/Amplifiers






Aiwa	0406
Carver	0269

Web Site : <http://www.oneforall.com>

Curtis Mathes	0300
Denon	0160
GE	0078
Harman/Kardon	0892
JVC	0331
Linn	0269
Luxman	0165
Magnavox	0269
Marantz	0269, 0321
Nakamichi	0321
Optimus	0013, 0300, 0395
Panasonic	0308
Philips	0269
Pioneer	0013, 0300
Realistic	0395
Sansui	0321
Shure	0264
Sony	0220, 0689
Soundesign	0078
Technics	0308
Victor	0331
Wards	0013, 0078
Yamaha	0354

SEARCHING FOR YOUR CODE

If your TV, VCR or Cable Converter does not respond to the *Cinema 7+™* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *Cinema 7+™* to operate your TV, then:

1.  Turn on your TV.
2.  Press **TV** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3.  Press **9 - 9 - 1**.
4.  Slowly alternate between pressing **POWER*** and **TV** until your TV turns OFF. Make sure that the *Cinema 7+™* is aimed at your TV during the search. You may have to press this sequence of buttons (**POWER*** then **TV**) up to 100 times to search the entire library of codes.
5.  When your TV turns OFF, press and release **SETUP** to lock in the code for your TV. Your *Cinema 7+™* is now programmed to operate your TV.


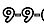




*If you are searching for your VCR, CD, LD or DVD Player code, you may want to play a tape or disk and use the **STOP** key instead of the **POWER** key to search for your code. When your VCR stops, press **SETUP** to lock in your code.

NOTE: To search for the codes of your other components, repeat Steps 1 through 5, only substitute the appropriate device key (ie., **VCR, DVD/LD, RCVR, AUX, CD** or **CBL/SAT**) for the component you are searching for.

RETRIEVING THE CODES PROGRAMMED INTO THE *Cinema 7+™*

If you have set up the *Cinema 7+™* using the "SEARCHING FOR YOUR CODE" procedure, you may want to figure out which four-digit code is operating your equipment. Use this procedure after you have set up your components to find out

which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "SEARCHING FOR YOUR CODE" procedure:

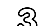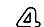
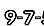
1.  Press **TV** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
2.  Press **9 - 9 - 0**.
3.  For the first digit of your four-digit code, press **1** and count the number of times the red light (LED) blinks on the *Cinema 7+™*. If the light does not blink when you press the number **1**, the digit is zero.
4.  For the second digit, press **2** and count the number of times the red light (LED) blinks on the *Cinema 7+™*. If the light does not blink when you press the number **2**, the digit is zero.
5.  For the third digit, press **3** and count the number of times the red light (LED) blinks on the *Cinema 7+™*. If the light does not blink when you press the number **3**, the digit is zero.
6.  For the fourth and final digit, press **4** and count the number of times the red light (LED) blinks on the *Cinema 7+™*. If the light does not blink when you press the number **4**, the digit is zero. Now you have your four-digit code.

NOTE: To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (**VCR, DVD/LD, RCVR, AUX, CD** or **CBL/SAT**) for the component code you wish to learn.

LEARNING FUNCTIONS ONTO THE 1L, 2L, 3L AND 4L KEYS

The 1L, 2L, 3L and 4L keys can be used to customize those functions that are unique to your home entertainment needs. For example, the *Cinema 7+™* does not offer *Tracking Up or Down* for a VCR. With the learning feature on the *Cinema 7+™*, you can add these functions and many others learned from your original remote control.

NOTE: Please have your original remote controls handy before performing learning on the *Cinema 7+™*.

1.  Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
2.  Press **9 - 7 - 5**. The *Cinema 7+™*'s red light will blink twice.
3. Press and release the Device key in which you want to learn a feature (e.g., **TV**).

NOTE: Steps 4 through 6 need to be completed within 10 seconds. Please read the next three steps before proceeding.

4. Press and release the L key in which the new feature is to be learned. The *Cinema 7+™*'s red light will flash rapidly.
5. Align your original remote control with the arrow mark to the left of the LED on your *Cinema 7+™* remote control (see diagram below)



6. On your original remote, press and hold the key (feature) you want to learn until the red light on the *Cinema 7+™* blinks twice. (If the red light does not blink twice, stop and repeat steps 1 through 6.)

NOTE: The following function keys can be accessed under the following function keys:

7. **TV** Key: Use the **TV** Key

8. **VCR** Key: Use the **VCR** Key

NOTE: The following function keys can be accessed under the following function keys:

9. **CD** Key: Use the **CD** Key

10. **CBL/SAT** Key: Use the **CBL/SAT** Key

NOTE: The following function keys can be accessed under the following function keys:

11. **TV** Key: Use the **TV** Key

12. **VCR** Key: Use the **VCR** Key

NOTE: The following function keys can be accessed under the following function keys:

13. **CD** Key: Use the **CD** Key

NOTE: The following function keys can be accessed under the following function keys:

14. **CBL/SAT** Key: Use the **CBL/SAT** Key

NOTE: The following function keys can be accessed under the following function keys:

15. **TV** Key: Use the **TV** Key

NOTE: The following function keys can be accessed under the following function keys:

16. **VCR** Key: Use the **VCR** Key

NOTE: The following function keys can be accessed under the following function keys:

17. **CD** Key: Use the **CD** Key

NOTE: The following function keys can be accessed under the following function keys:

18. **CBL/SAT** Key: Use the **CBL/SAT** Key

NOTE: The following function keys can be accessed under the following function keys:

19. **TV** Key: Use the **TV** Key

Miscellaneous Audio: Use the **AUX** or **RCVR** Key

For example, to set up a Cassette Player on the VCR key:

1. Turn on your Cassette Player and insert a tape.
2. Press **VCR** and release. Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Cassette Player code listed for your brand in the "Setup Codes For Audio Cassettes" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the *Cinema 7+™* at your Cassette Player and press **PL** (Play). Your unit should play the tape. If it does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that works.
5. Your *Cinema 7+™* is now programmed to operate your Cassette Player.

Remember, if you want to use your *Cinema 7+™* to operate your Cassette Player, press the **VCR** key first.

Setup Codes For Audio Cassettes

Aiwa	0029, 0197
Bang & Olufsen	0219
Carver	0029
Denon	0076
Harman/Kardon	0182
JVC	0244
Magnavox	0029
Marantz	0029
Optimus	0027, 0220
Philips	0029
Pioneer	0027, 0220
Sansui	0029
Sony	0170, 0243, 0291
Victor	0273
Wards	0027
Yamaha	0097

Setup Codes For IR Home Automation

GE	0240
Lutron	0318, 0597
One For All	0167
RadioShack	0240
Security System	0167
Universal X10	0167
X10	0167

Setup Codes For MiniDisc

Denon	0873
JVC	0826, 0681
Onkyo	0868
Sharp	0861
Sony	0490

Setup Codes For Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
Magnavox Web-TV	0818
Philips Web TV	0818
RadioShack	0160
TeleCaption	0171
Sony Web-TV	0850

Setup Codes For Miscellaneous Audio

Web Site : <http://www.oneforall.com>

Aiwa	0010, 0159, 0404
Fisher	0052
Harman/Kardon	0477
Jerrold	0459, 0520
JVC	0073
Nikko	0376
RCA	0056
Scientific Atlanta	0460
Sony	0010, 0159
Starcom	0459

RE-ASSIGNING DEVICE KEYS

You can use the *Cinema 7+™* to operate a second TV or a second VCR or any combination of seven home entertainment components. For example, you may want your *Cinema 7+™* to control 1 TV, 1 Cable Converter, 1 Receiver, 1 CD Player, 1 DVD Player and 2 VCRs. To accomplish this, you must re-assign one of the device keys to operate the desired component, in this case, a second VCR. The chart below shows you how to re-assign a particular device key and then set up your new component.

TV to VCR	SETUP* - 992 - VCR - TV - TV - SETUP* - VCR code
TV to DVD/LD	SETUP* - 992 - DVD/LD - TV - TV - SETUP* - DVD or LD Player code
TV to RCVR	SETUP* - 992 - RCVR - TV - TV - SETUP* - Audio code
TV to AUX	SETUP* - 992 - AUX - TV - TV - SETUP* - Audio code
TV to CD	SETUP* - 992 - CD - TV - TV - SETUP* - CD Player code
TV to CBL/SAT	SETUP* - 992 - CBL/SAT - TV - TV - SETUP* - Cable/DBS code
VCR to TV	SETUP* - 992 - TV - VCR - VCR - SETUP* - TV code
VCR to DVD/LD	SETUP* - 992 - DVD/LD - VCR - VCR - SETUP* - DVD/LD Player code
VCR to RCVR	SETUP* - 992 - RCVR - VCR - VCR - SETUP* - Audio code
VCR to AUX	SETUP* - 992 - AUX - VCR - VCR - SETUP* - Audio code
VCR to CD	SETUP* - 992 - CD - VCR - VCR - SETUP* - CD Player code
VCR to CBL/SAT	SETUP* - 992 - CBL/SAT - VCR - VCR - SETUP* - Cable/DBS code
DVD/LD to TV	SETUP* - 992 - TV - DVD/LD - DVD/LD - SETUP* - TV code
DVD/LD to VCR	SETUP* - 992 - VCR - DVD/LD - DVD/LD - SETUP* - VCR code
DVD/LD to RCVR	SETUP* - 992 - RCVR - DVD/LD - DVD/LD - SETUP* - Audio code
DVD/LD to AUX	SETUP* - 992 - AUX - DVD/LD - DVD/LD - SETUP* - AUDIO code
DVD/LD to CD	SETUP* - 992 - CD - DVD/LD - DVD/LD - SETUP* - CD Player code
DVD/LD to CBL/SAT	SETUP* - 992 - CBL/SAT - DVD/LD - DVD/LD - SETUP* - Cable/DBS code
RCVR to TV	SETUP* - 992 - TV - RCVR - RCVR - SETUP* - TV code
RCVR to VCR	SETUP* - 992 - VCR - RCVR - RCVR - SETUP* - VCR code

Web Site : <http://www.oneforall.com>



VCR code

RCVR to DVD/LD	SETUP* - 992 - DVD/LD - RCVR - RCVR - SETUP* - DVD/LD Player code
RCVR to CD	SETUP* - 992 - CD - RCVR - RCVR - SETUP* - CD Player code
RCVR to CBL/SAT	SETUP* - 992 - CBL/SAT - RCVR - RCVR - SETUP* - Cable/DBS code
AUX to TV	SETUP* - 992 - TV - AUX - AUX - SETUP* - TV code
AUX to VCR	SETUP* - 992 - VCR - AUX - AUX - SETUP* - VCR code
AUX to DVD/LD	SETUP* - 992 - DVD/LD - AUX - AUX - SETUP* - DVD or LD Player code
AUX to CD	SETUP* - 992 - CD - AUX - AUX - SETUP* - CD Player code
AUX to CBL/SAT	SETUP* - 992 - CBL/SAT - AUX - AUX - SETUP* - Cable/DBS code
AUX to MiniDisc	SETUP* - 992 - CD - AUX - SETUP* - MiniDisc code
CD to TV	SETUP* - 992 - TV - CD - CD - SETUP* - TV code
CD to VCR	SETUP* - 992 - VCR - CD - CD - SETUP* - VCR code
CD to DVD/LD	SETUP* - 992 - DVD/LD - CD - CD - SETUP* - DVD or LD Player code
CD to RCVR	SETUP* - 992 - RCVR - CD - CD - SETUP* - Audio code
CD to AUX	SETUP* - 992 - AUX - CD - CD - SETUP* - Audio code
CD to CBL/SAT	SETUP* - 992 - CBL/SAT - CD - CD - SETUP* - Cable/DBS code
CBL/SAT to TV	SETUP* - 992 - TV - CBL/SAT - CBL/SAT - SETUP* - TV code
CBL/SAT to VCR	SETUP* - 992 - VCR - CBL/SAT - CBL/SAT - SETUP* - VCR code
CBL/SAT to DVD/LD	SETUP* - 992 - DVD/LD - CBL/SAT - CBL/SAT - SETUP* - DVD or LD code
CBL/SAT to RCVR	SETUP* - 992 - RCVR - CBL/SAT - CBL/SAT - SETUP* - Audio code
CBL/SAT to AUX	SETUP* - 992 - AUX - CBL/SAT - CBL/SAT - SETUP* - Audio code
CBL/SAT to CD	SETUP* - 992 - CD - CBL/SAT - CBL/SAT - SETUP* - CD Player code


***NOTE:** Here (*) you must hold **SETUP** until the *Cinema 7+™*'s red light blinks twice.


PROGRAMMING THE MACRO KEYS

The *Cinema 7+™* has two Macro keys (**MACRO** and **MACRO2**) that allow the user to play back a series of key-strokes, at any time, with the press of one key. For example, to set up a sequence that will turn on your components and change the components to the proper inputs:

1.  Press and hold **SETUP** until the *Cinema 7+™*'s red light blinks twice, then release **SETUP**.
2.  Press **9 - 9 - 5**. The *Cinema 7+™*'s red light will blink twice.

Web Site : <http://www.oneforall.com>

3.  Press and release one of the **MACRO** keys. This will be the key that will play back the series of keystrokes assigned to that key.
4. Begin entering the sequence of keystrokes, up to 15, that you wish to be played back when you press the **MACRO** key. For example:



RCVR – POWER – TV – POWER – TV/VCR (To change the input on the TV to VIDEO 1) – **CBL/SAT – POWER**.
5.  Once your sequence is entered, press and hold **SETUP** until the *Cinema 7+™*s red light blinks twice.

Now, using the example as above, whenever the programmed **MACRO** key is pressed, the Receiver would power ON, the TV will power ON and change the input to VIDEO 1 and then the Satellite would power ON.

Repeat steps 1 - 5 to then setup a second sequence on the **MACRO2** key.

VOLUME LOCK

Volume Lock allows the user to designate which component will control the volume in the **TV**, **DVD/LD** and **CBL/SAT** modes. To set the Volume Lock to the **TV** mode:

1.  Press and hold **SETUP** until the *Cinema 7s* red light blinks twice, then release **SETUP**.
2.  Press **9 - 9 - 3**. The *Cinema 7+™*s red light will blink twice.
3. Press and release **TV**. The *Cinema 7+™*s red light will blink twice.

Now, whenever you press **VOL** , **VOL** or **MUTE** in the **VCR**, **DVD/LD** and **CBL/SAT** modes your TV will control the volume. If you would like to change the Volume Lock setting to the **VCR**, **DVD/LD** or **CBL/SAT** modes repeat steps 1-3, only substitute the appropriate device key. Setting the Volume Lock to the **TV**, **VCR**, **DVD/LD** or **CBL/SAT** mode will not effect the volume control in the **RCVR**, **AUX** and **CD** mode.

You can also change the Volume Lock setting so that an Audio component controls the volume in all device modes.

To change the Volume Lock setting on the *Cinema 7+™* to the **RCVR** or **AUX** mode:

1. Press and hold **SETUP** until the *Cinema 7+™*s red light blinks twice, then release **SETUP**.
2. Press **9 - 9 - 3**. The *Cinema 7+™*s red light will blink twice.
3. Press and release **RCVR** or **AUX**. The *Cinema 7+™*s red light will blink twice.

Now, whenever you press **VOL** , **VOL** or **MUTE** your Audio component will control the volume in all device modes.

You can also change the Volume Lock setting so that each component controls its own volume. However, some components do not have volume control. Using this setting may eliminate volume control in some device modes. To change the Volume Lock setting on the *Cinema 7+™* so each mode controls its own volume:

1. Press and hold **SETUP** until the *Cinema 7+™*s red light blinks twice, then release **SETUP**.
2. Press **9 - 9 - 3**. The *Cinema 7+™*s red light will blink twice.
3. Press and release **VOL** . The *Cinema 7+™*s red light will blink twice.

Now, whenever you press **VOL** , **VOL** or **MUTE** on the *Cinema 7+™* each component will control its own volume, provided each component has volume control.

USING THE SLEEP KEY

The **SLEEP** key allows you to access the sleep timer of your TV, Cable Converter/DBS Satellite or Audio component. You can access your TV, Cable Converter, DBS Satellite or Audio component's Sleep Timer by pressing the **SLEEP** key. Most Sleep Timers advance in increments of 10 or 15 minutes, however, for specific instructions on setting your components Sleep Timer, please consult your original owner's manual.

Even if your original Cable Converter remote control did not have a sleep timer, your *Cinema 7+™* has its own built-in sleep timer. If your Cable Converter does not have a sleep timer, press the **SLEEP** key to activate the *Cinema 7+™*s built-in sleep timer. For example:

1. Press and release the **CBL/SAT** key then press the **SLEEP** key once to set the *Cinema 7+™*s built-in sleep timer for 15 minutes. The red light will blink once.
2. Each additional press of the **SLEEP** key will add 15 more minutes to the Sleep Timer, up to a maximum of 60 minutes. The LED will blink twice when the sleep timer is set for 30 minutes, 3 times for 45 minutes, or 4 times for 60 minutes.

NOTE: The sleep timer starts 10 seconds after the last press of the **SLEEP** key. Once you have activated the *Cinema 7+™*s built-in sleep timer, you must keep the remote control aimed directly at the component.

3. To de-activate the built-in sleep timer, press **POWER**.

NOTE: Plugging your TV into the outlet on the back of the Cable Converter may allow you to turn both your Cable Converter and TV ON and OFF

TROUBLE SHOOTING

Problem	Solution
Red light does not blink when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The <i>Cinema 7+™</i> does not operate your home entertainment components or is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Setup Codes" section. Many setup codes may allow for partial functionality, however, only one setup code will operate your home entertainment component correctly. Make sure that all of the components you are setting up can be operated with an infrared remote control.
Problems programming a TV/VCR combo?	Try the VCR set-up codes for your brand. However, some combo units may require both a TV code for volume control and a VCR code for the remaining functions.
VCR not recording?	As a safety feature on the <i>Cinema 7+™</i> , you must press the REC key twice.
CH▲/▼ and PREV CH not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions.
Problems changing channels?	If your original remote control required an Enter keystroke when changing channels, press the ENTER key on the <i>Cinema 7+™</i> after you enter the channel number.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>Cinema 7+™</i> at your home entertainment component and that you are within 15 feet before using your remote.
<i>Cinema 7+™</i> not learning a command from your original remote control?	Make sure your remote controls are nose-to-nose and are no more than 2 inches apart (see diagram in step 5 on page 24).
Tried "Search Method" and still did not find the code?	Try the "Search Method" again after clearing out the device key as follows: Press and hold SETUP until red light blinks twice, then release. Next enter 9 - 9 - 2 . Then press and release the device key to be cleared twice.
Sony's Picture In Picture (PIP) won't turn off?	Press TV once. Press and hold SETUP until red light blinks twice, then release. Enter 9 - 9 - 4 and press SETUP once. Then enter 6 - 2 - 1 and press PIP On/Off . The red light should blink twice. PIP should operate properly now.
Sharp's Picture In Picture (PIP) won't work properly?	Sharp's PIP feature requires separate PIP functions for "on" and "off". For PIP "on", press TV once. Press and hold SETUP until red light blinks twice, then release. Enter 9 - 9 - 4 and press SETUP once. Enter 3 - 4 - 8 and press PIP On/Off . The red light should blink twice. PIP "on" should operate properly now. For PIP "off", press TV once. Press and hold SETUP until red light blinks twice, then release. Enter 9 - 9 - 4 and press SETUP once. Enter 6 - 0 - 6 and press SETUP PIP On/Off . The red light should blink twice. PIP "off" should operate by pressing SETUP then the PIP key.

TROUBLE SHOOTING (continued)

Problem	Solution
Surround on Sony receiver will not turn on?	Press RCVR once. Press and hold SETUP until red light blinks twice, then release. Enter 9 - 9 - 4 and press SETUP once. Enter 3 - 9 - 8 and press SURROUND . Red light should blink twice. Surround should operate now.
Sony receiver will turn off but not back on?	Try using the number pad on the <i>Cinema 7+™</i> to turn the receiver back on. For example, try pressing 0 to turn on in the CD mode, or 4 to turn on in the Video 1 mode. Other numeric keys will also turn the receiver on. If this doesn't work, try the following: Press RCVR once. Press and hold SETUP until red light blinks twice, then release. Enter 9 - 9 - 4 and press SETUP once. Then enter 5 - 9 - 1 and press POWER . The red light should blink twice. Power should operate properly now.
Audio component not fully-operational?	Audio functionality may be split between codes. For example, Pioneer's Tuner code 0014 works tuner presets, but only Amplifier code 0013 works power and volume. This also true for Sony's Receiver code 0158 and Misc. Audio code 0159. If some functionality is missing, try other codes to see if functionality resides there.
Mini-system, bookshelf, or boombox not working?	These systems may operate using a CD or Misc. Audio code. If the original remote control did not have a power key, press PL (or STOP) to turn on (or off) the system.

Consumer Help Line : 1-330-405-8606

E-Mail Address : HAGHelp@ueic.com

World Wide Web : <http://www.oneforall.com>

**ONE FOR ALL® PRODUCTS
Limited Warranty**

One For All ("OFA") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330)-405-8655

Copyright 1999 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All and *Cinema 7+*™ are trademarks of Universal Electronics Inc.

This One For All product is designed for compatibility in North America excluding Mexico.

URC-7800-Cinema 7+™

1/01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>