
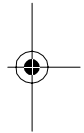


Concertmate 410

OWNER'S MANUAL Portable Electronic Keyboard

 
 
Please read before using this equipment.

 
illustration

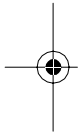

Cat. No. 42-4031

OPTIMUS®



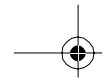

FEATURES

Your Optimus Concertmate 410 Portable Electronic Keyboard is a state-of-the-art musical instrument with many exciting features. You can set the keyboard to sound like 12 different musical instruments. To accompany your music, the keyboard has 12 different preset rhythms, as well as percussion sounds and auto-accompaniments.

Your Concertmate 410's features include:

18 Demonstration Songs — let you hear samples of what you and the Concertmate 410 can do.

12 Different Sounds — let you set your Concertmate 410 to sound like anything from a flute to a bell.

12 Auto-Rhythms — give you a steady beat for several styles of music from disco to waltz.

Tempo Controls — let you speed up or slow down the tempo of any selected music pattern.

Fill In Rhythm — lets you insert a short variation into any auto-rhythm.

Auto Accompaniment — lets you play chords on the accompaniment keys using chord formations of from one to three notes.

Lesson Function — turns the beginner into a musician by taking you phrase-by-phrase through a demonstration song until you master it.

Melody Off Function — lets you turn off the melody of a demonstration song so you can play the melody while the keyboard plays the accompaniment.

Melody Recording — lets you store melodies of up to 17 notes.

OCTAVE Key — lets you quickly raise the sound of the keyboard by one musical octave.

Polyphonic Sound — lets you play and hear up to four notes at the same time.

 
 
Two Built-In Speakers — provide excellent sound to help make your music come alive.


Output Jack — lets you connect headphones so you can play without disturbing others, or an external amplifier so you can play for a crowd.

Three Power Options — let you power the keyboard from internal batteries (not supplied), standard AC power (with an optional adapter), or your vehicle's cigarette lighter socket (with an optional adapter) so you can make music almost anywhere.

© 1996 Tandy Corporation.
All Rights Reserved.

Optimus and Concertmate are registered trademarks used by Tandy Corporation.
RadioShack is a trademark used by Tandy Corporation.



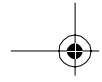

To fully enjoy the features and functions of this electronic keyboard, please read this manual carefully and completely.

 
 
 
 
 
Note: This owner's manual explains how to use this electronic keyboard. It does not teach music.

 
THE FCC WANTS YOU TO KNOW

This keyboard complies with the limits for a Class B digital device as specified in Part 15 of *FCC Rules*. These limits provide reasonable protection against radio and TV interference in a residential area. However, your keyboard might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or both of the following corrective measures:

- Increase the distance between the keyboard and the radio or TV
- Use outlets on different electrical circuits for the keyboard and the radio or TV

Consult your local RadioShack store or an experienced radio/TV technician if the problem still exists.



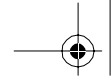

CONTENTS

Preparation	5
Powering Your Keyboard	5
Using Batteries	5
Using AC Power	6
Using Vehicle Battery Power	6
Connecting Headphones	7
Listening Safely	7
Connecting an External Amplifier	8
A Look at Your Keyboard	9
Operation	10
Basic Operation	10
Playing the Demonstration Songs	11
Using CHORD ONLY	11
Using LESSON and REVIEW	12
Selecting a Voice	13
Using the Auto-Rhythms	14
Using SYNC	15
Using FILL IN	15
Using Auto Accompaniment	15
Special Features	17
Using REC	17
Using the Percussion Pads	17
Storing a Percussion Pattern	18
Using REVERB	19
Using OCTAVE	19
Troubleshooting	20
Care and Maintenance	21
Chord Chart	22
Specifications	Back Cover



PREPARATION

POWERING YOUR KEYBOARD

You can power your Concertmate 410 with.

- Internal batteries (see “Using Batteries”)
- Standard AC power using an optional AC adapter (see “Using AC Power” on Page 6)
- A vehicle’s cigarette lighter socket using an optional DC adapter (see “Using Vehicle Battery Power” on Page 6)

Notes:

- Connecting an AC or DC adapter automatically disconnects internal batteries.
- Always disconnect the AC or DC adapter when you finish using the Concertmate 410.

Using Batteries

Your Concertmate 410 can use six C batteries (not supplied) for power. We recommend alkaline batteries, such as RadioShack Cat. No. 23-551.

Caution: Only use fresh batteries of the required size and type.

1. Press the tabs on the battery compartment cover, then pull up in the direction of the arrows to remove the cover.

illustration

2. Put the batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside.

 
 
 
 
 
illustration

3. Replace the cover.

Notes:

- If you do not plan to power the Concertmate 410 from batteries for a week or more, or if you plan to use only AC or vehicle battery power, remove the batteries.
- If the Concertmate 410 sounds weak or does not work properly, replace all six batteries. Do not mix old and new batteries.

Caution: Dispose of old batteries promptly and properly.



Using AC Power

You can power your Concertmate 410 from a standard AC outlet using a 9-volt AC adapter (not supplied), such as RadioShack Cat. No. 273-1650 or 273-1662.

Cautions:

- You must use an AC adapter that supplies 9 volts, and delivers at least 300 milliamps. Its center tip must be set to positive, and its plug must correctly fit the Concertmate 410's **DC9V** jack. The recommended adapter meets these specifications. Using an adapter that does not meet these specifications could damage the Concertmate 410 or the adapter.
- Always plug the AC adapter into the Concertmate 410 before you plug it into the AC outlet. Always unplug the AC adapter from the AC outlet before you unplug it from the Concertmate 410.

Illustration

1. Plug the 5.5 mm outer-diameter/ 2.1 mm inner-diameter barrel plug into the cable so it reads **TIP +POS.**

2. Set the adapter's voltage switch to 9 volts.
3. Insert the adapter's barrel plug into the **DC9V** jack on the back of the Concertmate 410.
4. Plug the adapter into a standard AC outlet.

Using Vehicle Battery Power

You can power your Concertmate 410 from your vehicle's cigarette lighter socket using a 9-volt DC adapter (not supplied), such as RadioShack Cat. No. 270-1560A.

Cautions:

- You must use a DC adapter that supplies 9 volts, and delivers at least 300 milliamps. Its center tip must be set to positive, and its plug must properly fit the Concertmate 410's **DC9V** jack. The recommended adapter meets these specifications. Using an adapter that does not meet these specifications could damage the Concertmate 410 or the adapter.
- Always plug the DC adapter into the Concertmate 410 before you plug it into the cigarette lighter socket. Always unplug the DC adapter from the cigarette lighter socket before you unplug it from the Concertmate 410.



To connect a pair of headphones, insert the headphones' 1/8-inch plug into the **PHONE** jack on the back of the keyboard.

illustration

illustration

1. Plug the 5.5 mm outer-diameter/ 2.1 mm inner-diameter barrel plug into the cable so it reads +TIP.
2. Set the adapter's voltage switch to 9 volts.
3. Insert the adapter's barrel plug into the **DC9V** jack on the back of the Concertmate 410.
4. Plug the other end of the adapter into the vehicle's cigarette lighter socket.

Note: Connecting headphones disconnects the Concertmate 410's built-in speakers.

 
 
 
Listening Safely

 
To protect your hearing, follow these guidelines when you use headphones.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

CONNECTING HEADPHONES

To listen to your Concertmate 410 without disturbing others, you can connect a pair of stereo headphones with a 1/8-inch plug (not supplied). Your local RadioShack store sells a wide selection of headphones.




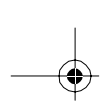


CONNECTING AN EXTERNAL AMPLIFIER



To amplify your Concertmate 410's sound, you can connect it to an external amplifier (not supplied) using an audio cable (not supplied) with a 1/8-inch plug.

To connect an external amplifier to your keyboard, insert the cable's plug into the **PHONE** jack on the back of the keyboard, and connect the other end of the cable to the amplifier's input jack(s) (such as AUX IN or TAPE IN).

 illustration

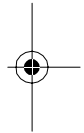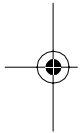

 Your local RadioShack store sells a full line of amplifiers, speakers, and connection cables.

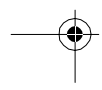
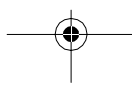






A LOOK AT YOUR KEYBOARD



  illustration



- | | |
|------------------------------|---------------------------|
| 1. VOICE A1-B6 Voices List | 14. SYNC Button |
| 2. POWER Switch | 15. OCTAVE Button |
| 3. VOLUME Control | 16. Percussion Pads |
| 4. REC Button | 17. SONG A1-C6 Songs List |
| 5. PROG Button | 18. A Button |
| 6. A.B.C Button | 19. B Button |
| 7. RHYTHM A1-B6 Rhythms List | 20. C Button |
| 8. VOICE Button | 21. FILL IN Button |
| 9. RHYTHM Button | 22. TEMPO Buttons |
| 10. SONG Button | 23. DEMO Button |
| 11. PLAY/SPACE Button | 24. CHORD ONLY Button |
| 12. REVERB Button | 25. LESSON Button |
| 13. START/STOP Button | 26. REVIEW Button |

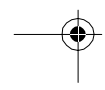 



OPERATION

BASIC OPERATION

1. Set **VOLUME** to **MIN** (minimum).

illustration

Important: To prevent hearing damage, always set the Concertmate 410's volume to its lowest level (**MIN**) before you turn it on and before you begin playing it again after changing the settings.

2. Slide **POWER** to **ON**. The **POWER** and **TEMPO** indicators turn on.

illustration

3. Adjust **VOLUME** to the desired setting. Slide it toward **MAX** (maximum) to increase the volume, or toward **MIN** (minimum) to decrease it.

illustration

4. To make your own music, simply begin playing the keyboard.

To hear some of the Concertmate 410's many different sounds, play the demonstration songs (see "Playing the Demonstration Songs" on Page 11).

Notes:

- The Concertmate 410 automatically selects the "voice" (musical instrument) **PIANO (A1)** each time you turn it on. To select a different voice, see "Selecting a Voice" on Page 13.
 - To select an auto-rhythm, see "Using the Auto-Rhythms" on Page 14.
 - To play a harmonic auto accompaniment, see "Using Auto Accompaniment" on Page 15.
5. To turn off the Concertmate 410, slide **POWER** to **OFF**. All indicators turn off.

Note: If you do not press a key for about 2¹/₂ minutes, the Concertmate 410 will chime "*Ding Dong*" about every 2¹/₂ minutes to remind you to turn it off.

PLAYING THE DEMONSTRATION SONGS

Your Concertmate 410 can play 18 demonstration songs. The name and number of each song is listed on the Concertmate 410's top panel.

Follow these steps to play a demonstration song.

1. The Concertmate 410 automatically selects the song *Twinkle, Twinkle, Little Star* (A1) each time you turn it on. To play another song, press **SONG**.

illustration

2. Choose a song from the SONG list, then repeatedly press the corresponding button (**A**, **B**, or **C**) until you hear the corresponding number. For example, to select *Jingle Bells* (C2), repeatedly press **C** until you hear "Two."
3. Press **DEMO**. The TEMPO indicator flashes in time with the beat and a voice counts one measure of beats. The Concertmate 410 then plays that song.

Notes:

- The Concertmate 410 automatically plays each demonstration song with a preselected "voice" (musical instrument).
 - Your Concertmate 410 plays the selected demonstration song continuously until you turn it off.
 - The song *Long Long Ago* (C6) includes synthesized singing.
 - While the song is playing, you can adjust the tempo (see "Using the Auto-Rhythms" on Page 14).
4. Adjust **VOLUME** to the desired setting.
 5. To turn off the demonstration song at any time, press **DEMO** again.
 6. To select a different song, press **SONG**, then repeat Step 2.

Using CHORD ONLY

The Concertmate 410 lets you turn off the melody of a demonstration song so you can play the melody while the keyboard plays the accompaniment.

1. Select the demonstration song you want to play.
2. Select the voice (musical instrument) you want to use (see "Selecting a Voice" on Page 13).



3. Press **CHORD ONLY**. The TEMPO indicator flashes in time with the beat and a voice counts one measure of beats. The keyboard then continuously plays the accompaniment.
4. Adjust **TEMPO** s and t and **VOLUME** to the desired levels.
5. Play the song's melody.
Note: See the supplied songbook. It shows you the notes for each song.
6. Press **CHORD ONLY** or **DEMO** to stop playing the demonstration song.

Using LESSON and REVIEW

The Concertmate 410 lets you learn each demonstration song. Lessons take you phrase-by-phrase through a demonstration song.

 
1. Select the demonstration song you want to learn (see "Playing the Demonstration Songs" on Page 11).
2. Press **DEMO**. The TEMPO indicator flashes in time with the beat and a voice counts one measure of beats. The Concertmate 410 then plays that song.
3. If you want to review the current phrase and its accompaniment, press **REVIEW**. The keyboard continuously repeats the current phrase and its accompaniment.

 
To stop repeating the current phrase and its accompaniment, press **REVIEW** again. The Concertmate 410 continues to play the demonstration song.

4. Press **LESSON**. Your keyboard plays the selected song phrase-by-phrase. After playing the current phrase, it stops and the voice counts one measure of beats. At the end of the count, the same measures play again without the melody so you can play the melody on the keyboard.

Notes:

- The Concertmate 410 automatically uses the preset voice used in each demonstration song.
 - Refer to the songbook supplied with this manual. It shows you the notes for each song. The instrument sounds when you play the melody on the keyboard.
5. If you want to review and replay the current phrase and its accompaniment, press **REVIEW**. The keyboard continuously repeats the current phrase and its accompaniment.
To stop repeating the current phrase and its accompaniment, press **REVIEW** again. The lesson continues.
 6. Adjust **TEMPO** s and t and **VOLUME** to the desired levels.





-
7. To stop the lesson, press **LESSON**. The keyboard continues to play the demonstration song.
 8. To turn off the demonstration song, press **DEMO**.

 
 
illustration

SELECTING A VOICE

Your Concertmate 410 can sound like 12 different musical instruments (“voices”). The name and number of each voice is listed on the Concertmate 410’s top panel.



illustration

3. Press any key(s) on the keyboard to hear the selected voice.
4. Adjust **VOLUME** to the desired level.
5. To select a different voice, press **VOICE** and repeat Step 2.



Follow these steps to select and play a voice.

  1. The Concertmate 410 automatically selects the voice PIANO (A1) each time you turn it on. To play another voice, press **VOICE**.
2. Choose a voice from the VOICE list, then repeatedly press the corresponding button (**A** or **B**) until you hear the corresponding number. For example, to select E.BASS (B2), repeatedly press B until you hear “Two.”





USING THE AUTO-RHYTHMS

Your Concertmate 410 has 12 auto-rhythms that provide a steady beat for your music. The name and number of each auto-rhythm is listed on the Concertmate 410's top panel.

Follow these steps to select and play an auto-rhythm.

1. The Concertmate 410 automatically selects the rhythm DISCO (A1) each time you turn it on. To select another rhythm, press **RHYTHM**.

illustration

2. Choose an auto-rhythm from the RHYTHM list, then repeatedly press the corresponding button (**A** or **B**) until you hear the corresponding number. For example, to select 16 BEAT (A3), repeatedly press **A** until you hear "Three."

illustration

3. Press **START/STOP** to start the selected auto-rhythm. The TEMPO indicator flashes in time with the beat, and the keyboard plays the selected rhythm.

illustration

4. To slow down the auto-rhythm, repeatedly press **TEMPO t**. To speed it up, repeatedly press **TEMPO s**.

illustration

Notes:

- You can adjust **TEMPO s** and **t** to play an auto-rhythm from 40 to 218 beats per minute.
- To reset the tempo to its default (original) speed (128 beats per minute), press both **TEMPO s** and **t** at the same time. The rhythm plays at the original speed.



5. Play the keyboard to hear the selected preset voice along with the rhythm.
6. Adjust **VOLUME** to the desired level.
7. To stop the rhythm, press **START/STOP** again.
8. To select a different rhythm, press **RHYTHM** and repeat Step 2.

rhythm is selected), then the original rhythm automatically resumes at the end of the variation.

illustration

Using SYNC

The Concertmate 410's SYNC feature lets you synchronize the start of an auto-rhythm with the beginning of your music.

After you press **RHYTHM** and enter an auto-rhythm, press **SYNC** so the TEMPO indicator flashes, then begin playing the keyboard. The rhythm automatically starts to play when you press any key.

To stop the rhythm, press **START/STOP**.

Note: To insert the variation for longer than 1 to 2 measures, press and hold **FILL IN**. The Concertmate 410 plays the variation until you release the button.

USING AUTO ACCOMPANIMENT

illustration

 
 
Using FILL IN

The FILL IN feature lets you insert a short (1- to 2-measure) variation in the beat pattern of a selected auto-rhythm.

To insert a short variation in a beat pattern, press and release **FILL IN** while the auto-rhythm is playing. The Concertmate 410 inserts a 1- to 2-measure variation (depending on which auto-

The 14 keys on the left side of the keyboard with note labels above them are called accompaniment keys.

Auto accompaniment lets you play chords on the accompaniment keys using chord formations of one to three notes.





Notes:

- You can use the Concertmate 410's rhythm controls (**FILL IN** and **SYNC**) with auto accompaniment.
- After you press the auto accompaniment keys, the Concertmate 410 plays the same chord until you press other keys to play a different chord or until you press **START/STOP**.

The accompaniment keys you press determine the type of chord played.

Note: See "Chord Chart" on Page 22 for a list of all the chords you can play on your Concertmate 410.

Follow these steps to start auto accompaniment.

1. Press **A.B.C** so the indicator beside **A.B.C** turns on.

 
To play a melody along with the accompaniment, press any key(s) to the right of the accompaniment keys.

 
5. Adjust **TEMPO** s and t and **VOLUME** to the desired levels.
6. To change chords without interrupting the rhythm, simply press the auto accompaniment key(s) required to form the new chord.
7. To stop auto accompaniment but not the auto-rhythm, press **A.B.C**. The **A.B.C** indicator turns off.
8. To stop auto accompaniment and auto-rhythm, press **START/STOP**.

To return to normal play on the Concertmate 410 after using auto accompaniment, press **A.B.C** so the **A.B.C** indicator turns off.

illustration

2. Select and enter an auto-rhythm.
3. To synchronize the start of the selected auto-rhythm with your accompaniment, press **SYNC** so the **TEMPO** indicator flashes.
4. Begin the accompaniment by pressing the desired accompaniment key(s).






SPECIAL FEATURES

USING REC

The Concertmate 410 has a memory storage function that allows you to record and play back a melody of up to 17 notes.

1. Select the preset voice you want to use (see "Selecting a Voice" on Page 13).
2. Press **REC**. The REC indicator lights and recording starts.

illustration

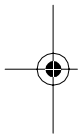

3. Play your desired melody, up to 17 notes.

Notes:

- During recording, remember to enter one note at a time. Do not press two or more notes at the same time.
 - You cannot record a particular percussion sound into memory.
4. Press **PLAY/SPACE** to start playing back the melody.
 5. Press **PLAY/SPACE** again to stop playback before the end.

Note: The recording is lost when you play the keyboard keys again, press **REC**, **PROG**, **DEMO**, **CHORD ONLY**, or turn off the Concertmate 410.

 
 
 
USING THE PERCUSSION PADS

The Concertmate 410's percussion pads put the sound of five different percussion instruments — bass drum, snare drum, cymbal, hi-hat, and tom — at your fingertips.

To play a percussion pad sound, simply press the desired pad at any time during play. The keyboard plays the selected percussion sound once each time you press the pad. Repeatedly press the pad to play the selected sound several times in a row.

illustration

Note: The Concertmate 410 has four sound channels. This means that you can play and hear up to four notes at one time on the keyboard. The percussion pad you play uses one of the sound channels.





Storing a Percussion Pattern

The Concertmate 410 lets you use the 5 percussion pads to create your own percussion pattern of up to 16 beats including rests.

1. Choose the desired rhythm (see "Using the Auto-Rhythms" on Page 14).
2. Press **PROG**. The indicator beside **PROG** lights.
3. Using the percussion pads, enter your own percussion pattern.

Notes:

- To enter a rest in the pattern, simply press **PLAY/SPACE**.
- If you choose WALTZ (B6) as the rhythm, enter only 12 beats.

If you enter fewer than 12 beats, you must enter a rest in each place that is not filled with a beat until all 12 beats are filled.

To enter a waltz pattern, follow this example:

illustration

 
 
- If you choose any pattern other than a waltz, enter 16 beats.


If you enter fewer than 16 beats, you must enter a rest in each place that is not filled with a beat until all 16 beats are filled.

To enter a pattern other than a waltz pattern, follow this example:

illustration

4. Press **PLAY/SPACE**. The Concertmate 410 continuously plays the pattern you just entered.



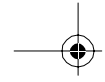

5. To play a melody along with the percussion rhythm, press any keyboard key(s).
6. Adjust **TEMPO** s and t and **VOLUME** to the desired levels.
7. To stop the percussion rhythm, press **PLAY/SPACE**.
8. To re-start the rhythm, press **PLAY/SPACE**.

Note: The percussion pattern is lost when you press the percussion pads again, press **PROG**, **REC**, **DEMO**, **CHORD ONLY**, or turn off the Concertmate 410.

The reverb feature turns off automatically when you play the rhythm, use **REC**, **LESSON**, or **CHORD ONLY**.

USING OCTAVE

The Concertmate 410 automatically selects the tone of middle C each time you turn it on. For added flexibility, you can raise the sound of the keyboard by one musical octave.

To quickly raise the key one octave, press **OCTAVE** while the keyboard is silent. Press **OCTAVE** again while the keyboard is silent to return to middle C.

USING REVERB

The Concertmate 410's reverb feature lets you reverberate (echo) the tone of the key you press. The reverb feature uses one of the four sound channels and is automatically selected each time you turn on the keyboard.

To turn off the reverb feature, simply press **REVERB** before or during play.

illustration

illustration

To turn on reverb again, press **REVERB**.



TROUBLESHOOTING

If your Concertmate 410 is not performing as it should, these suggestions might help. If you still cannot solve the problem, take the keyboard to your local RadioShack store for assistance.

Symptom	Possible Cause	Remedy
No sound, even if keys are pressed.	POWER is set to OFF .	Set POWER to ON .
	VOLUME is turned down.	Turn up VOLUME .
	Headphones are connected.	Unplug headphones.
	Power supply problem.	Check the power supply. <ul style="list-style-type: none"> • Ensure batteries are installed correctly. • Ensure batteries are fresh. • Check for correct AC/DC adapter connection.
No rhythm.	VOLUME is turned down.	Adjust VOLUME .
	Rhythm was not started.	Press START/STOP .
No accompaniment when accompaniment keys are pressed.	VOLUME is turned down.	Adjust VOLUME .
	Accompaniment button not pressed.	Press A.B.C.
No sound when connected to an external amplifier.	POWER is set to OFF .	Set POWER to ON .
	VOLUME is turned down.	Turn up VOLUME .
	Defective connection cord.	Replace the connection cord.
	Problem with external amplifier.	Check the external amplifier.

CARE AND MAINTENANCE

Your Optimus Concertmate 410 Portable Electronic Keyboard is an example of superior design and craftsmanship. The following suggestions will help you care for your Concertmate 410 so you can enjoy it for years.



Keep the Concertmate 410 dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Handle the Concertmate 410 gently and carefully. Dropping it can damage circuit boards and cases and can cause the keyboard to work improperly.



Use and store the Concertmate 410 only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.



Keep the Concertmate 410 away from dust and dirt, which can cause premature wear of parts.



Use only fresh batteries of the required size and type. Old batteries can leak chemicals that damage your keyboard's electronic parts.






 
 
 


Wipe the Concertmate 410 with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the Concertmate 410.

Modifying or tampering with the Concertmate 410's internal components can cause a malfunction, might invalidate its warranty, and void your FCC authorization to use it. If your Concertmate 410 is not performing as it should, take it to your local RadioShack store for assistance.



CHORD CHART

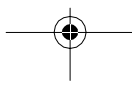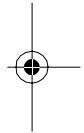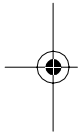

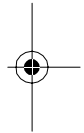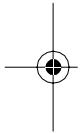

SPECIFICATIONS

Number of Keys	37
Polyphonic Sound	4-note (Maximum)
Preset Voices	12
Auto-Rhythm	12
Rhythm Controls	TEMPO, FILL IN, SYNC, START/STOP
Effects	REVERB, OCTAVE
Melody Memory	Up to 17 notes
Accompaniments	A.B.C
Demonstration Songs	18 Songs
Percussion Pads	BASS DRUM, SNARE DRUM, CYMBAL, HI-HAT, TOM
Other Functions	CHORD ONLY, LESSON, REVIEW, PROG
Built-in Speakers	3 1/2 Inch x 2 (4 ohm)
Jacks	PHONE, DC9V
Power Sources	DC: 6 C batteries (Cat. No. 23-551)
	AC: 120V, 60Hz, with AC adapter (Cat. No. 273-1650 or 273-1662)
	Vehicle Battery: 9-12V, with DC adapter (Cat. No. 270-1560A)
Power Consumption	DC ≤1.5 W
Dimensions (HWD)	3 1/16 x 22 5/8 x 8 3/4 Inches (78 x 575 x 222 mm)
Weight (Without Batteries)	3 lb 1.4 oz (1.4 kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

RadioShack Limited Warranty

This product is warranted against defects for 1 year from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

10/95

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

6A6

Printed in Hong Kong

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>