

 
ORECK[®] XL

SIMPLY AMAZING[®]

ORECK[®]

Oreck Corporation
100 Plantation Road
New Orleans, LA 70123

USER'S GUIDE Black Light Sound Machine **SML200**

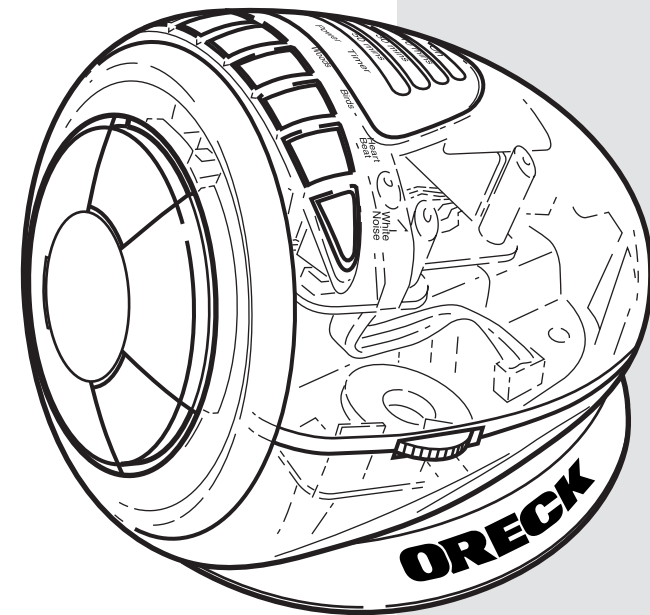

• **IMPORTANT!**
SAVE THIS BOOKLET!

Includes:
Important Safety Instructions
Warranty
Operating Instructions

**REGISTER YOUR PRODUCT
ON THE WEB:
WWW.ORECK.COM**

IMPORTANT SAFETY INSTRUCTIONS

This owner's manual contains **IMPORTANT SAFETY INSTRUCTIONS.**

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING

To reduce the risk of fire, electric shock, or injury to persons:

- Read and follow instructions
- Use only for intended use as described in this manual.
- If appliance is not working properly, has been dropped, damaged, exposed to weather or dropped in water, return it to a service center for examination and repair. Do not disassemble.
- Do not use a damaged cord. Replace immediately.
- Do not use an extension cord.
- Close supervision is necessary when used by or near children. Do not allow to be used as a toy.
- The unit may be subjected to interference from external sources such as transformers, electric motors or other electric devices. Avoid placing the unit near the above sources.
- In order to prevent the likelihood of lightning damage, disconnect the A/C adapter cord from the household A/C receptacle during an electrical storm. When removing the A/C adapter from the wall jack, always grasp the body of the adapter and do not pull the cord.
- Only use the A/C adapter included with the unit, otherwise a safety hazard may cause the unit to fail.
- Do not use parts or attachments not included in the package.
- Keep the cord away from heated surfaces.
- Do not open the cabinet of this unit. If any foreign object enters the unit, contact customer service for assistance.

 
SAVE THESE INSTRUCTIONS

Warranty

Oreck Corp. warrants this product free from defects in material and workmanship under normal, non-commercial use and service. Oreck will remedy any such defects if they appear within 1 year from date of purchase. This warranty gives you specific legal rights, and you may have other rights which vary state to state.

**Register your product on the web:
WWW.ORECK.COM**

Features



- Rain - Gentle rainfall refreshes you to a state of calm and relaxation.



 
- Thunder - Rumbles of thunder ease the stresses of the day.



- Stream - A cool bubbling stream sets the mood for relaxation.



- Ocean - Ocean waves crash and pound to wash your tension away.



- Woods - Be inspired by the chorus of nature as you trek through the bushes.



- Birds - Birds warble a melody of joy to brighten your day.



- Heartbeat - A reassuring heartbeat to soothe newborns to sleep.



- White Noise - The "White Noise" of a waterfall screens out distractions and focuses your thoughts.

Repair or Replacement

Your ORECK Sound Machine is a product of precise engineering. If you require additional information or have problems with your Oreck product, you may call ORECK CUSTOMER SERVICE at:

US: 1-800-989-3535 Canada: 1-888-676-7325

 
Please specify the product and model number.

Save your sales or purchase slip. Should your Oreck product require warranty service in the U.S.A., present this slip to the Authorized Service Center as your proof of purchase date or, in Canada, call customer service.

Operating Instructions


Using the A/C Adapter

Plug adapter plug into the A/C adapter jack at the back of unit. Once the adapter is plugged into the A/C adapter jack, plug the A/C adapter unit into a 120V/230V electrical outlet.

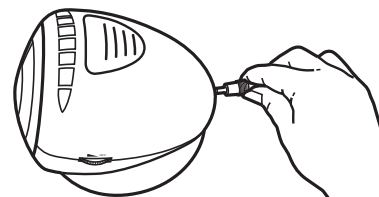


To Adjust Volume

 Turn volume control knob clockwise to increase volume and counter-clockwise to decrease volume.

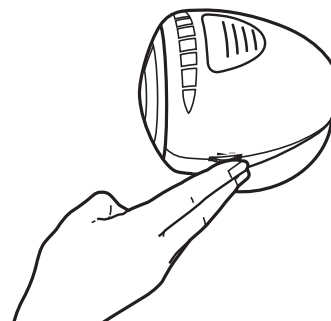

To Set Timing

 
After turning unit on, select the desired time setting by repeatedly pressing the TIMER button. This activates the LEDs that scan from one time setting to another. Pressing TIMER repeatedly will cycle through settings of 15 minutes, 30 minutes, 60 minutes and continuous. Press until you select your preferred time setting.

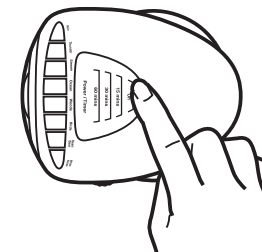

NOTE: Time will be recounted when the time selection is changed.

To Select Sound

 To play any of the natural built-in sounds, simply press the desired sound button. If you want to change the sound selected, simply press another sound.

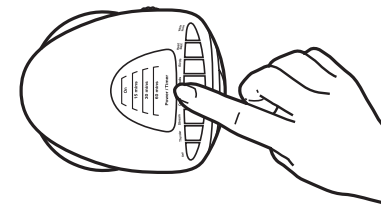

NOTE: Time will be recounted when the sound is changed.

Maintenance

To Clean

Do not attempt to clean the unit with a chemical solvent as this might damage the finish. Use a clean, dry cloth.

To Store

Avoid placing in direct sunlight or close to a source of heat. Avoid locations that are subject to vibrations, excessive dust, cold temperatures and moisture.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>