

Dear Parent/Guardian,

Thank you for choosing the **Barbie™ B-Glam Laptop**. Designed with fun in mind, **Barbie™ B-Glam Laptop** is packed with stimulating games and activities that will make an invaluable contribution to your child's development.

The activities to help improve your child's skills include: language, mathematics, logic, memory and music. **Barbie™ B-Glam Laptop** provides a dependable and realistic introduction to computers and encourages creativity and independent learning.

Learning has never been so much fun!

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc.

© 2012 Mattel Inc. All Rights Reserved.

1

Chapter 1

About the Barbie™ B-Glam Laptop

Features

30 Activities

- Word
- Mathematics
- Logic
- Memory
- Reaction
- Music
- 2-Player games

Multimedia

- Digital sound/animation

Display

- LCD screen

Audio

- The voice of Barbie®


Energy Saving Features

- Automatic shut-down

2


The **Barbie™ B-Glam Laptop** is supplied with the following parts: (Please contact your retailer if any parts are missing.)

- 1 - Unit
- 2 - Instruction Manual
- 3 - Mouse

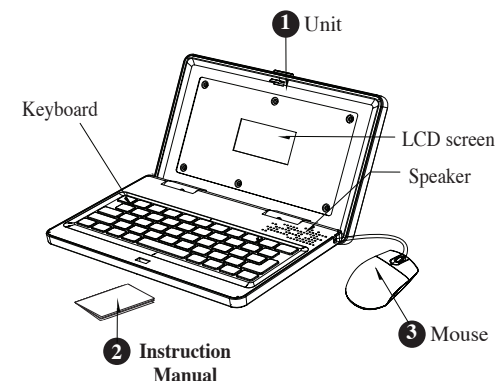

3

Unit

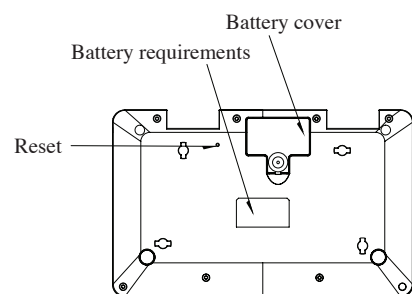

Battery Installation

1. Make sure the unit is turned off.
2. Open the battery cover at the back of the unit using a coin or a flat head screwdriver.
3. Insert 2 "AA" size batteries. (Note the correct polarity: +, -).
4. Replace the cover.



Caution

- Do not mix different types of batteries or old and new batteries together.
- Only use batteries of the same or equivalent type as recommended.
- Remove all batteries when replacing.
- Remove batteries from the unit if the unit is not going to be used for long periods of time.
- Do not dispose of batteries in fire.
- Do not recharge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged.

5

- Rechargeable batteries are only to be charged under adult supervision.
- Remove exhausted batteries from the toy.
- Do not short-circuit the supply terminals.

Storage & Care

To ensure that the product enjoys a long life, please follow these simple rules: Regularly examine the unit for damage to the enclosure and other parts. In the event of such damage, the unit must not be used until the damage has been repaired. Always disconnect the power supply before cleaning. Keep the unit clean by wiping the exterior of the unit with a dry cloth. Avoid getting the unit wet. The unit should not be dismantled. Always store the unit away from direct sunlight, and high temperatures. Avoid leaving the unit in a car where it is exposed to direct sunlight. The unit should not be subjected to extreme force or shock.

6

Chapter 2

Getting Started

The **Barbie™ B-Glam Laptop** operates on 2 "AA" size batteries.

4

The player can also use the **←**, **→** arrow keys and press **Enter** to select a category. All the games under a category are listed in the game selection menu. The player can use the **↑**, **↓** arrow keys to scroll through the activity names and press **Enter** to play.

Attempts

In most activities the player will have three attempts per question. Barbie® will reveal the correct answer after three incorrect attempts. If there is no input after 30 seconds, Barbie® will repeat the instruction prompt.

Scoring

At the end of each game round (generally consisting of ten questions), a summary score screen will appear so the player can see how well they have done. After the successful completion of all the levels in an activity or if time has run out, a 'Play Again?' screen will appear, allowing player to choose whether they want to play again or exit and choose another activity.

8

Time Limit

For most games, the player has a time limit to select an answer, with the length depending upon the type of question and game.

9

Chapter 4

Useful Features and Controls

Keyboard

Barbie™ B-Glam Laptop features a fully functional computer keyboard.

Game Menu

Press **Menu** to go to the main category selection menu.

Settings

Press the **Settings** to set the contrast, volume and background music.

Repeat

Press **Repeat** to repeat a sentence or an instruction.

Help

Press **Help** to receive hints to a question. Using this function will reduce the total score for the current question. Note: Not all games have this function.

Answer

Press **Answer** to reveal the correct answer to a question. The player needs to think carefully before pressing this button as no points will be awarded for that question.

Backspace

Press **Backspace** to remove the previously entered letter or number.

Enter

Press **Enter** to confirm a selection.

Demo

Press **Demo** to see a demonstration of some of the exciting features and activities in the **Barbie™ B-Glam Laptop**.

10

Starting the Barbie™ B-Glam Laptop

Open the unit by pushing in the lock at the front of the laptop and lifting up the laptop cover. Turn on the **Barbie™ B-Glam Laptop** by pressing the **On/Off** button located at the bottom left corner of the keyboard. At the end of a session, remember to turn off the power by pressing the same button.

Auto-off

If there is no input on the unit after several minutes, the unit plays a closing prompt and automatically turns itself off to conserve power. When you are ready to start playing again, just press the **On/Off** button to turn the unit back on.

Chapter 3

Game Rules and Selection

The category selection menu will scroll to the next category every 5 seconds.

7

Chapter 5

Activities

Word

Iconic Words

Select a topic and learn a word.

Iconic Word Quiz

Find the right word that match the picture.

Lollipops

Spell the word shown on the screen by lining up the lollipops.

Spelling Garden

Remove an extra letter to spell a word.

Secret Word

Spell out the word correctly.

11

Word Vines

Guess the hidden word.

Mathematics

How Many?

Help Barbie® count the number of shapes.

Plus Or Minus

Select the correct operation sign for the equation.

Shape Up!

Complete the equation.

Be On Time!

Select the correct time shown on the clock.

Balance Barbie®

Find the equation with the larger or smaller value.

12

Music



Number Songs

Using the number keys to repeat the tone.

Play Along

Select a song, choose a musical instrument and follow the highlighted keys shown on the screen to play along.

Rock Out

Have fun composing a melody. Select an instrument and compose a melody. Press the  or  key to listen to your creation.

2-Player games

Choose the P or Q key to answer. Player 1 press the Q key to play. Player 2 press the P key to play.

16

Memory

Sequin®'s Show

Remember and repeat the number sequence as Sequin® walking by.

Match It!

Remember the matching pairs in a grid and find out the pairs.

Shape Race

Remember the order in which the shapes arrive.

Making Memories

A sequence of vocabulary animations will be played. Select one of the words according to the order asked.

Pet ID

Use the arrow keys to choose the animal which you just saw.

13

Dress To Impress

Help Barbie® pick up all of the dresses without repeating her steps or hitting the obstacles.

Ballet Tandem

It's Barbie®'s Ballet recital, help her keep balance and finish to a grand applause. Use the space bar and stop as close to the target as possible.

Memory Mistress

A sequence of vocabulary animations will be played. Select one of the words according to the order asked.

Chapter 6

Troubleshooting

Developing learning products is a responsibility that we at Oregon Scientific take very seriously. We make every effort to ensure the accuracy and appropriateness of the information which

17

Logic

Dress To Impress

Help Barbie® pick up all of the dresses without repeating her steps or hitting the obstacles.

Sequence Shift

Fill in the missing number to complete the number sequence.

Which Is Different?

Find the item or character that looks different from the rest.

Put It Away!

Help Barbie® clean up the mess! Put the items away in the right place.

Ready Dress Go!

Help Barbie® put her clothes and accessories on in the right order.

14

Reaction

Ballet Balance

It's Barbie®'s Ballet recital, help her keep balance and finish to a grand applause. Use the space bar and stop as close to the target as possible.

Sequin®'s Run Home

Help Sequin® get home by crossing the river, but don't fall into the water!

Caterpillar Feed

Use the arrow keys to guide the caterpillar to pick up its food, so it can turn into a beautiful butterfly. Do not let the caterpillar hit the walls or itself.

15

forms the value of our products. However, errors can sometimes occur. It is important for you to know that we stand behind our products and we encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. Our service representatives will be happy to help you. Before contacting an authorised service representative at 0871 222 1966, carry out the following simple checks. It may save you the time of an unnecessary service call.

No display

Are the batteries installed properly?
Do the batteries need replacing?

Black-out screen or abnormal display

Disconnect the power supply by removing the batteries for at least 10 seconds before connecting the power supply again.

In an environment prone to static discharge, the unit may malfunction.

To reset, press the reset button at the back of the laptop, remove the batteries for at least 10

18

seconds before connecting the power supply again.
Conforms to safety requirements of ASTM F963, EN71 Parts 1, 2 & 3 and EN62115.
In an effort to continually improve our products, the actual screen display on the product may differ slightly from the diagrams shown. Please retain this manual for future reference.

19

Oregon Scientific (UK) Ltd.
Unit 1, Switchback, Gardner Road,
Maidenhead, Berkshire SL6 7RJ.
Hotline number: 0871 222 1966
Email: Technical@oregonuk.com
Website: www.oregonscientific.co.uk

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Warning! Not suitable for children under 36 months.
Small parts. Choking hazard.



DISPOSAL
Do not dispose of this product as unsorted municipal waste.
Such waste should be collected separately for special treatment.

20

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>