

Oster®

For product questions contact:
Sunbeam Consumer Service

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2004 Sunbeam Products, Inc. All rights reserved.

OSTER® is a registered trademark of Sunbeam Products, Inc.

In the U.S., distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

In Canada, imported and distributed by Sunbeam Corporation, Limited.

Pour les questions de produit:
Sunbeam Consumer Service

États-Unis : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

©2004 Sunbeam Products, Inc. Tous droits réservés.

OSTER® est une marque déposée de Sunbeam Products, Inc.

Aux États-Unis, distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Au Canada, importé et distribué par Sunbeam Corporation, Limited.

Para preguntas sobre los productos llame:
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759
Canadá : 1.800.667.8623
www.oster.com

©2004 Sunbeam Products, Inc. Todos los derechos reservados.

OSTER® es una marca registrada de Sunbeam Products, Inc.

En los EE. UU., distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431

En Canadá, importado y distribuido por Sunbeam Corporation, Limited.

Oster®

User Manual

Indoor Grill

Manual de Instrucciones

Parilla para Interiores

Manuel d'Instructions

Gril Électrique

MODELS/MODELOS
MODÈLES

4770 & 4774



Visit us at www.oster.com

P.N. 113648

IMPORTANT SAFEGUARDS

When using your electric skillet, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Be sure that handles are assembled and fastened properly.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the temperature controller, cord or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow appliance to cool before putting on or taking off parts and before cleaning appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return to an Authorized Service Station for examination, repair or electrical or mechanical adjustment. You can locate the nearest service center by calling 1.800.334.0759.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Use extreme caution when moving the appliance if it contains hot oil or any other hot liquid.
- Always attach the temperature controller to the appliance first, then plug into the wall outlet. To disconnect, switch off, remove plug from the wall outlet, then remove the temperature controller from the appliance.
- Only use the appliance with the OSTER® Temperature Controller.
- Do not use appliance for anything other than its intended use.

THIS UNIT IS FOR HOUSEHOLD USE ONLY

EXTENSION CORD USE

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

SAVE THESE INSTRUCTIONS

English-1

POWER CORD INSTRUCTIONS

Please follow the instructions below to ensure the safe use of the power cord.

- This appliance is equipped with a 3 prong plug. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the 3 prong plug by modifying the plug in any way.
- Follow these guidelines if using an extension cord:
 - The marked electrical rating of the extension cord must be 120 volt, 60 Hz, 10A.
 - The extension must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children and will not be tripped over.
- Do not pull, twist, or otherwise abuse the power cord.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.


If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

WELCOME

Congratulations on your purchase of an OSTER® Indoor Grill! To learn more about OSTER® products, please visit us at www.oster.com.

English-2

GETTING TO KNOW YOUR INDOOR GRILL

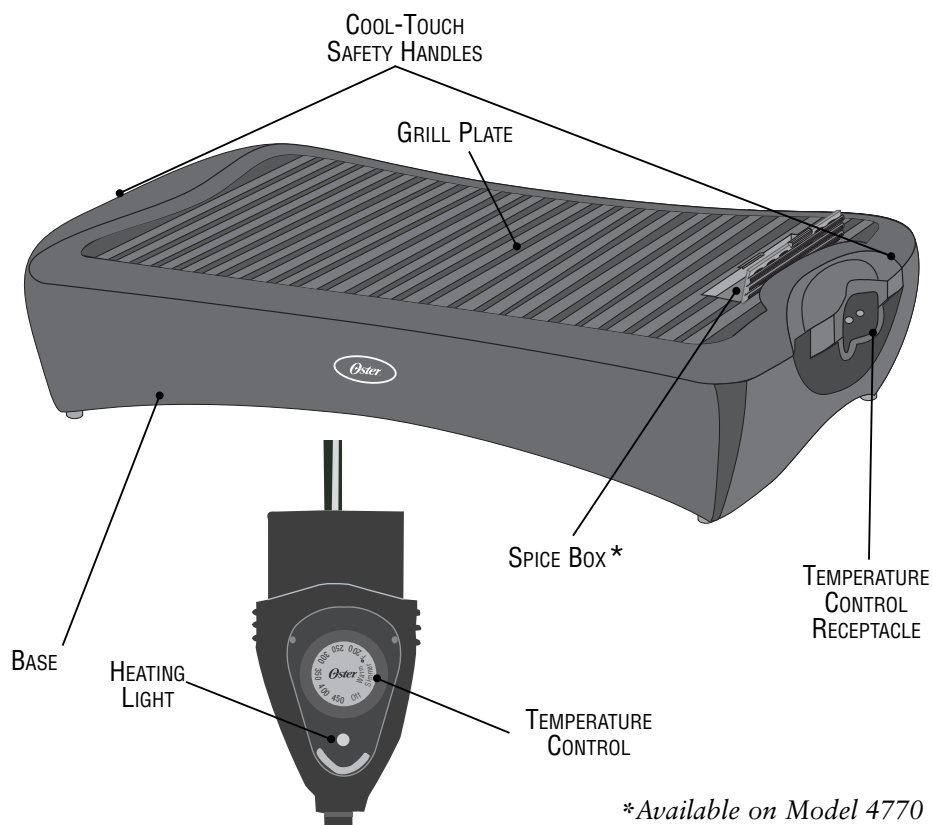

**Available on Model 4770*

DIRECTIONS FOR GRILLING

1. Wash Grill surface and base in hot, soapy water. Rinse and dry thoroughly.
2. Attach Grill Plate to base.
3. Set Temperature Control to "OFF." Insert Temperature Control into the Temperature Control Receptacle and plug the Cord into a standard 120 volt AC outlet. Be sure Temperature Control is inserted fully into receptacle.
4. Set Temperature Control to desired setting. Indicator Light will illuminate.
5. Indicator Light goes off when correct cooking temperature is reached. During cooking, indicator light may cycle off and on as thermostat maintains temperature.
6. When food is completely cooked, it can be kept warm by setting Temperature Control to "WARM SIMMER."
7. After use, set Temperature Control to "OFF" position, unplug unit from outlet and then unplug from Temperature Control Receptacle.

English-3

SPICE BOX USAGE*

The spice box can be used to infuse your food with spices and/or herbs, or as a marinade box.

- **TO USE FOR INFUSING FOOD** – Place herbs or spices in box and close lid. For best results, place food over or close to the vents on the top of the box.
- **TO USE AS A MARINADE BOX** – Pour your favorite marinade into the box and leave lid open. Use a brush throughout cooking to brush hot marinade over your food.

**Available on Model 4770*

CAUTION: Contents of spice box will become very hot while cooking.

CONDITIONING OF THE NON-STICK COATED GRILL

Before using your new appliance, wash the grilling surface with warm, sudsy water and dry. Rub a film of cooking or salad oil all over the non-stick coating. Remove any excess oil with a cloth or paper towel.

The Indoor Grill is now ready for use and it is unnecessary to condition it again.

DIRECTIONS FOR CLEANING

Before cleaning make sure unit is cool.

1. Remove Temperature Control from Temperature Control Receptacle. Allow grill to cool.
2. Grip Base with one hand and grip Safety Handle with other hand. Slowly pull up on the Safety Handle while holding the Base down. If grill is hot, use oven mitt.
3. Rinse Grill Plate and Base and place in dishwasher. NOTE: Grill Base should be put on the top dishwasher rack only. You can also wash in hot, soapy water.
4. **DO NOT** wash Grill Plate with the Temperature Control connected.
5. Make sure Grill Plate and Base are completely dry before using.

TIPS AND SUGGESTIONS

1. **DO NOT** use sharp metal utensils or knives to cut food on the Grill Plate.
2. **DO NOT** place the Temperature Control on the Grill Plate surface. It may scratch or damage the surface of the Grill Plate.
3. **DO NOT** use cleansers, nylon or metal brushes. It may scratch or damage the surface of the Grill Plate.
4. **DO NOT** use Grill Plate on any other surface except base.

English-4

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively “Sunbeam”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam’s Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A. –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF
THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>