

USING YOUR HAND MIXER

Before using your mixer for the first time, wash the beaters, dough hooks and whisk. Rinse and dry.

Be sure speed control is in the “OFF” position and unplugged from an electrical outlet. Insert beaters one at a time, by placing stem end of beaters into the opening drive holes on the bottom of the mixer. Turn beater slightly and push in until beater clicks into position.

Note that the beaters are interchangeable but dough hooks are not. When using dough hooks, the dough hook with the collar on the stem (*see drawing on page 4*) fits into the large drive hole on the mixer. If dough hooks do not click into the drive holes, reverse and try again.

Plug cord into an appropriate outlet.

MIXING

To avoid splatters start unit on lowest speed and slowly increase to desired speed setting.

Slowly guide mixer around sides and through center of bowl, going in the same direction. Be careful not to overbeat the mixture. Overbeating tends to make some mixtures tough.

Whenever scraping of the bowl is required, stop the mixer and scrape sides and bottom of bowl with a rubber spatula as needed. Turn speed control to “OFF” and rest mixer on its heel rest while adding ingredients. Be sure to position beaters over mixing bowl so any drippings will fall back into mixing bowl.

When mixing is complete, set speed control to “1” and raise beaters slowly from batter to clean off clinging food. Be sure to turn unit to “OFF” before raising beaters completely out of mixing bowl.

EJECTING BEATERS, DOUGH HOOKS, OR WHISK

Be sure speed control is at the “OFF” position and cord is removed from electrical outlet. Scrape off any excess batter with a rubber spatula. Grasp the stems of the attachments with your hand and press the beater eject Button. Attachments will release into your hand.

HOW TO ADJUST THE SPEED

1. You can select a speed by turning the position selector to the speed required, from Speed 1 to Speed 7.
2. No matter where the position selector is situated, you can get a higher speed immediately by pressing the “Burst” button.

NOTE: Do not press the “Burst” button if the speed control/eject button is at the “OFF” position. This may damage the mechanism.

SELECTION OF SPEEDS

Speeds 1 through 7: For continuous use of stirring, beating or mixing of ingredients and thin batters. May also be useful for whipping egg whites or flour into various doughs. May be used in mixing cake dough, making sauces and even heavy doughs.

SPEED GUIDE FOR HAND MIXER

SPEED	MIXING TASKS	
1	Stir	Use when stirring liquid ingredients or when mixing dry and liquid ingredients together alternately in a recipe. Use when preparing any of the ready-prepared or packaged instant puddings.
2	Mix	Use when a recipe calls for combining ingredients together. Use for quick breads or muffins that require a brisk action, just enough to blend.
3	Blend	Use when preparing cake mixes or for directions calling for medium speed. Use to cream butter and sugar together. NOTE: This is the maximum recommended speed for dough hook usage.
4-5	Beat	Use when preparing a frosting from a recipe or package. Use when whipping cream for desserts.
6-7	Whip	Use to mash potatoes to develop a light and fluffy texture. Use when whipping egg whites.
BURST OF POWER® Mixer Button		During especially heavy mixing tasks, press the Button to drive through the mixture with ease.

CARING FOR YOUR MIXER

CARE AND CLEANING

1. Before cleaning any part of the mixer, set the position selector to the “OFF” position, then unplug the cord from the outlet and eject the beaters. Be sure to dry all parts thoroughly before using them again.
2. The beaters, dough hooks and whisk may be washed in hot, soapy water or in a dishwasher.
3. The mixer and the cord can be cleaned with a damp cloth but the final clean must be with a dry cloth. **DO NOT IMMERSER MIXER IN WATER WHILE CLEANING. THIS MAY CAUSE ELECTRIC SHOCK, INJURY, OR DAMAGE TO THE PRODUCT.**
4. To remove stubborn spots, wipe surfaces with a piece of cloth, slightly dampened, in soapy water or a mild, non-abrasive cleaner.
5. Do not use any abrasive cleaner or material to clean any part of the hand mixer, as it can harm the body of the product.

STORAGE

Store hand mixer and attachments in a clean, dry location such as a cabinet or shelf.

USING THE STORAGE CASE (select models only)

Place accessories and hand mixer in the storage case. Store assembled mixer and case as desired.

MAINTENANCE

Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your hand mixer should require repairs, do not try to fix it yourself. Send it to the nearest Authorized Sunbeam Appliance Service Center.

1-Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS’s Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-334-0759 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, doing business as Jarden Consumer Solutions located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

Oster

User Manual

Manual de Instrucciones

Hand Mixer with Storage Case Batidora Manual con Funda para Almacenaje

MODEL/MODELO **FPSTHMBGB**



Visit us at www.oster.com

P.N. 160913

SAVE THESE INSTRUCTIONS

For PRODUcTS PURCHASED IN THE U.S. AND CANADA ONLY
A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Do not use with an extension cord.

For PRODUcTS PURCHASED IN THE U.S. AND CANADA ONLY
To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way; if the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

 
 
THIS UNIT IS FOR HOUSEHOLD USE ONLY

- Do not use with an extension cord.
- Do not use with electrical or mechanical adjustment.
- Do not use with an extension cord.
- Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
- Do not operate hand mixer with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner.
- To protect against risk of electrical shock, do not put hand mixer in water or other liquid. This may cause personal injury and/or damage to the product.
- To disconnect, turn off control and unplug from outlet.
- Unplug from outlet while not in use, before putting on or taking off parts and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to the hand mixer.
- Do not operate hand mixer with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner.
- Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
- Do not use with an extension cord.
- Do not use with electrical or mechanical adjustment.
- Do not use with an extension cord.
- Do not use outdoors or for commercial purposes.
- Do not use beaters from hand mixer before washing them.
- Do not place hand mixer on or near a hot burner or in a heated oven.
- Do not use hand mixer for other than intended use.
- Do not leave hand mixer unattended while it is operating.
- Do not use hand mixer while it is operating.
- Close Supervision is necessary when any appliance is used by or near children.

READ ALL INSTRUCTIONS BEFORE USE

When using electrical appliances, basic safety precautions should always be followed, including the following:


IMPORTANT SAFEGUARDS

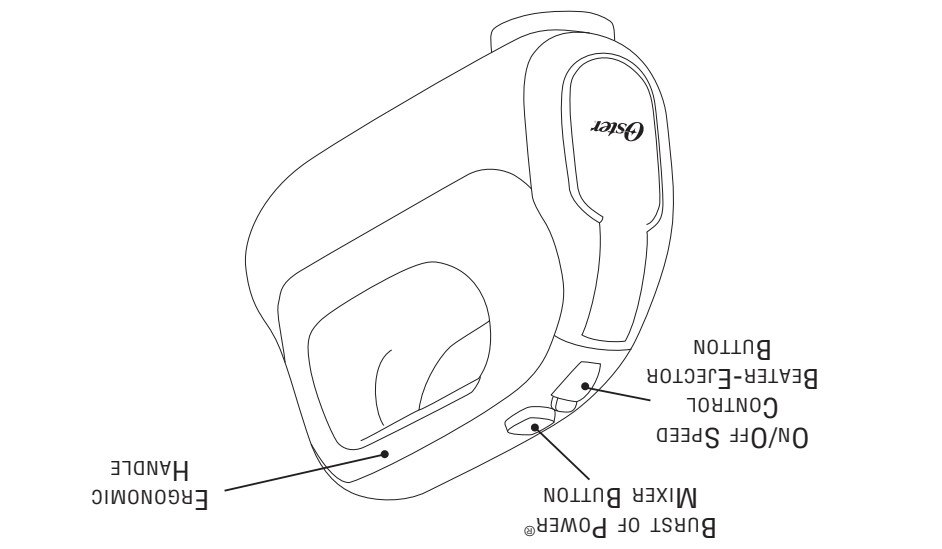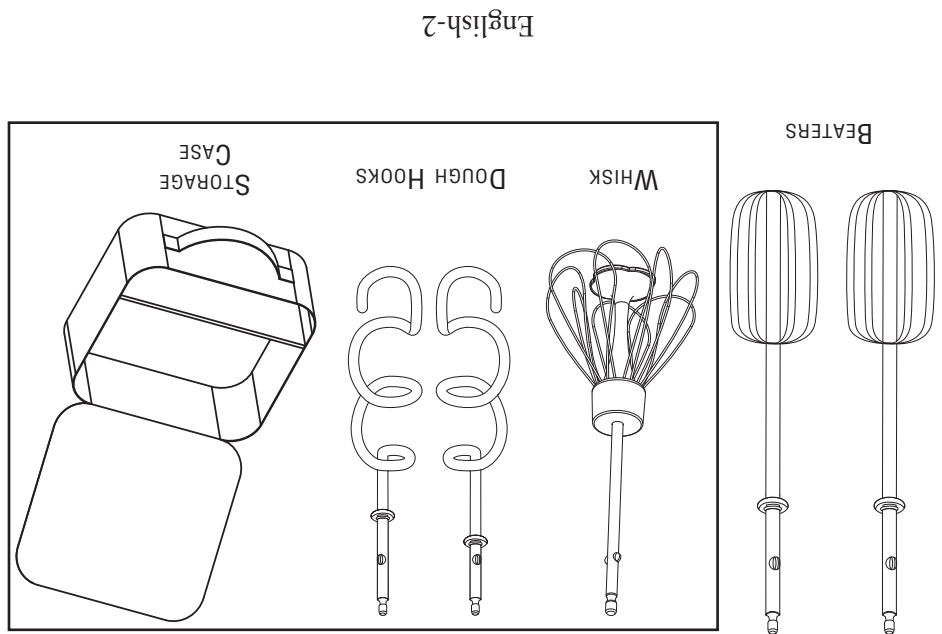

FEATURES OF YOUR HAND MIXER

WELCOME

 Congratulations on your purchase of an OSTER® Hand Mixer! To learn more about OSTER® products, please visit us at www.oster.com.

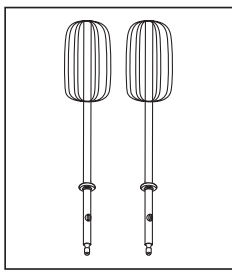


BEATERS
The beater design allows for thorough, fast mixing results for all types of batters. The beaters are dishwasher safe.

NOTE: Make sure hand mixer is unplugged before removing or inserting any attachments.


BEATER EJECT BUTTON
This OSTER® Hand Mixer features a convenient beater eject button. The design allows for a smooth push of the thumb to release the beaters or dough hooks. There will not be a noticeable “click”.

BURST OF POWER® FEATURE
The BURST OF POWER® feature allows for an added boost to the selected speed setting at the press of the button. During especially heavy mixing tasks, press the button to drive the mixer will return to the original speed setting.

 
HEEL REST
The heel rest keeps the mixer stable when sitting upright on your counter.

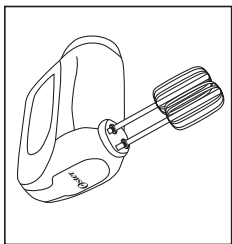

 
LEARNING ABOUT YOUR HAND MIXER
The OSTER® Hand Mixer with Retractable Cord has been designed to assist you in preparing delicious foods.

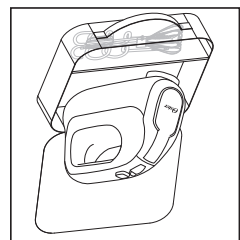




 
STORAGE CASE
Lets you store your hand mixer and accessories conveniently together for easy access and travel.

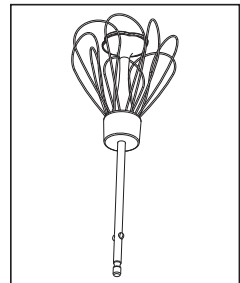

 WHISK
The whisk is used to beat air into mixtures such as egg whites, yolks or cream.

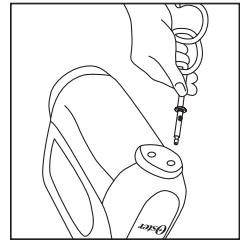

    DOUGH HOOKS
Use these hooks to knead bread dough, pizza dough or other heavy batters and doughs. Use at lower speeds for best results.
Note that the beaters are interchangeable but dough hooks are not. When using dough hooks, the dough hook with the collar on the stem (*see feature drawing*) fits into the larger drive hole on the mixer.

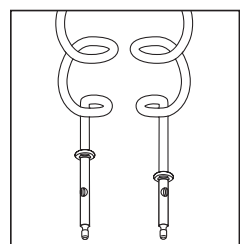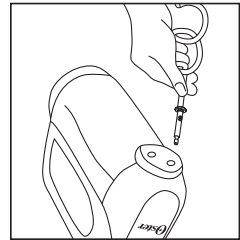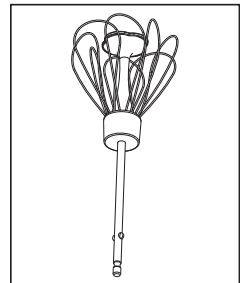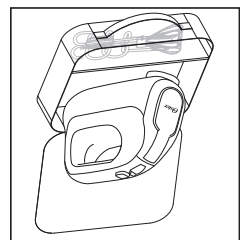

English-5

English-6

English-7

English-4

English-3

English-2

English-1

Impreso en China

Printed in China

© 2012 Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions. Todos los derechos reservados. Distribuido por Sunbeam Products, Inc. operando bajo el nombre de Jarden Consumer Solutions, Boca Raton, Florida 33431.

EE.UU. : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

Para preguntas sobre los productos llame:
Sunbeam Consumer Service

GCD5-OST127178-PH

© 2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

USA : 1.800.334.0759
Canada : 1.800.667.8623
www.oster.com

For product questions contact:
Sunbeam Consumer Service

Oster

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>