 


Oster®

30
Mar 2003
בוב
10.47

User Manual Classic Milkshake Mixer

MODELS 6625, 6626, 6627

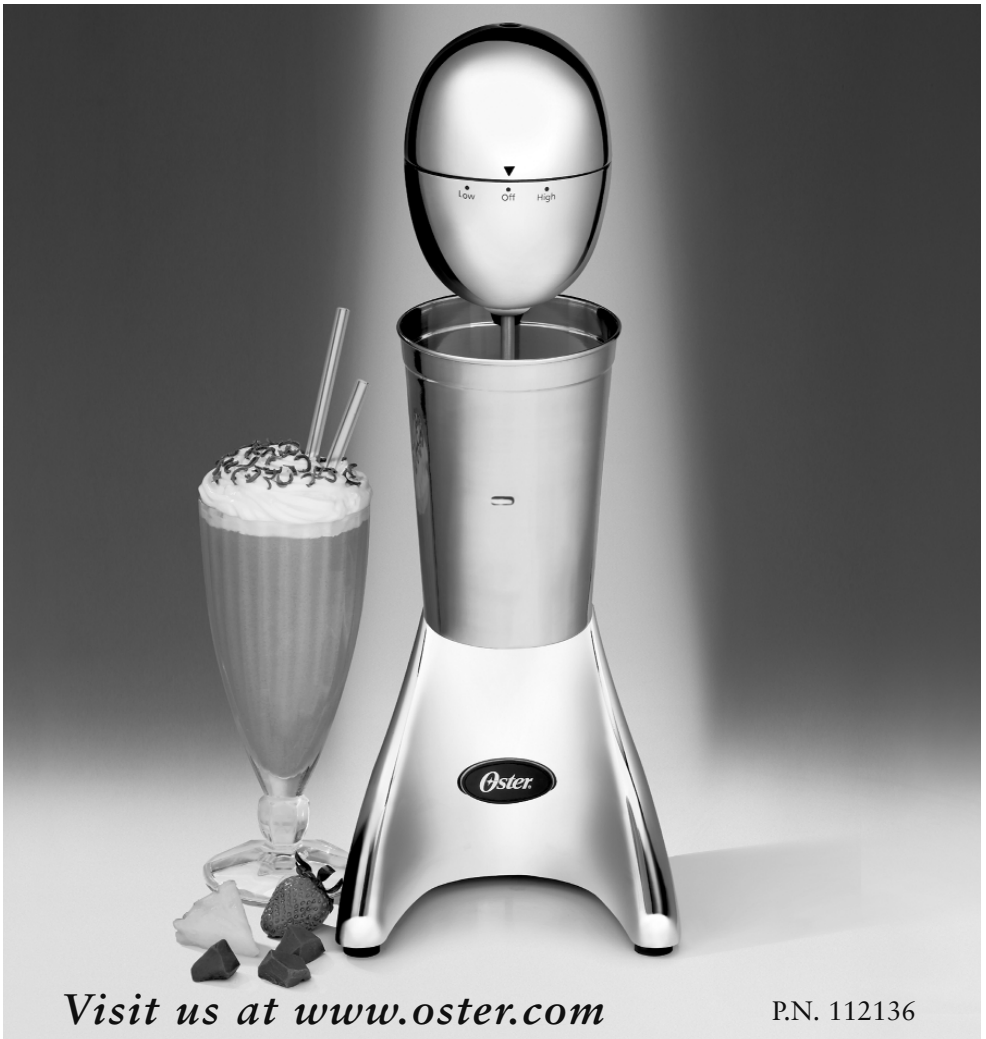

Visit us at www.oster.com

P.N. 112136

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- Unplug cord from outlet when not in use or before cleaning.
- To protect against risk of electrical shock, do not put base, motor, cord or plug in water or other liquid.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- Close supervision is necessary when used by or near children.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas or other utensils out of cup to prevent personal injury or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest Authorized Sunbeam Appliance Service center for examination, repair or electrical or mechanical adjustment.
- Do not use outdoors or for commercial purposes; this appliance is for household use only.
- Use this appliance for its intended use as described in this manual. Do not use attachments that are not recommended by the manufacturer; they may cause injury.
- Never add ingredients to cup while appliance is operating.
- Cup must be properly in place before switching on the appliance.
- Always operate on a flat surface.
- Do not operate continuously for more than 4 minutes.

SAVE THESE INSTRUCTIONS

POWER CORD INSTRUCTIONS

Please follow the instructions below to ensure the safe use of the power cord.

 
- This appliance is equipped with a 3 prong plug. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the 3 prong plug by modifying the plug in any way.

- You may use an extension cord, if necessary, but be certain to follow these guidelines:
 - The marked electrical rating of the extension cord must be at least 120/127 volt, 60 Hz, 10A.
 - The extension must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children and will not be tripped over.
- Do not pull, twist, or otherwise abuse the power cord.

WELCOME

Congratulations on your purchase of an OSTER® Classic Milkshake Mixer!

LEARNING ABOUT YOUR CLASSIC MILKSHAKE MIXER

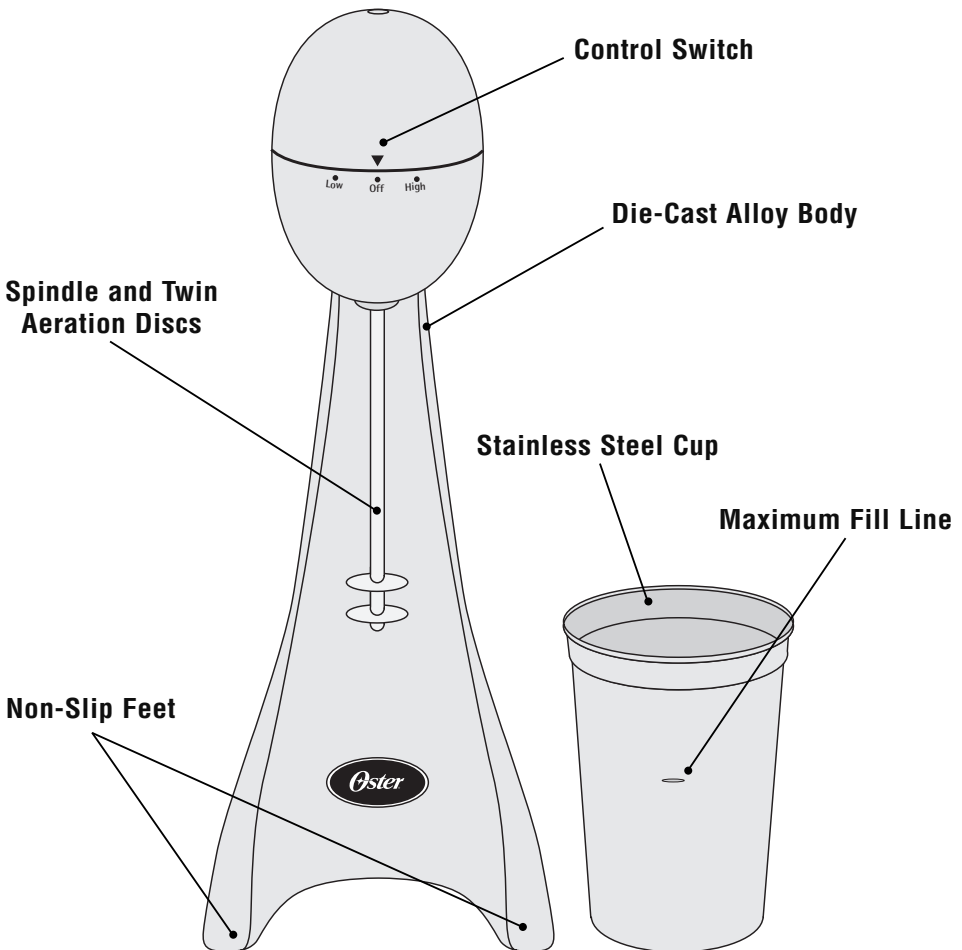

Control Switch

Unique two-speed switch control – simply turn the upper section of the motor head to select high or low speed.

Die-Cast Alloy Body

A classic Milkshake Mixer with a heavy duty die-cast alloy body.

Non-Slip Feet

Non-slip rubber feet keep your Milkshake Mixer stable on the counter during use.

Spindle and Twin Aeration Discs

Commercial design, twin aeration discs, combines ingredients in seconds, supported by a stainless steel spindle.

Stainless Steel Cup

Large capacity 28.5 ounce (850 ml) stainless steel cup reduces splashing and is ideal for preparing icy cold milkshakes.

USING YOUR PRODUCT

1. Prior to first use, clean the Milkshake Mixer according to the instructions in the “Cleaning Your Product” section.
2. Be sure unit is “OFF.”
3. Plug the power cord into a power outlet.
4. Place ingredients into cup.

Note: We recommend you do not fill liquid beyond the top fill mark on the side of the cup (13 oz./380 ml). This will help to prevent the mixture from splashing out during mixing. The volume of milkshakes will increase, which makes the large cup ideal for the frothiest shakes.


5. Attach the cup to the Milkshake Mixer by sliding the lip of the cup up under the cup holding clip and sitting the bottom edge of the cup on the cup rest.

Note: The Milkshake Mixer will only operate when the cup is in place.

6. Turn the upper section of the motor head to low speed and mix for 3 seconds. If your recipe requires high speed, turn the upper section of the motor head to high speed after mixing for 3 seconds on low speed; otherwise continue mixing on low speed until drink is desired consistency.

Important: Do not operate continuously for more than 4 minutes.

 7. Turn the upper section of the motor head to “OFF” and remove the cup. Enjoy!

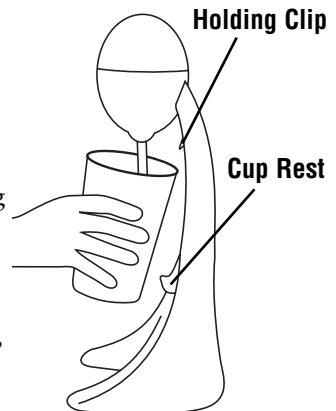

MIXING TIPS

- Use only crushed ice in the Milkshake Mixer.
- Grind or crush solid ingredients such as fruit, candy, or cookies before adding to mixing cup.
- Always be sure the head of the Milkshake Mixer is in the “OFF” position before plugging in outlet and before removing cup when mixing is done.
- Add wet ingredients before dry ingredients for best mixing results.
- The mixing time of beverages containing ice cream type ingredients will vary according to the hardness of the ingredients. Softer ingredients work better.
- Do not mix hot ingredients in the Milkshake Mixer.
- For the frothiest shakes we recommend you use well chilled milk.

CHOCOLATE MILKSHAKE

1/2 – 2/3 cup milk

3 scoops vanilla ice cream

2 Tbsp. chocolate syrup

1. Place ingredients into cup.
2. Blend on high for 1-1/2 minutes or until desired consistency.
3. Serve in a tall, chilled glass.

CLEANING YOUR PRODUCT

Important: Unplug before cleaning base.

Note: Never immerse the Milkshake Mixer in water or any other liquid.

- Clean before initial use and immediately after each use.
- Clean the spindle, twin aeration discs and cup by filling the cup to the top fill mark with warm soapy water. Attach the cup to the Milkshake Mixer and run it on speed 1 for about 30 seconds. Turn the upper section of the motor head to “OFF,” empty the cup and repeat with rinsed water. Turn the head to “OFF” again, empty the cup. Dry spindle and aeration discs thoroughly.
- Cup may be washed by hand with mild detergent or in the dishwasher.
- Use a damp, soft sponge with mild detergent to clean the outside of the Milkshake Mixer base.

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam's Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A. –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431.

In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

The Oster logo features the brand name in a large, bold, cursive script. A registered trademark symbol (®) is positioned at the top right of the letter 'r'. The logo is set against a plain white background.

For product questions contact:
Sunbeam Consumer Service

1.800.334.0759

www.oster.com

©2003 Sunbeam Products, Inc. All rights reserved.

OSTER® is a registered trademark
of Sunbeam Products, Inc.

Distributed by Sunbeam Products, Inc.,
Boca Raton, FL 33431

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>