

# Oster®

*User Manual*

## 6-Slice Toaster Oven

*Manual de Instrucciones*

## Horno Tostador de 6 Rebanadas

*Manuel d'Instructions*

## Grille-Pain Four de 6 Tranches

**MODEL/MODÈLE  
MODELO**

**6239**



Visit us at [www.oster.com](http://www.oster.com)

P.N. 111339

Download from [www.Somaterials.com](http://www.Somaterials.com). All Manuals Search And Download.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

## READ ALL INSTRUCTIONS BEFORE USE

- Do not touch hot surface. Use oven handles or knobs. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts.
- When the unit is not in use and before cleaning, unplug the toaster oven from the wall outlet. NOTE: Make sure the oven is turned off before unplugging.
- To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or other liquids.
- Close supervision is necessary when this or any appliance is used near children. This appliance is not for use by children.
- Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner.
- Do not use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
- Do not use outdoors or for commercial purposes.
- Do not use this appliance for other than its intended use.
- Do not let cord dangle over the edge of a tabletop or countertop or to touch hot surfaces.
- Do not place appliance on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
- Extreme caution should be used when using containers constructed of other than metal or glass.
- A fire may occur if the oven is covered or touching flammable materials, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the top of the oven during operation.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any flammable materials in the oven, such as paper, cardboard, plastic, or any materials that may catch fire or melt.
- Do not cover the oven with metal foil. This will cause overheating of the appliance.
- Oversized foods or metal utensils must not be inserted in the appliance, as they may create a fire or risk of electric shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- When broiling, use extreme caution when removing tray or disposing of hot grease or other hot liquids.
- To turn this appliance off, return all controls to the "OFF" position.
- When operating the oven keep at least four inches of space on all sides of oven to allow for adequate air circulation.

## SAVE THESE INSTRUCTIONS

### THIS UNIT IS FOR HOUSEHOLD USE ONLY


To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not attempt to defeat this safety feature.**

## WELCOME

Congratulations on your purchase of an OSTER® 6-Slice Toaster Oven! To learn more about OSTER® products, please visit us at [www.oster.com](http://www.oster.com).


### LEARNING ABOUT YOUR TOASTER OVEN

1. Digital Control Panel
- 1a. LCD Display
- 1b. Bake, Broil, Toast and Keep Warm Buttons and Indicator Lights
- 1c. Toast Shade Setting Indicator
- 1d. Start Button and Indicator Light
- 1e. Stop Button and Indicator Light
- 1f. Timer and Temperature Setting Button and Indicator Lights
2. Viewing Window
3. Continuous Clean Interior Walls
4. Baking Pan and Broiling Tray
5. Auto Advance Rack
6. Two Rack Positions
7. Two Removable/Reversible Wire Racks
8. Removable Crumb Tray

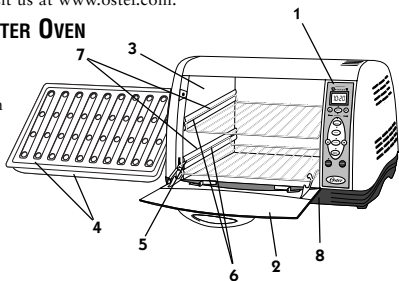

### TOASTER OVEN FEATURE BENEFITS

1. Digital Control Panel
- 1a. LCD Display – For easy viewing of temperature and time settings
- 1b. Bake, Broil, Toast and Keep Warm Buttons and Indicator Light – Buttons are easy to read and easy to use. The indicator light will show what option (*bake, broil, toast or keep warm*) has been selected.
- 1c. Toast Shade Setting Indicator Light – Allows you to visually see the toaster shade setting selected.
- 1d. Start Button and Indicator Light – Press this button to begin all functions and the according indicator light will illuminate.
- 1e. Stop Button – Allows you to stop the baking, broiling, toasting or keep warm function at any time.
- 1f. Timer and Temperature Setting Button – Allows you to toggle between the temperature and timer setting. The buttons allow you to set the time and temperature you desire. The “▲” button allows you to increase the temperature or time and the “▼” button to decrease the temperature or time.
2. Viewing Window – Allows you to see food cooking.
3. Continuous Clean Interior Walls – Allows food to dissipate off for easy cleaning.
4. Baking Pan and Broiling Tray – Makes all of your baking and broiling needs easy.
5. Auto Advance Rack – For easy and safe removal of cooked foods.
6. Two Rack Positions – To accommodate a wide variety of foods from pizza to tall roasts.
7. Two Removable/Reversible Wire Racks – To accommodate multiple foods and sizes.
8. Removable Crumb Tray – Allows for easy cleaning of crumbs and fallen food particles.

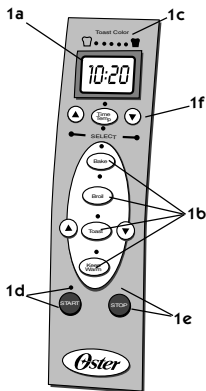

# PREPARING YOUR TOASTER OVEN

If you are using your toaster oven for the first time, please be sure to:

- Remove any stickers from the surface of the oven.
- Open oven door and remove all printed documents and paper from inside the toaster oven.
- Clean the racks, tray, and pan with hot water, a small amount of dishwashing liquid and a non-abrasive sponge or cleaning pad. **DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.**
- Dry the unit thoroughly before using.
- Select a location for the toaster oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Insert bottom rack over hooks on glass door so rack moves with door.
- Plug the toaster oven into an electrical outlet.

## USING YOUR TOASTER OVEN

Plug the unit in, “- -” will appear in the LCD. The indicator lights will not illuminate. Every time that you press a button, your oven will make a confirmation beep.

**NOTE:** You will need to press one of the menu buttons “keep warm”, “broil”, “bake”, or “toast” for the unit to start. Then you can set the Time and Temperature.

## MENU BUTTONS

If you press one of the buttons from the four menus, “keep warm”, “broil”, “bake”, “toast”, the corresponding indicator light will illuminate and the LCD will display the default time setting. You will then be able to toggle between Time and Temperature with the Time/Temp button.

**Time:** Press the “▲” button to increase the time or press the “▼” button to decrease time.

**Temperature:** Press the “▲” button to increase the temperature or press the “▼” button to decrease temperature.

The maximum cooking time is 120 minutes (2 hours), the time will appear in the LCD display.

## START BUTTON

Press this button to begin all functions and the corresponding indicator light will illuminate. If you do not press the “start” button within 30 seconds of choosing your menu selection, the LCD display will go back to “- -” and all indicator lights will turn off.

## STOP BUTTON

Press this button to turn off the power. The display will revert to “- -”. When the operation is finished or you press the “stop” button, the unit will turn off, “- -” will appear in the LCD and all of the indicator lights will turn off.

## BEEPER FUNCTION

- (1) When you plug the unit in, the beeper sounds once and “ - - - ” appears in the LCD.
- (2) When you press one of the four menu buttons the beeper will sound one time.
- (3) When you press the adjustable button, every time you press the button, the beeper will sound once. If you press the button continually, the beeper only sounds one time.
- (4) When you press the start button the beeper will sound once, and “:” will flash, that means the unit is in operation. Once the unit has begun the cooking cycle, the menu selection, time or temperature cannot be changed. The unit must be stopped and reset.
- (5) When the unit is in operation, press the stop button, the beeper will sound once and the unit will stop operation.
- (6) At the end of pre-set time, the unit will sound a long beep to remind you the work is done.

## USING THE BAKE FUNCTION

- The bake function may be used to bake cake, cookies, poultry, beef and pork.
- When you select the bake function, the bake indicator light will illuminate.
  - The default Time is 30 minutes.
  - The default Temperature is 450°F.
- Both Time and Temperature are adjustable.
- **Set the Time:** The default Time will appear first on the LCD. Press the “▲” button to increase the time and the “▼” button to decrease the time. Time will “▲” or “▼” in 5 minute increments. Once 5 minutes is reached, you have the option of decreasing in one minute increments when you press “▼” (4 minutes, 3 minutes...).
- **Set the Temperature:** Press the Time/Temp button to set the Temperature. This button will toggle between Time and Temperature. The default Temperature will appear on the LCD display. Press the “▲” button to increase the temperature and “▼” button to decrease the temperature. Temperature changes in 25° increments each time you press “▲” or “▼”.
- Press Start – The unit starts working. The LCD displays the time. The “:” begins flashing and the time starts counting down. Both top and bottom elements will heat up.
- When the baking cycle is complete, the unit will sound a long beep and turn the unit off automatically. The “---” will appear on the display and the “Bake” indicator light will turn off.

## USING THE BROIL FUNCTION

- The broil function may be used to broil steak, fillets, poultry and other favorite foods according to package or recipe instructions.
- When broiling, always use baking/broiling tray with the broiling insert.
- Close the door to the first notch, leaving approximately a 3-inch gap at the top.
- When you select the broil function, the broil indicator light will illuminate.
  - The default Time is 30 minutes.
  - The default Temperature is 450°F. The temperature cannot be adjusted.
- The Time is adjustable. Time will “▲” or “▼” in 5 minute increments. Once 5 minutes is reached, you have the option of decreasing in one minute increments when you press “▼” (4 minutes, 3 minutes...).
- **Set the Time:** The default Time will appear first on the LCD. Press the “▲” button to increase the time and “▼” button to decrease the time.

NOTE: During broiling, only top heating element will heat up.

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

- Press Start – The unit starts working. The LCD displays the time. The “:” begins flashing and the time starts counting down.
- When the broiling cycle is complete, the unit will sound a long beep and turn the unit off automatically. The “---” will appear on the display and the “Broil” indicator light will turn off.

## USING THE KEEP WARM FUNCTION

- The keep warm function is for defrosting foods or keeping food warm.
 

NOTE: For best results, do not set the timer more than 60 minutes because the food will no longer warm but overcook.
- When you select the Keep Warm function, the Keep Warm indicator light will illuminate.
  - The default Time is 30 minutes.
  - The default Temperature is 150°F and is NOT adjustable.
- Time is adjustable and can be set at a maximum of 120 minutes. Time will “▲” or “▼” in 5 minute increments. Once 5 minutes is reached, you have the option of decreasing in one minute increments when you press “▼” (4 minutes, 3 minutes...).
- **Set the Time:** The default Time will appear first on the LCD. Press the “▲” button to increase the time and “▼” button to decrease the time.
- **Set the Temperature:** Press the Time/Temp button to set the Temperature. This button will toggle between Time and Temperature. The default Temperature will appear on the LCD.
- Press Start – The unit starts working. The LCD displays the setting time. The “:” begins flashing and the time starts counting down. Both top and bottom elements will heat up.
- When the Keep Warm cycle is complete, the unit will sound a long beep and turn the unit off automatically. The “---” will appear on the display and the “Key Warm” indicator light will turn off.

## USING THE TOAST FUNCTION

- The toast function may be used to toast bread, muffins and waffles or your favorite recipe according to package or recipe instructions.
- When you select the Toast function, the toast indicator light will illuminate.
- The default temperature is 450°F. The temperature is not adjustable.
- **Set the Toast Shade Setting:** (See Figure 1) The default setting is the lightest toast shade option. Press the “▲” or “▼” buttons on either side of the Toast button. Press the “▲” button to increase the toast shade and “▼” button to decrease the toast shade. The toast shade indicator lights above the LCD panel will illuminate. (See Figure 2)

NOTE: No default time or temperature will appear when the Time/Temperature button is pressed. The Toast Shade setting can only be adjusted with the toast “▲” or toast “▼” button.

- Press Start – The unit starts working. The LCD displays the setting time. The “:” begins flashing and the time starts counting down. After the temperature appears on LCD for 30 seconds, the LCD will go back to show time automatically.
- When the toasting cycle is complete, the unit will sound a long beep and turn the unit off automatically. The “---” will appear on the display and the “Toast” indicator light will turn off.

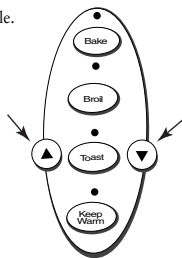


FIGURE 1

Toast Color



FIGURE 2

## POSITIONING RACKS

To accommodate a wide variety of foods the oven has two reversible racks and two rack positions. The racks can be inserted in the oven in the up position or down position. The racks will fit into either of the rack guides inside of the toaster oven (*see Figure*).

Before removing the racks allow the unit to cool.

To remove a rack, open the oven door and pull the rack towards the front of the oven. The rack will slide on the rack guides on the inside of the oven.

Positioning of the rack will depend on the size of the food and desired browning.

**NOTE:** Lower rack will not auto advance unless the rack is inside hooks on the glass door.

### TIPS:

Adjust rack downward to prevent top browning and upward to prevent bottom burning.

For best toasting results, position the rack in the up position on the lower rack guide.

When broiling, position the rack in the up position on the upper rack guide.

To replace the rack in the oven, align rack in rack guide and slide toward the back of the oven.

**NOTE:** Heating elements may cycle ON and OFF to maintain the desired temperature.

## CLEANING YOUR TOASTER OVEN

Before cleaning your OSTER® Toaster Oven, unplug it and allow it to cool. To clean, wipe with damp cloth. **DO NOT IMMERSE IN WATER!** Make sure to use only mild, soapy water.

Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the continuous clean coating on this unit. Empty crumb tray frequently to avoid accumulation of crumbs.

## STORING YOUR TOASTER OVEN

Allow the appliance to cool completely before storing. If storing the toaster oven for long periods of time make certain that the toaster oven is clean and free of food particles. Store the toaster oven in a dry location such as on a table or countertop or in a cupboard shelf. Wind the electrical cord around the cord storage brackets. Other than the recommended cleaning, no further user maintenance should be necessary.

## ***One-Year Limited Warranty***

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively "Sunbeam") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What Are the Limits on Sunbeam's Liability?**

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Warranty Service**

In the U.S.A. –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**



# Oster®

For product questions contact:  
Sunbeam Consumer Service

USA : 1.800.334.0759  
Canada : 1.800.667.8623  
www.oster.com

©2003 Sunbeam Products, Inc. All rights reserved.  
OSTER® is a registered trademark of Sunbeam Products, Inc.  
Distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

Pour les questions de produit:  
Sunbeam Consumer Service

États-Unis : 1.800.334.0759  
Canada : 1.800.667.8623  
www.oster.com



©2003 Sunbeam Products, Inc. Tous droits réservés.  
OSTER® est une marque déposée de Sunbeam Products, Inc.  
Distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Para preguntas sobre los productos llame:  
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759  
Canadá : 1.800.667.8623  
www.oster.com

©2003 Sunbeam Products, Inc. Todos los derechos reservados.  
OSTER® es una marca registrada de Sunbeam Products, Inc.  
Distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>