



QUICK TIPS FOR USING YOUR OSTER® COUNTERTOP OVEN

Model: TSSTTVDFL1

Refer to your Oven Manual for Important Safeguards and cleaning instructions.

BEFORE USING YOUR COUNTERTOP OVEN

 
- Remove any stickers and papers in and on the countertop oven.
- Clean the wire rack, broil rack and baking/cookie pan with hot water, a small amount of dishwashing liquid and a nonabrasive sponge or cleaning pad.
- ** During initial start up, you may detect a slight smell and/or smoke. Don't worry this is normal. Turn the temperature to 450° and let run for approximately 5 minutes to allow the smell or smoke to dissipate.

Warning: Make sure there is a 6-inch (15.24cm) clearance between the countertop oven and any other surface.


TO USE THE TOAST & BAGEL FUNCTIONS

We simplified toasting for more precise, consistent results with less hassle.


- 1 Place food on Wire Rack.
(Use bottom rack position for best results.)

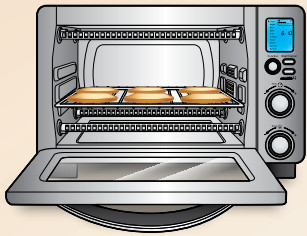


- 2 Close glass door completely.

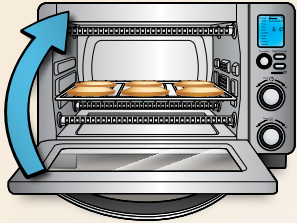 

 
- 3 Turn the Function Knob to select Toast or Bagel.

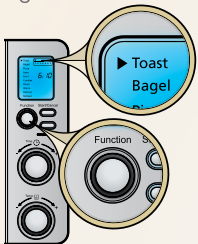

 - 4 Turn the Time Knob to select the desired shade setting.

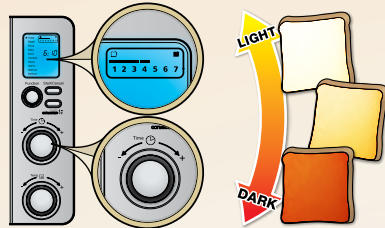

 - 5 Press the Start/Cancel Button to start the toasting process. When complete, three beeps will sound.

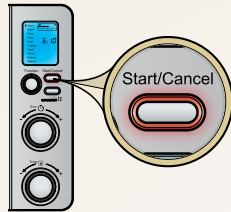


NOTE: The temperature or time is not adjustable for the Toast function.


NOTE: To turn off the oven at any time, press the Start/Cancel button (The LCD will turn off after 30 seconds)

TO USE ALL OTHER FUNCTIONS

 
- 1 Place food on Wire Rack.

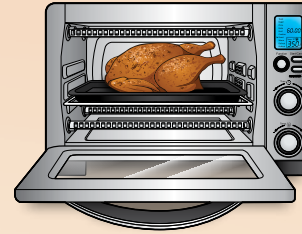

- 2 Close glass door completely.

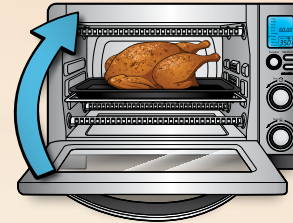 

 - 3 Turn the Function Knob to Pizza, Bake, Broil, Cookies, Roast, Warm, Defrost or Reheat. The selected function will be highlighted on the LCD.

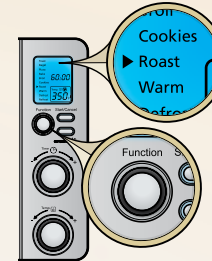


Turbo Convection Heat* will automatically activate for Pizza, Cookies, Bake and Roast functions. To de-activate this feature push the turbo button once


You may manually activate the Turbo Convection Heat for all functions except Broil, Toast and Bagel.

Follow steps 4-5 to modify preset time and temperature. Otherwise, skip to step 6.

 
- 4 Turn the Temperature Knob to select the desired temperature.

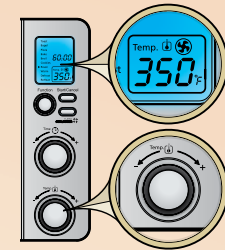

 - 5 Turn the Time Knob to select the desired cooking time.

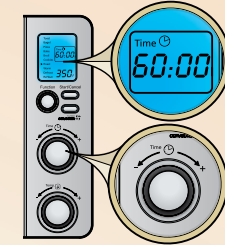

 - 6 Press the Start/Cancel Button to start the cooking process. When complete, three beeps will sound.

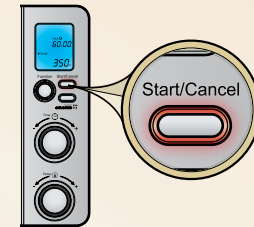

***NOTE:** Turbo Convection Heat uses a built in fan to circulate hot air in the oven chamber, cooking your food faster and more evenly. For best results, preheat oven 5-7 minutes at desired temperature with oven rack in place.

ADDITIONAL RESOURCES

For great recipes or any question you may have on your Oster® Countertop Oven please visit us at www.Oster.com or you can call us at: 1-800-334-0759.

**WARNING: Cooked food and metal rack can be very hot, handle with care. Do not leave Countertop Oven unattended.

© 2011 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431. The product you buy may differ slightly from the one shown on this carton due to continuing product development. One Year Limited Warranty – see inside for details. Sunbeam Products, Inc. is a subsidiary of Jarden Corporation (NYSE: JAH). Made in China. P.N. 154634 CBA-112211

STOP Please do not return product to the place of purchase, call us first at 1-800-334-0759.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>