

OWNER'S MANUAL



NOTICE!

FOR MISSING PARTS:

1-800-775-1965 or 1-800-366-1599

**PLEASE DO NOT
RETURN THIS UNIT TO
THE RETAIL STORE**

TROUBLESHOOTING GUIDE

| PROBLEM | SOLUTION |
|---|--|
| 1. CONDENSATION | THIS IS CAUSED BY LOWER TEMPERATURES ON OUTSIDE OF PRODUCT COMBINED WITH BODY HEAT ON INSIDE OF PRODUCT. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION. |
| 2. MILDEW | TO AVOID MILDEW, NEVER STORE YOUR PRODUCT WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD SOAP TO CLEAN. LET DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS. |
| 3. REPAIRING A TEAR | FOR SMALL TEARS USE A SELF-ADHESIVE PATCH KIT. WE RECOMMEND A REPAIR SHOP FOR LARGER TEARS. |
| 4. FAULTY ZIPPER | PRODUCTS ARE MANUFACTURED WITH ZIPPERS WHICH, IF THE ZIPPER SEPARATES, IT CAN BE FIXED BY MOVING THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORKING THE ZIPPER. IF THIS DOESN'T WORK, A REPLACEMENT ZIPPER MAY BE ORDERED FROM OUR PARTS DEPARTMENT, AND MAY BE INSTALLED BY A REPAIR SHOP IN YOUR AREA. |
| 5. FLOOR CONDENSATION (ONLY APPLICABLE ON PRODUCTS WITH FLOOR) | TO PREVENT FLOOR CONDENSATION USE A GROUND CLOTH. PLACING A GROUND CLOTH UNDER YOUR PRODUCT WILL PROLONG ITS LIFE. GROUND CLOTH SIZE SHOULD BE SLIGHTLY SMALLER THAN PRODUCT FLOOR SIZE. |

PERHAPS WE'VE MISSED SOMETHING IN OUR TROUBLESHOOTING GUIDE. FEEL FREE TO GIVE US YOUR IDEAS ON "TRICKS OF CAMPING", REPAIR PROCEDURES, FEATURES YOU'D LIKE TO SEE, OR OTHER RECOMMENDATIONS.

SEND THEM TO:

NORTHPOLE LIMITED
23 Town and Country Drive
Washington, MO 63090

A Message To Our Customers



Thank you for purchasing a quality product manufactured by NorthPole Limited. As the world leader in outdoor recreational products, we pride ourselves in delivering high quality and customer friendly products. As with any new product, it is very important to read all the information on safety, assembly/disassembly and care of your new purchase prior to usage.

As a valued customer, your satisfaction is very important to us. We at NorthPole Limited welcome your feedback and look forward to continuing our relationship with the development of new, innovative products to suit your needs.



Please visit your favorite retailer for other quality products from NorthPole Limited.


IMPORTANT: We advise you to assemble this product at least once at home before going on a trip to ensure that you have attained a satisfactory knowledge of the assembly process. Being familiar with your product will make it easier if you have to set up in the dark or under adverse conditions.

IMPORTANT SAFETY AND TIP INFORMATION

TO MAXIMIZE THE ENJOYMENT OF YOUR PRODUCT PLEASE ASSEMBLE AND USE YOUR PRODUCT AS SAFELY AS POSSIBLE. THE PURPOSE OF THE SAFETY ALERT SYMBOL  IS TO CALL YOUR ATTENTION TO POSSIBLE HAZARDS RELATING TO THE USE AND ASSEMBLY OF YOUR PRODUCT. THE PURPOSE OF THE TIP SYMBOL  IS TO CALL YOUR ATTENTION TO SUGGESTIONS THAT WILL ASSIST YOU IN THE ASSEMBLY/DISASSEMBLY PROCESS AND ENHANCE YOUR CAMPING EXPERIENCE. WHEN YOU SEE THESE SYMBOLS, PLEASE CLOSELY FOLLOW THE INFORMATION PROVIDED.

WARNING

- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This fabric is not fireproof! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.
- Do not erect this product near an open flame.
- Never use any fuel burning, oxygen consuming devices, or any device that produces fumes (including, but not limited to cooking stoves, lanterns, candles, hibachis, or heaters) in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.
- This product is not waterproof!
- Your product is water repellent, however, during heavy rain some leakage may occur. Keep objects from touching the inside, as objects may cause leakage at the point of contact.
- To prevent seam leakage (floor seams in particular), a seam sealer compound must be applied to the seams. Use recommended water repellent compounds on our product. Read the label on any product before using. Questions? Call our Customer Service number.
- Your recreational product is made from synthetic fabric that has been treated and is highly resistant to the sun's Ultraviolet (UV) light. No fabric can withstand prolonged exposure to sunlight. UV damage is not covered by the limited warranty.
- Do not spray or apply insecticide or pesticide on your product. It may damage UV resistant and/or water repellent properties of your product. Any damage caused by applying insecticide or pesticide on your product is not covered by the limited warranty.
- Our recreational products are constructed to rigid specifications. They are not made, however, for extreme weather, climates, or environments. Modification, abuse and extreme weather are some conditions that may adversely affect the structural integrity.
- Additional precautions may be necessary during inclement or "surprise" weather conditions. Here are some tips that may help during these times:
 -  Use guy lines to help secure your structure during periods of heavy winds.
 -  Storms or steady rains may collect in water pockets on the roof. This will add weight, which can weaken the overall structure causing the uprights to collapse. Maintain a watchful eye and remove any water accumulation that may occur.
- Your product must be stored dry. One of the easiest ways to damage your product is storing it while it is wet. Storing a wet tent as short as 24 hours in warm weather is likely to cause mildew on the fabric. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric coatings and are not covered by the limited warranty.
- If you must close camp in the rain, open your product and set it up to allow it to dry as soon as possible. Even when your product appears to be dry after use, it is always best to unfold and assure it is completely dry before storing. Hanging it outside or even leaving loosely clumped in your house for a few days, turning it inside and out to assure it has dried everywhere, can help prevent damage.
- This product is not machine washable. To clean product, use mild soap and let it dry thoroughly before storage.

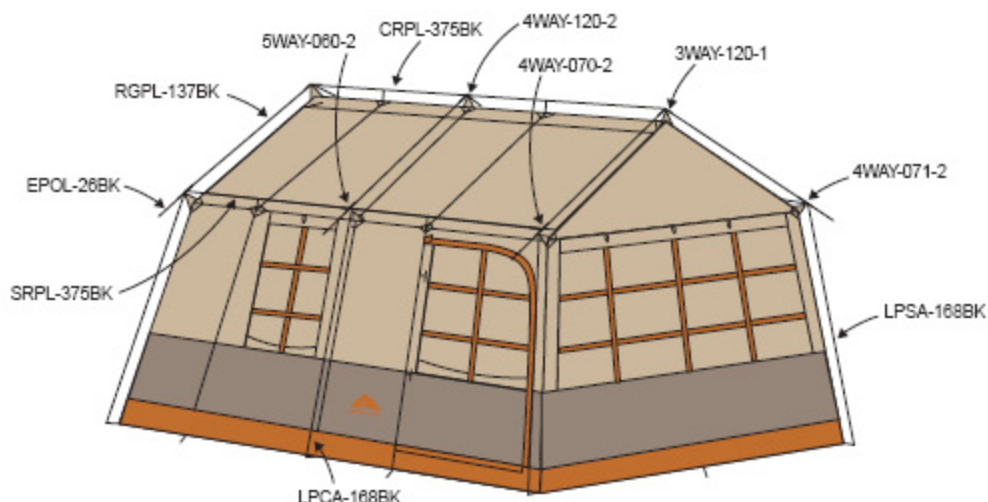

Model # WMT-1410N 3 Room Cottage Cabin 14 ft. x 10 ft. x 88 in.

| ✓ | QTY. | DESCRIPTION | PART NUMBER |
|-----|------|---|--------------|
| | | <u>FABRIC BODY</u> | |
| ___ | 1 | Tent Body | N/A |
| | | <u>POLES</u> | |
| ___ | 1 | Steel, chain-corded Center Roof Pole w/R-Springs & Hubs-black w/red dot | CRPL-375BK |
| ___ | 2 | Steel, chain-corded Side Roof Pole w/R-Spring & Hub-black w/red dot | SRPL-375BK |
| ___ | 6 | Steel, chain-corded Roof Gable Pole w/R-Spring- black w/blue dot | RGPL-137BK |
| ___ | 2 | Steel, chain-corded Center Leg Pole-black w/purple dot | LPCA-168BK |
| ___ | 4 | Steel, chain-corded side Corner Leg Pole w/R-Springs - black w/green dot | LPSA-168BK |
| ___ | 6 | Steel, chain-corded Eave Pole w/R-Spring - black w/yellow dot | EPOL-26BK |
| ___ | 1 | Fiberglass, shock-corded Pocket Pole (fits at pocket top)-black | PKPL-170CM |
| | | If you wish to order a complete set of poles, please use: | |
| ___ | 1 | Pole Set of Twenty-Two Steel&Fiberglass Poles - black | PSET-BK |
| | | <u>RAINFLY&Sun Shade: select from below</u> | |
| ___ | 1 | Rainfly w/ 4 Brass S-Hooks; center seams taped - beige/orange trim | RFLY-BGOR06 |
| ___ | 1 | Sun Shade w/2 Plastic S-Hooks: brown | SUND-T79B110 |
| | | <u>CARRY BAG</u> | |
| ___ | 1 | Carry Bag- beige/black trim | CBAG-850BG |
| | | <u>UNIVERSAL PARTS</u> | |
| ___ | 2 | 5 Way Hub- center side (one in center of each SRPL pole) | 5WAY-060-2 |
| ___ | 2 | 4 Way Hub- left side (one to left of center on each SRPL pole) | 4WAY-070-2 |
| ___ | 2 | 4 Way Hub- right side (one to right of center on each SRPL pole) | 4WAY-071-2 |
| ___ | 2 | 3 Way Hub- gable top (one on front end and one on rear end of CRPL) | 3WAY-120-1 |
| ___ | 1 | 4 Way Hub- gable middle (one in middle of CRPL pole) | 4WAY-120-2 |
| ___ | 2 | Shelf, 3 Tier | SHF3-22X10 |
| ___ | 1 | Pole Bag | PBAG-40IN |
| ___ | 1 | Stake Bag | SBAG-11IN |
| ___ | 8 | Guy Ropes; 3M | GROPE-3M |
| ___ | 2 | Guy Ropes; 2M | GROPE-2M |
| ___ | 1 | Hanging Pocket | PCKT-T67B91 |
| ___ | 2 | Cup Holder | CUPH-BK |
| | | <u>STAKES</u> | |
| ___ | 1 | Stake Set of Eighteen 7 in. steel stakes | SSET-18ST7IN |

Review your parts list above to make sure all parts listed above have been included in your package.

Please do NOT return product to store.

Call our TOLL FREE Numbers: 800-775-1965 or 800-366-1599 Monday-Friday 7am - 5pm CST

Mention your complete Model Number so that our Representative may assist you!

ASSEMBLY INSTRUCTIONS

THIS RECREATIONAL PRODUCT REQUIRES TWO ADULTS TO ASSEMBLE.

- * Unless otherwise specified all instructions will be given assuming the assembler is facing the front opening of the tent.
- * Carefully fold out your poles, using caution to prevent snapping the shock-cord. Make sure each pole segment is "seated" into the next section before flexing the pole during set-up.
- * Do not drop tent pole bag. Do not bounce tent bag on its end to remove tent, as these actions may damage the shock-cord and/or pole ends.

STEP 1: Verify Package Contents


Verify package contents by emptying contents of bag(s) and confirming all parts are included and undamaged. Do this at home before you leave on your trip.

STEP 2: Assemble Tent

A) Select a smooth level site and lay out your tent.

B) Extend all of your poles and sort into groups by style i.e. roof ridge poles, roof side poles, leg poles, eave poles, etc. This will simplify the assembly process.

C) Lay Center Roof Pole (CRPL-375BK) in the center of tent, making sure that the center hub is secure in the middle by placing R-spring in the slot on hub.

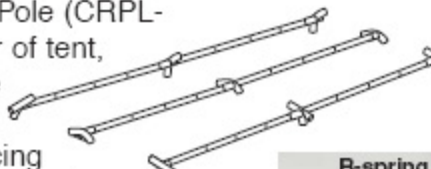


D) Attach 3 Way Hub (3WAY-120-1) on each side of the center roof pole, making sure the reds match up.




E) Lay one of the Side Roof Poles (SRPL-375BK) on each side of the center roof pole, making sure that the center hub is secure in the middle by placing R-spring in the slot on hub.

F) Attach the 4 Way Hub (4WAY-071-2) on the left side of each Side Roof Poles (SRPL-375BK), and (4WAY-070-2) to the right side of the same poles.

G) Slide Roof Gable Pole (RGPL-137BK) into the corresponding hubs by matching the blue hub to the blue pole. Repeat with all other Roof Gable Poles.

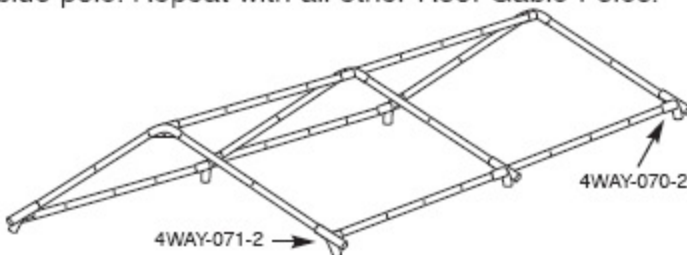


H) Position the tent body underneath the roof assembly. Hook S-hooks on tent body roof to the holes in each corresponding hub. Also connect quick clips to the poles.

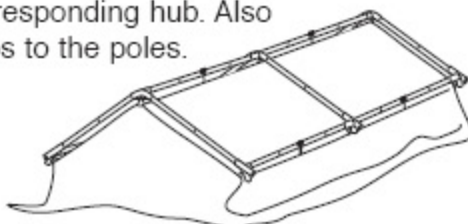


I) The Corner Leg Poles (LPSP-168BK) will insert into the hubs on all four corners with the green tape.

Insert the pin on the pin-rings at the base of the tent body into the end of each pole.

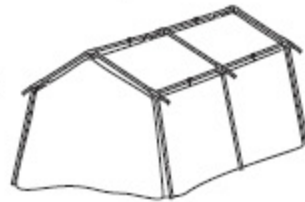

J) Take the Center Leg Poles (LPCA-168BK) and put into purple opening on hubs in the center. Insert pins into pole ends.

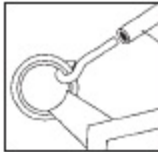

K) Take the Eave Pole (EPOL-26BK) and put into yellow taped opening on all six hubs.

STEP 3: Installing the Rainfly

A) Drape rainfly over tent.

B) Attach Eave Poles to the rainfly by placing the pole ends in the pole pockets on underside of rainfly. Use nylon fasteners on fly to secure poles. Use S-hooks on the corners and connect to the D-rings on the corner leg poles.



STEP 4: Stake Tent

A) Stake tent by driving stakes through the webbing loops around the base of tent.

B) To secure guy lines, find the guy line plastic slider and look for the portion of the line opposite the knot. Pull this portion, forming a loop (works like a slip knot.) Extend guy line to ground and stake. Repeat with remaining guy lines.



STEP 5: Add Accessories

A) Attach shelf unit to tent by taking S-hooks and attaching them to the loops inside, located at the back of tent.

B) Attach the big mesh pocket to tent by taking S-hooks and attaching them to the fabric loops inside, Located at the back of tent.

C) Attach the sun block curtain to rainfly by fastening the S-hooks to the corresponding webbing loop, located at the tri-angle patch.

CAMPERS WANT TO KNOW

How can I stay cool and dry?

Partially unzip the upper window in your tent to remove unwanted moisture and condensation from perspiring sleepers. On muggy nights, also zip open a lower window to draw cooler air through to increase air circulation.

DISASSEMBLY INSTRUCTIONS

* Make sure all windows and doors are unzipped to disassemble.

* Store all poles and stakes in their corresponding bags to prevent possible tearing or damage to fabric.

STEP 1: Remove the Stakes

Carefully remove stakes by pulling out the hook ends. Do not pull or tug at the stake loops sewn onto the tent body. Remove excess soil from the stakes and store them in stake bag.

STEP 2: Remove Rainfly

- A) Unfasten S-hooks that hold rainfly down.
- B) Take poles out from pole pocket.
- C) Fold rainfly for storage.

STEP 3: Take down Tent

- A) Remove shelves.
- B) Take the yellow eave poles out of hubs.
- C) After pulling the pin-ring from the purple poles, pull the poles out of hub and collapse poles. Repeat with the green poles.

D) Unhook the S-hooks and quick clips on the roof lines.


E) Take the blue poles out from the hubs on the roof line and collapse poles.

F) Remove the hubs on the corners and center poles.

G) Collapse roof poles with center hub attached.

STEP 4: Fold the Tent

Fold tent into a rectangular shape the same width as pole bag. Lay pole bag at one end of tent and roll tightly together, slowly squeezing air out as you go. You can roll rainfly together with tent in one step. Store tent in carry bag provided. (Following these instructions will make it easier to fit tent into bag.)

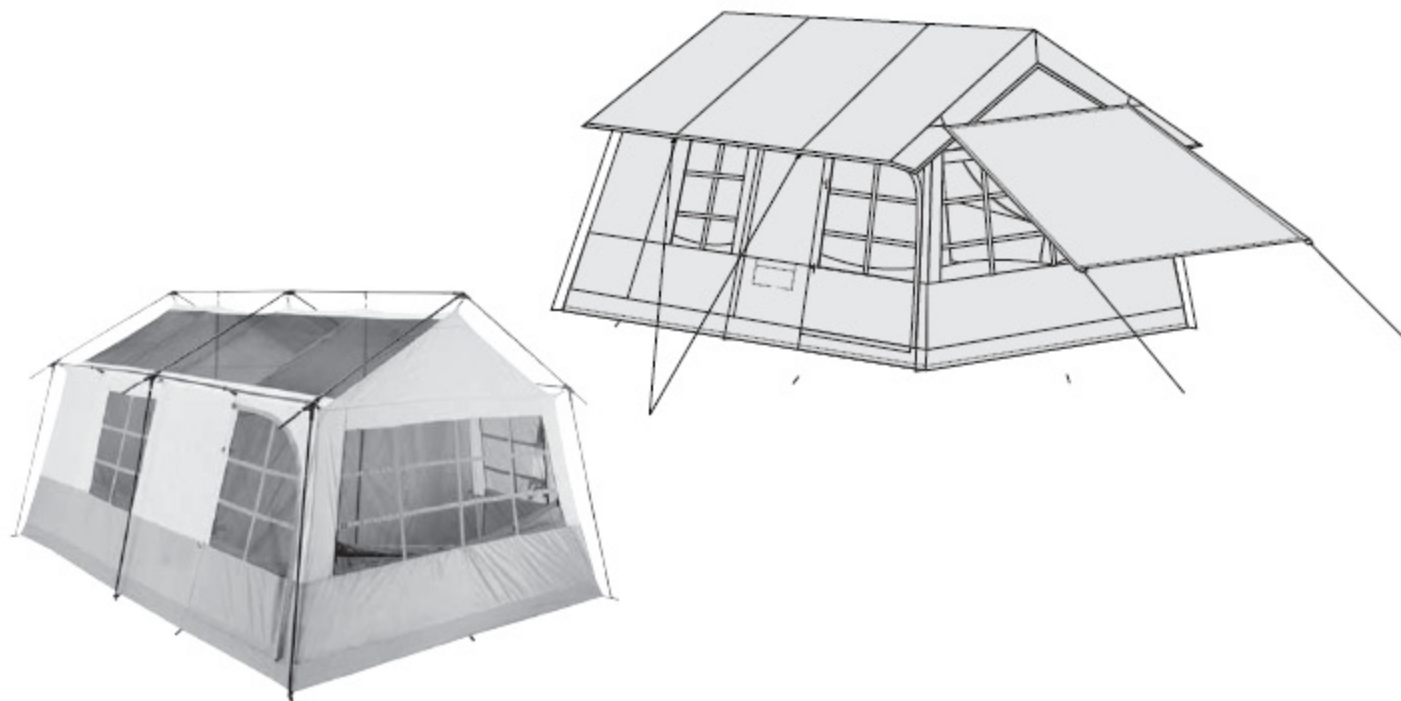

Limited 6 Month Warranty

If your product does not work properly because of a defect in materials or workmanship, NorthPole Limited will, for 6 months from the date of purchase, at its option either (a) repair our product with new or refurbished parts, or (b) replace it with a new product. The decision to repair or replace will be made by NorthPole Limited. NORTHPOLE LIMITED RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

If repair is needed during the limited warranty period, the purchaser will be required to furnish a sales receipt as proof of purchase indicating date of purchase, amount paid, and place of purchase. Product will not be covered under warranty due to damages resulting from misuse, excessive or abusive usage, and/or inclement weather conditions (i.e. wind storms, hurricanes, lightning storms, tornadoes). Acts of God resulting in damage to tent and its components are not covered under this limited warranty. In such event, the consumer assumes cost of needed parts. NorthPole Limited is not responsible for normal wear and tear, zipper exhaustion, or the natural breakdown in materials that occurs with extended use.

UNDER NO CIRCUMSTANCES SHALL NORTHPOLE LIMITED BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

NORTHPOLE LIMITED EXPRESSLY EXCLUDES ALL WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow the exclusion or limitation of implied warranties, so the above exclusion may not apply to you.

NOTWITHSTANDING ANYTHING TO THE CONTRARY, NORTHPOLE'S AGGREGATE LIABILITY, WHETHER IN CONTRACT OR TORT, SHALL BE LIMITED TO ACTUAL DIRECT MONEY DAMAGES IN AN AMOUNT NOT TO EXCEED THE PRICE PAID BY THE END-USER FOR THIS PRODUCT.

HOW TO OBTAIN WARRANTY SERVICE: Call the toll free number during the business hours mentioned below. You must have a copy of your purchase receipt from an authorized dealer as proof of purchase at time of call.

HOW TO ORDER REPLACEMENT PARTS: When ordering replacement parts, always include Model Number, Part Number, and Part Description.

Call toll free 1 (800) 775-1965 - Mon-Fri, 7:00 a.m. to 5:00 p.m. (Central Standard Time)



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>