

# Palsonic

## LCD TV COMBO TFTV1520D USER'S MANUAL

 


# Table Of Contents

<b>Important Safety Instructions</b> .....	<b>1</b>
<b>Characteristic Features</b> .....	<b>3</b>
<b>Disc Information</b> .....	<b>4</b>
<b>View of Unit</b> .....	<b>5</b>
<b>Remote Control</b> .....	<b>8</b>
<b>System Connections</b> .....	<b>11</b>
Connecting to Power Supply .....	11
Connecting to TV Antenna .....	11
Connecting to External AV Signal Source .....	12
Connecting to Earphone .....	12
Connecting to PC .....	13
<b>TV Function</b> .....	<b>14</b>
Preparations .....	14
Image Setting .....	14
Audio Setting .....	17
Timer Setting .....	18
Setup Setting .....	18
<b>NICAM Function</b> .....	<b>22</b>
<b>DVD Playback Operation</b> .....	<b>23</b>
<b>DVD System Setup</b> .....	<b>28</b>
<b>Troubleshooting</b> .....	<b>34</b>
<b>Specifications</b> .....	<b>35</b>

# Important Safety Instructions

---

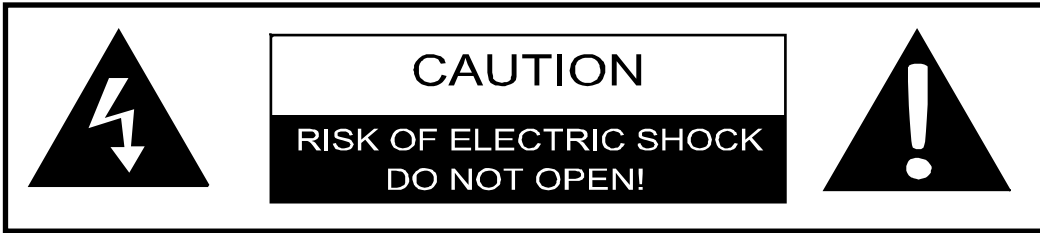

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "Dangerous Voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**CAUTION: Laser radiation when open. Do not stare into beam.**

**CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

## **CAUTION**

1. The product contains a low-power laser device. In order to ensure the safety of the laser device, do not remove any cover and attempt to repair the unit. If any service is needed, please contact the distributor or its authorised service centre.
2. To reduce the risk of electric shock, do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel. Unplug the product from the wall outlet before servicing or when it is unused for a long period of time.
3. The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorisation from the manufacturer or authorised unit.

## **WARNING**

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

## **Copyright Protection**

The product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorised by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision, Reverse engineering or disassembly is prohibited.

# Important Safety Instructions

---

## Note:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install in according to the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Read, heed and follow all instructions to ensure correct and safe installation and inter-connection of the apparatus.
10. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
11. The mains socket outlet shall be installed near the apparatus and the mains plug shall remain readily operable.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
13. Only use attachments/accessories specified by the manufacturer.
14. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
15. Unplug this apparatus during lightning storms or when unused for long periods of time.
16. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
17. The apparatus shall be connected to a mains socket outlet with a protective earthing connection.

### IMPORTANT FOR LASER PRODUCTS

#### 1. CLASS 1 LASER PRODUCT

2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel.

**Note: Do not touch the colour TFT LCD screen by hand directly.**

# Characteristic Features

---

This product incorporates DVD player, LCD display and TV receiver in one system.

## Multiple Mode

TV mode

COMPOSITE mode

S-VIDEO mode

VGA mode

DVD mode

## High Quality Property

### **High Resolution**

Adopt an MPEG2 decoding format to achieve horizontal resolution more than 500 lines.

### **LCD (Liquid Crystal Display)**

Designed with colour TFT liquid crystal display clearly shows the data.

### **Stereo Amplifier**

Built-in two speakers provide high quality sound.

### **AV and VGA Input**

Can be connected to external audio and video signal source and PC.

### **Special Function**

Support sleep time setting function and favourite channel setting function, etc.

### **Multi Audio and Multi-video modes**

Support multi-audio and multi-video modes, provides more selecting.

### **Auto TV Searching Function**

Can be connected to the TV antenna, supports Auto and manual TV programs searching function.

### **NICAM Function**

Supports the NICAM function. According to the broadcasting programs, you can choose the corresponding soundtrack

## Advanced Playing Features

### **Compatibility**

DVD, CD, and JPEG discs compatible.

### **All Playback Functions**

Fast forward and reverse, slow playback and repeat playback

### **Special Playback**



Support multi-angle, multi-language and multi-subtitle playback.

**NOTE:** It is normal for a TFT screen to experience some light or dark spots appearing on the LCD screen.

# Disc Information

---

## Discs Formats Supported By This Player

	DISC LOGO	CONTENTS	SIZE	MAXIMUM TIME
DVD		Audio+Video (active picture)	12cm	133min(SS-SL)
				242min(SS-DL)
				266min(DS-SL)
				484min(DS-DL)
CD		Audio	12cm	74min
JPEG		Still high resolution	12cm	

- ◆ The operating method of some DVD discs is specified by the software maker. Please refer to the instruction manual of the disc.

## About Disc Terms

### Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

### Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching. But some discs may not have a recording chapter.

 
### Track

A segment of picture or music on a CD. Each track is numbered for searching.

# Front Panel

---

## Front and Side Panel

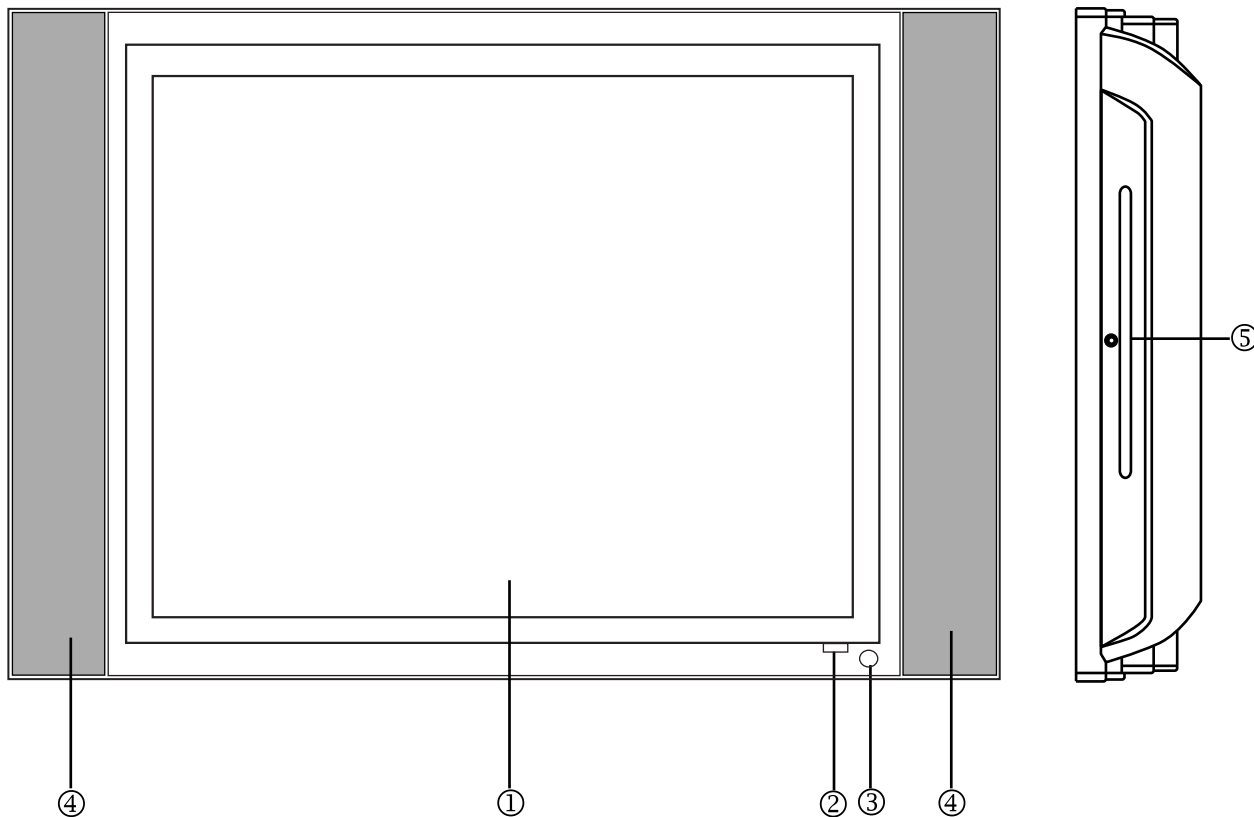

### 1. 15" colour TFT screen

15" colour TFT screen clearly shows the data.

### 2. Power Indicator

In normal playback status, it turns green; in standby mode, it turns red.

### 3. Remote sensor

Remote sensor window for the remote control.

### 4. Speakers

Two speakers output high quality stereo sound.

 
### 5. Disc Tray Slot

Used to load disc.

# Top Panel

---

## Top Panel Drawing

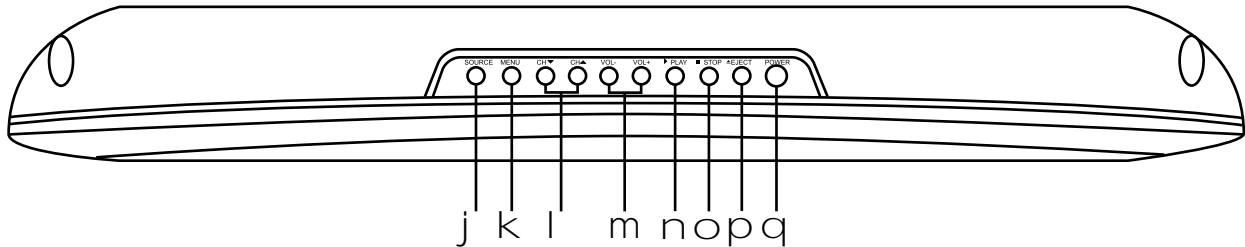

### 1. Input button

Press to modes among TV, COMPOSITE, S-VIDEO, VGA and DVD.  
In setup menu, the same function as OK button.

### 2. MENU button

Press to enter or return to the previous setup menu.

### 3. CH ▼/▲ button

While in TV mode, press to select channels  
In setup menu, the same function as ▼, ▲ direction button.

### 4. VOL ►/◄ button

In TV mode, press to decrease or increase the volume in DVD mode.  
In setup mode, the same function as ►, ◄ direction button.

### 5. ► PLAY button

Press to play the disc in DVD mode.

### 6. ■ Stop

Press to stop playback in DVD mode.

### 7. EJECT button

Press to eject the disc out.

 
### 8. POWER button

Press to enter or exit standby mode.



# Rear Panel

## Rear Panel Drawing

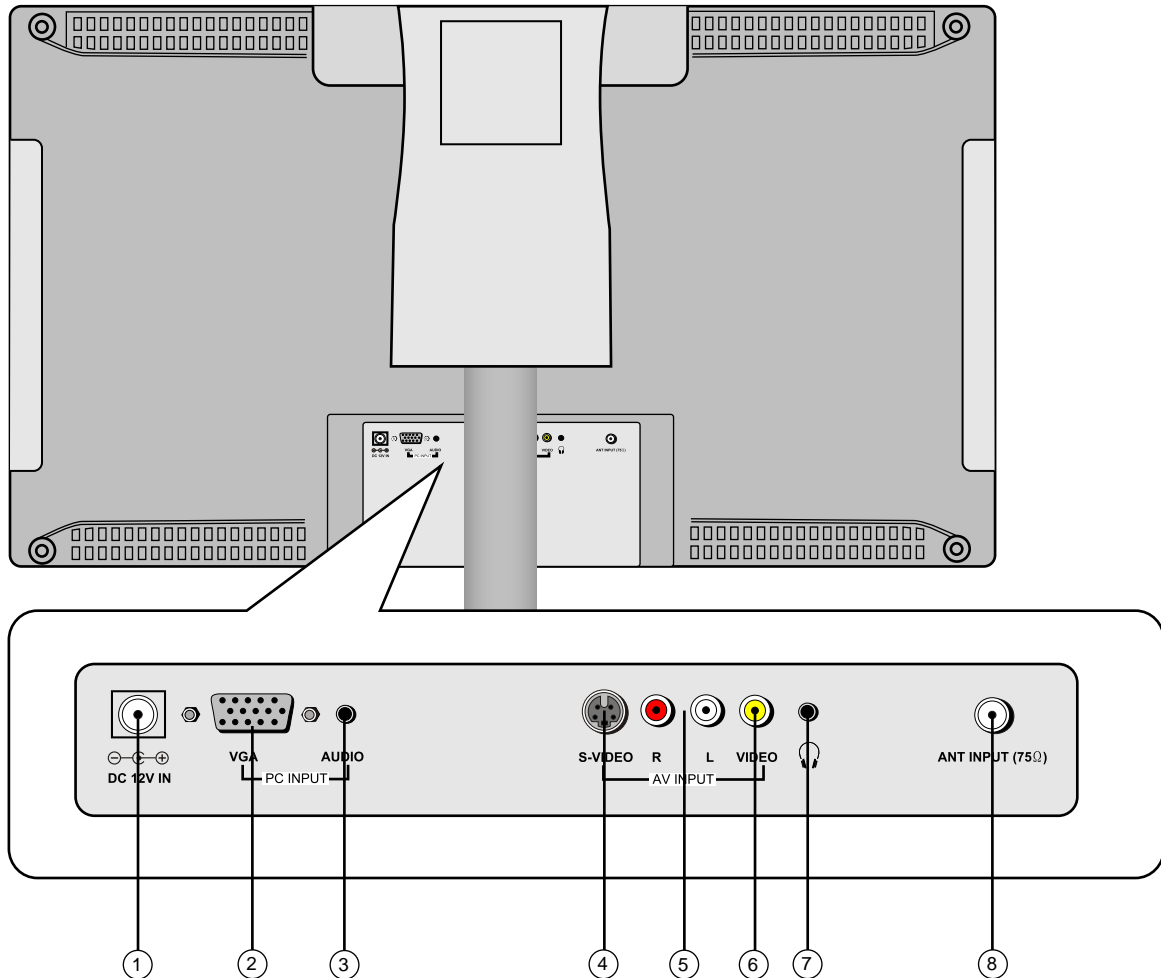

### 1. DC 12V Power Supply Cord

Connect the power supply adaptor or the car adaptor

### 2. VGA Input Jack

Connected to the VGA output jack on a personal computer.

### 3. PC Audio Input Jack

Connected to the PC audio output jack.

### 4. S-Video Input Jack

Connected to the S-VIDEO input in S-VIDEO.

### 5. L/R Audio Input Jacks

Connected to L/R audio input in both S-VIDEO or COMPOSITE mode.

### 6. Video Input Jack

Connected to the VIDEO input in the COMPOSITE mode.

### 7. Earphone Jack

When connected to earphone, the internal speakers will automatically turn off.

 
### 8. TV Signal Input Jack

Connected for the external TV signal input.


# Remote Control

## Preparation of Remote Control


Refer to the drawing and remove the empty battery receptacle.

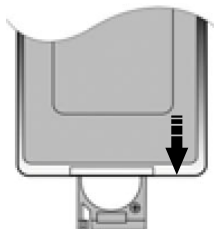

 Insert the battery into the receptacle. Make sure the polarity matches the marks inside the component.

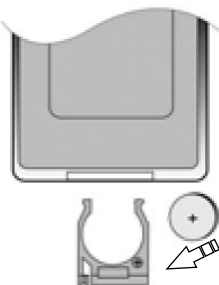

 
Insert the receptacle into the remote control.

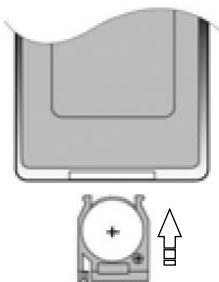

- Under normal use the battery will last for six months.
- Take out battery when the remote is not in use for a long time.

## Using of Remote Control

 Point the remote control unit from no more than about 7m from the remote control sensor and within about 60 degrees of the front of the unit.

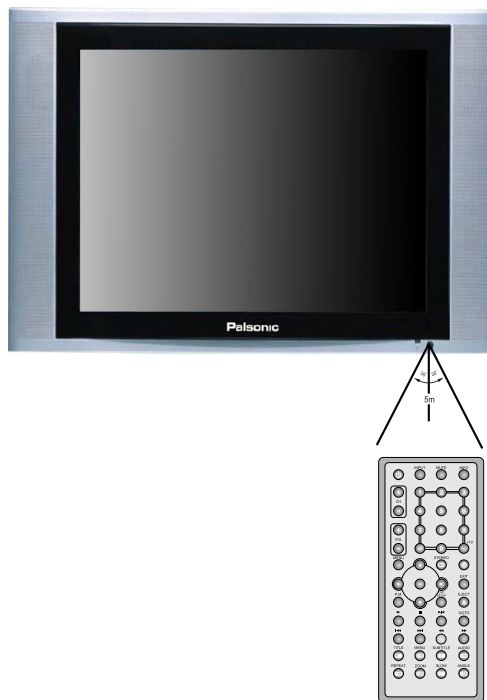


- The operating distance may vary depending to the brightness around.

### Notes:

 - Do not point bright lights directly at the remote control sensor.
- Do not place objects between the remote control unit and the remote control sensor.
- Do not use this remote control unit while simultaneously operating the remote control unit of any other equipment.

# Remote Control

## Remote Control Drawing

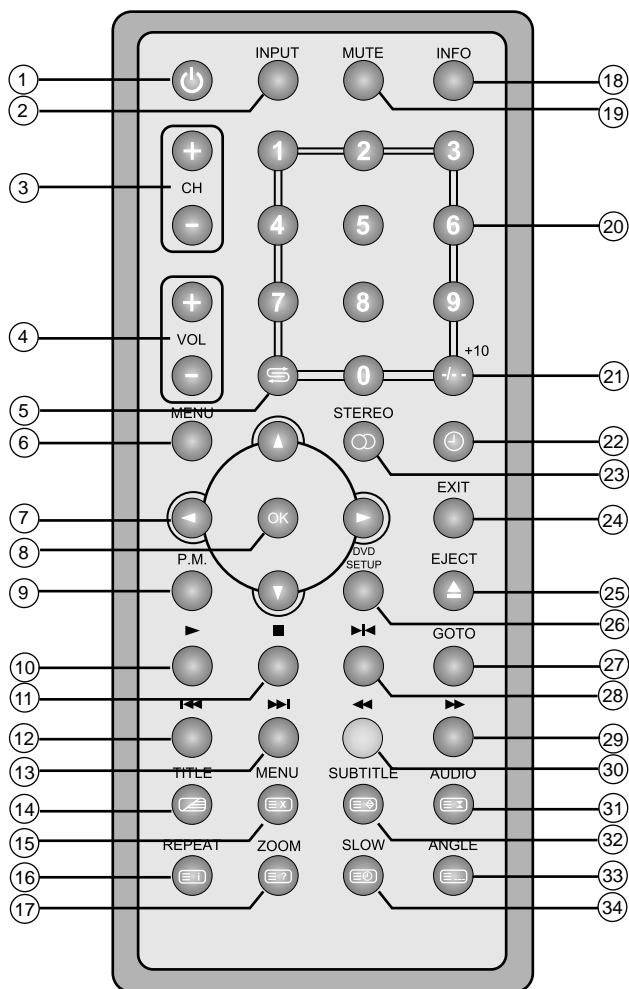

### 1. POWER button

Press to enter to or exit the standby mode.

### 2. Input button

Press to select mode among TV, COMPOSITE, S-VIDEO, VGA, and DVD.

### 3. CH+/- button

When in TV mode press to select channel.

### 4. VOL +/-

Press to increase or decrease the speaker volume level.

### 5. MUTE button

When in TV mode, press to return to the channel previously viewed.

### 6. +10 button

Select track number greater than 9, in DVD mode.

### 7. Direction buttons (◀ ▶ ▲ ▼)

In the setup menu, press the ▲ ▼ button to select a desired item and press ▶ button to adjust or set.

### 8. OK button

Press to confirm the selection.

### 9. P.M. button

Press to shift the screen picture modes among User, Standard, Soft, Bright and Shine.

### 10. ▶ Play button

Press to play a disc when in the DVD mode.

### 11. ■ Stop

Press to stop disc playback when in DVD mode.

### 12. ⏮ Skip

Press to skip to the previous chapter/track when in DVD mode.

Under Teletext mode, it's the teletext colour button.

### 13. ⏭ Next Skip

Press to skip to the next chapter/track when in DVD mode.

Under Teletext mode, it's the teletext colour button.

### 14. TITLE button

When a DVD disc is playing, press the TITLE button to go the title menu and display disc contents.

Under TV, COMPOSITE or S-VIDEO mode, press display/close the teletext.

### 15. MENU button

Press to enter disc menu when in DVD mode.

Under Teletext mode, press to disable teletext display and press again to resume.

### 16. REPEAT button

Press to repeat a chapter, track, title, or all program content when in DVD mode.

Under Teletext mode, press to display index page.

# Remote Control

---

## 17. ZOOM button

Press to activate zoom function.

Under Teletext mode, press once to display the concealed information, such as solution of riddles or puzzles; press again to resume riddles information from display.

## 18. INFO. button

Press to display reference information of the current program.

## 19. MUTE button

Press to turn on or off speaker output.

## 20. 0~9 number buttons

Press to select numbers such as TV Channel.

## 21. -/--/+10 buttons

When in TV mode, press to select 1-digit or 2-digit channel number and then use the number button to select channel.

When in DVD mode, press to select numbers greater than 10.

## 22. ☹ button

This feature allows you to set up sleep time when in TV mode. Press the button and then the "Sleep Time" window will appear on the left top of the screen. Then press the OK button to enter setup and the ▲ ▼ button to select the sleep time "Off" to close this function.

## 23. STEREO button

Press to shift sound track when in TV mode.

## 24. EXIT button

Press to exit from menu setup.

## 25. Eject button

Press to eject the disc from the unit.

## 26. DVD SETUP button

Press to open DVD setup menu when in DVD mode.

## 27. GOTO button

Press to select the desired disc starting time, title or chapter when in DVD mode.

## 28. ⏮ button

Press pause playback or start step frame by frame playback.

## 29. ⏭ button

Press to search forward when in DVD mode.

## 30. ⏪ button

Press to search backward when in DVD mode.

Under Teletext mode, it's the teletext colour button.

## 31. AUDIO button

Press to select audio language or audio track when in DVD mode.

Under Teletext mode, press to freeze the current page and press again to resume.

## 32. SUBTITLE button

Press to select alternate subtitle languages during playback of a multiple language DVD disc when in DVD mode. Under Teletext mode, press button first time to double the size of teletext letters in the upper half of the screen, second to double the size of the teletext letters in the lower half of the screen and third to resume normal status.

## 32. ANGLE button

Press to access various camera angles (if the DVD disc contains multiple camera angles) when in DVD mode.

Under Teletext mode, press to select four groups 3-digit numbers that displayed in different colours at the bottom of the screen. Press the colour buttons on the remote control to select, then use the number buttons to input the corresponding number to display the page.

Repeat the above procedures for each page to be stored, using a different colour button accordingly each time.

## 34. SLOW button

Press to activate slow playback function when in DVD mode.

Under TV mode, press to display the real clock and press the EXIT button to exit.

 
# System Connections

---

- Do not connect the power cord until all other connections have been made.
- Ensure that you observe the colour cord when connecting audio and video cables.


## Connecting to Power Supply

Power is supplied through the provided appropriate power adapter, one end is connected to the DC 12V IN jack on the rear panel of the unit, the other end to the wall AC outlet.

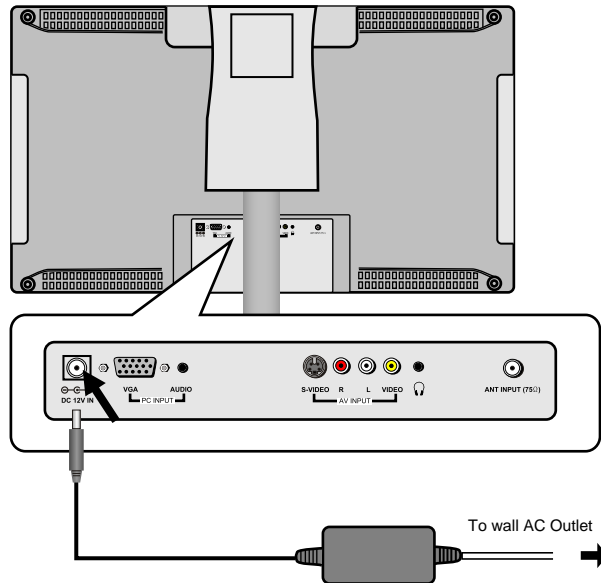

## Connecting to TV Antenna

 This unit can be connected to the TV signal input source via the TV jack on the rear panel.

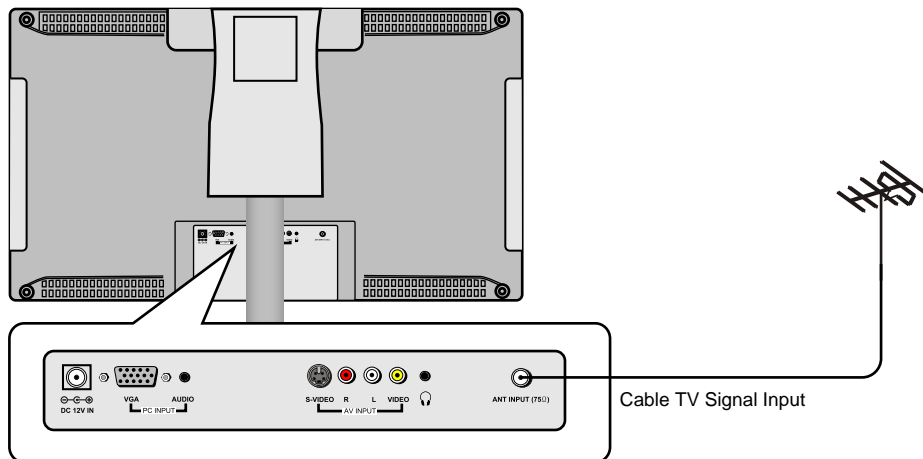


After connection, turn on the power of the unit. Then press the INPUT button to shift to TV mode.

# System Connections
 
## Connecting to External AV Signal Source

Use the audio and video cable to connect the AV input jacks on the rear panel of the unit to the external AV signal source. Use the S-VIDEO cable to connect the S-VIDEO input jack on the rear panel of the unit to the external AV signal source.

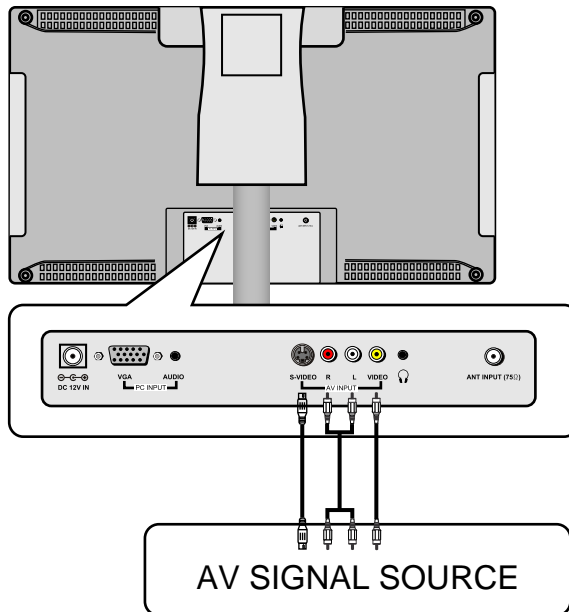


After connection, turn on the power of the unit and the external AV signal source and then press the INPUT button to shift to COMPOSITE or S-VIDEO mode.

**Note:** the L/R audio input jack scan be used in the both COMPOSITE and S-VIDEO modes.

## Connecting to Earphones

 This unit can be connected to an earphone for listening music privately. See the below figure for details:

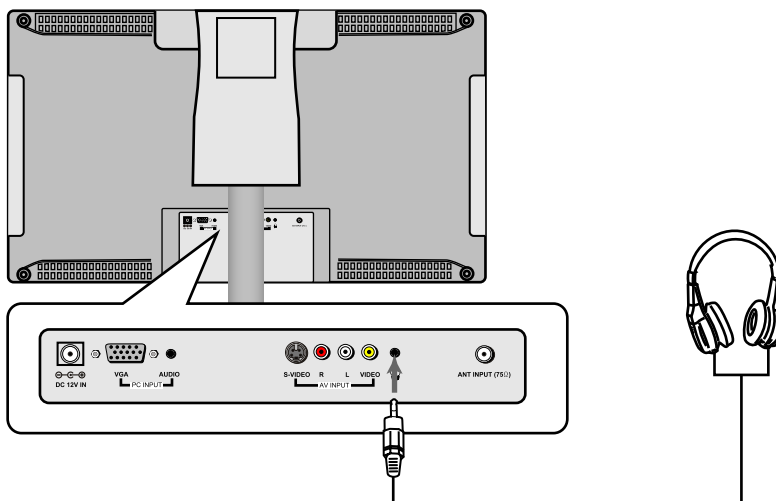

After connecting to the earphone, the internal speakers output will turn off automatically.

**Note:** Excessively loud volume could damage your hearing. So turn down the volume before you connect the headphones, and then raise the volume to comfortable level.


# System Connections

 ---

## Connecting to PC

The unit can be connected to PC (person computer) via the VGA cable. Follow the steps and the figure below to connect.

1. Connect one end of the VGA cable to the VGA input jack on the rear panel and the other end to the PC.
2. Connect one end of the audio cables to the PC audio input jack on the rear panel and the other end to the PC audio output jack.
3. Set the PC's resolution at 1024x768@60Hz.

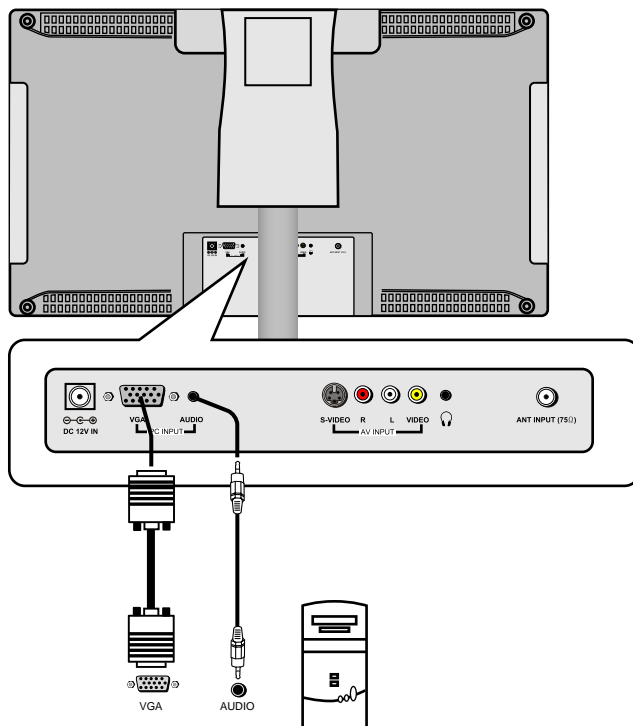

After connection, turn on the unit and the PC and then press the INPUT button to shift to VGA mode.

# TV Function

**NOTE:** In other mode, you can refer to the following instructions in TV mode to go on with some settings. Only when there are signals, the menus can appear and be set.

## Preparation

 
1. After connection, press the POWER button to turn on the power. (If it is turned on, the power indicator is blue.)
2. Press the INPUT button to shift to TV mode. You can go on with the following operations.

## Image Setting

**Note:** This item is only available when there is signal input.


Press the **MENU** button once to enter the setup menu. Press the **▲ ▼** button to select **Image** and press the OK button to enter the menu shown on the right.

In the **Image** setup menu, press the **▲ ▼** button to select the desired item. Press the MENU button to return to the previous menu.

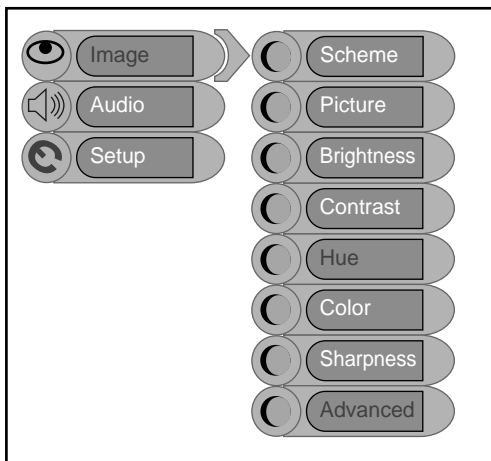


### Scheme Setup

 Press the **▲ ▼** button to select Scheme and press the OK button to enter. Press the **▲ ▼** button to select the desired item and press the OK button to confirm your selection. Press the MENU button to return to the previous menu.

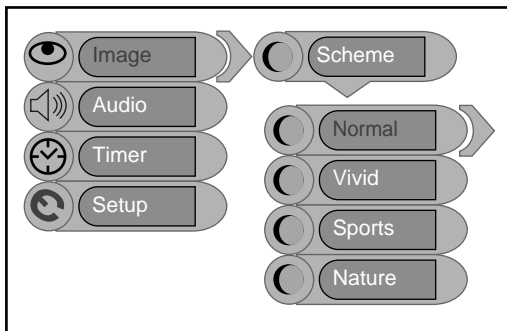

### Picture Setup

 Press the **▲ ▼** button to select **Picture** and press the OK button to enter. Press the **▲ ▼** button to select the desired item and press the OK button to confirm your selection. Press the MENU button to return to the previous menu.

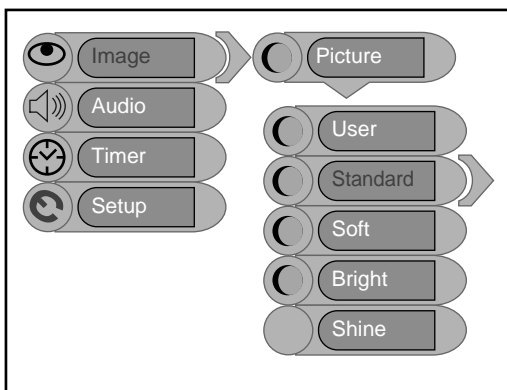




# TV Function

## Brightness Setup

 Press the ▲ ▼ button to select **Brightness** and press the ◀ ▶ button to adjust the value . Press the MENU button to return to the previous menu.

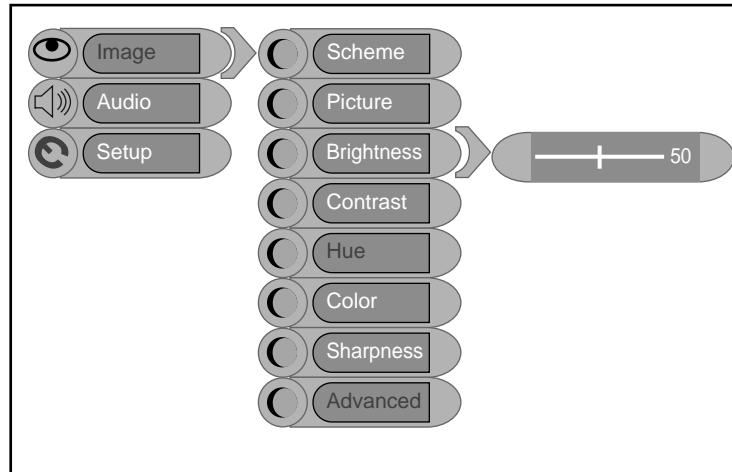

## Contrast Setup

Press the ▲ ▼ button to select **Contrast** and press the ◀ ▶ button to adjust the value. Press the MENU button to return to the previous menu.

## Hue Setup

Press the ▲ ▼ button to select **Hue** and press the ◀ ▶ button to adjust the value. Press the MENU button to return to the previous menu.

**Note: This item is only available under NTSC TV signal mode.**

## Colour Setup

Press the ▲ ▼ button to select **Colour** and press the ◀ ▶ button to adjust the value. Press the MENU button to return to the previous menu.

## Sharpness Setup

 
Press the ▲ ▼ button to select **Sharpness** and press the ◀ ▶ button to adjust the value. Press the MENU button to return to the previous menu.

## Advanced Setup

Press the ▲ ▼ button to select **Advanced** and press the OK button to enter.

In the menu, press the ▲ ▼ ◀ ▶ direction button to move the image. Press the MENU button to return to the previous menu.

**Note: This item is only available in DVD and VGA modes.**

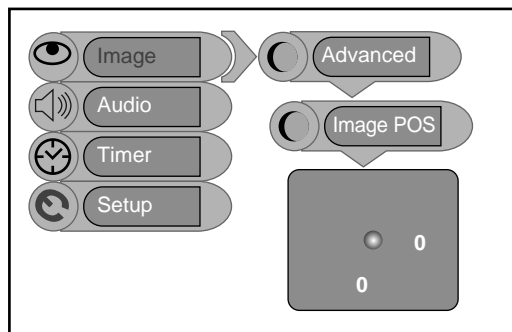


# TV Function

---

When the VGA signal is connected to the unit, the Advanced setup menu is shown below:

 Press the "▲▼" button to select the desired item and press the "ENTER" button to enter it's setup menu. Press the "MENU" button to return to the previous menu.

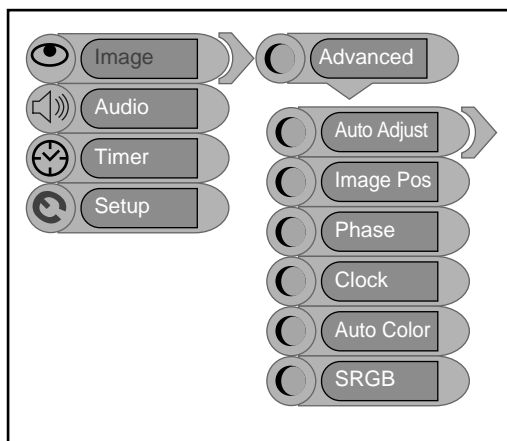

## Auto Adjust:

If the monitor is not clear, you should carry out "Auto Adjust".

Press the "▲▼" button to select "Auto Adjust" and press the "ENTER" button to enter it's menu. Press the "▲▼" button to select "Yes" to activate this function or "No" to cancel. Press the "MENU" button to return to the previous menu.

## Image Pos:

Press the "▲▼" button to select "Image Pos" and press the "ENTER" button to enter it's menu. Within the menu, press the "▲▼◀▶" button to move the image. Press the "MENU" button to return to the previous menu.

## Phase:

Press the "▲▼" button to select "Phase". Press the "◀▶" button to adjust the value. Press the "MENU" button to return to the previous menu.

## Clock:

Press the "▲▼" button to select "Clock" and press the "ENTER" button to enter it's menu. Press the "▶◀" button to adjust the value. Press the "MENU" button to return to the previous menu.

## Auto Color:

Press the "▲▼" button to select "Auto Color" and press the "ENTER" button to activate this function. Press the "MENU" button to return to the previous menu.

## sRGB :

 
Press the "▲▼" button to select "sRGB" and press the "ENTER" button to enter it's menu. Press the "▲▼" button to select "On" to activate this function or "Off" to cancel. Press the "MENU" button to return to the previous menu.

# TV Function

## Audio Setting

Press the MENU button once to enter the setup menu. Press the ▲ ▼ button to select **Audio** and press the OK button to enter the menu shown on the right.

In the **Audio** setup menu, press the ▲ ▼ button to select the desired item. Press the MENU button to return to the previous menu.

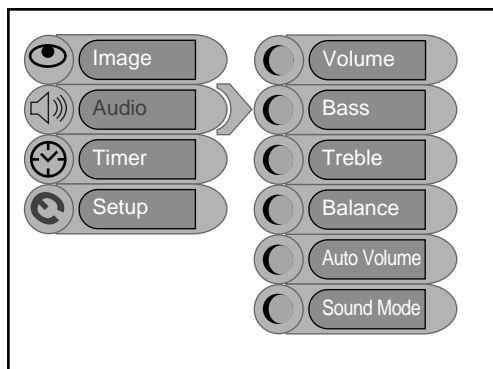

### Volume Setup

Press the ▲ ▼ button to select **Volume** and press the ◀ ▶ button to adjust the level. Press the MENU button to return to the previous menu.

### Bass Setup

Press the ▲ ▼ button to select **Bass** and press the ◀ ▶ button to adjust the level. Press the MENU button to return to the previous menu.

### Treble Setup

Press the ▲ ▼ button to select **Treble** and press the ◀ ▶ button to adjust the level. Press the MENU button to return to the previous menu.

### Balance Setup

 
Press the ▲ ▼ button to select **Balance** and press the ◀ ▶ button to adjust the level. Press the MENU button to return to the previous menu.

### Auto Volume Setup

Press the ▲ ▼ button to select **Auto Volume** and press the OK button to access the menu. Press the ▲ ▼ button to select "On" or "Off" and press the OK button to confirm. Press the MENU button to return to the previous menu.

### Sound Mode Setup

Press the ▲ ▼ button to select **Sound Mode** and press the OK button to enter. Press the ▲ ▼ button to select the desired item and then press the OK button to confirm your selection. Press the MENU button to return to the previous menu.

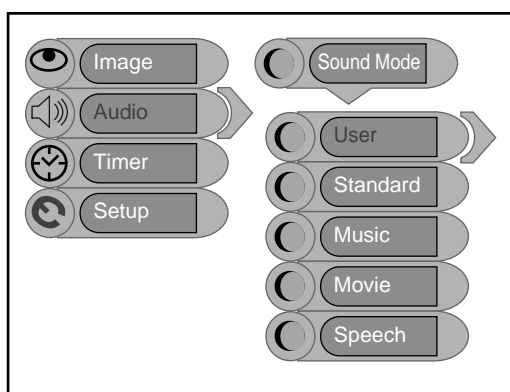


# TV Function

## Timer Setting

Press the MENU button once to enter the setup menu. Press the ▲ ▼ button to select Timer and press the OK button to enter the menu shown on the right.

 
In the **Timer** setup menu, press the ▲ ▼ button to select Off, 15Min, 30Min, 45Min, 60Min, 75Min, 90Min, 105Min or 120Min. Press the MENU button to return to the previous menu.

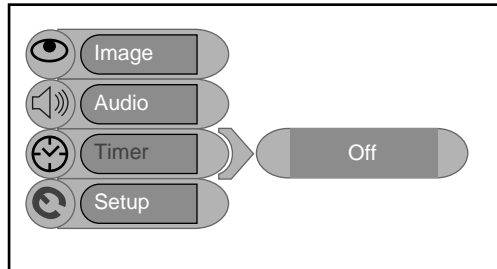

## Setup Setting


Press the MENU button once to enter the setup menu. Press the ▲ ▼ button to select **Setup** and press the OK button to enter the menu shown on the right.

 In the **Setup** menu, press the ▲ ▼ button to select the desired item. Press the MENU button to return to the previous menu.

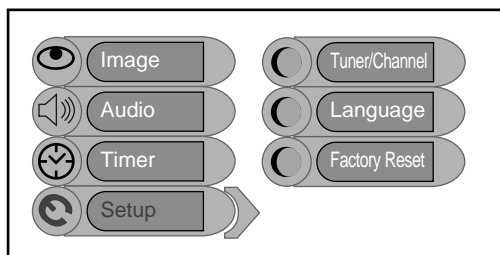

## Tuner/Channel

 
Press the ▲ ▼ button to select the **Tuner/Channel** and press the OK button to enter the menu shown on the right. Press the ▲ ▼ button to select the desired item. Press the MENU button to return to the previous menu.

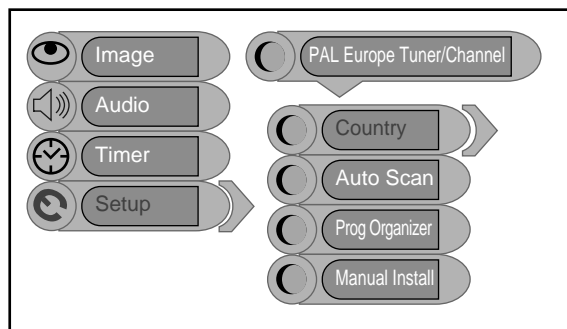

# TV Function


## Country

 Press the ▲▼ button to select the **Country** and press the OK button to enter the menu shown on the right. Press the ▲▼ button to select the desired item. Press the MENU button to return to the previous menu.

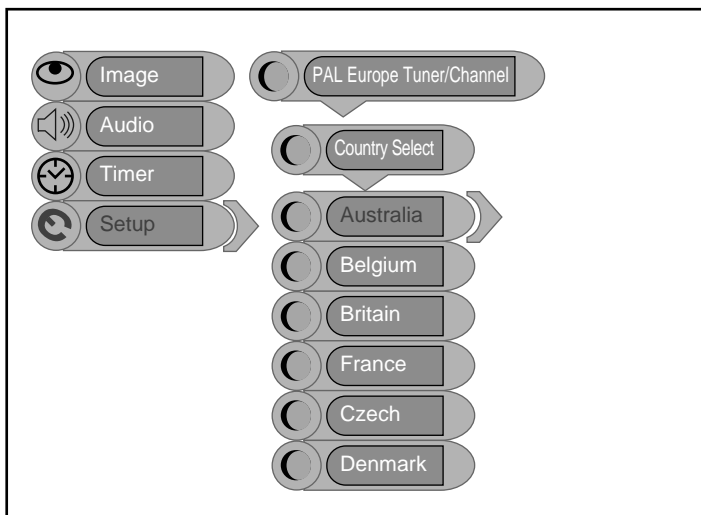

## Auto Scan

 Press the ▲▼ button to select the **Auto Scan** and press the OK button to start auto scan. The screen will display shown below:

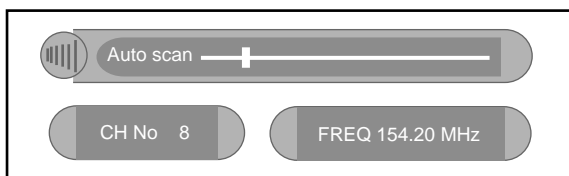


Auto scan will take a few minutes, when the tuning operation completes the unit will exit and memorise the programs by sequence automatically.

During tuning, press the MENU button to exit the auto scan mode

## Prog Organizer

 Press the ▲▼ button to select the **Prog Organizer** and press the OK button to enter the menu shown on the right.

In the **Prog Organizer** setup menu, press the ▲▼ button to select the desired item. Press the MENU button to return to the previous menu.

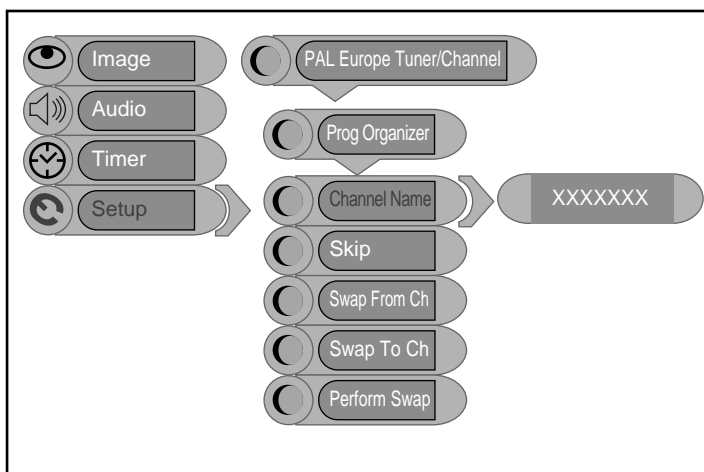

# TV Function

## Channel Name

Press the ▲ ▼ button to select the **Channel Name** and press the OK button to enter. Then press the ▲ ▼ button to select letters or press the number button to input numbers. Press the MENU button to return to the previous menu.

## Skip

Press the ▲ ▼ button to select **Skip** and press the OK button to activate or cancel this function. Press the MENU button to return to the previous menu.

 
## Swap

Press the ▲ ▼ button to select **Swap from Ch** and press the OK button to enter. Press the number buttons to select program number. Repeat the above operations to **Swap To Ch**. Then Press the ▲ ▼ button to select **Perform Swap** and press the OK button to confirm.

## Manual Install

Press the ▲ ▼ button to select the Manual Install and press the OK button to enter the menu shown on the right.

In the **Manual Install** setup menu, press the ▲ ▼ button to select the desired item. Press the MENU button to return to the previous menu.

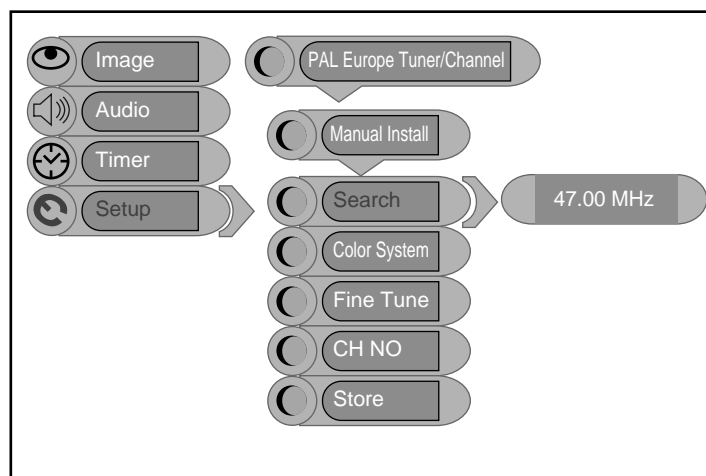

## Search

Press the ▲ ▼ button to select **Search** and press the ► or ◀ to start searching forward or backward. Press the MENU button to return to the previous menu.

## Colour System

Press the ▲ ▼ button to select **Colour System** and press the OK button to enter. Press the MENU button to return to the previous menu.

## Fine Tune

Press the ▲ ▼ button to select **Fine Tune** and press the OK button to enter. Press the ► or ◀ controls to start fine tuning forward or backward. Press the MENU button to return to the previous menu.

This feature allows for minor adjustments to the integrated electronic tuner's ability to tune in weak broadcast signals or where applicable solve minor irregularities in cable channel tuning parameters.

# TV Function

---

## CH NO

Press the ▲ ▼ button to select **CH NO** and press the OK button to enter. Press the number buttons to enter the channel number. Press the button to return to the previous menu.

 
## Store

Press the ▲ ▼ button to select **Store** and press the OK button to store the above operations.

**Note: The "CH NO" and "Store" items only function when the program is searched out.**


## Language

Press the ▲ ▼ button to select the **Language**, press the OK button to enter the setup, press the ▲ ▼ button to select item. Press the MENU button to return to the previous menu.

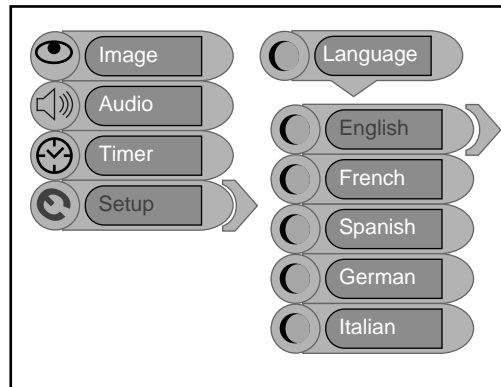

## Factory Reset

 Press the ▲ ▼ button to select the **Factory Reset** and press the OK button to enter. Press the ▲ ▼ button to select "Yes" or "No". Select "Yes" and press the OK button to reset all settings to default status; select "No" and press the OK button to cancel factory reset and it will return to the previous menu. Or press the MENU button to return to the previous menu.

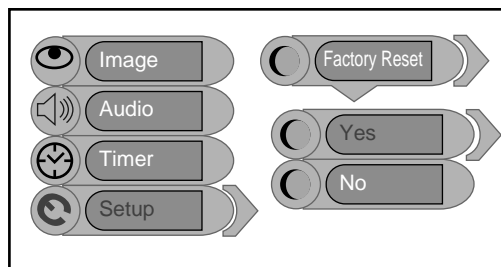

# NICAM Function

---

The unit support NICAM function under TV mode.

## Under NICAM TV broadcast:

1. When receiving stereo audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between **Nicam Stereo** and **Mono** and the screen will appear corresponding display as shown below:



2. When receiving bilingual audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks among **Nicam I**, **Nicam II**, **Nicam I+II** and **Mono** and the screen will appear corresponding display as shown below:



3. When receiving mono audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between **Nicam Mono** and **Mono** and the screen will appear corresponding display as shown below:



## Under A2 TV broadcast:

 
1. When receiving stereo audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks between **Stereo** and **Mono** and the screen will appear corresponding display as shown below:



2. When receiving bilingual audio signals, press the STEREO/AUDIO button on the remote control repeatedly to shift the sound tracks among **I**, **II** and **I+II** and the screen will appear corresponding display as shown below:



3. When receiving mono audio signals, press the STEREO/AUDIO button on the remote control to display sound track **Mono** on the screen.





# DVD Playback Operation

 
---

## Preparation:

After connections, turn on the unit and select the relevant video input before playback.

## Disc Loading Steps:

1. Press the POWER button to turn on the power. Press the INPUT button and select DVD, press the OK button to confirm and shift to DVD mode.
2. Holding the disc with its printed side outward vertically to the disc tray. (Referring to the below picture.)
3. Slightly put the disc into the disc tray.
4. As disc is automatically taken in the disc tray fully, the player will search a disc and play it automatically in DVD mode.

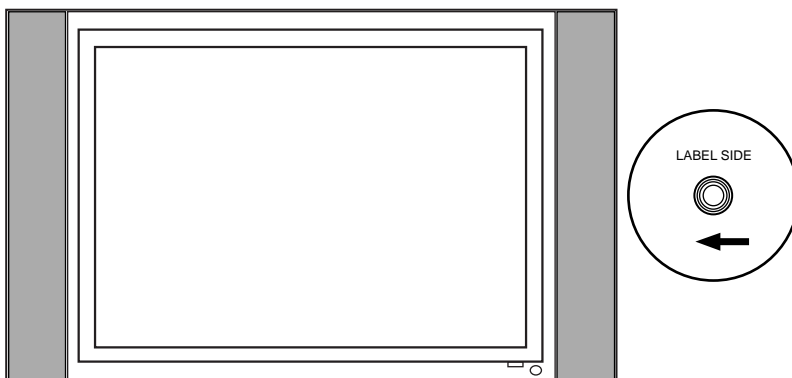

**Warning:** Do not play poor quality discs that may damage the player's lens.

## DVD Playback

### Region Code

DVD players and discs are coded by region. These regional codes must match the played discs. If the codes don't match, the disc cannot be played. This player's default code is region 4.

### Play

Press the PLAY button to start playback. Press the STOP button once on the remote control to stop playback, and press the PLAY button again to resume playback.

### Stop

Press the ■ STOP button once to stop playback and press the ► PLAY button to resume normal playback. Press this button twice repeatedly to stop playback completely.

# DVD Playback Operation

---

## Pause

Press the ►► PAUSE button once to pause the playback; press it repeatedly to start step-by-step playback. Press the ► PLAY button to resume normal playback.

## Previous ◀◀ and ▶▶ Next

Press the ▶▶ button to go to the next chapter. Press the ◀◀ button once to return to the beginning of the current chapter or track; press it twice to go to the previous chapter.

## Fast Playback

Press the ◀◀ or ▶▶ FWD/REV SCAN button on the remote control to activate fast backward or forward playback.

## ZOOM

During DVD disc playback, press the ZOOM button on the remote control to realise several zoom effects.

## SLOW

During DVD disc playback, press the SLOW button on the remote control to start slow playback. During slow playback, press the PLAY button to resume normal playback.

## Repeat

Use the REPEAT button repeatedly to repeat a chapter, title or all.

◆ Some discs do not support the repeat function.

## Menu

Normally there is a selecting menu for DVD discs. You can press the MENU button (under DVD mode) to enter the menu, and use the direction buttons to highlight an item. Then press the OK button to confirm.

## Title & Chapter

Normally there are several titles in a DVD disc, and several chapters (sections) in a title. You can select any title or chapter quickly by entering the relevant number.

## Language (Audio)

There can be up to 8 audio languages on a DVD disc. When you play a multi-language DVD disc you can use press the AUDIO button on the remote control to select a language.

## Subtitle

The DVD player can support multiple kinds of subtitles. When you play a multi-subtitle disc you can press the SUBTITLE button on the remote control to select different subtitles.

# DVD Playback Operation

---

## GOTO

During DVD disc playback, press the GOTO button on the remote control once, there will be a menu displayed on the screen. You can set or select items for your preference. Use the ▲ ▼ direction buttons to select items and press the OK button to enter and use the ▲ ▼ direction buttons to select the desired item. Press the ◀ direction button to return. When select the Title/Chapter, TT Time/CH Time, use number buttons to input desired title/chapter number time.

◆ Some DVD discs do not support the search function.

## Various Camera Angles

The movies on some DVDs have been recorded from various camera positions. This lets you enjoy the same scene from different perspectives. In this case you'll usually find a marking on the DVD sleeve.

When playing a DVD containing various camera angles the camera symbol appears on the screen. Press the ANGLE button repeatedly until the desired perspective is shown. The picture will be adjusted in 1~2 seconds.

## CD Playback

The player will play all tracks on a CD disc by default. You can use the ◀◀ and ▶▶ (PREV/NEXT skip) buttons, or number buttons to select a track.

## Stop

Press the ■ STOP button once to stop playback and press the ▶ PLAY button to resume normal playback. Press this button twice repeatedly to stop playback completely.

## Pause

Press the ▶◀ PAUSE button to pause the playback and then press the ▶ PLAY button to resume normal playback.

## Previous and Next

Press the ◀◀ button once to go the beginning of this track. Press twice repeatedly to go the previous track.

press the ▶▶ button to play from the beginning of the next track.

## Fast Playback

Press the ◀◀ or ▶▶ FWD/REV SCAN button on the remote control to activate fast backward or forward playback.

# DVD Playback Operation

---

## Repeat

Use the REPEAT button repeatedly to repeat Track, All or to cancel repeat.

◆ Some discs do not support the repeat function.

## Audio

During CD playback, press the AUDIO button on the remote control to select the audio output mode: Mono Left, Mono Right, Mix-Mono and Stereo.

## GOTO

Press the GOTO button to access the time-selected state. You can select Disc Go To, Track Go To or Select Track respectively by pressing this button repeatedly. Use the 0-9 buttons to enter the desired time, and then the player will play according to the selected time.

## JPEG Playback

JPEG is a common picture format that requires small amounts of storage per image and has low loss in resolution. Hundreds of pictures can be stored on a disc in this format. In order to view JPEG photo albums, you can ask your film development company to make a "PICTURE CD" when they develop your film.

## Normal Playback

Load a JPEG disc in. For JPEG disc, there will be a root menu displayed on the screen. Use the OK button and the direction button to select a submenu, and then use the ▲ ▼ direction button to select the contents. Many discs have other contents besides pictures.

For Picture CD disc, it will display the pictures automatically.

During playback, press the ◀◀ or ▶▶ button to select picture.

◆ **Many discs have other contents besides pictures.**

## Stop

Press the ■ STOP button once to stop playback and return to the preview menu. Press the ► PLAY button to resume normal playback. Press this button twice repeatedly to stop playback completely.

## Pause

Press the ▶◀ PAUSE button to pause playback, press the ► PLAY button to resume playback.

# DVD Playback Operation

---

## Repeat

During playback, press the REPEAT button repeatedly, and the repeat modes are Shuffle, Random, Single, Repeat One, Repeat All and Repeat Off.

## Previous and Next

During playback, press the ◀◀ or ▶▶ button to select picture.

## Menu

Press the MENU button once to stop playback and return to the root menu.

## GOTO

During playback, press the GOTO button on the remote control once, use the number buttons to input the file number.

## Picture Rotation

This can be used only when the picture is normally displayed. Once another picture is selected, rotation will be cancelled automatically. Use the ◀ ▶ buttons to rotate the picture.

◆ **Some JPEG disc may not support rotating**

 
# DVD System Setup

## Preparations

1. Connect to the power supply and turn on the unit.
2. Press the INPUT button to shift to DVD mode.
3. Press the DVD SETUP button on the remote control to display the settings menu.
4. Press the ◀ ▶ direction buttons on the remote control to select a category. All the items in the category will appear on the screen.
5. Press the DVD SETUP button again to exit the setup.


## General Setup Page

Press the DVD SETUP button to enter the General setup menu. The screen will display as the below:

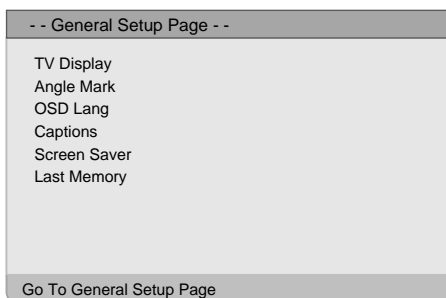


In the menu, press the ENTER or ▼ direction button to enter. Use the ▲ ▼ direction buttons to select the desired item. Press the ◀ button to return.

## TV Display

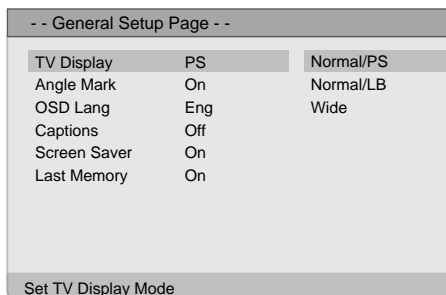 

1. Press the ▲ ▼ direction buttons to select **TV Display**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select items.
4. Press the OK button again to confirm selection and return.


## Angle Mark

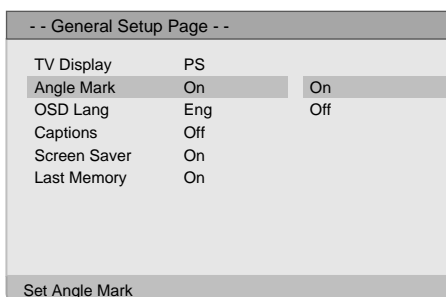 

1. Press the ▲ ▼ direction buttons to select **Angle Mark**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select On or Off.
4. Press the OK button again to confirm selection and return.

# DVD System Setup

 
## OSD Lang

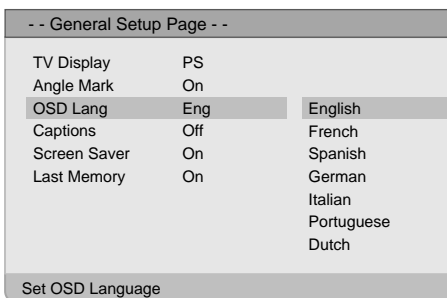

The item is used to select the OSD language.


1. Press the ▲ ▼ direction buttons to select **OSD Lang**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select items.
4. Press the OK button again to confirm selection and return.

## Captions

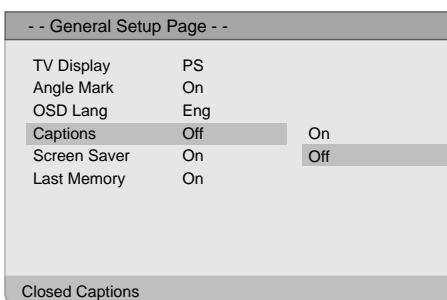 


1. Press the ▲ ▼ direction buttons to select **Captions**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select items.
4. Press the OK button again to confirm selection and return.

## Screen Saver

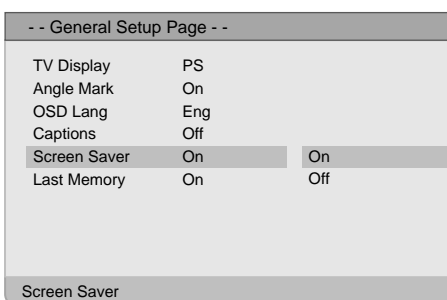 

1. Press the ▲ ▼ direction buttons to select **Screen Saver**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select On or Off.
4. Press the OK button again to confirm selection and to return.

## Last Memory

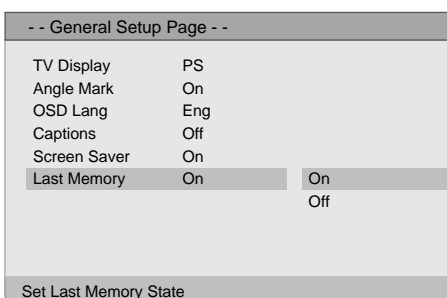 


1. Press the ▲ ▼ direction buttons to select **Last Memory**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select On or Off.
4. Press the OK button again to confirm selection and return.

# DVD System Setup

 
## Speaker Setup Page

Press the DVD SETUP button to enter the General setup menu, then use the ◀ ▶ direction buttons to select Speaker Setup Page, the screen will display as the below:

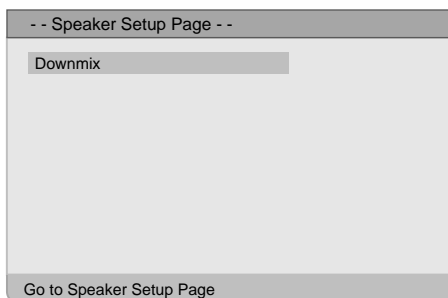

In the menu, press the ENTER or ▼ direction button to enter. Press the ◀ button to return.


### Downmix

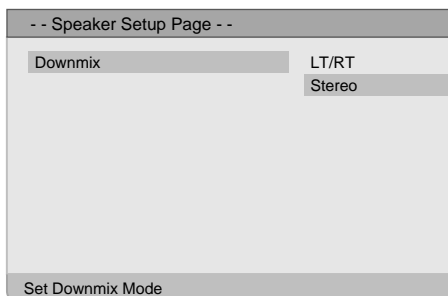 

1. Press the ▼ direction button to select **Downmix**.
2. Press the OK button to enter the setup, the screen will display as left:
3. In the menu, use the ▲ ▼ direction buttons to select items.
4. Press the OK button again to confirm selection and return.


## Dolby Digital Setup

 Press the DVD SETUP button to enter the General setup menu, then use the ◀ ▶ direction buttons to select Dolby Digital Setup, the screen will display as the below:

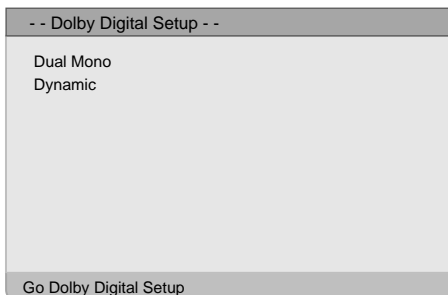

In the menu, press the ENTER or ▼ direction button to enter. Use the ▲ ▼ direction buttons to select the desired item. Press the ◀ button to return.

### Dual Mono

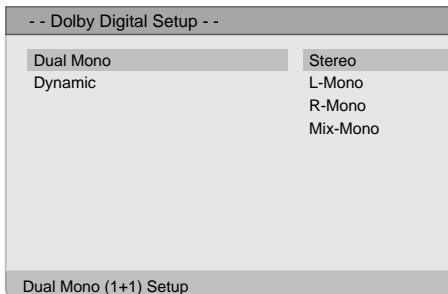 


1. Press the ▲ ▼ direction buttons to select **Dual Mono**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select items.
4. Press the OK button again to confirm selection and return.




# DVD System Setup
 
## Dynamic

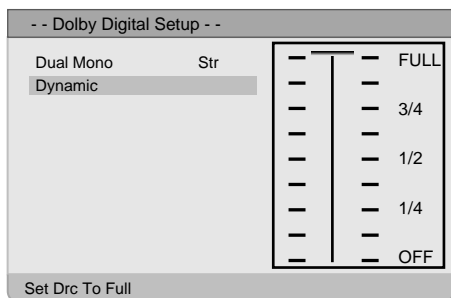


1. Press the ▲ ▼ direction buttons to select **Dynamic**.
2. Press the OK button to enter the setup, the screen will display as left:
3. Press the OK button to enter.
4. Use the ▲ ▼ direction buttons to adjust.
5. Press the OK button again to confirm setting and return.
6. Press the ◀ button to return.

## Sharpness

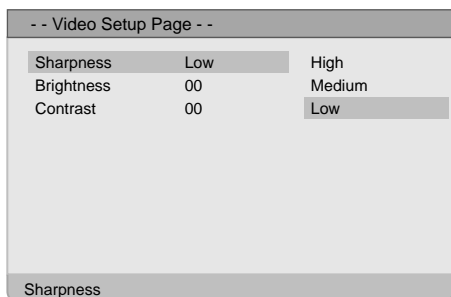 


1. Press the ▲ ▼ direction buttons to select **Sharpness**.
2. Press the OK button to enter the setup.
3. Use the ▲ ▼ direction buttons to select High, Medium or Low.
4. Press the OK button again to confirm selection and return.

## Brightness

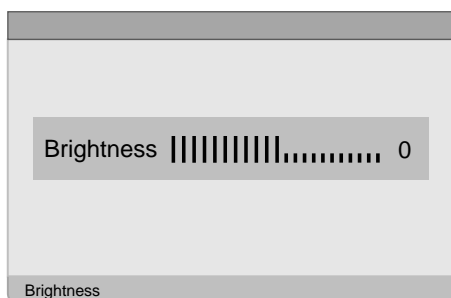 

1. Press the ▲ ▼ direction buttons to select **Brightness**.
2. Press the OK button to enter the setup, the screen will display as left:
3. Use the ◀ ▶ direction buttons to adjust the level.
4. Press the OK button again to confirm setting and return.

## Contrast

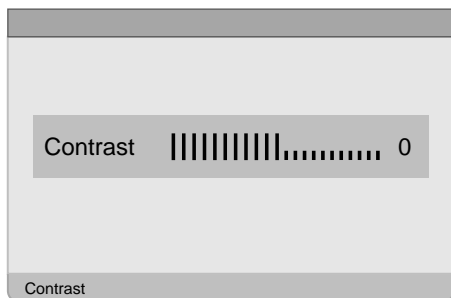 


1. Press the ▲ ▼ direction buttons to select **Contrast**.
2. Press the OK button to enter the setup, the screen will display as left:
3. Use the ◀ ▶ direction buttons to adjust the level.
4. Press the OK button again to confirm setting and return.

# DVD System Setup

 
## Preference Setup

Press the DVD SETUP button to enter the General setup menu, then use the ◀ ▶ direction buttons to select Preference Page, the screen will display as the below:

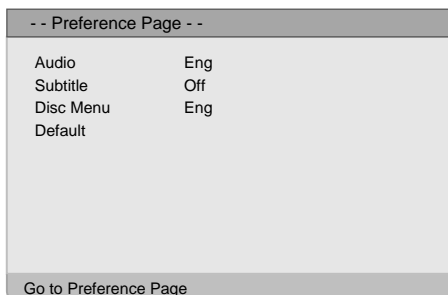


In the menu, press the ENTER or ▼ direction button to enter. Use the ▲ ▼ direction buttons to select the desired item. Press the ◀ button to return.

### Audio

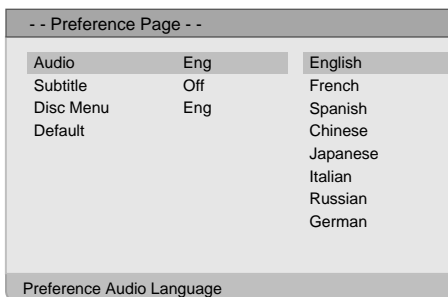 

1. Press the ▲ ▼ direction buttons to select **Audio**.
2. Press the OK button to enter the setup, see the left figure:
3. Press the ▲ ▼ direction buttons to select audio language.
4. Press the OK button again to confirm setting and return.

### Subtitle

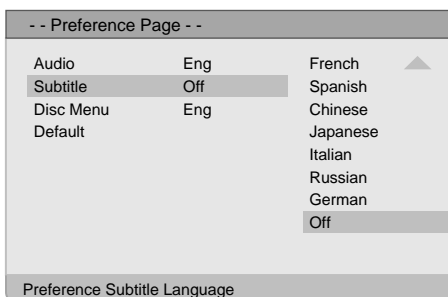 


1. Press the ▲ ▼ direction buttons to select **Subtitle**.
2. Press the OK button to enter the setup, see the left figure:
3. Press the ▲ ▼ direction buttons to select Subtitle language.
4. Press the OK button again to confirm setting and return.

# DVD System Setup

 
---

## Disc Menu

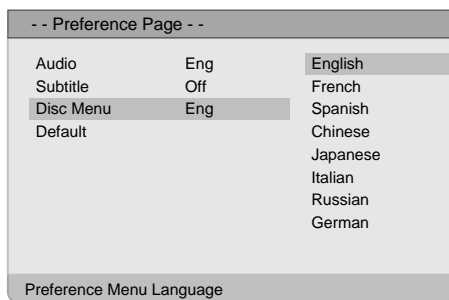

1. Press the ▲ ▼ direction buttons to select **Disc Menu**.
2. Press the OK button to enter the setup, see the left figure:
3. Press the ▲ ▼ direction buttons to select Menu language.
4. Press the OK button again to confirm setting and return.

## Default

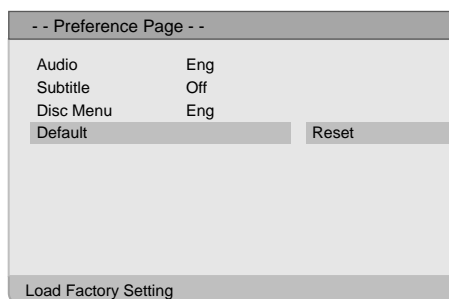 

1. Press the ▲ ▼ direction buttons to select **Default**.
2. Press the OK button to select Reset.
3. Press the OK button, all the settings will return to the default status.

# Troubleshooting

---

SYMPTOM	CHECK ITEM
The player cannot play.	Make sure disc tray is closed Make sure disc is loaded in. Make sure disc is loaded correctly. Make sure disc is not dirty or warped. Make sure the player's region code is the same as region code of DVD disc. Make sure water condensation has not occurred. Take out disc and leave the player on for at least one hour when water condensation occurs.
There is no sound.	Make sure system connection is correct. Make sure the power of speakers is turned on. Make sure the sound setup of DVD disc is correct. Make sure disc is not dirty or warped. Clean or replace the disc.
There is no picture or the picture moves up and down Unsteady.	Make sure the unit is turned on and is in correct video mode. Make sure system connections are correct. If it is not, access the setup menu and select the correct system.
Cannot continue to play and play a section repeatedly.	Make sure it is not in A-B repeat status. Press A-B button to cancel it. Make sure disc is not dirty or damaged. Clean the disc or skip selection.
The remote control does not work.	Make sure there are no obstructions between the remote control and the player. Make sure the remote control is pointing at the player. Make sure batteries are inserted and the polarity is correct. Make sure battery is not weak. Replace the weak battery.

## Other Notes:

Static or other external interference may cause the player to behave abnormally. In this occurrence, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.

# Specifications

---

TFT-LCD Resolution	1024 x 768
TFT-LCD Screen Size	15 inches
Power	AC100~240V, 50/60Hz DC 12V 5A
Power Consumption	< 60W
Dimension	461mm x 200mm x 352mm (LxWxD)
Weight	About 6.5 Kg
Ambient Temperature	10~45°C

***DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE***

Manufactured under license from Dolby Laboratories.  
“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.  
Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc.  
All rights reserved.

**All Images in this manual are only for your information.**

PALSONIC CORPORATION PTY LTD  
1 JOYNTON AVENUE  
WATERLOO NSW 2017 AUSTRALIA  
TEL: (02) 9313 7111  
FAX: (02) 9313 7555  
[www.palsonic.com.au](http://www.palsonic.com.au)

**PALSONIC CUSTOMER SERVICE  
TELEPHONE  
AUSTRALIA: 1300 657 888**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>