
Panasonic

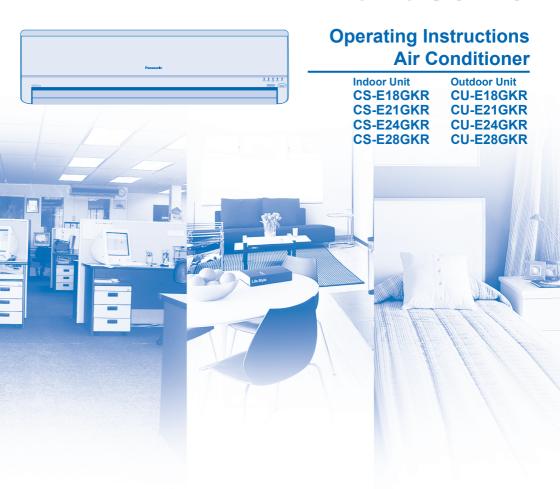



Before operating the unit, read these operating instructions thoroughly and keep them for future reference.

QUICK GUIDE



Manufactured by:

Panasonic HA Air-Conditioning (M) Sdn. Bhd. Lot 2, Persiaran Tengku Ampuan, Section 21, Shah Alam Industrial Site, 40300 Shah Alam, Selangor, Malaysia.

© 2007 Panasonic HA Air-Conditioning (M) Sdn. Bhd. (11969-T). All rights reserved. Unauthorized copying and distribution is a violation of law.

SAFETY PRECAUTIONS

DEFINITION

To prevent personal injury, injury to others, or property damage, please observe the following. Incorrect operation due to failure to follow instructions may cause harm or damage, the seriousness of which is classified as below:



Warning

Remote Control

(Ni-Cd) batteries.

Do not use rechargeable

Do not allow infants and

small children to play

to prevent them from

batteries.

with the remote control

accidentally swallowing the

· Remove the batteries if the

for a long period of time.

New batteries of the same

following the polarity stated

to prevent malfunction of the

type must be inserted

remote control

unit is not going to be used

This sign warns of death or serious injury.



This sign warns of injury or damage to property.

The instructions to be followed are classified by the following symbols:



This symbol denotes an action that is PROHIBITED.







These symbols denote actions that are COMPULSORY.

Caution

Warning

Indoor Unit



- Do not insert your fingers or other objects into the indoor or outdoor unit.
- · Do not attempt to repair the unit by yourself.

Indoor Unit



- Do not install the unit in a potentially explosive atmosphere. Do not wash the unit with water,
- benzene, thinner or scouring powder
- Do not use for other purposes such as preservation of food.
- Do not use any combustible equipment in front of the airflow outlet
- Do not expose directly to cold air for a long period.



- Ensure that the drainage pipe is connected properly. Otherwise, leakage may occur.
- Aerate the room regularly.

outlet

Air inlet

Power Supply



- Switch off the power supply before cleaning or servicing.
- Turn off the power supply if the unit is not used for a long period of
- This air conditioner is equipped with a built-in surge protective device. However, in order to further protect your air conditioner from being damaged by abnormally strong lightning activity, you may want to disconnect it from the power supply. Do not touch the air conditioner during lightning, it may cause electric shock.

Power Supply



- · Do not share the same power outlet with other equipment.
- Do not modify power cords.
- Do not use extension cords.
- · Do not operate with wet hands.



- Use the specified supply cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



This equipment must be earthed and strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock or fire in case of malfunction.



In case of emergency or abnormal conditions (burnt smell, etc), turn off the power supply, and consult your nearest dealer





Outdoor Unit



- · Do not sit or place anything on the indoor or outdoor unit.
- Do not touch the sharp aluminium



- Ensure that the drainage pipe is connected properly. Otherwise, leakage may occur.
- · After long periods of use, make sure the installation rack is not damaged

REGULATORY INFORMATION

The appliance is not intended for use by young children or the infirm person without supervision. Young children should be supervised to ensure that they do not play with the appliance.

OPERATION CONDITION

Use this air conditioner under the following temperature range

	Temperature (°C)		Indoor		Outdoor	
			*DBT	*WBT	*DBT	*WBT
I	COOLING	Maximum	32	23	43	26
		Minimum	16	11	16	11
ľ	HEATING	Maximum	30	-	24	18
		Minimum	16	-	-5	-6

* DBT: Dry bulb temperature

* WBT: Wet bulb temperature

Thank you for purchasing **Panasonic** Air Conditioner



NOTE:

The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without notice for future improvement.



ENVIRONMENTAL REQUIREMENTS

Battery Disposal

The batteries must be recycled or disposed of properly.




END-OF-LIFE DISPOSAL

"Instructions for end-user" for air conditioners:

Information on Disposal in other countries outside the European Union

This symbol is only valid in the European Union. If you wish to discard this product, please contact your installer, dealer or local authority and ask for the correct method of disposal.

PRODUCT OVERVIEW & OPERATIONS

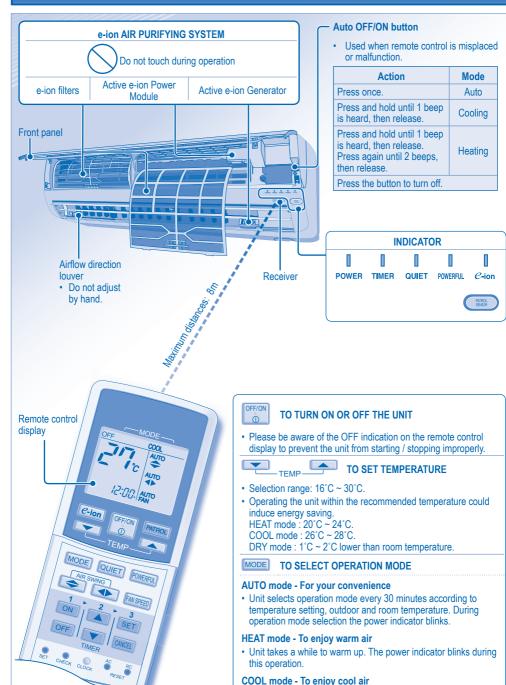

DRY mode - To dehumidify the environment

· Unit operates at low fan speed to give a gentle cooling operation.

FAN SPEED

TO SELECT FAN SPEED (5 OPTIONS)



· For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.



TO ADJUST AIRFLOW DIRECTION (5 OPTIONS)



- · Keeps the room ventilated.
- If AUTO is set, the louvers swing left/right and up/down automatically.
- In heat mode, the air blows horizontally for a while. then starts to blow downwards and the airflow louvers start to swing left/right after the temperature rises.

PATROL

TO MONITOR AIR QUALITY

- · Patrol sensor detects air quality.
- · When air quality is unsatisfactory, e-ion operation will start automatically.

e-ion

TO ENJOY CLEAN AIR

 This operation produces negative ions to attract dust which will then be captured at the positively charged e-ion filters.

QUIET

TO ENJOY QUIET ENVIRONMENT

 This operation reduces indoor and outdoor units. noise.

POWERFUL

TO ACHIEVE TEMPERATURE QUICKLY

· This operation will stop automatically after 20 minutes

- PATROL | Powerful | Can be activated in all modes and can be cancelled by pressing the respective button again.
- PATROL and Powerful can not be activated at the same time.
- PATROL and P-ion can be activated even when the unit is turned off. In this condition, once e-ion indicator is ON, the unit will operate with AUTO fan speed and air swing.

TO SET THE TIMER

· To turn ON or OFF the unit at a preset time.







Select ON or OFF timer.

Set the time

Confirm

- To cancel ON or OFF timer, press on or off then press CANCEL
- When ON Timer is set, the unit may start earlier (up to 30 minutes) before the actual set time in order to achieve the desired temperature on time.
- Timer operation is based on the clock set in the remote control and repeats daily once set. For clock setting, please refer to Remote Control Preparation at back cover
- If timer is cancelled manually or due to power failure. you can restore the previous setting (once power is resumed) by pressing SET.

OPTIONAL SETTINGS

PATROL

Patrol starts automatically with the unit switched on with OFF/ON

Press and hold for 5 seconds, then release to disable or restore this setting.



Press and hold for 5 seconds to dim or restore the unit's indicator brightness.



Press and hold for approximately 10 seconds to show temperature setting in °C or °F



Press and hold for approximately 5 seconds to show 12-hour (am/pm) or 24-hour time indication



Press to restore the remote control's default settina.



Not used in normal operations.

Set the temperature 1°C higher in cool mode or 2°C lower in heat mode than the desired temperature to achieve a 10% power saving.

Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

CARE & CLEANING




- Switch off the power supply before cleaning.
- Do not touch the aluminium fin, sharp part may cause injury.

WASHING INSTRUCTIONS

- · Do not use benzene, thinner or scouring powder.
- Use only soap (≃ pH7) or neutral household detergent.
- Do not use water hotter than 40°C.

HINTS

- Clean the filter regularly for best performance and to reduce power consumption.
- Please consult your nearest dealer for seasonal inspection.

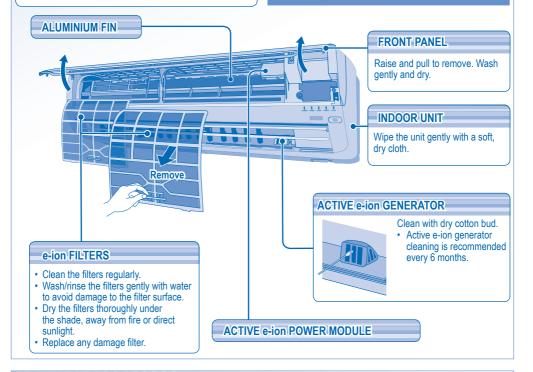

FOR SEASONAL INSPECTION AFTER EXTENDED NON-USE

- · Checking of remote control batteries.
- · No obstruction at air inlet and air outlet vents.
- After 15 minutes of operation, it is normal to have the following temperature difference between air inlet and air outlet vents:

Cooling: ≥ 8°C

Heating: ≥ 14°C

FOR EXTENDED NON-USE

- Activate heat mode for 2~3 hours to thoroughly dry the unit.
- · Turn off the power supply.
- Remove the remote control batteries.

NON SERVICEABLE CRITERIAS

TURN OFF POWER SUPPLY then CALL Authorized Distributor under the following conditions:

- · Abnormal noise during operation.
- · Water/foreign particles have entered the remote control.
- · Water leaks from Indoor unit.
- · Circuit breaker switches off frequently.
- · Power cord becomes unnaturally warm.
- · Switches or buttons are not functioning properly.

TROUBLESHOOTING

The following symptoms do not indicate malfunction.

Symptom	Cause
Mist emerges from indoor unit.	Condensation effect due to cooling process.
Water flowing sound during operation.	Refrigerant flow inside the unit.
The room has a peculiar odour.	 This may due to damp smell emitted by the wall, carpet, furniture or clothing.
Indoor fan stops occasionally during automatic fan speed setting.	This helps to remove the surrounding odours.
Operation is delayed a few minutes after restart.	The delay is a protection to the unit's compressor.
Outdoor unit emits water/steam.	Condensation or evaporation occurs on pipes.
Timer indicator is always on.	The timer setting repeats daily once set.
Power indicator blinks during operation and the indoor fan is stopped.	The unit is in defrost mode, and the melted frost is drained from the outdoor unit.
Indoor fan stops occasionally during heating operation.	To avoid unintended cooling effect.
Power indicator blinks before the unit is switched on.	This is a preliminary step in preparation for the operation when the ON timer has been set.
Cracking sound during operation.	Changes of temperature cause the expansion/contraction of the unit.

Check the following before calling for servicing.

Symptom	Check
Heating/Cooling operation is not working efficiently.	Set the temperature correctly. Close all doors and windows. Clean or replace the filters. Clear any obstruction at the air inlet and air outlet vents.
Noisy during operation.	Check if the unit has been installed at an incline. Close the front panel properly.
Remote control does not work. (Display is dim or transmission signal is weak.)	Insert the batteries correctly. Replace weak batteries.
The unit does not work.	Check if the circuit breaker is tripped. Check if timers have been set.
The unit does not receive the signal from the remote control.	 Make sure the receiver not obstructed. Certain fluorescent lights may interfere with signal transmitter. Please consult your nearest dealer.
Patrol sensor or e-ion indicator on the indoor unit is blinking.	 Press PATROL or @-ion twice. If the patrol sensor or e-ion indicator still blinking, please consult your nearest dealer.

The unit stops and the timer indicator blinks.



Press until you hear beep sound, then jot down the error code.

 The unit may be operable (with 4 beeps) on a limited basis, depending on the error

NOTE:

• Turn the unit off and reveal the error code to your nearest dealer.


QUICK GUIDE

Remote Control Preparation



- 1 Press and pull out
- 2 Insert AAA or R03 batteries (can be used ~ 1 year)
- 3 Press CLOCK
- 4 Set time
- 5 Confirm
- 6 Close the cover



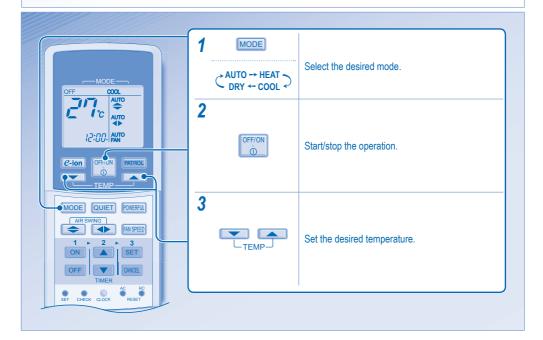

Matsushita Electric Industrial Co., Ltd.

Web Site: http://www.panasonic.co.jp/global/

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com