

Panasonic

Operating Instructions Air Conditioner

Indoor Unit
CS-E18JKR
CS-E21JKR
CS-E24JKR
CS-E28JKR
CU-E28JKR
CU-E28JKR







Before operating the unit, read these operating instructions thoroughly and keep them for future reference.



QUICK GUIDE

© Panasonic HA Air-Conditioning (M) Sdn. Bhd. 2009. Unauthorized copying and distribution is a violation of law.

SAFETY PRECAUTIONS

DEFINITION

The instructions to be followed are classified by the following symbols:



This symbol denotes an action that is PROHIBITED.





These symbols denote actions that are COMPLIL SORY

To prevent personal injury, injury to others, or property damage, please observe the following. Incorrect operation due to failure to follow instructions may cause harm or damage, the seriousness of which is classified as below:



Warning This sign warns of death or serious injury.



Caution

This sign warns of injury or damage to property.

Remote Control



• Do not use rechargeable (Ni-Cd) batteries.

 Do not allow infants and small children to play with the remote control to prevent them from accidentally swallowing the batteries.



• Remove the batteries if the unit is not going to be used for a long period of time

for a long period of time.

New batteries of the same type must be inserted following the polarity stated to prevent malfunction of the remote control.

Indoor Unit



- Do not insert your fingers or other objects into the unit, rotating parts may cause injury.
- Do not attempt to repair the unit by yourself.

outlet

Air

inlet

Air inlet

Air inlet

Air outlet

Indoor Unit



- Do not install the unit in a potentially explosive atmosphere.
 Do not wash the unit with water.
- benzene, thinner or scouring powder.
- Do not use for other purposes such as preservation of food.
- Do not use any combustible equipment in front of the airflow outlet.
- Do not expose directly to cold air for a long period.



- Ensure that the drainage pipe is connected properly. Otherwise, leakage may occur.
- Aerate the room regularly.

Power Supply



- Do not share the same power outlet with other equipment.
- Do not modify power cords.
- Do not use extension cords.
- Do not operate with wet hands.



 Use the specified supply cord.
 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



 This equipment must be earthed and strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock or fire in case of malfunction.



 In case of emergency or abnormal conditions (burnt smell, etc), turn off the power supply, and please consult authorized dealer.

Power Supply



- Switch off the power supply before cleaning or servicing.
- Turn off the power supply if the unit is not used for a long period of time.
- This air conditioner is equipped with a built-in surge protective device. However, in order to further protect your air conditioner from being damaged by abnormally strong lightning activity, you may want to disconnect it from the power supply. Do not touch the air conditioner during lightning, it may cause electric shock.

Outdoor Unit



• Do not sit or step on the unit, you may fall down accidentally.



Do not touch the sharp aluminium fin, sharp parts may cause injury.



- Ensure that the drainage pipe is connected properly. Otherwise, leakage may occur.
- After long periods of use, make sure the installation rack is not damaged

Outdoor Unit



 Do not insert your fingers or other objects into the unit, rotating parts may cause injury.

damaged.

Download from Www.Somanuals.com. All Manuals Search And Download.

REGULATORY INFORMATION

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

OPERATION CONDITION

Use this air conditioner under the following temperature range (CU-E18JKR, CU-E21JKR)

Temperature (°C)		Indoor		Outdoor	
		*DBT	*WBT	*DBT	*WBT
COOLING	Maximum	32	23	43	26
	Minimum	16	11	16	11
HEATING	Maximum	30	-	24	18
	Minimum	16	-	-5	-6

(CU-E24JKR, CU-E28JKR)

Temperature (°C)		Indoor		Outdoor	
		*DBT	*WBT	*DBT	*WBT
COOLING	Maximum	32	23	43	26
	Minimum	16	11	16	11
HEATING	Maximum	30	-	24	18
	Minimum	16	-	-10	-11

* **DBT**: Dry bulb temperature * **WBT**: Wet bulb temperature

Thank you for purchasing Panasonic Air Conditioner

TABLE OF CONTENTS
SAFETY PRECAUTIONS 2
REGULATORY INFORMATION 3
PRODUCT OVERVIEW & OPERATIONS 4~5
CARE & CLEANING 6
TROUBLESHOOTING 7
QUICK GUIDE BACK COVER

NOTE:

The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without notice for future improvement.

Information for Users on Collection and Disposal of Old Equipment and used Batteries



[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Note for the battery symbol (bottom two symbol examples):


This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



Ph

- Do not switch ON the unit when waxing the floor. After waxing, aerate the room properly before operating the unit.
- · Do not install the unit in oily and smoky areas.

PRODUCT OVERVIEW & OPERATIONS

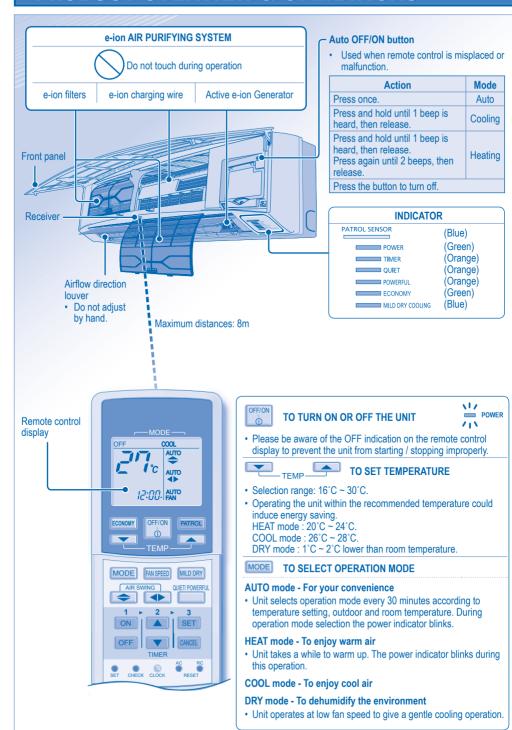



• For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.



- Keens the room ventilated
- In COOL/DRY mode, if AUTO is set, the louver swing left/right and up/down automatically.
- In HEAT mode, if AUTO is set, the horizontal louver fix at predetermined position. The vertical louver swing left/right after the temperature rises.

TO MONITOR AIR QUALITY

PATROL SENSOR

- · Patrol sensor detects air quality.
- When air quality is unsatisfactory, e-ion operation will start automatically.

TO SAVE ELECTRICAL POWER CONSUMPTION



- Save power consumption at unoccupied room by adjust set temperature up to 3°C automatically.
- · Brightness of all indicators will be dimmed.

QUIET/ POWERFUL



TO ENJOY QUIET ENVIRONMENT

 This operation reduces indoor and outdoor units noise QUIET

TO ACHIEVE TEMPERATURE QUICKLY \1/

This operation will stop automatically after 20 minutes.

 
MILD DRY

TO IMPROVE HUMIDITY MILD DRY COOLING AND MOISTURE LEVEL

- This operation reduces air dryness and provides you with a comfortable living environment.
- When vertical airflow direction is set to AUTO, it stops at lower position to avoid cold air contact. However, you can adjust the louver direction manually.
- PATROL, ECONOMY and and can be activated in all modes and can be cancelled by pressing the respective button again.
- MILDDRY only can be activated in COOL mode and can be cancelled by pressing the button again.
- MILDDRY, ECONOMY and cannot be activated at the same time.
- PATROL can be activated even when the unit is turned off. In this condition, once e-ion operation is ON, the unit will operate with AUTO fan speed and air swing.

TO SET THE TIMER

 2 sets of ON and OFF timers are available to turn ON or OFF the unit at different preset time.



• Example of application at living room:

Morning: ON @1 at 07:00 (Wake up)

OFF @1 at 08:00 (Out for work)

Evening: ON @2 at 17:00 (Back home)

OFF @2 at 22:00 (Sleep)

- To cancel ON or OFF timer, press on or off to select respective @1 or @2 then press once.
- If timer is cancelled manually or due to power failure, you can restore the timer again by pressing on or
 to select respective @1 or @2 then press set.
- Upcoming timer will be displayed and will be activated in sequence.
- When ON Timer is set, the unit may start earlier (up to 35 minutes) before the actual set time in order to achieve the desired temperature on time.
- Timer operation is based on the clock set in the remote control and repeats daily once set. For clock setting, please refer to Remote Control Preparation at back cover.

OPTIONAL SETTINGS

PATROL

Patrol starts automatically with the unit switched on with OFF/ON.

Press and hold for 5 seconds, then release to disable or restore this setting.



Press and hold for approximately 10 seconds to show temperature setting in °C or °F

Press to restore the remote control's default setting.



Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

CARE & CLEANING




- Switch off the power supply before cleaning.
- Do not touch the aluminium fin, sharp parts may cause injury.

WASHING INSTRUCTIONS

- Do not use benzene, thinner or scouring powder.
- Use only soap (≃ pH7) or neutral household detergent.
- Do not use water hotter than 40°C.

HINT

 To ensure optimal performance of the unit, cleaning maintenance have to be carried out at regular intervals.
 Dirty unit may caused malfunction and you may retrieve error code "H99". Please consult authorized dealer.

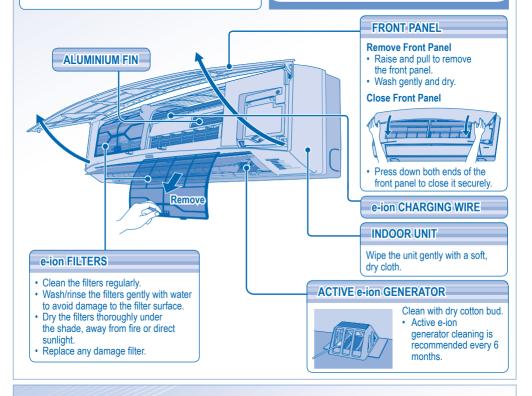

FOR SEASONAL INSPECTION AFTER EXTENDED NON-USF

- · Checking of remote control batteries.
- · No obstruction at air inlet and air outlet vents.
- Use Auto OFF/ON button to select Cooling/Heating operation, after 15 minutes of operation, it is normal to have the following temperature difference between air inlet and air outlet vents: Cooling: ≥ 8°C Heating: ≥ 14°C

FOR EXTENDED NON-USE

- Activate Heat mode for 2~3 hours to remove moisture left in the internal parts thoroughly to prevent mould growth.
- · Turn off the power supply.
- · Remove the remote control batteries.

NON SERVICEABLE CRITERIAS

TURN OFF POWER SUPPLY then please consult authorized dealer under the following conditions:

- · Abnormal noise during operation.
- · Water/foreign particles have entered the remote control.
- · Water leaks from Indoor unit.
- · Circuit breaker switches off frequently.
- · Power cord becomes unnaturally warm.
- · Switches or buttons are not functioning properly.

TROUBLESHOOTING

The following symptoms do not indicate malfunction.				
Symptom	Cause			
Mist emerges from indoor unit.	Condensation effect due to cooling process.			
Water flowing sound during operation.	Refrigerant flow inside the unit.			
The room has a peculiar odour.	• This may due to damp smell emitted by the wall, carpet, furniture or clothing.			
Indoor fan stops occasionally during automatic fan speed setting.	This helps to remove the surrounding odours.			
Airflow continues even after operation has stopped.	Extraction of remaining heat from the indoor unit (maximum 30 seconds).			
Operation is delayed a few minutes after restart.	The delay is a protection to the unit's compressor.			
Outdoor unit emits water/steam.	Condensation or evaporation occurs on pipes.			
Timer indicator is always on.	The timer setting repeats daily once set.			
Power indicator blinks during operation, the indoor fan is stopped and vane is closed.	 The unit is in defrost mode, and the melted frost is drained from the outdoor unit. 			
Indoor fan stops occasionally during heating operation.	To avoid unintended cooling effect.			
Power indicator blinks before the unit is switched on.	This is a preliminary step in preparation for the operation when the ON timer has been set.			
Cracking sound during operation.	Changes of temperature cause the expansion/contraction of the unit.			

Check the following before calling for servicing. Symptom Check

Heating/Cooling operation is not working efficiently.	 Set the temperature correctly. Close all doors and windows. Clean or replace the filters. Clear any obstruction at the air inlet and air outlet vents.
Noisy during operation.	Check if the unit has been installed at an incline.Close the front panel properly.
Remote control does not work. (Display is dim or transmission signal is weak.)	Insert the batteries correctly. Replace weak batteries.
The unit does not work.	Check if the circuit breaker is tripped. Check if timers have been set.
The unit does not receive the signal from the remote control.	 Make sure the receiver not obstructed. Certain fluorescent lights may interfere with signal transmitter. Please consult your nearest dealer.
PATROL operation does not work.	Press and hold PATROL for 15 seconds until beep sound is heard, press PATROL again.
Patrol sensor indicator on the indoor unit is blinking.	Press PATROL twice. If the patrol sensor indicator still blinking, please consult authorized dealer.

The unit stops and the timer indicator blinks.





Press until you hear beep sound, then jot down the error code.

Note:

 For certain error, you may restart the unit with limited operation with 4 beeps during operation starts.

4 Turn the unit off and reveal the error code to authorized dealer.


QUICK GUIDE

Remote Control Preparation



- 1 Press and pull out
- 2 Insert AAA or R03 batteries (can be used ~ 1 year)
- 3 Press CLOCK
- 4 Set time
- 5 Confirm
- 6 Close the cover



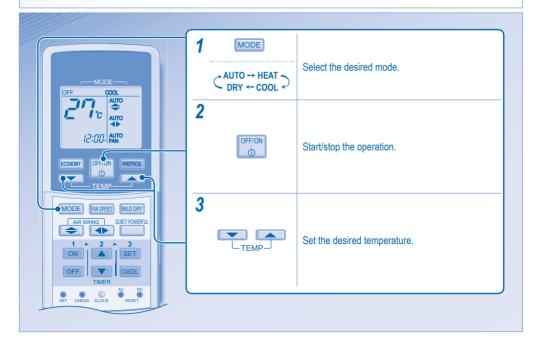

Panasonic Corporation

Website: http://panasonic.net/

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com