


Panasonic®

Digital Imaging Systems Operating Instructions (For Copy & Network Scan Functions)

Model No. **DP-2310/3010**
with Options

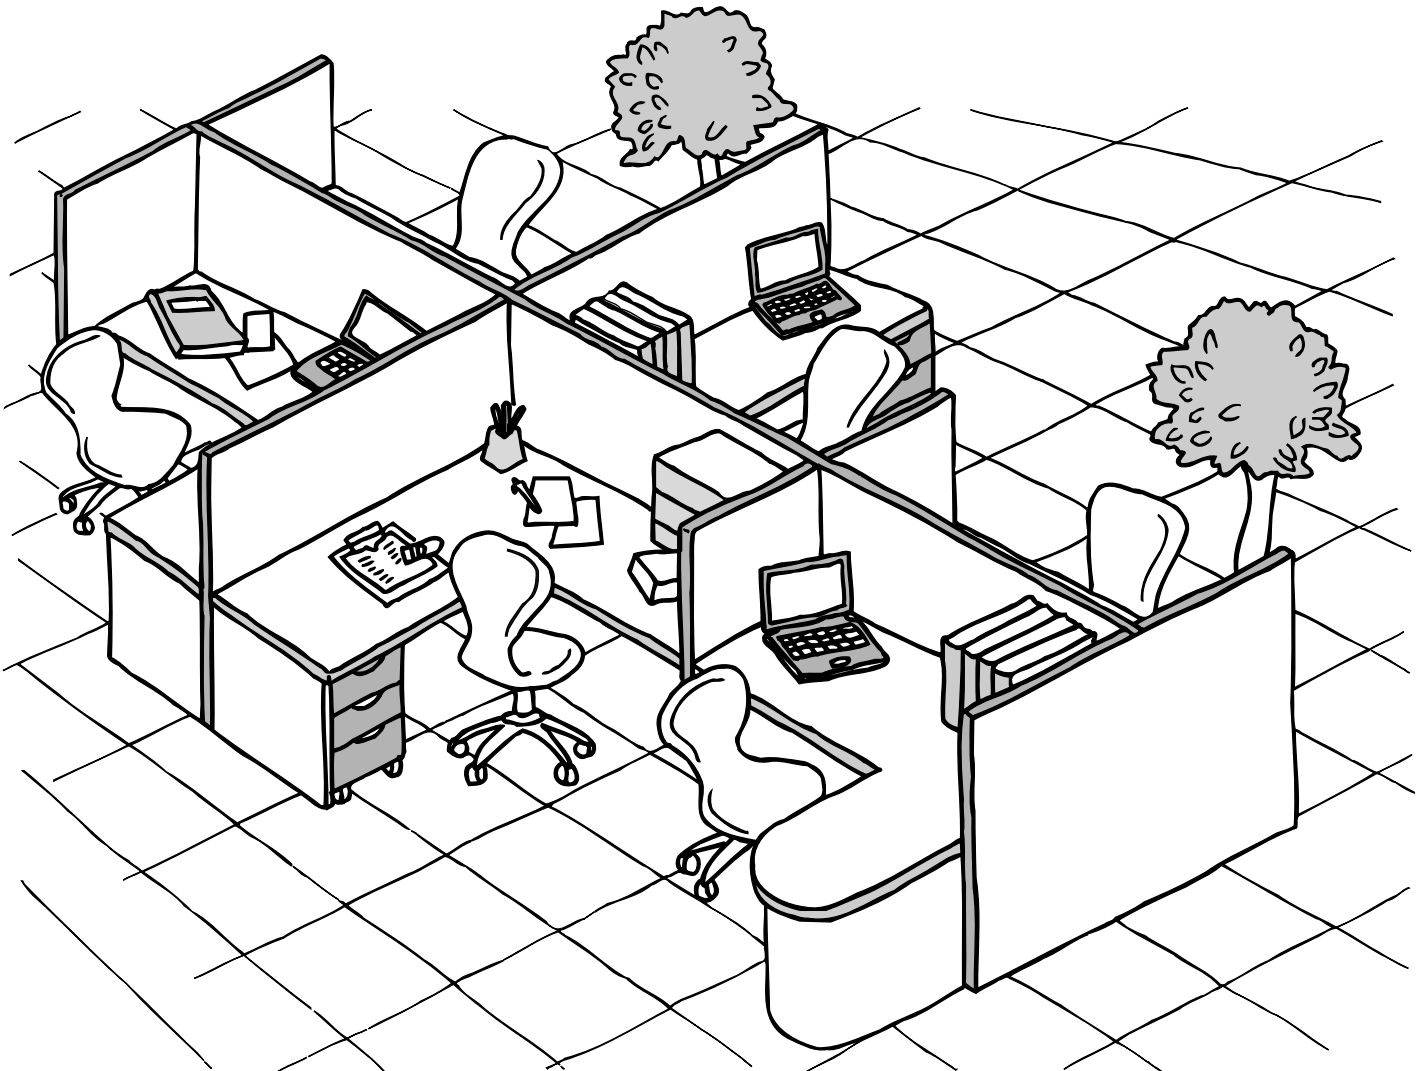

WORKIO


Before operating this equipment, please read these instructions completely and keep these operating instructions for future reference.

English



Getting To Know Your Machine

Useful Office Functions

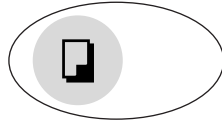


Copy

- Copy up to Ledger size.
Capable of copying text/photos/halftone originals.




Fax/Email

- Plain Paper High-speed Super G3 compatible Fax with JBIG compression when optional Fax Communication Board (DA-FG300) is installed.
- Quick-Scan
- Quick Memory Transmission
- Email Function capability when optional Internet Fax/E-Mail Module (DA-NF600) is installed.

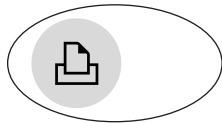


Print

- Digital printer controller standard, printer resolution 300 or 600 dpi.

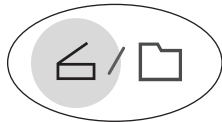

Scan/File

- Monochrome scanner capability when optional Network Scanner Module (DA-NS600) is installed.
Scanning resolution up to 600 dpi.
- A document can be saved to, or retrieved from the Network Server with this Digital Imaging System.

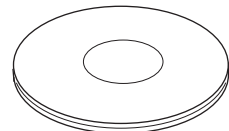

Application Software

- Document Manager
- Document Viewer
- Document Network Scanner*
- Utilities (Network Status Monitor, Phone Book Editor, Device Configuration Editor)

* Document Network Scanner is only available when the optional Network Scanner Module (DA-NS600) is installed.

DP-2310/3010 Operating Instructions

This copier includes operating instruction manuals, please use the correct manual when an operator intervention is necessary.

<Copy & Network Scan>

Use the information provided in this manual whenever a copier function requires intervention. For example: how to make copies, add paper, replace the toner bottle, etc.





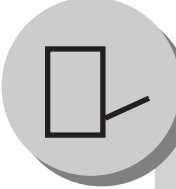
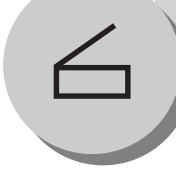

<Fax/Internet Fax (Email)>

Use the information provided in the DP-2310/3010 Fax & Internet Fax Operating Instructions manual whenever a Fax/Internet Fax function requires intervention. For example: how to send/receive a Fax/Email, or when a trouble message appears, etc.

<Print & Other Advanced Functions>

Use the information provided on the enclosed CD for an explanation of how to use as a Network Printer, Network Scanner, Edit Directory Dialing Feature, Device Settings, Network Status Monitor, and/or Document Management System.

Operating Instructions Outline

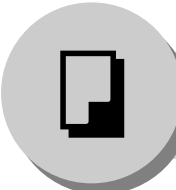
	Getting To Know Your Machine	<ul style="list-style-type: none"> ● Quick Operation Chart (See pages 10, 11) ● Adding Paper, Replacing the Toner Bottle, Removing a Misfed Paper and Error Codes (See pages 10-17)
	Before Starting	<ul style="list-style-type: none"> ● Safety Precautions (See pages 7-9) ● Control Panel Key/Button/Indicator Names (See pages 19-21)
	Making Copies	<p>Operating Instructions for making copies according to Function Categories on the LCD Touch Panel Display</p> <p>(See pages 22-49)</p>
	Function	<p>Changing the Initial Machine Modes</p> <ul style="list-style-type: none"> ● Copy, Printer, Scanner (Option) and Fax/Internet Fax (Option) <p>(See pages 50-63)</p>
	Options	<ul style="list-style-type: none"> ● Accessories Components (See page 65) ● 1-Bin Finisher (DA-FS300) (See page 37, 38) ● Network Scanner (DA-NS600) (See pages 66-69)
	Problem Solving	<ul style="list-style-type: none"> ● Troubleshooting (See pages 70, 71) ● Replacing the Battery (See pages 72, 73)
	Others	<p>Specifications, Options and Supplies and Index</p> <p>(See pages 74-78)</p>




Getting To Know Your Machine

Symbols/Icons

 
The following Symbols/Icons are used throughout this operating instructions manual.



Place original(s) on the ADF

 

Place original(s) on the Platen (Book)

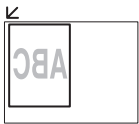

Place original on the Platen (Sheet)



Press any Hard Key on the control panel or touch any Button on the touch panel display


<p>Press Hard Key</p>	<p>Touch any Button</p>
<p>Input numbers</p> <p>● Number of Copies, etc.</p>	<p>Input text with a keyboard</p>




Go to next step




Go to next step (below)

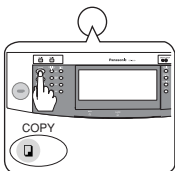


Setting any function(s) if required

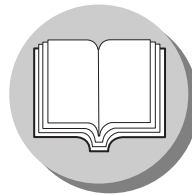


Getting to know your machine Before starting

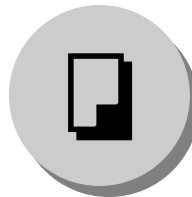


When making copies

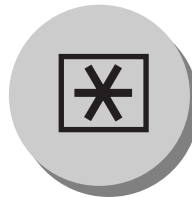

When setting the machine modes

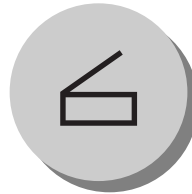

Options (ex.: Network Scanner) When scanning document(s)

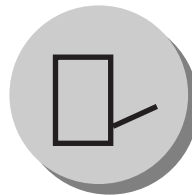

Options (ex.: 1-Bin Finisher)



Problem solving



Others (Specifications, Index)



Getting To Know Your Machine

Table of Contents


Useful Office Functions	2
DP-2310/3010 Operating Instructions	2
Operating Instructions Outline	3
Symbols/Icons	4
Precautions	7
Operation Chart	10
■ Quick Operation Chart	10
■ Problem Solving	11

Before Starting

Energy Star	18
Control Panel	19
Touch Panel Display	20

Making Copies

Basic Menu	22
■ Copying the Same Size Originals (1:1)	22
■ Using the ADF	22
■ Copying on Heavy Paper (Post Cards, etc.) (35 lb max.)	22
■ Position of the original	23
■ Copying with Preset Ratios	24
■ Proof Copying	24
■ Tandem/Remote Copying	24
■ Tandem/Remote Copy Settings (Registration 1)	26
■ Tandem/Remote Copy Settings (Registration 2)	26
■ Tandem/Remote Copy Settings (Editing)	26
■ Tandem/Remote Copy Settings (Deleting)	26
■ Job Queue	28
■ Completion Notice	28
2-Sided/Original → Copy	30
■ 1-Sided → 2-Sided, 2-Sided → 1-Sided, 2-Sided → 2-Sided Copy	30
■ Book → 2-Sided Copy	30
■ 2 Page Copy	32
■ N in 1 Copy	32
■ Booklet Copy	32
■ Multi-Size Feeding	34
■ Job Build and SADF Mode	34
Sort/Finish	36
■ When using Sort Mode	36
Zoom/Effects	38
■ Zoom	38
■ Auto Zoom	38
■ Edge	38
■ Book	38
■ Margin	40
■ Centering	40
■ Image Repeat	40
■ Inverse	40
■ Stamping (Page Numbering)	42
■ Stamping (Date Stamp)	42
■ Stamping (Issue Number Stamping)	42
Insertion/Overlay	44
■ Cover	44
■ Page Insertion	44
■ OHP Interleaving	44
■ Presentation	44

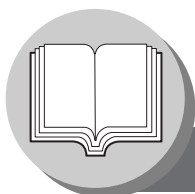

Getting To Know Your Machine

Table of Contents

Insertion/Overlay/Job Memory	46
■ Overlay	46
■ File Edit	46
■ Form Overlay	46
■ Job Memory	46
Other Features	48
■ Concurrent Copying	48
■ Energy Saver (Energy Saver Mode, Sleep/Shutdown Mode)	48
■ Skyshot Mode	48
■ Interrupt Mode	49

Function

■ Using Function Modes to Change the Initial Copy Modes	50
■ Procedure	50
■ General Settings	52
■ Copier Settings	52
■ Scanner Settings	53
■ Printer Settings	54
For Key Operator	55
■ General Settings	55
■ Copier Settings	57
■ Printer Settings	58
For Example	60
■ Changing the Auto Contrast Setting	60
■ Changing the Paper Size	60
■ Weekly Timer	60
■ Department Counter	62
■ Network Settings	62
Combined Function Table	64

Accessories

Components	65
■ Options	65
■ Supplies	65

Network Scanner (Option)


■ Document Scanning	66
■ Adding your PC or DD Server IP Address	66
■ Editing your PC or DD Server IP Address	68
■ Erasing the Address	68

Problem Solving

Troubleshooting	70
Replacing the Battery	72

Others

Specifications	74
Index	76

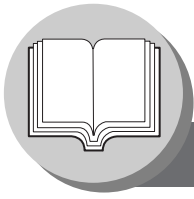

Getting To Know Your Machine

Precautions

■ Laser Safety

LASER SAFETY


This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury.

CAUTION:

USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



■ Caution Label

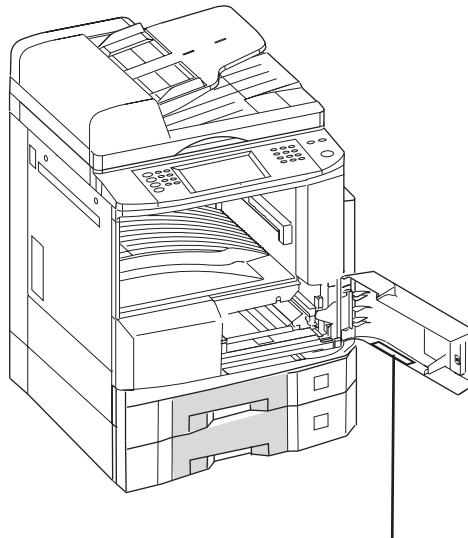

- **DANGER** : Invisible laser radiation when open and interlock defeated. AVOID DIRECT EXPOSURE TO BEAM.
- **CAUTION** : Invisible and hazardous laser radiation when interlocks defeated. AVOID EXPOSURE TO BEAM.
- **ATTENTION** : Rayonnement laser invisible dangereux lorsque la sécurité est neutralisée. EXPOSITION DANGEREUSE AU FAISCEAU.
- **VORSICHT** : Unsichtbare Laserstrahlung, wenn Sicherheitsverriegelung überbrückt. NICHT DEM STRAHL AUSSETZEN.
- **PELIGRO** : Cuando se invalida el bloqueo, se producen radiaciones invisibles de láser. EVITESE LA EXPOSICION DIRECTA A TALES RAYOS.
- **VARO!** : Näkymätöntä ja vaarallista lasersäteilyä suojalukitus ohitettaessa. Vältä suoraa altistumista säteelle.
- **ADVARSEL** : USYNLIG LASERSTRÅLING NÅR SIKKERHEDSAF-BRYDERE ER UDE AF FUNKTION. UNDGÅ UDSETTELSE FOR STRÅLING.
- **ADVARSEL** : USYNLIG LASERSTRÅLING NÅR SIKKERHEDSAF-BRYDERE ER UDE AF FUNKTION. UNDGÅ EKSPONERING FOR STRÅLEN.
- **WARNING** : OSYNLIG LASERSTRÅLNING NÅR SPÄRRAR ÄR URKOPPLADE. STRÅLEN ÄR FARLIG.
- **注意** : 为防止激光照射, 当连接本机时, 请勿暴露在光柱下。
- **주의** : 연결장치가 고장 났을 때에는 눈에 보이지않고 위험한 레이저 방사선이 빛에 직접 닿지않도록 해 주십시오.

FBS8902



Getting To Know Your Machine

Precautions

Handling


- Do not look directly at the exposure lamp when copying.
- Do not turn the power switches Off or open the front cover/right cover during copying.
 - Do not drop paper clips or other metal objects into the copier.
- If you are not going to use the copier for long periods of time, turn OFF the Power Switch on the Left Side of the machine and wait 10 seconds then, turn OFF the Main Power Switch on the Back Side of the machine.

- Energy Save Mode Notice

- If the energy save mode is set to Shutdown mode, the following functions will not work while the unit is in this mode.


When using the following functions, we recommend that you leave the energy save mode in the initial factory default setting (Sleep). (See page 55)

- 1) Data Reception Function while Tandem/Remote Copying is being used
- 2) Printer Function (USB Local and Network Connections)

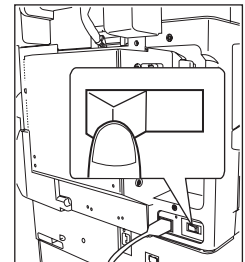

- Inner Tray Notice

- Under normal operation, it is not necessary to remove this Inner Tray. If this tray is removed, lift up the Paper Holder while reinstalling the tray to prevent damaging it.

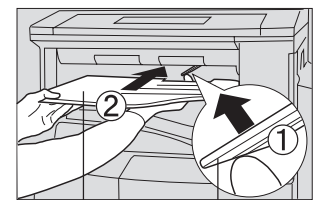

Inner Tray Paper Holder

Toner and Paper

- Store toner, drum and paper in cool areas with low humidity.
 - Use high quality 16 - 24 lb (Sheet Bypass: 15 - 35 lb) paper.
 - For optimum performance, it is recommended that only Panasonic Brand supplies are used in the copier.
 - Do not unseal the toner bottle unless you are ready to use it.
 - Certain types of transparency film may not be compatible and may damage your machine. Consult with an authorized Panasonic dealer for advice regarding non-standard paper types. (Panasonic has tested "3M PP2500" transparency film and found it to be compatible.)

Installation

- The copier should not be installed in areas with the following conditions:
 - Extremely high or low temperature and humidity.
 - Ambient conditions
 - Temperature: 50 – 86°F
 - Relative humidity: 30 – 80 %
 - Where temperature and humidity can change rapidly, causing condensation.
 - Direct exposure to sunlight.
 - Directly in the air conditioning flow.
 - In areas of high dust concentration.
 - In areas of poor ventilation.
 - In areas with chemical fume concentration.
 - In areas with extreme vibration.
 - With unstable or uneven conditions (floors, etc.).

Ventilation

- The copier should be installed in a well-ventilated area to minimize the ozone density in the air.

For Your Safety

- The maximum power consumption is 1.45 kW.
A properly wired (grounded), dedicated, 15A, 120V AC outlet is required. Do not use an extension cord. Please ensure the wall outlet is installed near the equipment and is easily accessible.

Caution Note: Unplug the power cord from the wall outlet before removing covers.

CAUTION

- THIS PRODUCT CONTAINS A LITHIUM BATTERY. DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS OF YOUR LOCAL SOLID WASTE OFFICIALS.

WARNING For USA


FCC WARNING:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

The user could lose the authority to operate this equipment if any unauthorized changes or modifications are made to this equipment.

This product has a fluorescent lamp that contains a small amount of mercury. It also contains lead in some components. Disposal of these materials may be regulated in your community due to environmental considerations.




For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <<http://www.eiae.org>>.

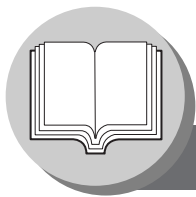

Getting To Know Your Machine

Operation Chart


Quick Operation Chart

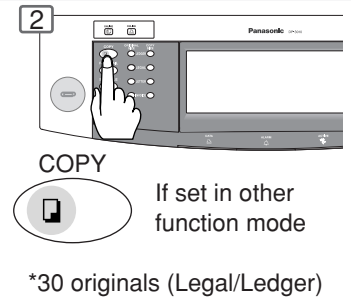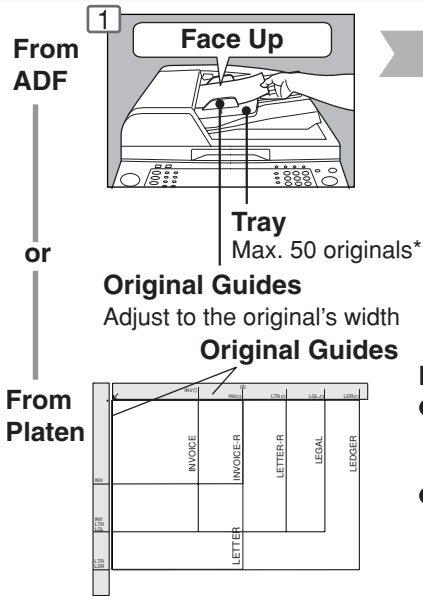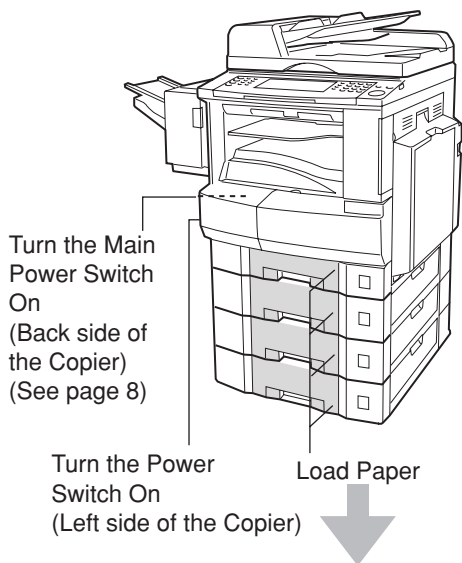


Face Down


- If the original is not positioned properly, a portion of the original may not be copied.
- For originals smaller than Invoice size, position the original within the Invoice area and select Invoice.

Adding Paper (Paper Tray)

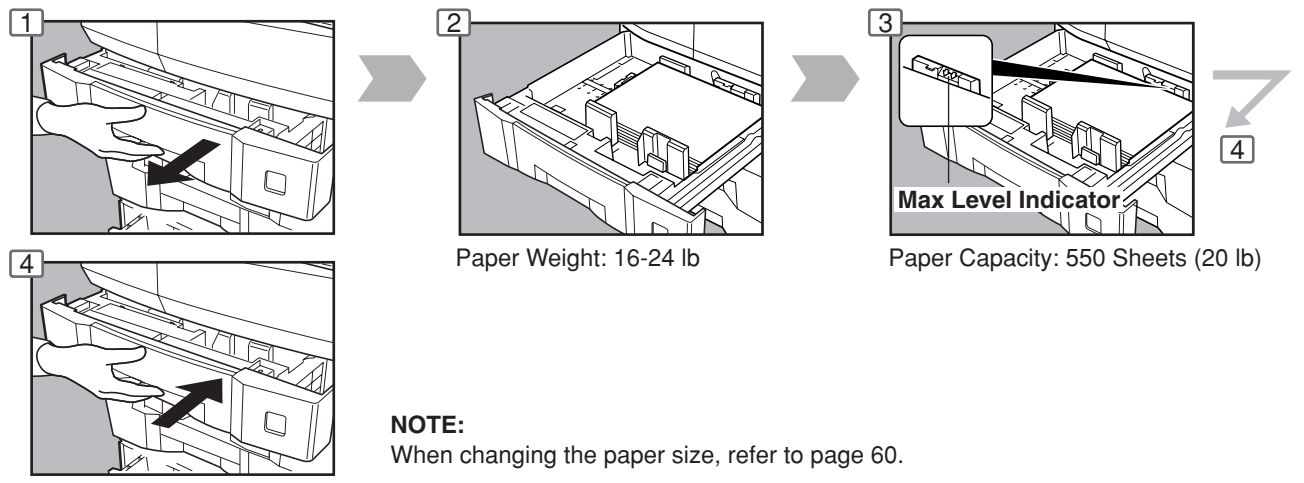

Adding Paper (Sheet Bypass)

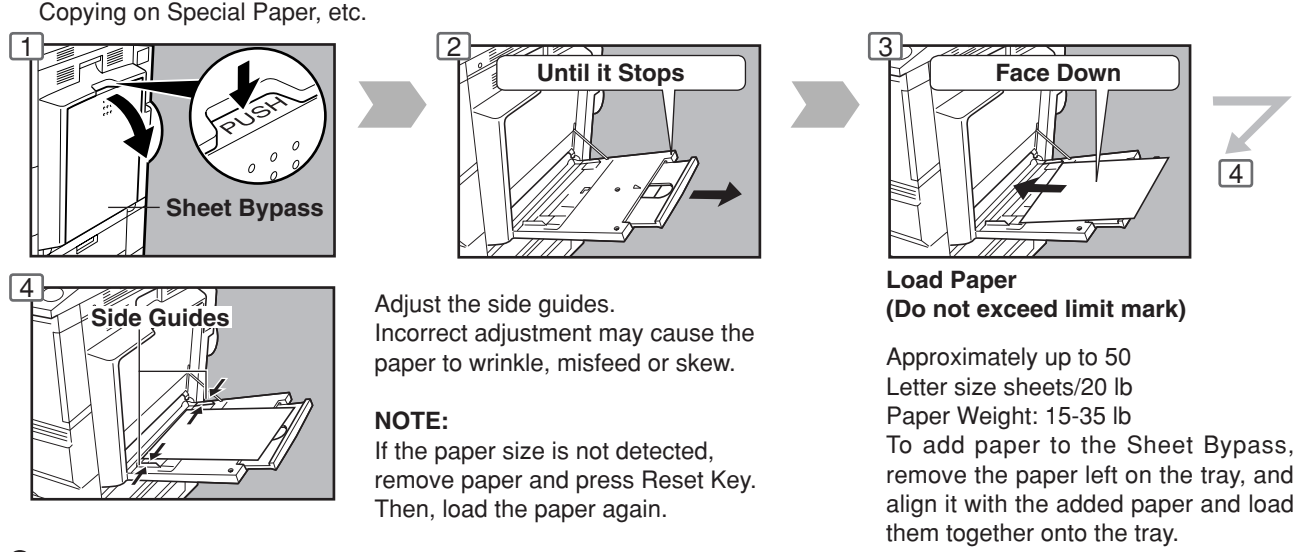

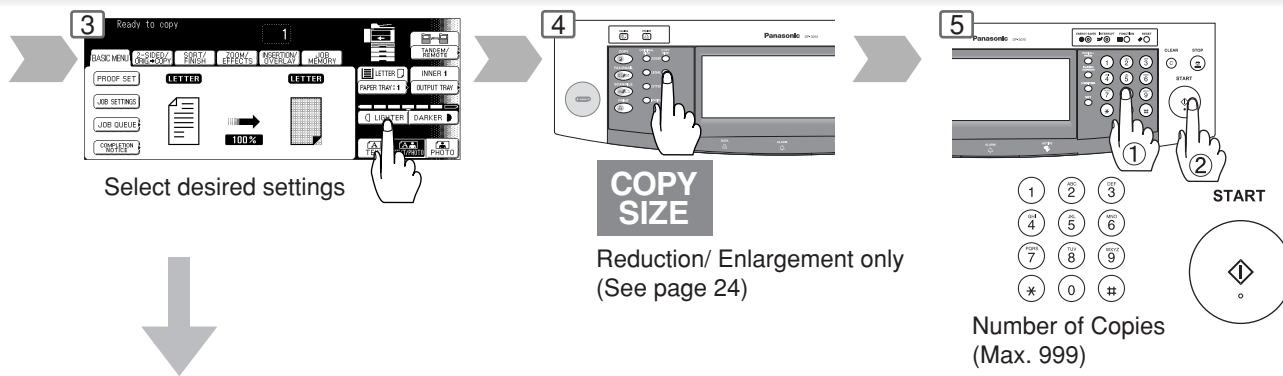

Adjust the Manual Exposure
 LIGHTER or DARKER

Select type of Original(s)
 TEXT Mainly Text TEXT/PHOTO Text and Photo combined PHOTO Mainly Photo

Select the Exit Destination
 INNER 1 Receiving Tray (Lower) INNER 2 Receiving Tray (Upper)
 OUTER Tray/1-Bin Finisher (External)

• INNER 2 and OUTER are only available when the optional Inner Tray or Exit Tray/1-Bin Finisher is installed.

Copy Jobs

(See pages 22-29)

(See pages 30-35)

(See pages 36 and 37)

(See pages 38-43)

(See pages 44-47)

(See pages 46 and 47)

Problem Solving

Adding Paper
(See page 10)

Replacing Toner Bottle
(See page 12)

Replacing Toner Waste Container
(See page 12)

UXX
EXX


Removing a Misfed Paper
(See pages 14-17)

User Error Code
(See page 12)

Machine Error Code
(Call your Service provider)

Replacing Staple Cartridge
(See page 12)

- When the optional 1-Bin Finisher (DA-F300) is installed.


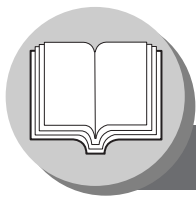


Getting To Know Your Machine

Operation Chart


■ Problem Solving

 ● Replacing Toner Bottle/Replacing Toner Waste Container

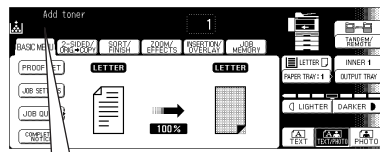


Replace Toner Bottle


Replace Toner Waste Container

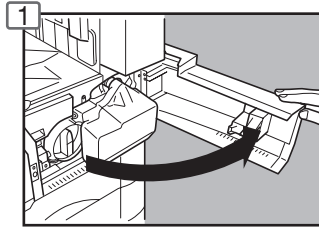


Toner Waste Container

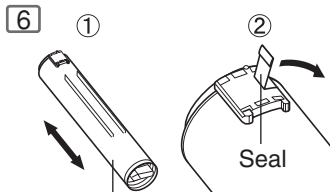

Shake the new Toner Bottle well to loosen the contents.



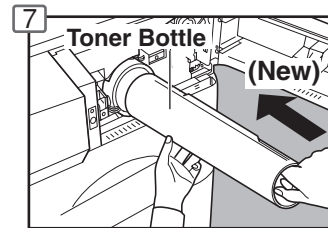


● Replacing the Staple Cartridge (When optional 1-Bin Finisher is installed.)

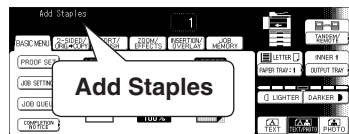


Add Staples


or

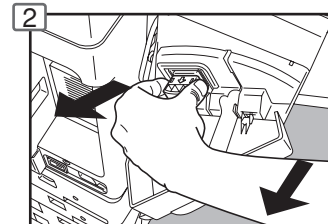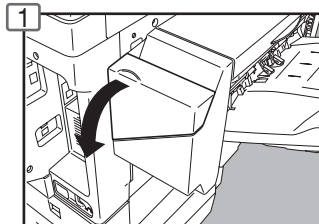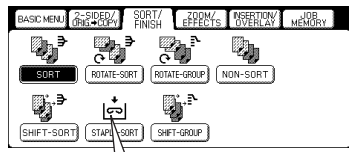

6 Check the operation

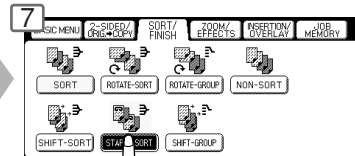


STAPLE-SORT


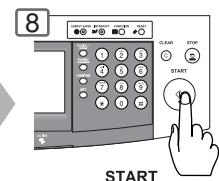


START

● User Error Codes (U Code)

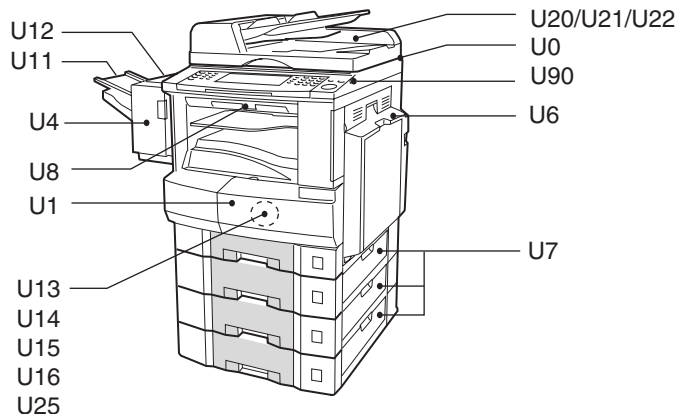


Code	Check Points
U0	Contact your Key Operator. • Key Counter is not installed. • Department ID Code is not entered.
U1	Front Cover is open.
U4	1-Bin Finisher is separated from the machine.
U6	Right Cover is open.
U7	Feeder Cover 1/2/3 is open.
U8	Transport Cover is open.

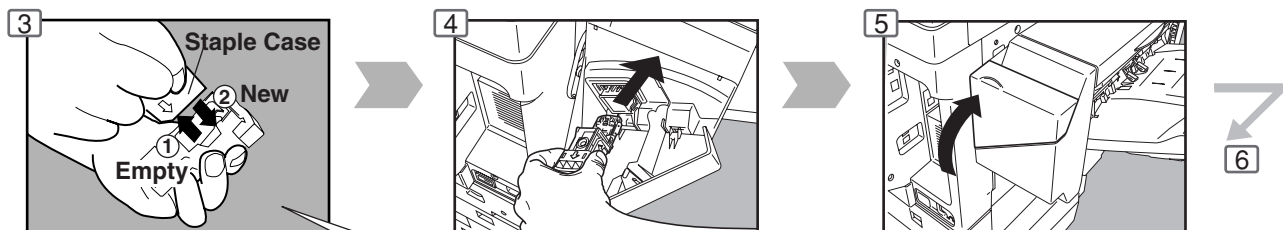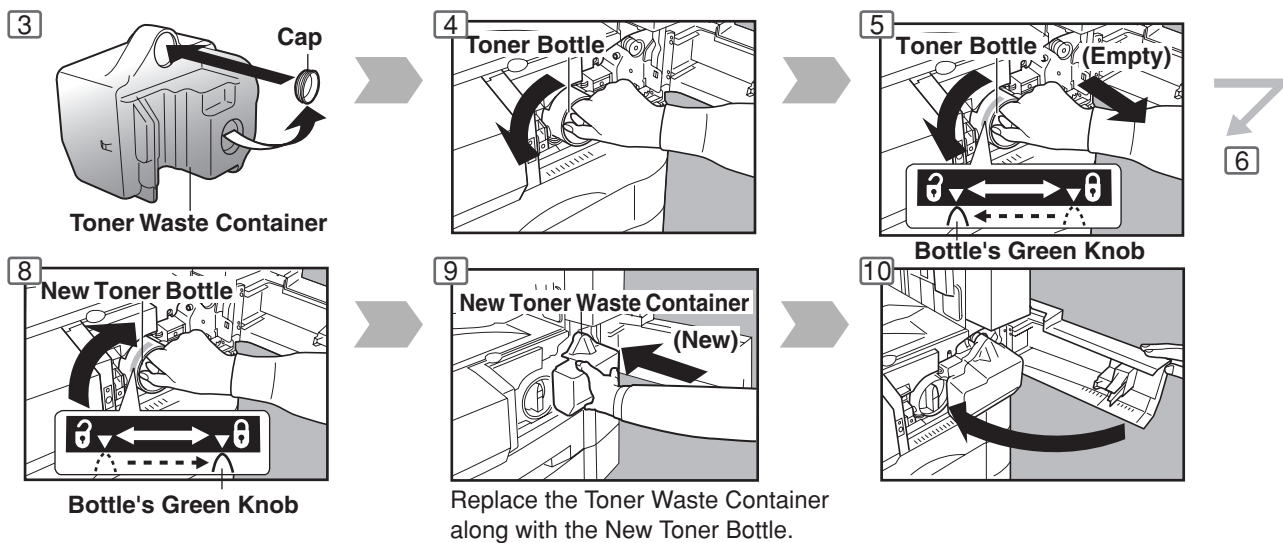


**Staple Cartridge
FQ-SS32**

When the Staple is jammed

- The following message will be displayed on the Touch Panel Display:
"Can Not Complete Confirm Staple Unit"

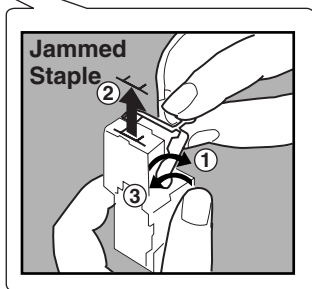

Code	Check Points	Code	Check Points
U11	Paper remains in the Finisher Bin.	U20	ADF Cover is open.
U12	Finisher Staple Cover/Top Cover is open.	U21	ADF is opened while scanning from ADF.
U13	Low Toner.	U22	ADF Exit Unit is open.
U14	Toner Waste Container is full.	U25	Shake Toner Bottle well.
U15	Toner Waste Container is not installed.	U90	Battery requires replacement.
U16	Call your Service provider.		(See page 72)
U18	Total Copy Count reached the limit, consult your Key Operator.		




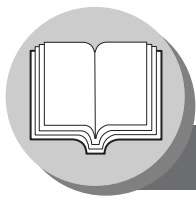


Getting To Know Your Machine


Operation Chart

■ Problem Solving (Continued)



● Removing a Misfed Paper (Paper Entry Area/1st Paper Tray)

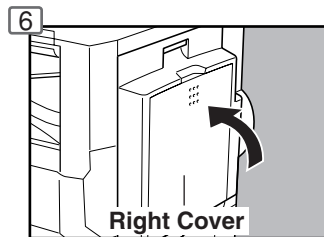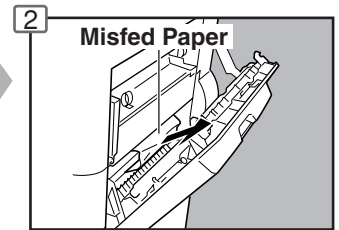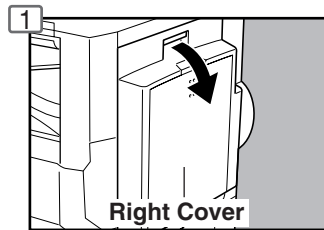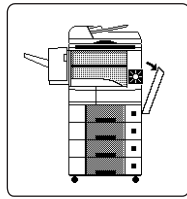




● Removing a Misfed Paper (Paper Transport Area)

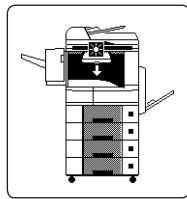


When the optional Tray/1-Bin Finisher is installed.

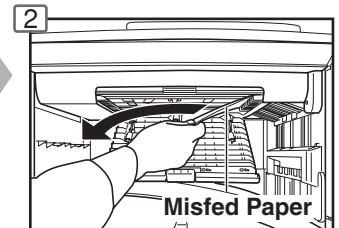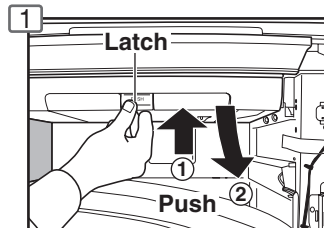



● Removing a Misfed Paper (Automatic Duplex Unit)

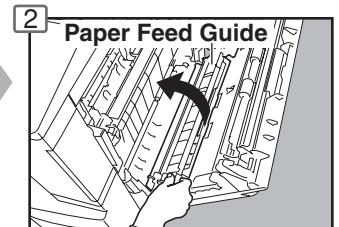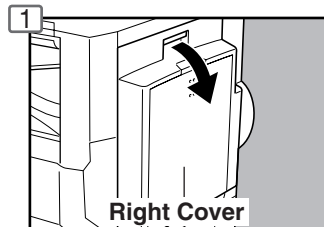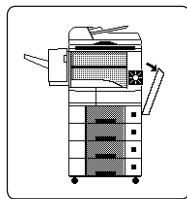


● Removing a Misfed Paper (2nd/3rd/4th Paper Tray)

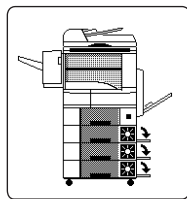


Options
3rd Paper Tray (DA-DS303)
4th Paper Tray (DA-DS304)

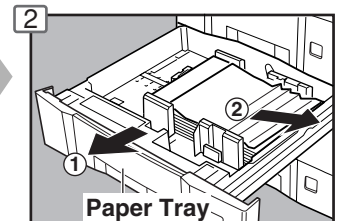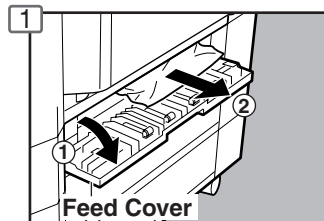

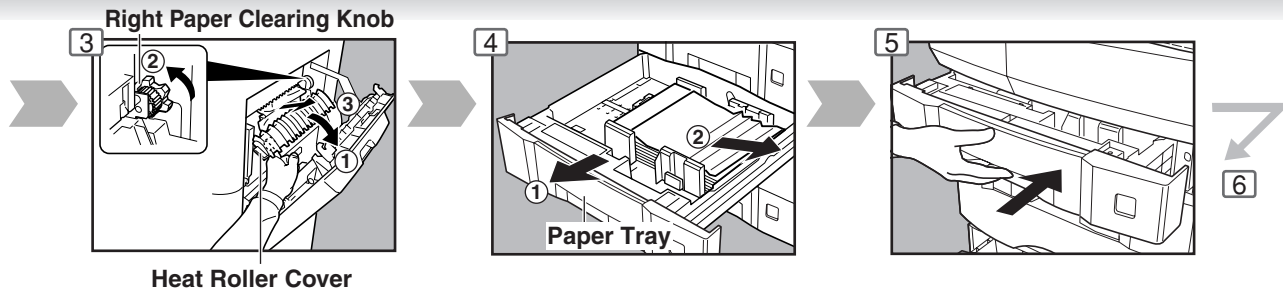



·HIGH TEMPERATURE SURFACE. DO NOT TOUCH.
 ·SURFACE TRES CHAUDE. NE PAS TOUCHER.
 ·NICHT BERUEHREN. HEISSE OBERFLAECHE VERBRENNUNGSGEFAHR.
 ·SUPERFICIE DE ALTA TEMPERATURA. NO TOCAR.
 ·表面高温 不要触摸
 FBS1486AU


注意 高温注意
 やけどの恐れあり
 ·CAUTION! HIGH TEMPERATURE
 ·ATTENTION! TEMPERATURE ELEVÉE
 ·VORSICHT! HEIZUNGSRÖLLEN SEHR HEISS
 ·ADVERTENCIA! TEMPERATURA ELEVADA
 FBS1383

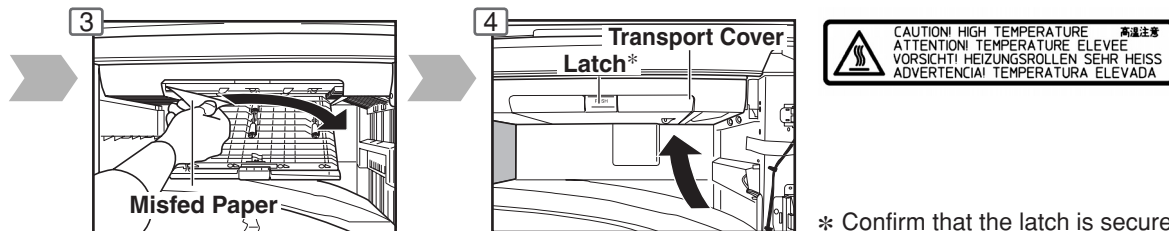

CAUTION! HIGH TEMPERATURE 高温注意
 ATTENTION! TEMPERATURE ELEVÉE
 VORSICHT! HEIZUNGSRÖLLEN SEHR HEISS
 ADVERTENCIA! TEMPERATURA ELEVADA

* Confirm that the latch is securely fastened.

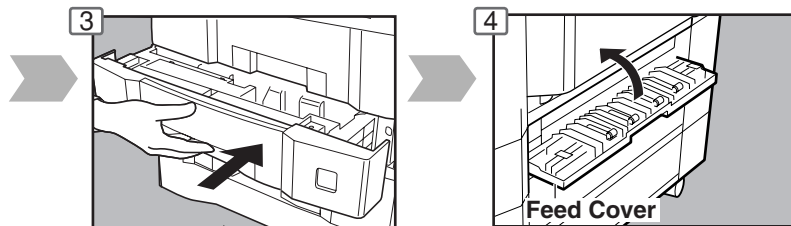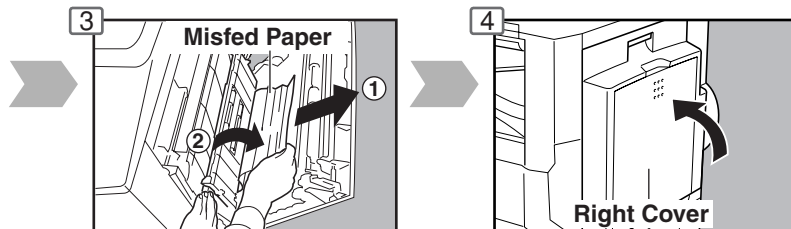





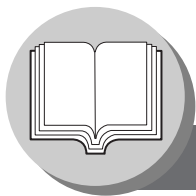


Getting To Know Your Machine


Operation Chart

■ Problem Solving (Continued)


● Removing a Misfed Paper (ADF)

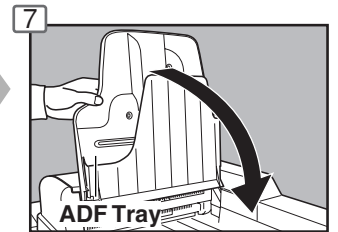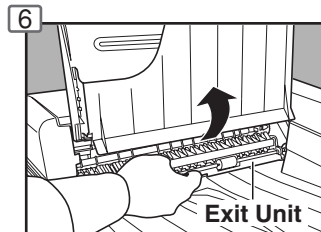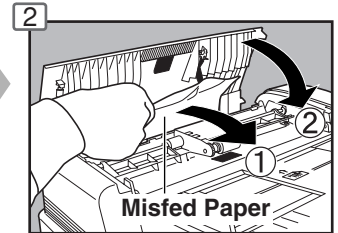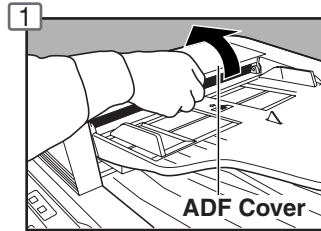
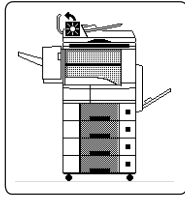


● Removing a Misfed Paper (1-Bin Finisher)

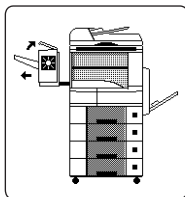

Option (DA-FS300)

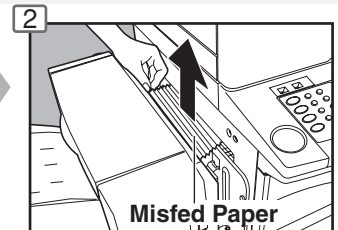

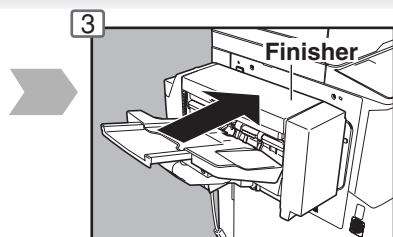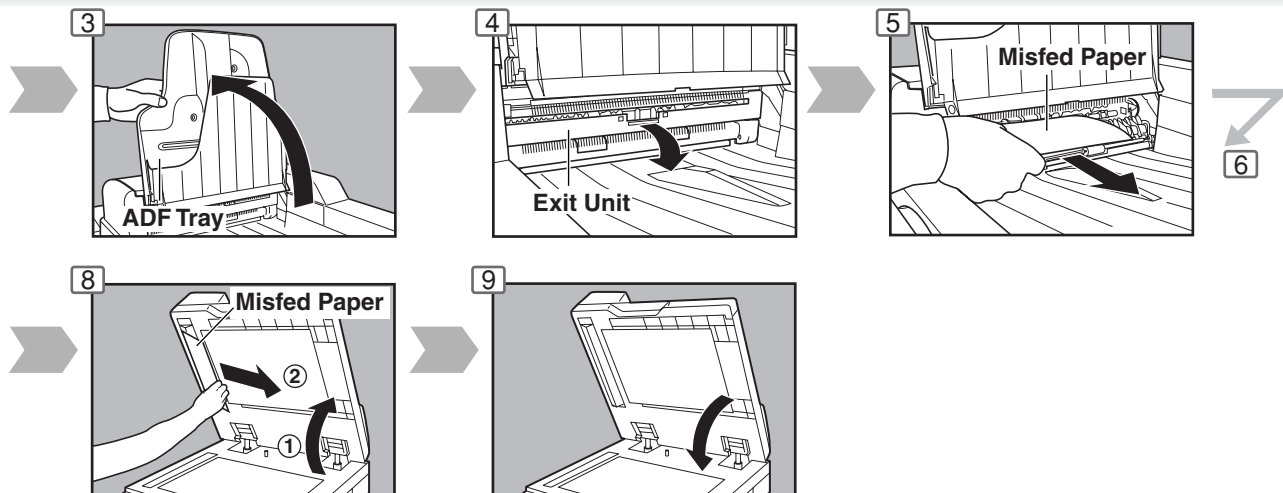


NOTE:


If the misfeed indicator(s) do not clear, open the upper cover and remove all misfed paper.

When using the Staple Sort, Shift-Sort or Shift-Group mode, remove the remaining copies on the staple tray.

Then the copy job will restart.

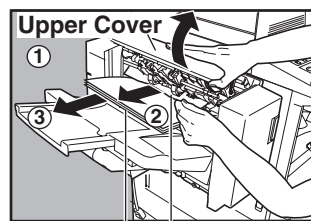


Remaining Copies Misfed Paper

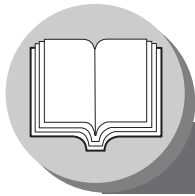

Before Starting

Energy Star

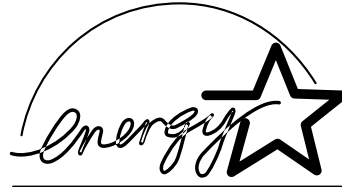


As an **ENERGY STAR**[®] Partner, Panasonic has determined that this product meets the **ENERGY STAR**[®] guidelines for energy efficiency.

This voluntary program specifies certain energy consumption and usage standards. This product will automatically “power down” after a specified period of non-use. The use of this **ENERGY STAR**[®] compliant product will reduce energy consumption and ultimately benefit the environment.

The default functions can be adjusted depending on your office requirements. Please ask your authorized Panasonic dealer for more details.

Control Panel

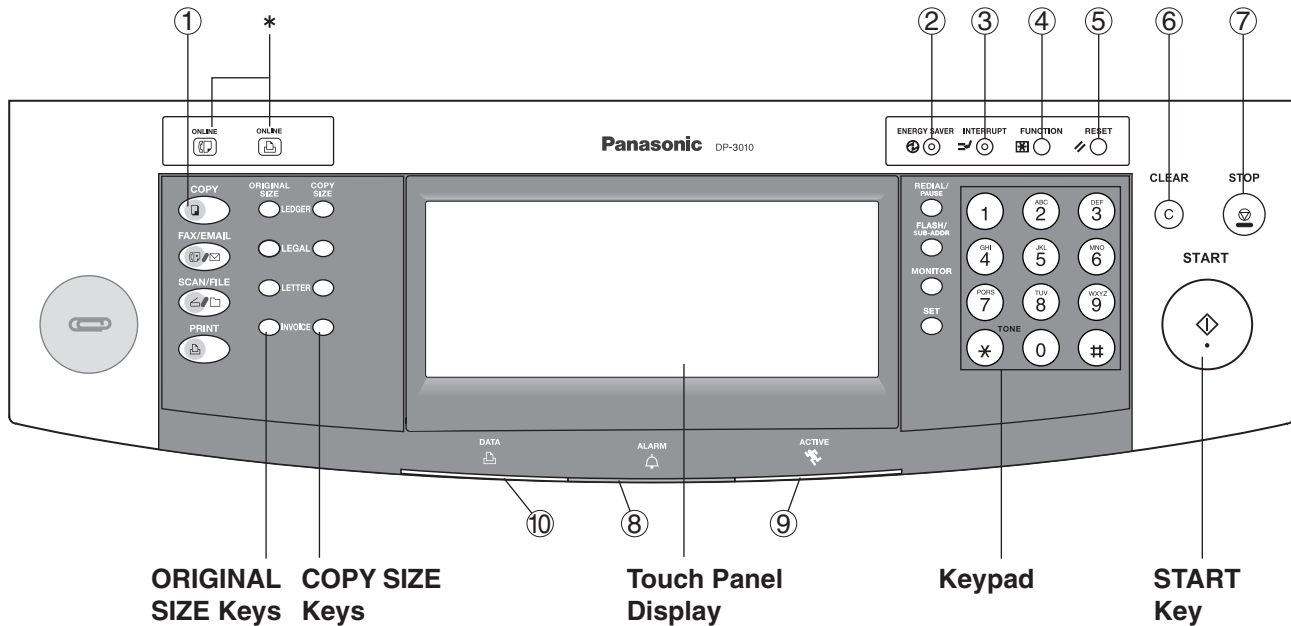

No.	Contents
①	COPY Key ● To use the unit as a photocopier.
②	ENERGY SAVER Key ● Saves power while the copier is not in use.
③	INTERRUPT Key ● Interrupts other copy or print jobs while making copies.
④	FUNCTION Key ● Use when changing the paper size, initial function values (default values) and key operator settings.
⑤	RESET Key ● Resets all features to the initial power-on state.
⑥	CLEAR Key ● Clears the copy count in the display.
⑦	STOP Key ● Stops the copy run.
⑧	ALARM LED (RED) ● Lights when trouble occurs.**
⑨	ACTIVE LED (GREEN) ● Lights when machine is active.
⑩	PRINT DATA LED (GREEN) ● Lights when receiving print data.

* Fax/Email "ON LINE" LED for optional Fax/Internet Fax functions
Print "ON LINE" LED for Printer function



NOTE

- ** When the machine detects a problem or an alarm status is activated, the ⑧ Alarm LED lights or begins to flash.
- LED Lights: Machine detected a trouble status
- No paper in the selected tray or toner has run out.
 - Machine detected trouble, such as paper misfed or jammed.
- LED Flashes: Machine detected an alarm status
- No paper in the Tray. (Tray not selected)
 - Toner is getting low, etc.
- The Control Panel displayed above shows only copier functions. Please refer to the appropriate operating instructions for other control panel functions.



Before Starting

Touch Panel Display

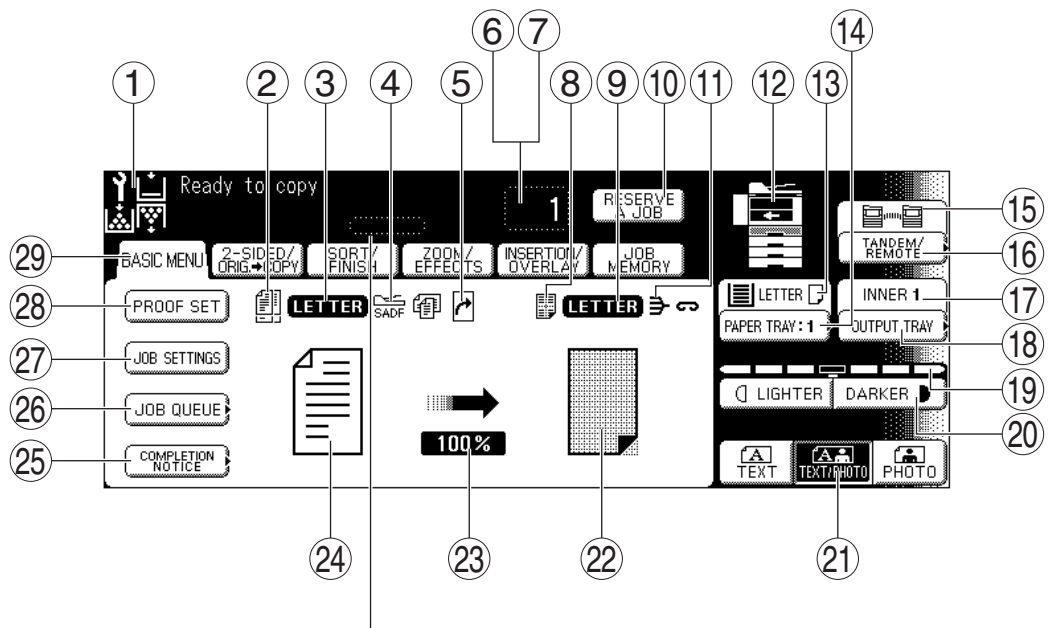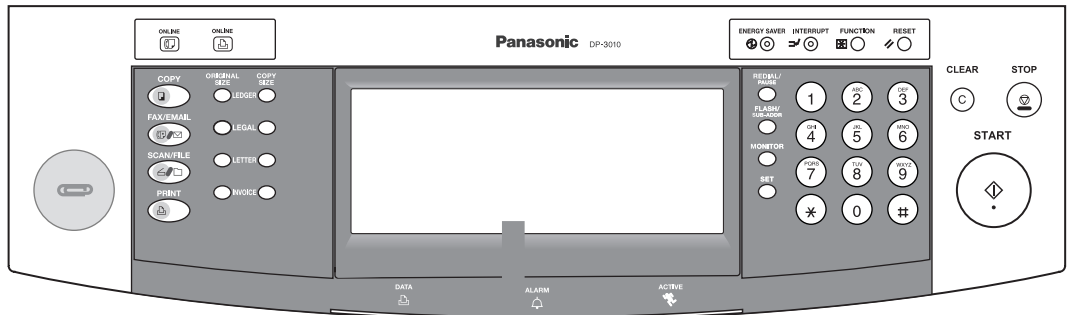

Job Status Indicator

Ex.: Copying 3 sets.

The Indicator displays the progress of a job task as follows:

0/3 → 1/3 → 2/3 → 3/3





NOTE


- Use only soft finger pressure to activate the Touch Panel Display. DO NOT USE SHARP OBJECTS such as pens, fingernails etc., as this may damage the panel.
- Touch Panel Display Brightness Adjustment:
To adjust the brightness of the Touch Panel display, press and while holding down the "C" (CLEAR) key, keep pressing the "ORIGINAL SIZE/LEDGER" or the "COPY SIZE/LEDGER" keys until the desired brightness is achieved.

ORIGINAL SIZE/LEDGER : Dimmer

COPY SIZE/LEDGER : Brighter

■ Touch Panel Display Indications

No.	Contents	See Page
①	Warning Indications  : Add Toner  : Add Paper  : Call Service (Call your Service Provider)  : Waste Toner	10 - 13
②	Original Icon	—
③	Original Size Indication	—
④	Job Build and SADF/Multi-Size Feed Mode Indication	34, 35
⑤	Rotate Mode Indication	—
⑥	Number of Copies / Original(s)	—
⑦	Machine / User Error Code Indication (E1-01, U13, etc.)	12, 13
⑧	Copy Icon	—
⑨	Copy Size Indication	—
⑩	Reserve a Job Button	49
⑪	Finisher Functions Indication	37
⑫	Machine Outline with Tray Selection (Paper Tray and Output Tray)	—
⑬	Paper Level and Size Indication	—
⑭	Paper Tray Selection Button	—
⑮	Tandem/Remote Button Indication	25
⑯	Tandem/Remote Button	25
⑰	Output Tray Indication	11
⑱	Output Tray Button	11
⑲	Density Indicator (7 steps)	11, 23
⑳	Manual Exposure Select Buttons (Lighter and Darker)	11, 23
㉑	Original Mode Select Button (Text; Text / Photo; Photo)	11, 23
㉒	Copy Image and Paper Image Indication	—
㉓	Copy Ratio Indication	—
㉔	Original Image Indication	—
㉕	Completion Notice Button	29
㉖	Job Queue Button	28
㉗	Job Settings Button • Selected copy jobs will be indicated on the right side of the touch panel display. (2-Sided/Original → Copy, Sort/Finish, Zoom/Effects, Insertion/Overlay modes)	—
㉘	Proof Set Button	25
㉙	Function Categories	—


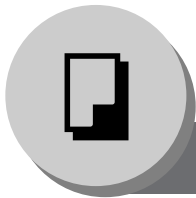


Making Copies

Basic Menu

■ Copying the Same Size Originals (1:1)

Copy size is automatically selected.

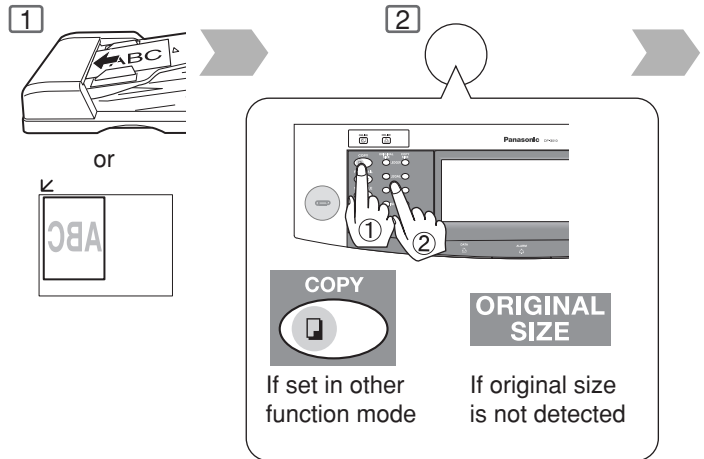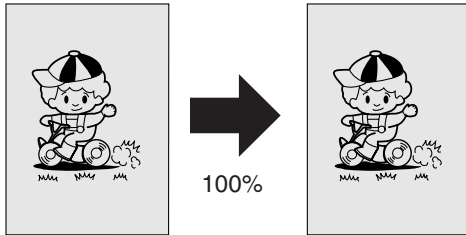


■ Using the ADF

Inappropriate Originals


- Paper with a smooth surface such as glossy and coated papers
- Transparencies
- Originals with a Lead Edge that is "creased", "folded", "punched" or "glued"
- Paste-ups
- Pressure sensitive or carbon backed papers
- Paper with excessive curl
- Stapled originals
- Freshly printed copies from a laser printer

ADF

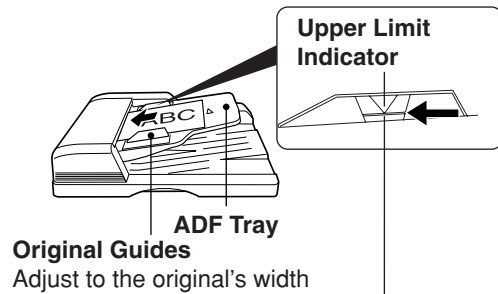


Set the originals up to the upper limit indicator

■ Copying on Heavy Paper (Post Cards, etc.) (35 lb max.)

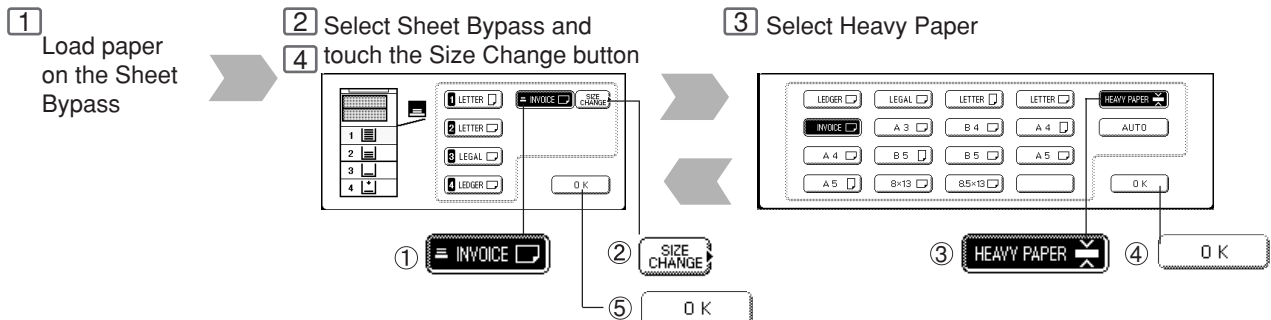

NOTE

- During the copy operation and after making copies, the fan motor may start spinning. This is a normal operation and is used to cool down the copier.

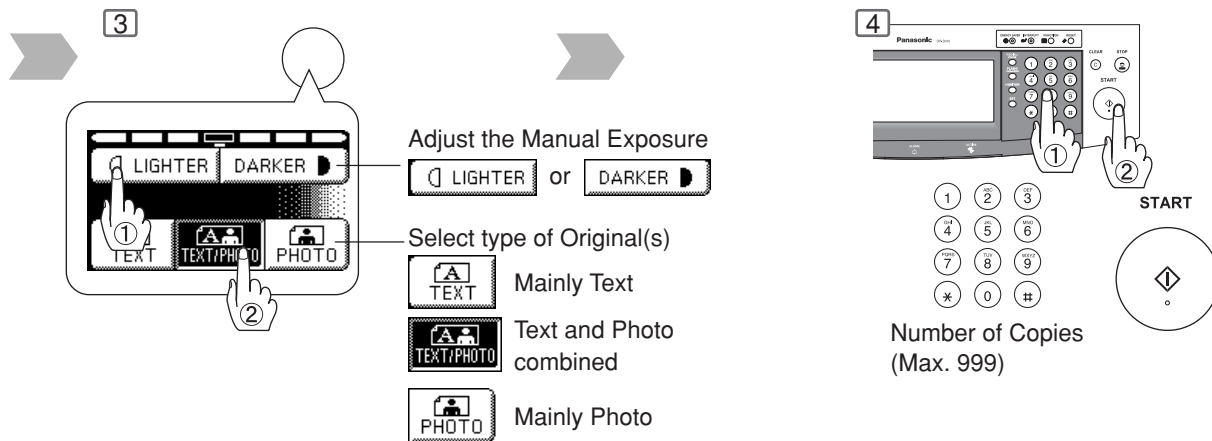


Features

Automatic Original Feeding

- ① Feeds originals automatically
Up to 50 Letter size (20 lb)
(up to 30 Legal or Ledger size)
Automatic original size detection
- ② Invoice to Ledger

Duplex Copying

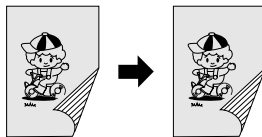

2-Sided originals

➔ 2 or 1-Sided copy automatically

(See pages 30 and 31)

 
Insertion/Overlay

- Cover
- Page Insertion
- OHP Interleaving
- Presentation
- Overlay


(See pages 44-47)

Position of the original(s)

From ADF/i-ADF



From Platen

 


NOTE

● Memory Capacity:

If the memory becomes full during original scanning, the message "Cannot Complete / Job Exceeds Memory Capacity" will be displayed on the LCD. If this occurs, follow the instructions on the LCD.



When additional memory is required, consult with an authorized service provider.

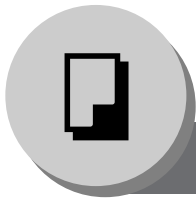

Making Copies



Basic Menu

■ Copying with Preset Ratios

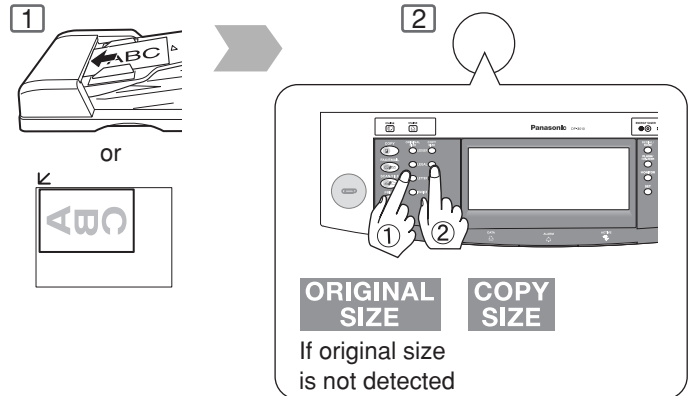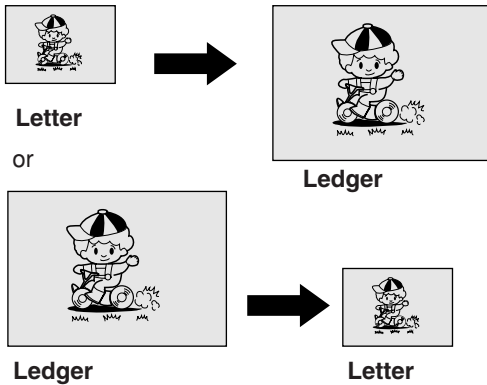



■ Proof Copying

Allows you to make one proof set, before proceeding to copy a large multi-set with various settings.

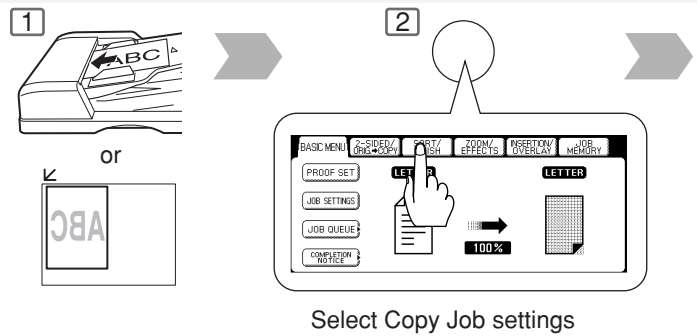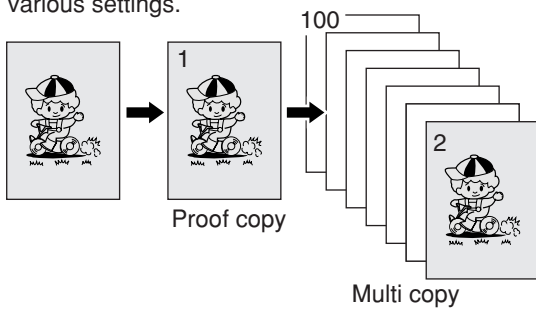

■ Tandem/Remote Copying

Requires installation of optional Hard Disk Drive (DA-HD30) and additional Image Memory (DA-SM16B/SM64B/SM28B), Network setup (See pages 56 and 62) and Parameter registration. (See page 26)

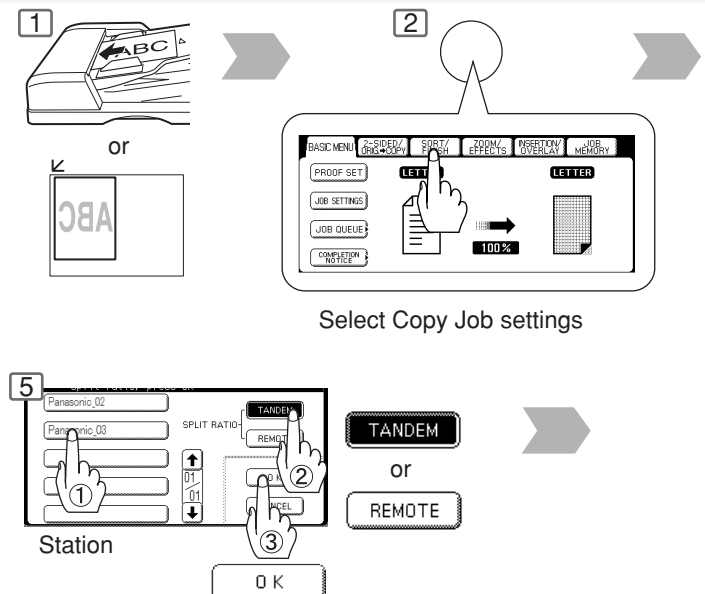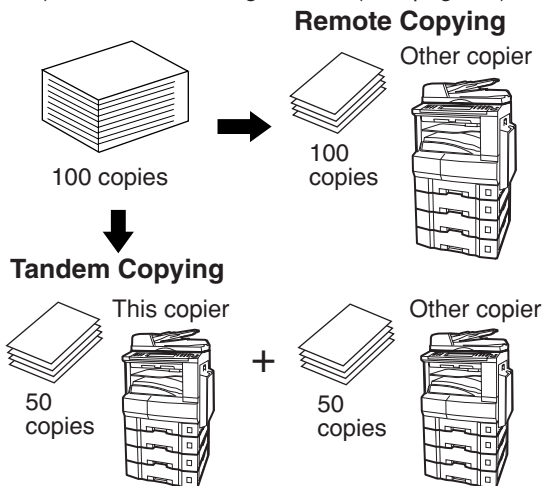









NOTE

- If the desired copy size is different from the paper size loaded in the Paper Tray, use Sheet Bypass. (See page 10)
The selected Remote printing copier, must be either DP-2310 or DP-3010.
For the copier to function as a Remote/Tandem Copier it has to be setup in advance.

3 The Correct ratio is automatically selected.


Reduction and enlargement ratios (%)

ORIGINAL SIZE	COPY SIZE			
	Ledger	Legal	Letter-R	Invoice-R
Ledger	100	77	65	50
Legal	121	100	79	61
Letter-R	129	100	100	65
Invoice-R	200	155	129	100

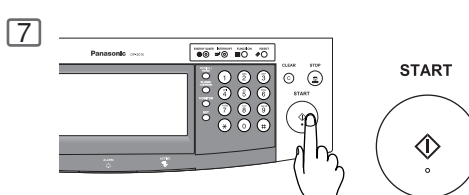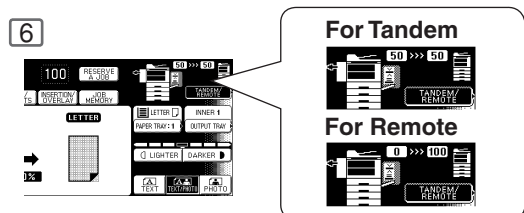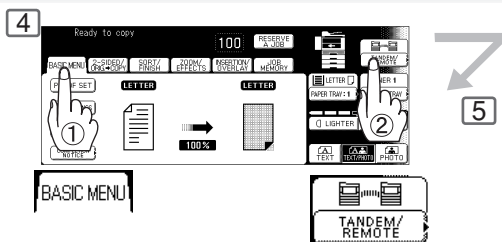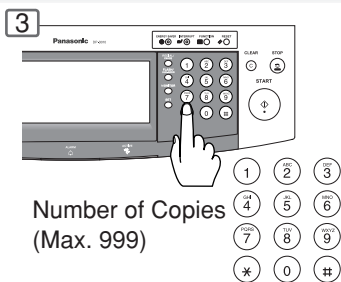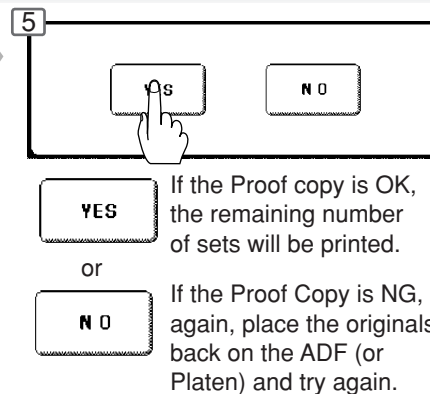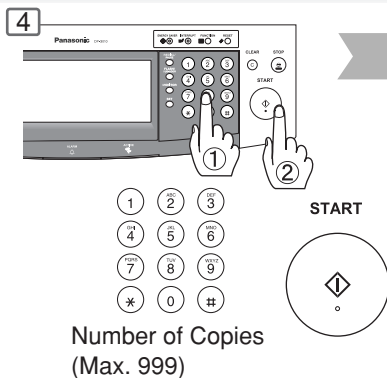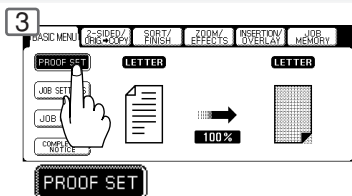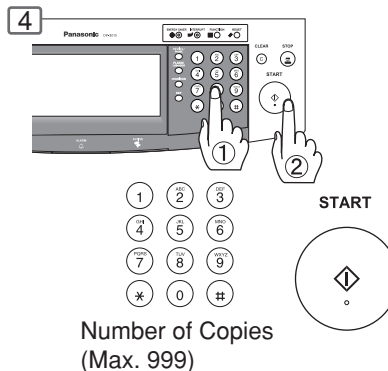

NOTE

- Press the PROOF SET button again if the Proof Copying mode was reset.

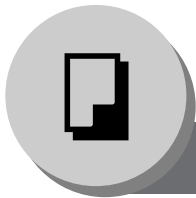


Making Copies


Basic Menu

■ Tandem/Remote Copy Settings (Registration 1)



Input the Key Operator ID Code if required.

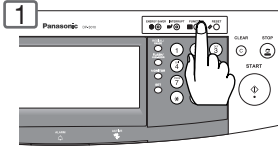

FUNCTION

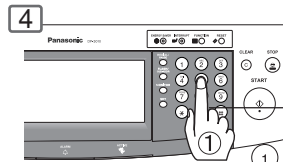


Input ID Code
(4-digit)

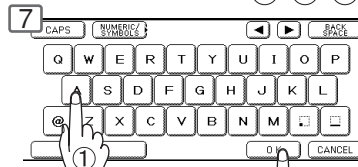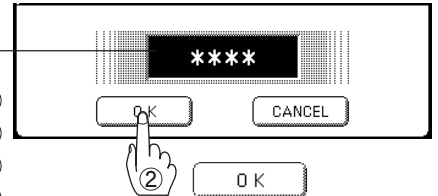


Enter the key name*
(up to 15 characters).

 * By default, the key name will be up to 15 characters of the station's name.




■ Tandem/Remote Copy Settings (Registration 2)


If either DP-2310 or DP-3010 is installed on a Network with a different subnet mask, the DP-2310 or DP-3010 must be registered first, before being able to use the Tandem/Remote Copying function.

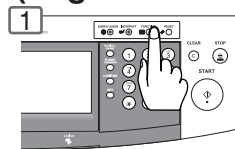


FUNCTION

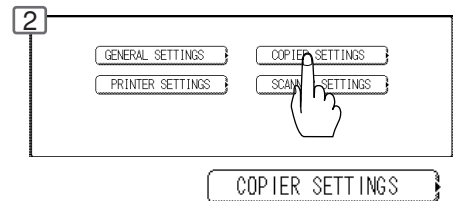

COPIER SETTINGS

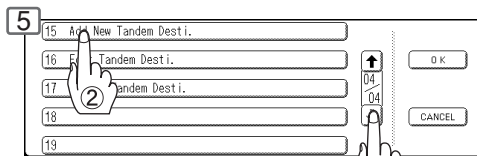

15 Add New Tandem Dest. i. Scroll to 04/04

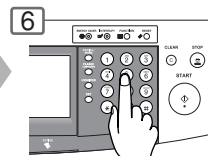

IP Address


Ex: 123.123.12.1

When entering a 1 or 2-digit number segment, add "00" or "0" in front of the number, to scroll to the next segment of numbers or press the "*" key to enter a period after the number.

■ Tandem/Remote Copy Settings (Editing)

To edit the registered machine's settings (IP Address, machine name or key name).

1 Open the screen 04/04 same as the Registration procedures above.

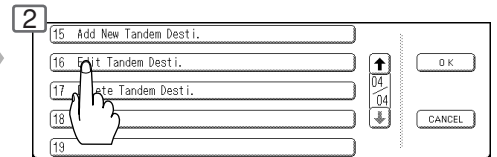


16 Edit Tandem Dest. i.


■ Tandem/Remote Copy Settings (Deleting)

To delete the registered machine.


1 Open the screen 04/04, same as the Registration procedures above.

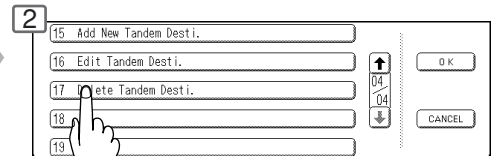

17 Delete Tandem Dest. i.

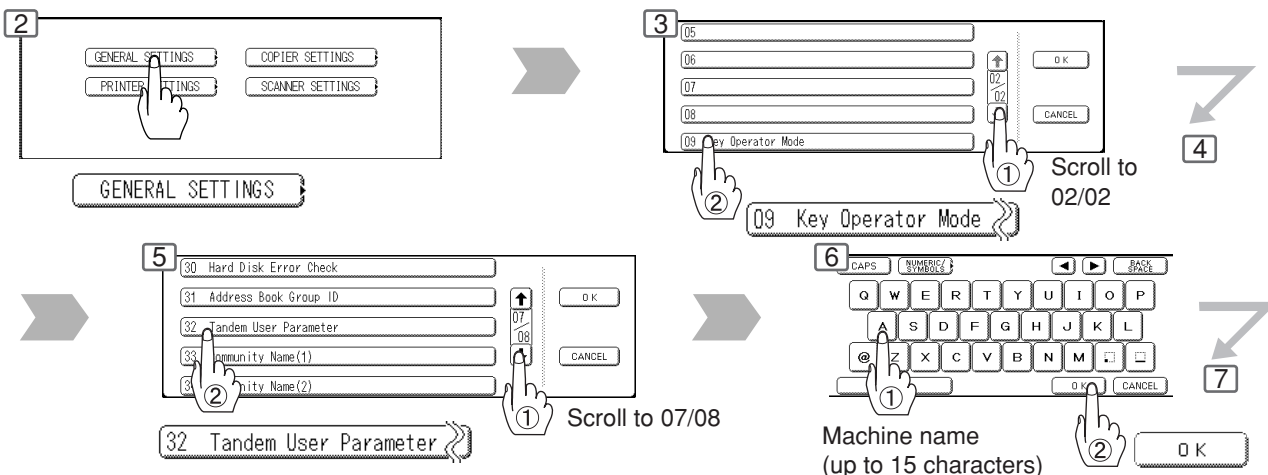

Button Names on the Keyboard

 

To input upper case letter(s).






To move the cursor () to the left or right side.



To input numbers and/or symbols.



To erase the character before the cursor.

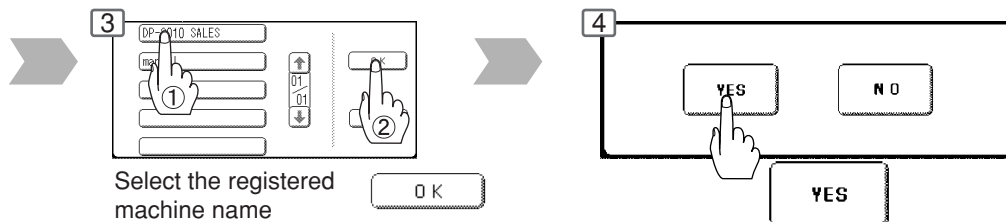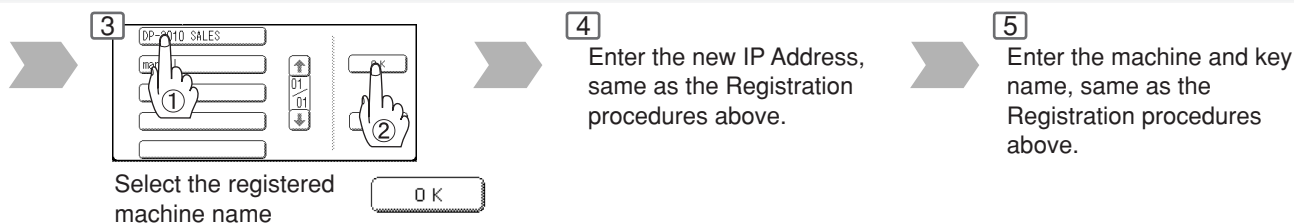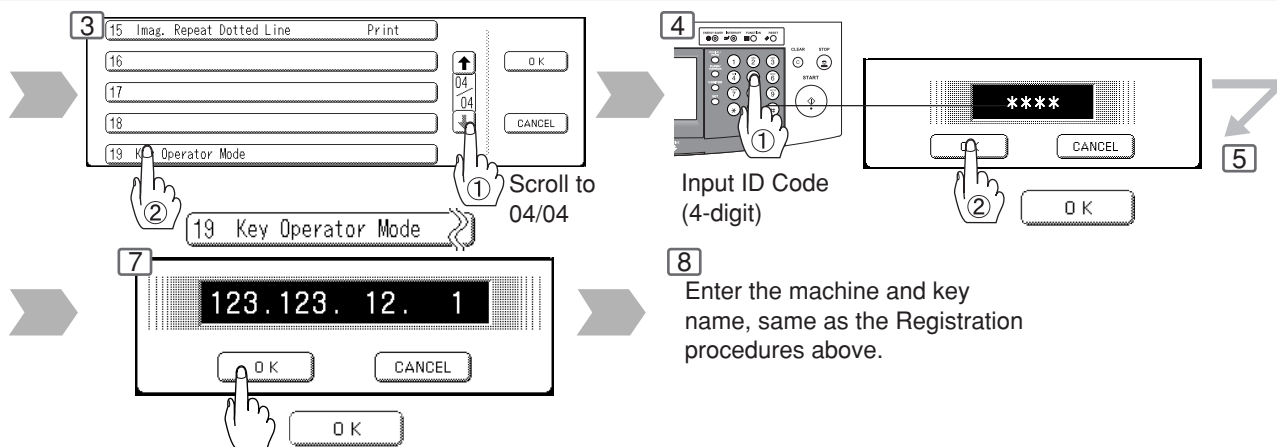






Making Copies

Basic Menu

Job Queue

Refers to a list of jobs waiting to print, delete or change of priority (only for print job).

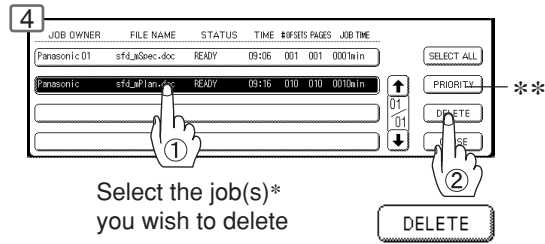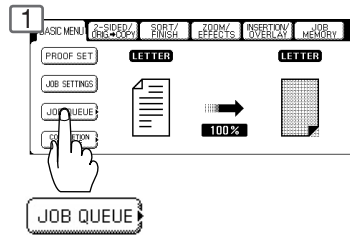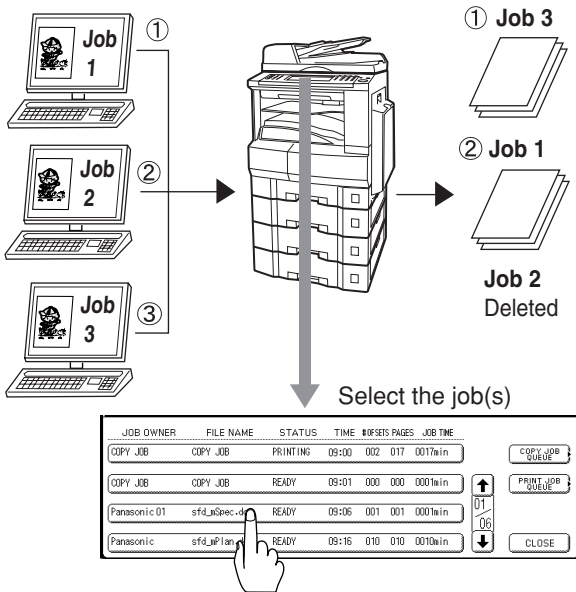



Select the job(s)* you wish to delete

- * You can select to delete multiple/all jobs.
- ** Priority can be selected for print jobs only when the optional HDD is installed.

Completion Notice

A Job Completion Notice via a pop up screen on the Desktop of your PC when the Copy Job is completed.

Before using the Completion Notice, install the Panasonic-DMS included with the machine.

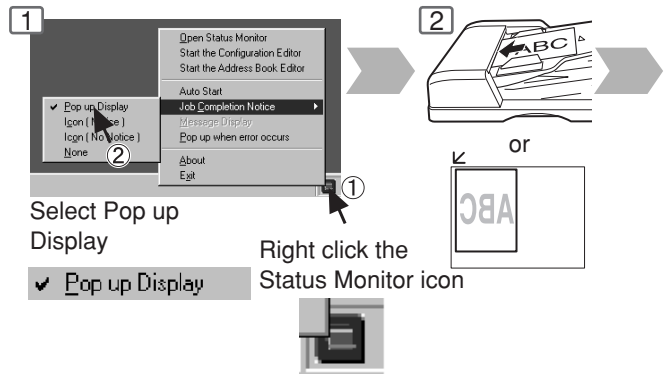
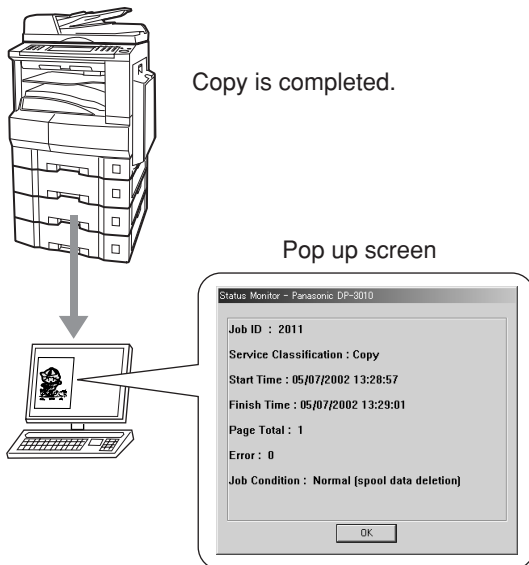


Select Pop up Display

Right click the Status Monitor icon


NOTE

- The PRINT JOB QUEUE requires the Key Operator's Password, however, the COPY JOB QUEUE does not require a password. The Job Queue selection function is only available when the optional HDD is installed.

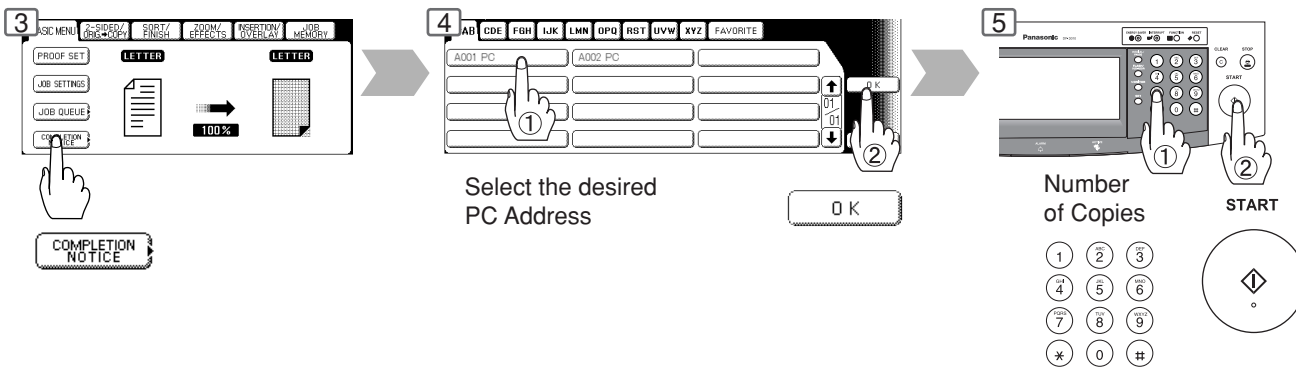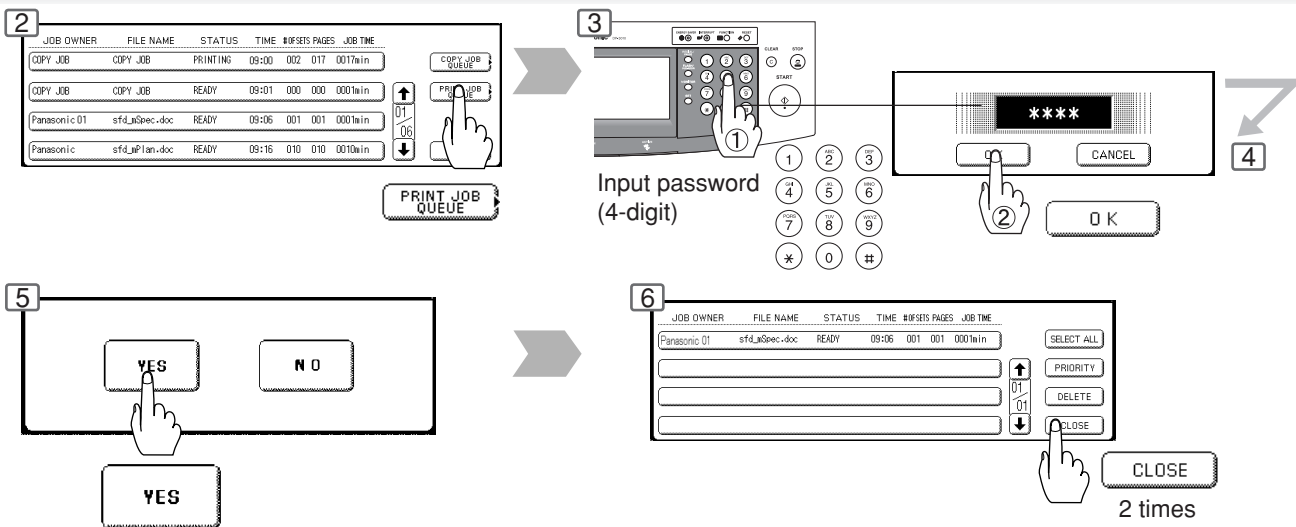

NOTE

- This Completion Notice is available only when connected to the Network. To reset the Completion Notice, press the CANCEL button.

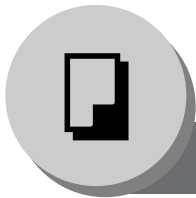


Making Copies


2-Sided/Original → Copy

1-Sided → 2-Sided, 2-Sided → 1-Sided, 2-Sided → 2-Sided Copy



1 → 2 } 1-Sided → 2-Sided

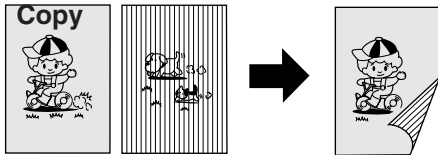

2 → 1 } 2-Sided → 1-Sided

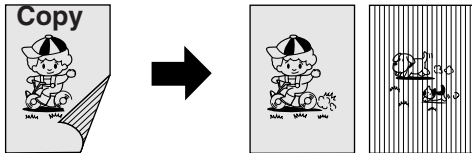


2 → 2 } 2-Sided → 2-Sided Copy

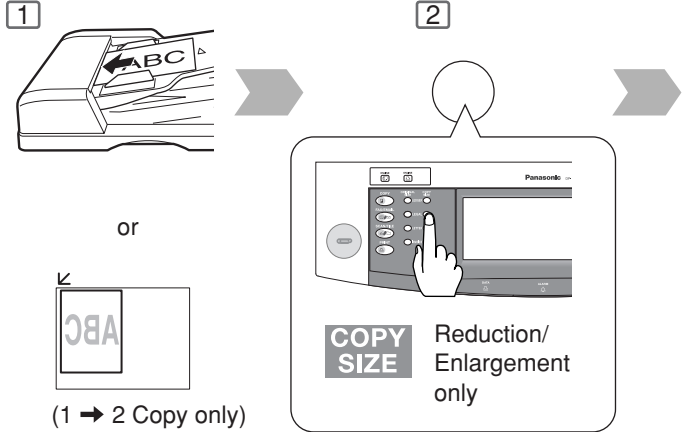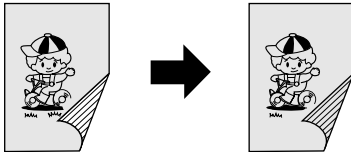

(1 → 2 Copy only)


● Duplex Notice Function

 "2-SIDED PRINT" is printed on 1-Sided copy.




Book → 2-Sided Copy


BOOK → 2 } Book → 2-Sided Copy

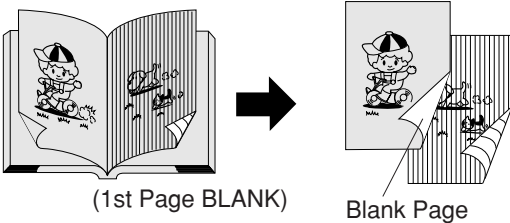

(1st Page BLANK)

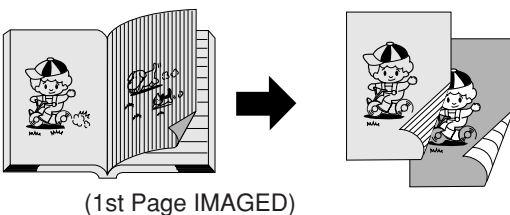

(1st Page IMAGED)

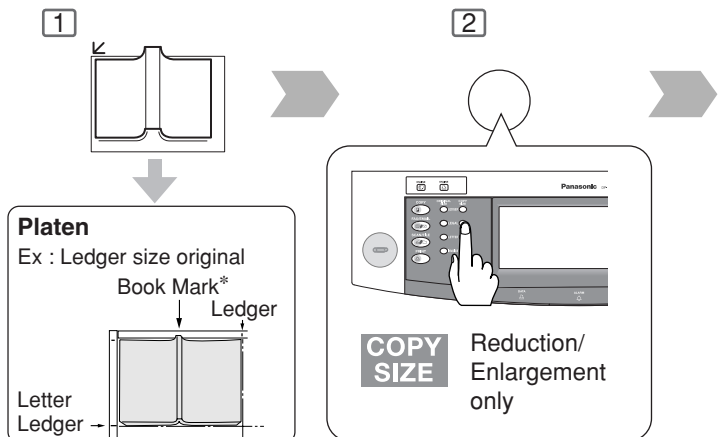

* Center book by length and width according to center marks only for Ledger size.

● Duplex Notice Function

"2-SIDED PRINT" is printed on 1-Sided copy.

3 2-SIDED/ ORIG → COPY

1 → 2
or
2 → 1
or
2 → 2

When clearing the 2-Sided Copy:
1 → 1

4 Bind position

LONG EDGE
or
SHORT EDGE

OK

4 ORIENTATION

LONG EDGE
or
SHORT EDGE

DUPLX NOTICE
If required

OK

CANCEL

5 Number of Copies

START

Number of Copies

1 2 3
4 5 6
7 8 9
* 0 #

6 From Platen:
When "Last Original?" message is displayed.
Ex: 2 originals
① Touch "NO" button.
② Place next original on the platen.
③ Press Start Key.
④ Touch "YES" button.

When DUPLEX NOTICE is selected.

2-SIDED PRINT

3 2-SIDED/ ORIG → COPY

BOOK → 2

4 Original format Copy format

LONG EDGE
or
SHORT EDGE

1 → 2
or
2 → 1

1st PAGE IMAGED
or
1st PAGE BLANK

DUPLX NOTICE
If required

OK

5 Number of Copies

START


Number of Copies

1 2 3
4 5 6
7 8 9
* 0 #

6 When "Last Original?" message is displayed.
Ex: 2 originals
① Touch "NO" button.
② Place next original on the platen.
③ Press Start Key.
④ Touch "YES" button.

When DUPLEX NOTICE is selected.

2-SIDED PRINT


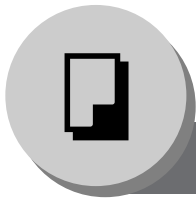


Making Copies

2-Sided/Original → Copy

2 Page Copy

Copying two facing pages or a Ledger size original on two separate Letter size sheets.

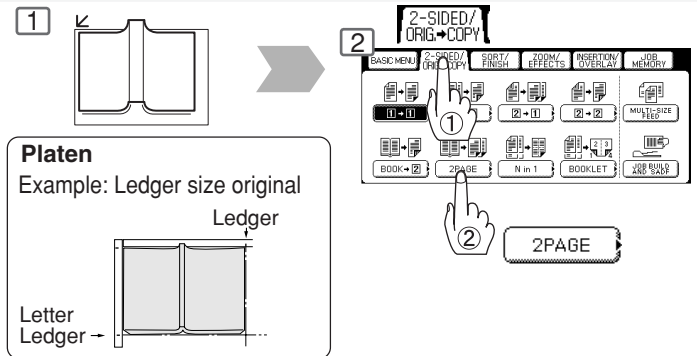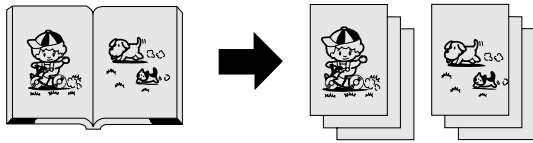


N in 1 Copy

From two/four/six 1-Sided originals, side by side, to 1-Sided pages.


2 in 1 Copy



 4 in 1 Copy





6 in 1 Copy

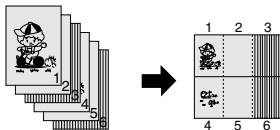

2-Sided Copy


From 4/8/12 1-Sided originals, side by side, to 2-Sided copies.

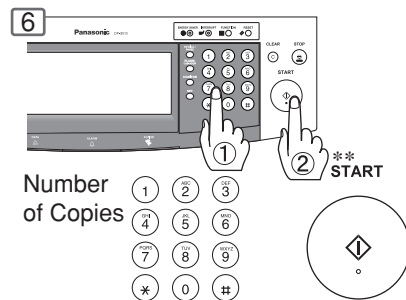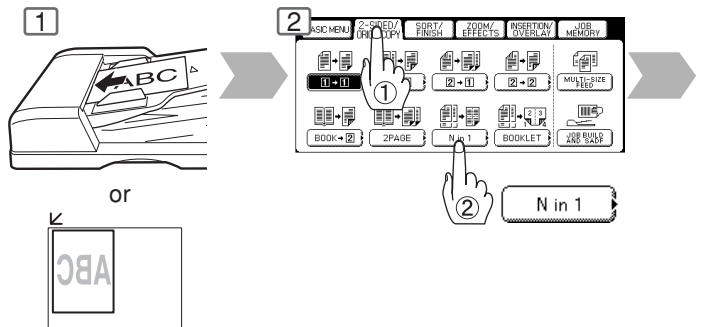


From Platen:
Same Procedures as for 2 Page Copy


Booklet Copy

Formats the output in a manner so that documents can be folded like a book.

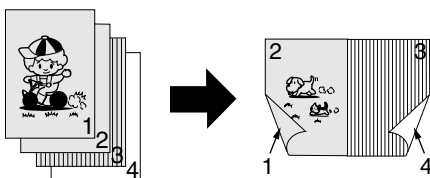


Letter or Invoice originals only

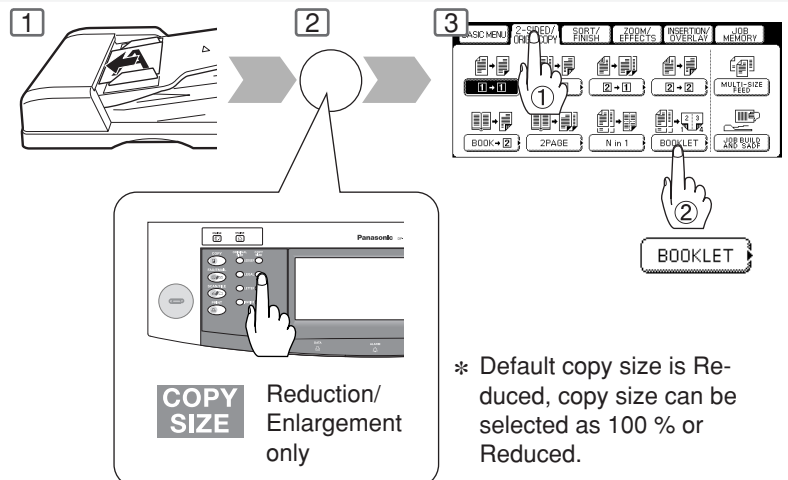


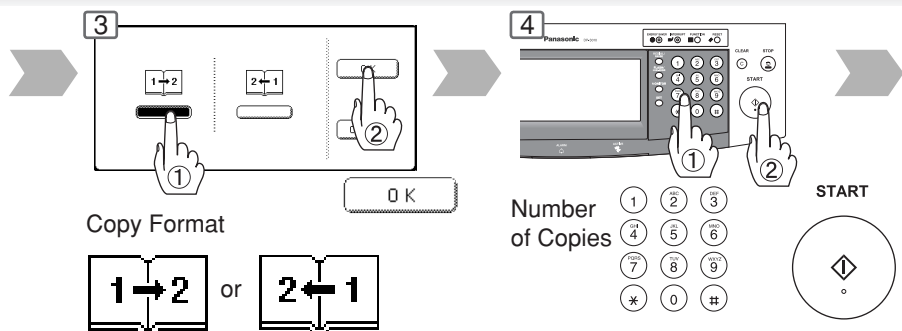



5 When "Last Original?" message is displayed.
 Ex: 2 originals
 ① Touch "NO" button.
 ② Place next original on the platen.
 ③ Press Start Key.
 ④ Touch "YES" button.

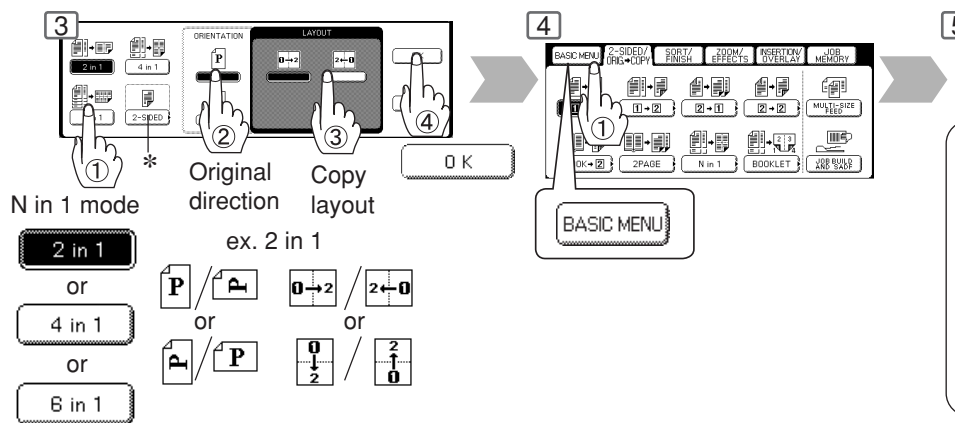


- Copy is automatically reduced.
 2 in 1: 65 %, 4 in 1: 50 %, 6 in 1: 38 %
 (ex. Letter to Letter-size)

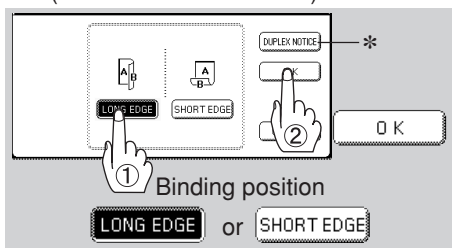

* When N in 1 Copying a 2-Sided copy. "2-SIDED PRINT" will be printed on the copy when "DUPLEX NOTICE" is selected.

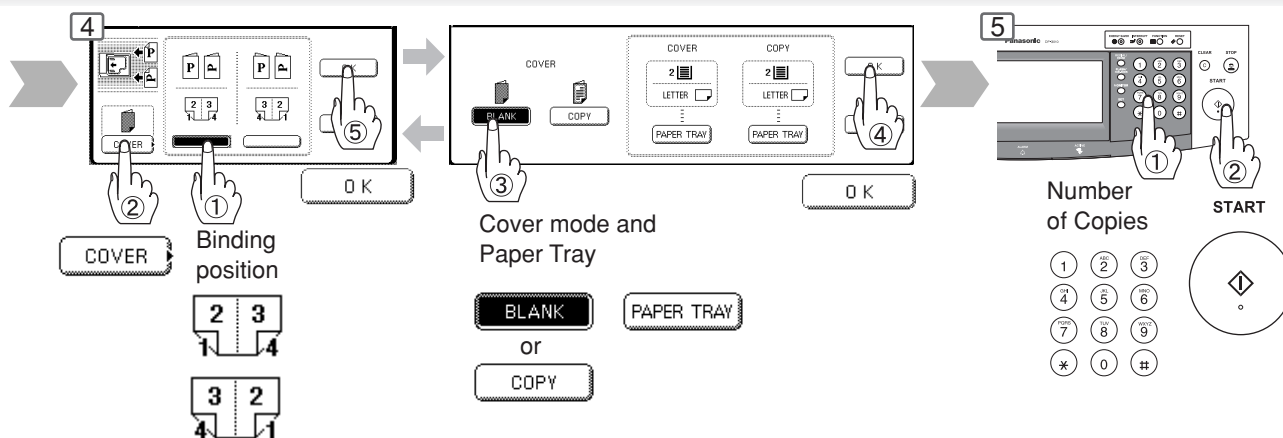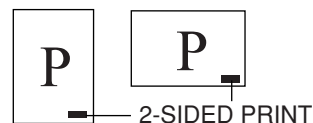

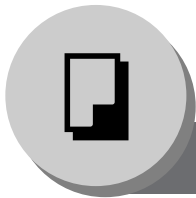

Making Copies


2-Sided/Original → Copy

Multi-Size Feeding

Use this function when copying mixed Ledger/Letter size originals using the ADF. Original size can be detected automatically then can be copied full size (1:1) or same size.


Combination of Multi-Size Feeding

Originals	Copies		
	Full Size	Reduction	Enlargement
Legal	Legal	Letter-R/Invoice	Ledger
Letter-R	Letter-R	Letter-R/Invoice	Ledger
Ledger	Ledger	Letter/Letter-R	—
Letter	Letter	Letter/Letter-R	—

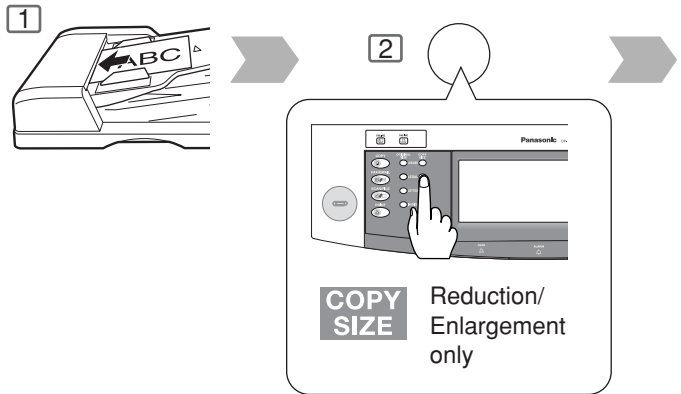



Job Build and SADF Mode

Special originals (like thin paper, etc.) can be fed from the ADF Tray and copied continuously using the Job Build and SADF Mode.

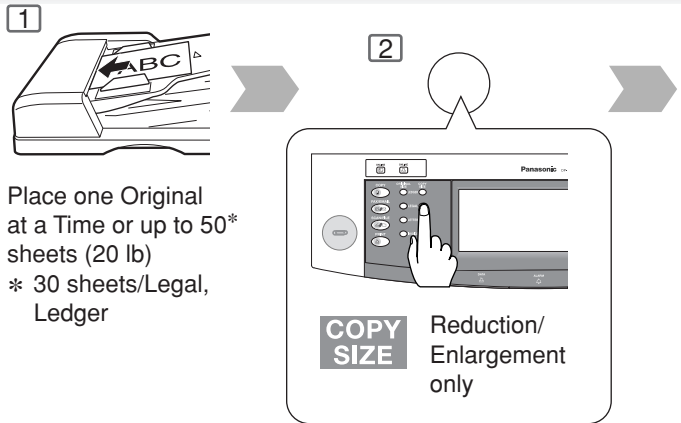

Place one Original at a Time or up to 50* sheets (20 lb)
* 30 sheets/Legal, Ledger




Example: To make 5 sets of sorted copies of 80 sheets of originals. (Letter size)

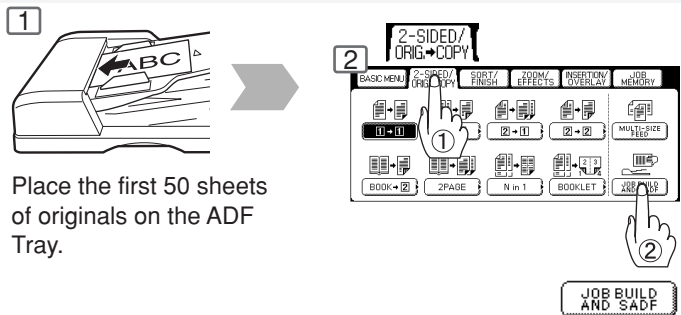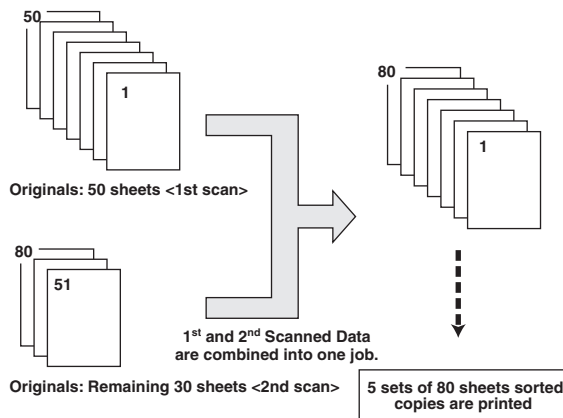

Place the first 50 sheets of originals on the ADF Tray.

NOTE

- Multi-Size Feeding Function cannot be combined with another 2-sided/original → copy function.
- Job Build and SADF function cannot be combined with 2 → 1 and 2 → 2.
- Optional Image Memory or Hard Disk Drive (DA-HD30) may be required.

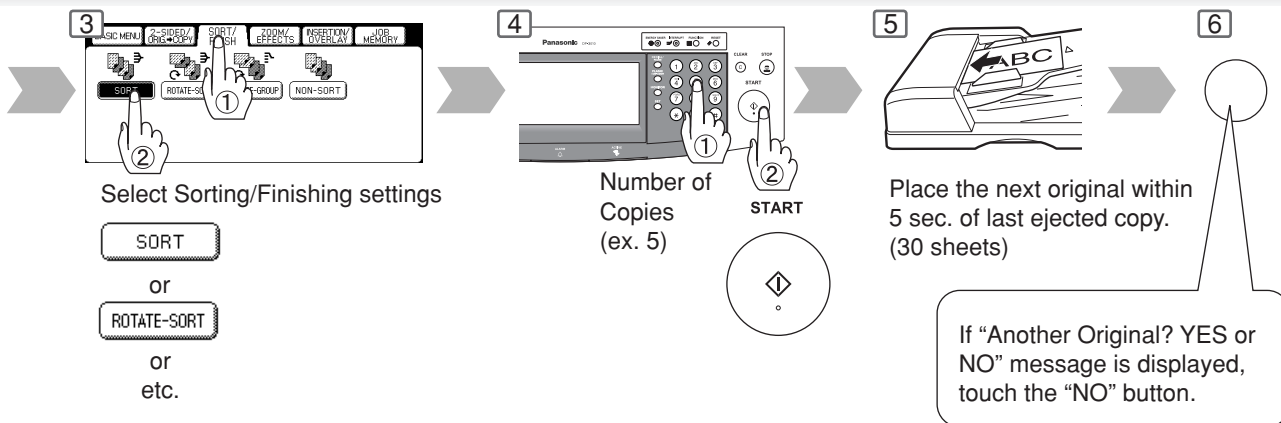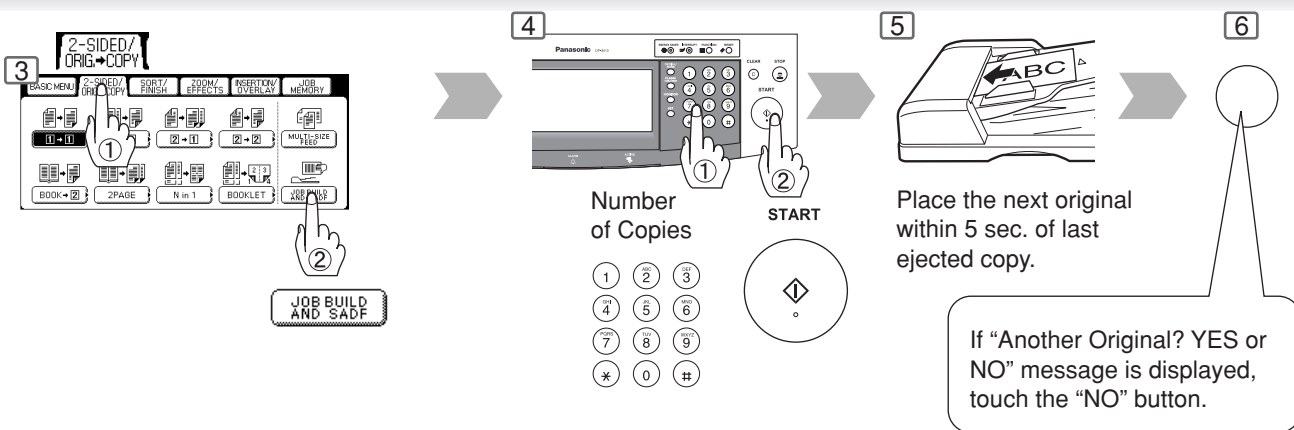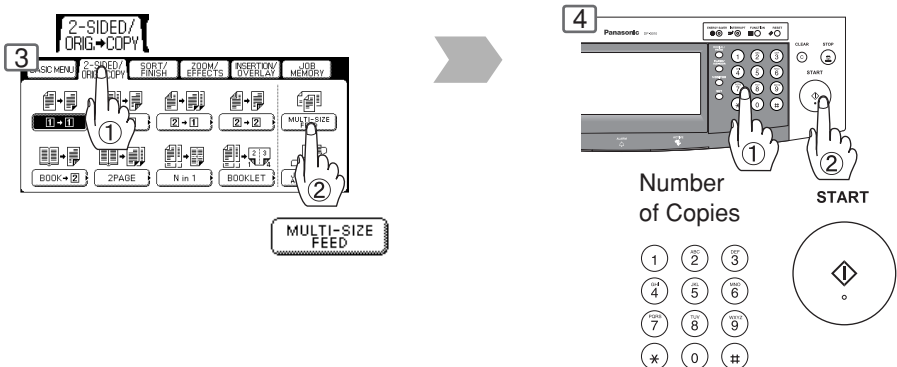





Making Copies

Sort/Finish


■ When using Sort Mode

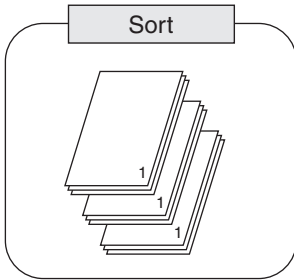


Multiple copy sets are sorted automatically.

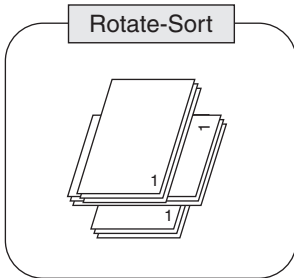


Multiple copy sets are sorted automatically and stacked in alternate direction (rotate). (Letter size only)

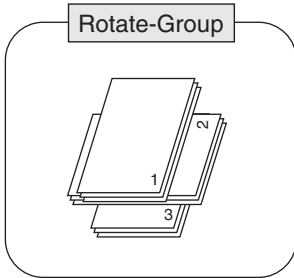


Multiple copies of individual pages are stacked in alternate direction (rotate). (Letter size only)

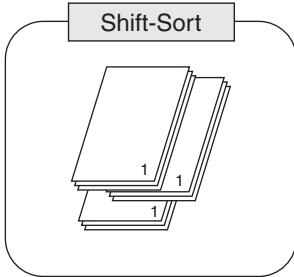

When optional 1-Bin Finisher (DA-FS300) is installed. Offset using electronic sorting (Letter, Letter-R, Legal, Ledger)

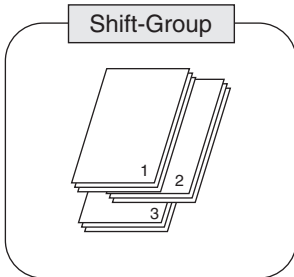


When optional 1-Bin Finisher (DA-FS300) is installed. Offset using electronic sorting (Letter, Letter-R, Legal, Ledger)

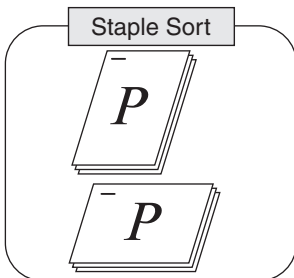



When optional 1-Bin Finisher (DA-FS300) is installed. Sort by stapling sets. Up to 30 sheets. (Letter, Letter-R, Legal, Ledger)




Copy is stored on the Tray.

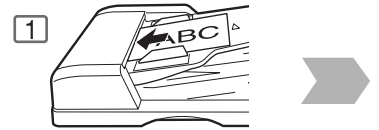


or

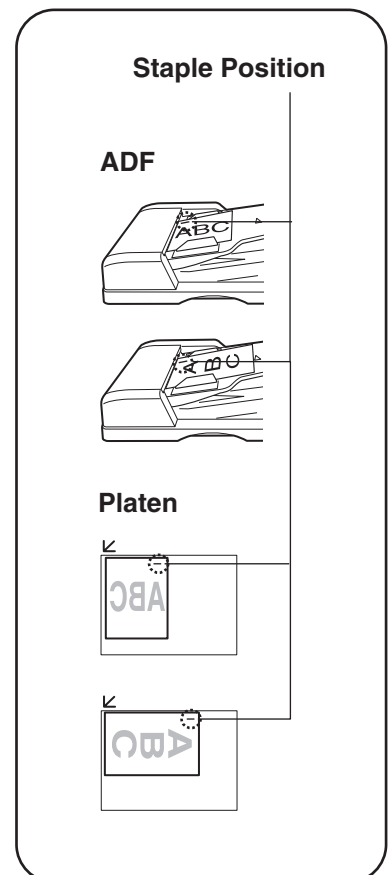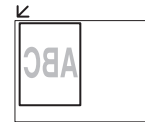

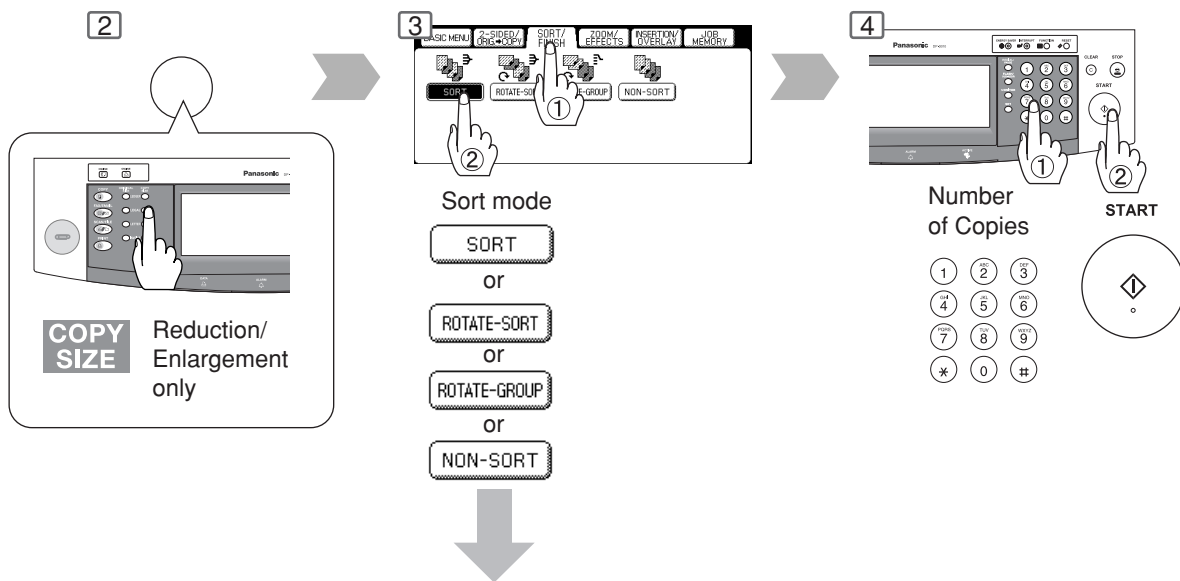

1-Bin Finisher (DA-FS300)

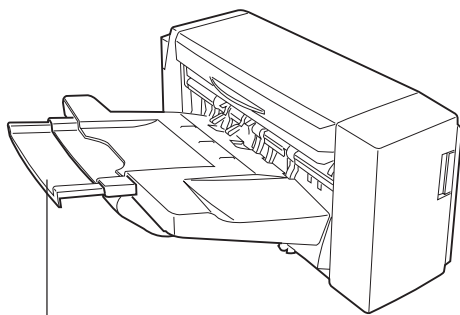


Bin

- Electronic Shift-Sort
- When copying with Legal/Ledger size, pull out the bin until it stops.

When the optional 1-Bin Finisher is installed, this screen will change as follows:

For DA-FS300

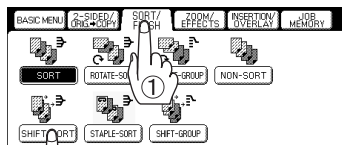

SHIFT-SORT or STAPLE-SORT or SHIFT-GROUP

● Paper Capacity (20 lb Paper)

Paper Size	Non-Sort/Rotate	Shift	Staple*
Letter	500	500 (Max. 30 Sheets/Shift)	10 to 30 Sheets: 45 to 16 Sets
			2 to 9 Sheets: 70 to 50 Sets
Legal, Ledger	250	250 (Max. 20 Sheets/Shift)	10 to 20 Sheets: 25 to 12 Sets
			2 to 9 Sheets: 70 to 28 Sets

*Ex: Letter Size
10 Sheets: 45 Sets
30 Sheets: 16 Sets

● Overflow

oF When overflow **oF** indicator appears on the display, remove excess copies from the bin, then press any mode key on the control panel to reset.





Making Copies

Zoom/Effects



Zoom

Copies with variable zoom ratios from 25 % to 400 % in 1 % increments.

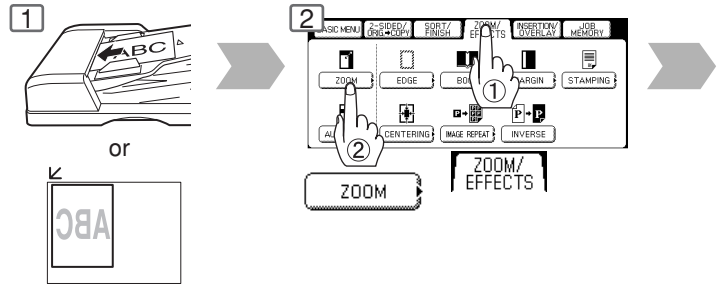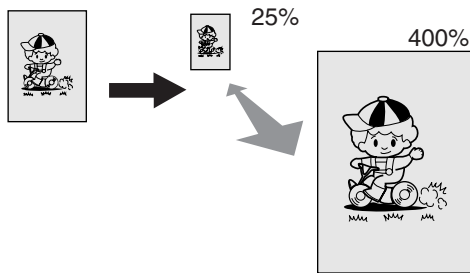



Auto Zoom

The copy Zoom Ratio adjusts automatically to the selected paper size.

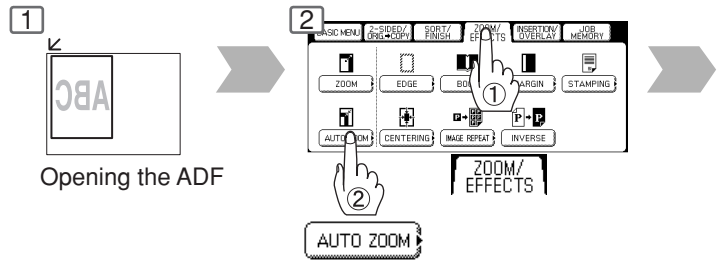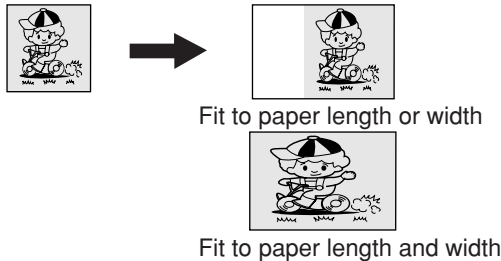



Edge

Creates a blank edge.

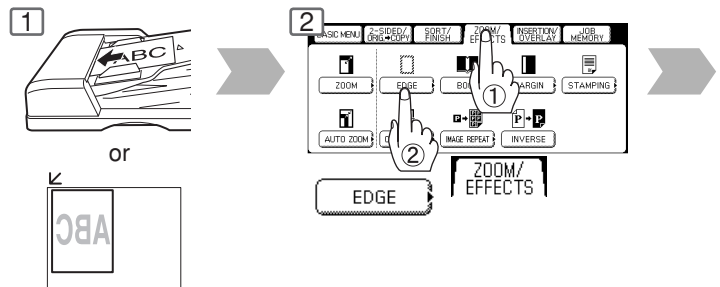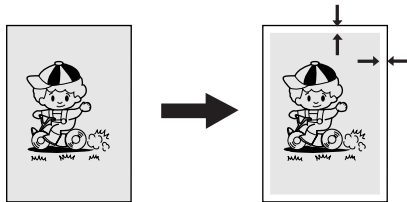

Book

Eliminates dark inner binding shadows.

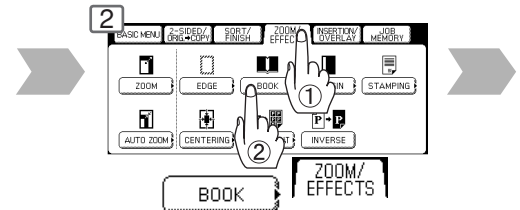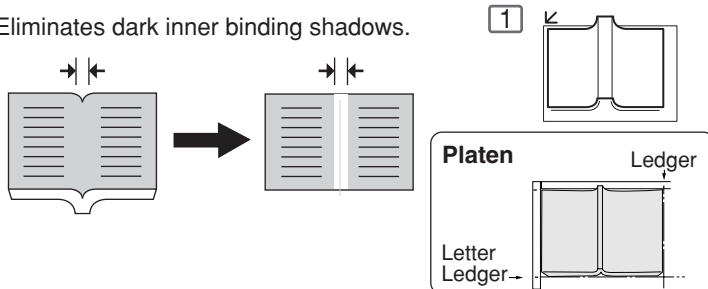


ATTENTION

- If using the keypad to set the zoom ratio, press the CLEAR key first to reset the current zoom ratio. When changing the paper size after setting the zoom ratio, use the PAPER TRAY button.






NOTE

- For Auto Zoom
 - An incorrect exposure may occur when there is a black line at the edge of the original or an image which the copier interprets as a black pattern in the skyshot mode.
 - An incorrect position detection of the original may occur when a strong light shines onto the glass during skyshot mode.


3 Same vertical and horizontal ratio

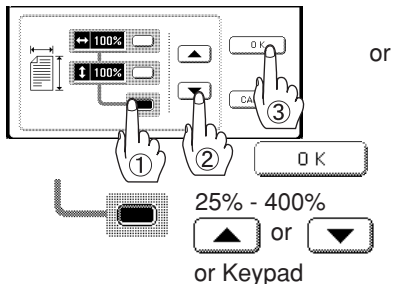





Different vertical and horizontal ratio

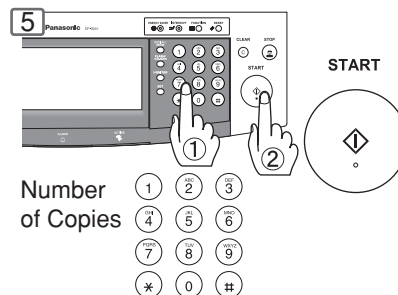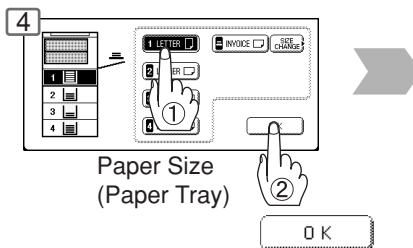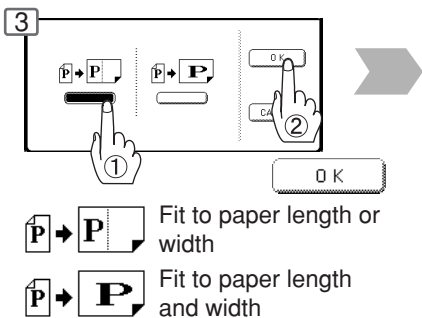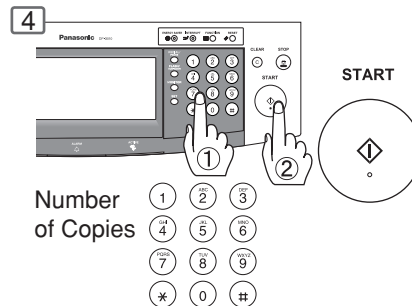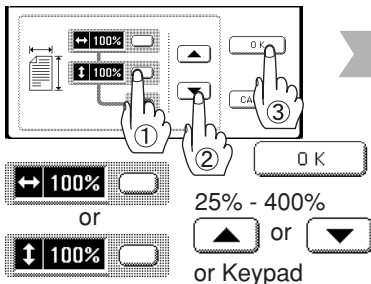

3 Same vertical and horizontal void value

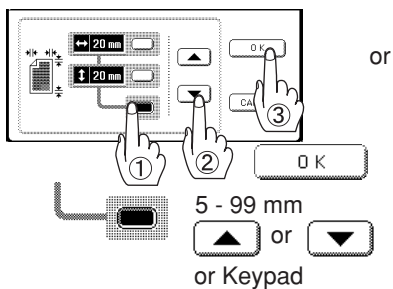

Different vertical and horizontal void value

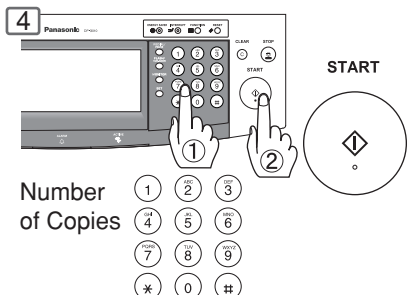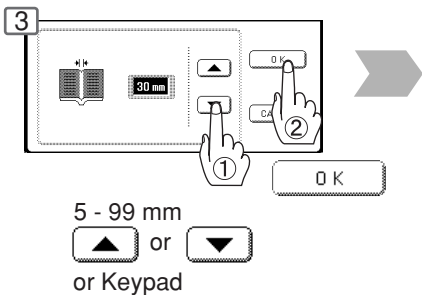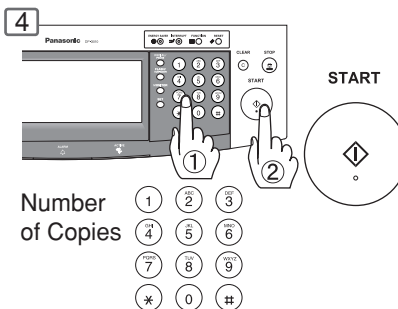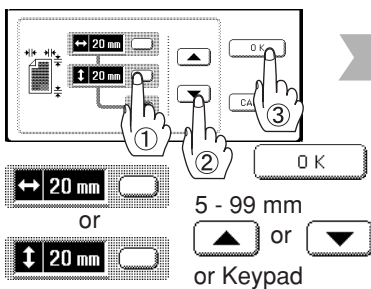

NOTE

● Zoom Ratio

If using the keypad to set the zoom ratio, press the CLEAR key first to reset the current zoom ratio.





Making Copies

Zoom/Effects

Margin

Shifts image to right, left, up or down.

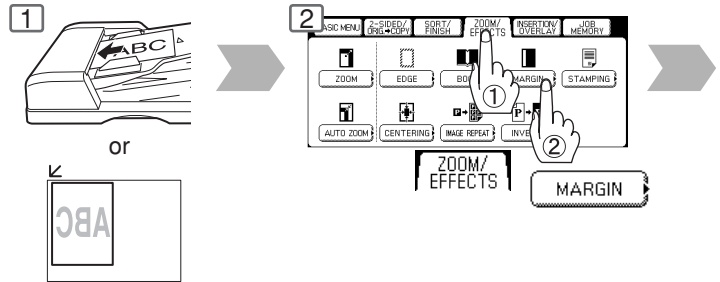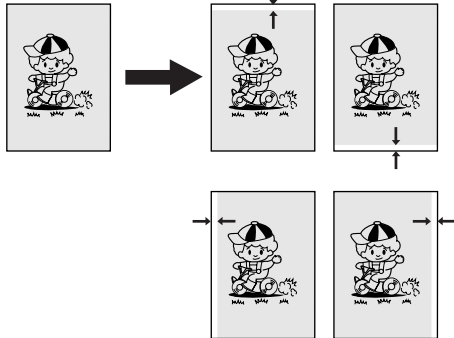

Centering

Copy image can be centered automatically on selected paper.




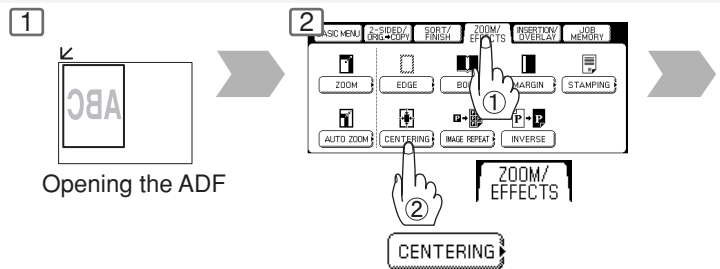


Image Repeat



Creates continuous copy image on one sheet.
Minimum original size: 20 x 20 mm

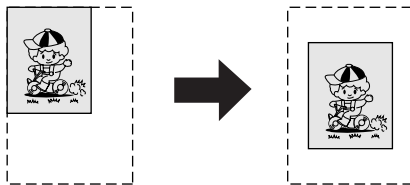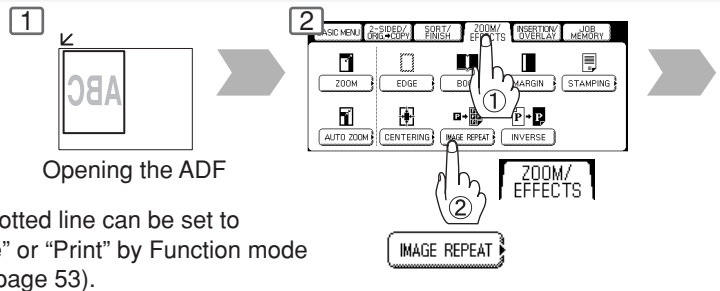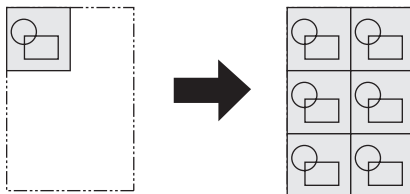

The dotted line can be set to "None" or "Print" by Function mode (See page 53).

Inverse



Negative/Positive image can be created for special effects.

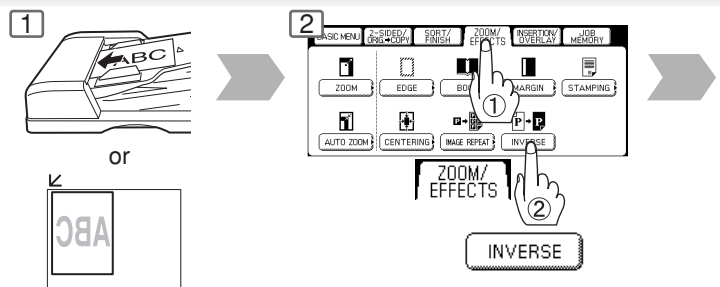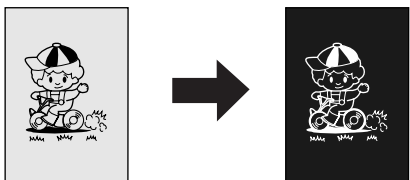






NOTE

- In Centering and Image Repeat mode, make copies with the ADF open.
- Remove the originals from the ADF before selecting the Centering and Image Repeat mode. An incorrect position detection of the original may occur when a strong light shines onto the glass during the Centering and Image Repeat mode. Also an image which the copier interprets as a black pattern in the Centering and Image Repeat modes.

Download from www.Somanuals.com. All Manuals Search And Download.

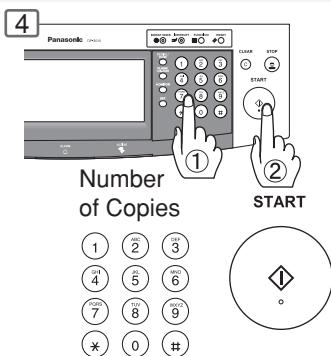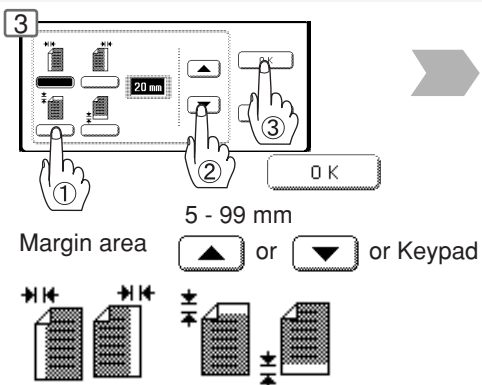

If a part of the copied image is missing when using the Margin mode, change the Margin Reduction setting to Yes. (See page 52)

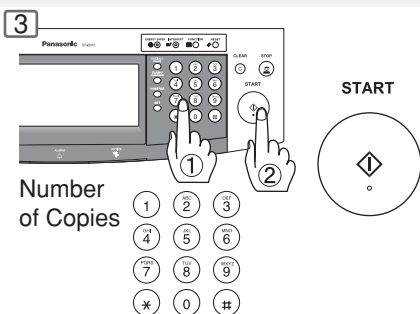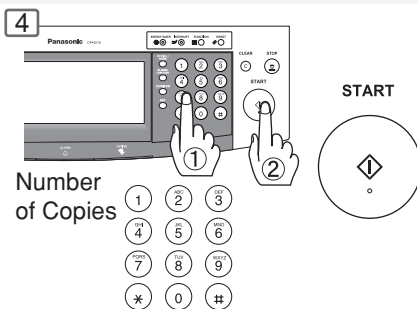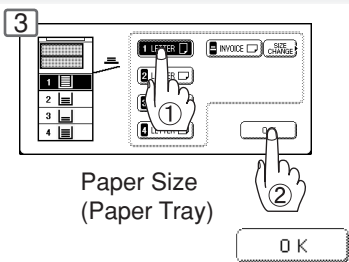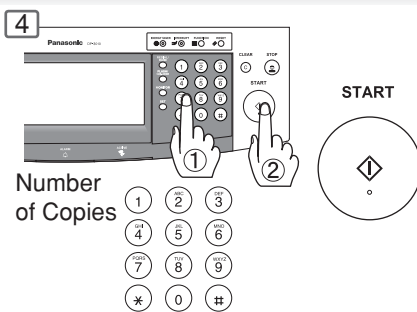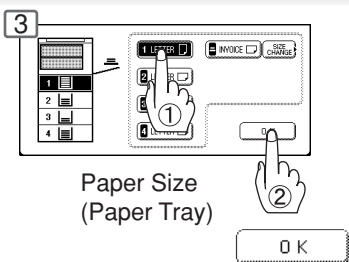




Making Copies


Zoom/Effects

■ Stamping (Page Numbering)

Page numbers can be automatically stamped on each page.


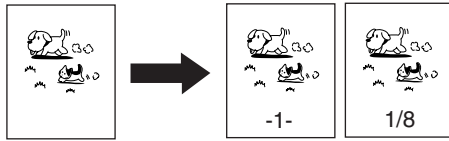


The page numbering format can be changed in function mode. Default format is "-n-". (See page 53)

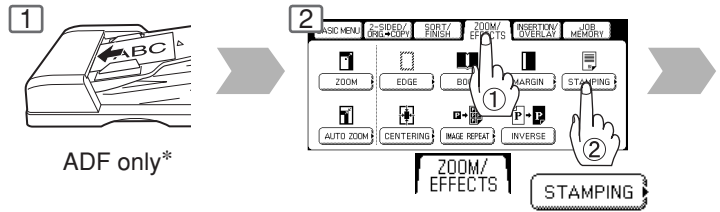



■ Stamping (Date Stamp)

The date can be automatically stamped on each page.

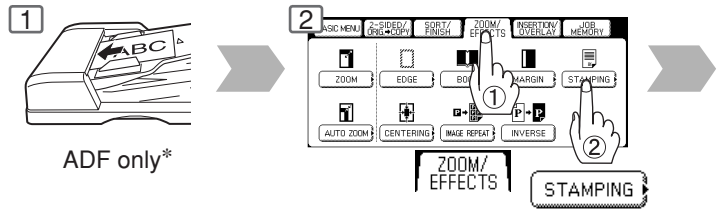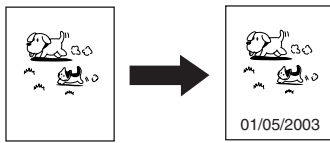

■ Stamping (Issue Number Stamping)

An issue number can be automatically stamped on each page.

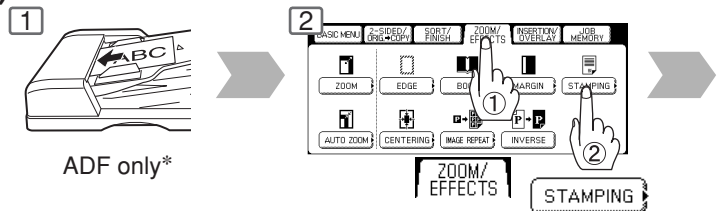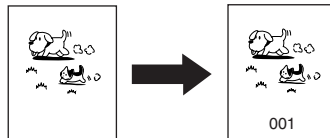

NOTE

* When copying with the Stamping mode combined with N in 1 mode, the Stamping mode can be used from the platen.

3

PAGE NUMBERING ORIENTATION

Stamping position

Stamping start page
From 1, 2 or 3

From 3rd page
From 2nd page
From 1st page

4

Number of Copies (Max. 999) START

- Multiple copy sets will be sorted automatically.

3

DATE STAMP ORIENTATION

Stamping position

Changing the stamp date

05/01/2003 CHANGE

4

Number of Copies (Max. 999) START

- Multiple copy sets will be sorted automatically.

3

ISSUE NUMBER STAMPING ORIENTATION

Stamping position

Stamping the Issue Number

001

or Keypad

4

Number of Copies (Max. 999) START

- Multiple copy sets will be sorted automatically.





Making Copies

Insertion/Overlay



■ Cover

Adds Cover Page(s) to copies.

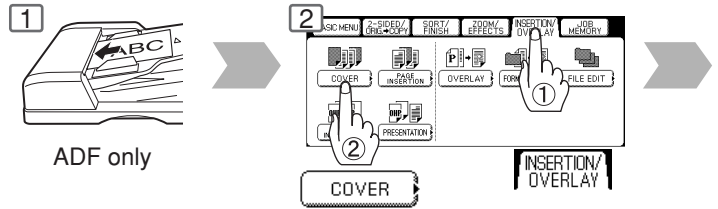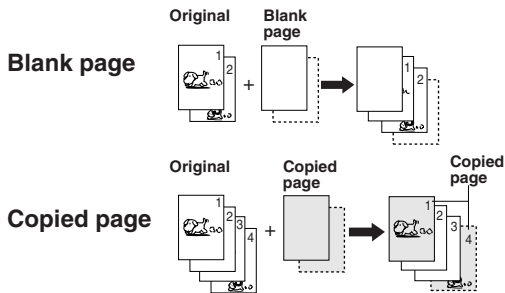



■ Page Insertion

Inserts Blank/Copied pages between copies.

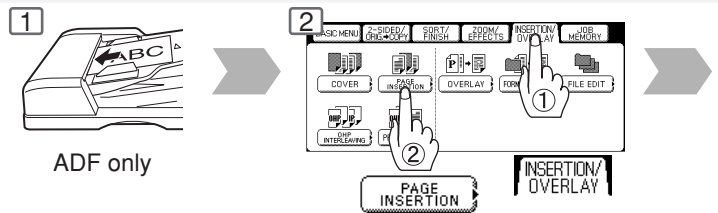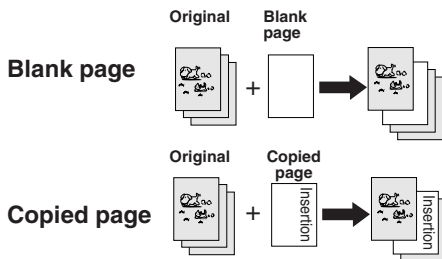



■ OHP Interleaving

Inserts Blank/Copied pages between OHP film.

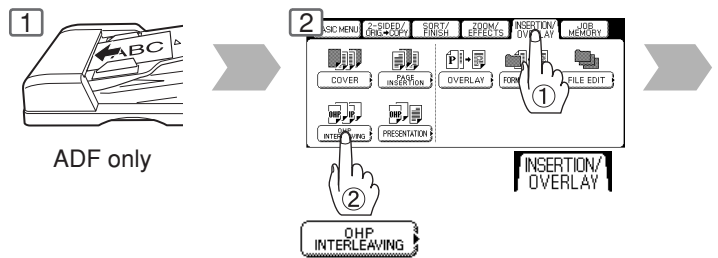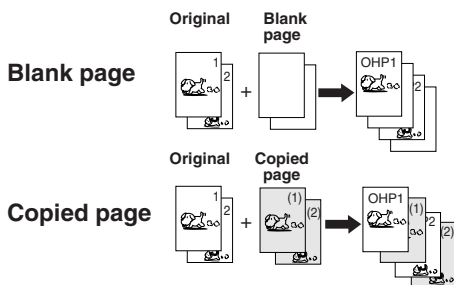

■ Presentation

Inserts Blank/Copied pages between OHP film and make copied sets for handouts.

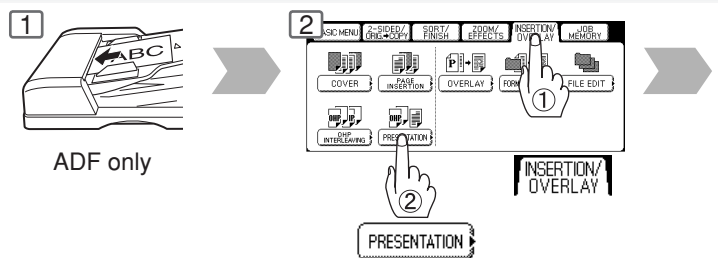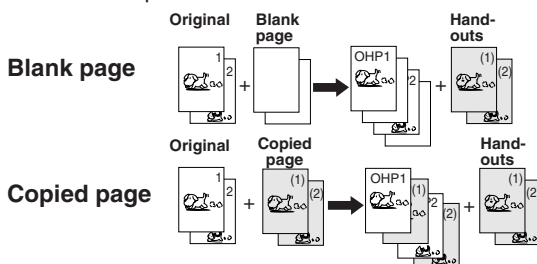

NOTE

- Certain types of transparency film may not be compatible and may damage your machine. Consult with an authorized Panasonic dealer for advice regarding non-standard paper types. (Panasonic has tested "3M PP2500" transparency film and found it to be compatible.)

3

Cover Page mode
 Cover (Front) Cover (Front+Back)

Blank Copy

Paper Size*
 Paper Tray

4

Number of Copies
 (Max. 999)

START

3

Page Insertion mode

Blank Copy

Paper Size*
 Paper Tray

4

5

Number of Copies
 (Max. 999)

START

① Set the insert page position with Keypad**
 ② If selecting other position, move the sheet with ◀ / ▶ button, then set the insert page position with Keypad

3 Load OHP film onto the Sheet Bypass

4

OHP Interleaving mode

Blank Copy

Paper Size*
 Paper Tray

5

Number of Copies
 (Max. 999)

START

3 Load OHP film onto the Sheet Bypass

4

Presentation mode

Blank Copy

Paper Size*
 Paper Tray

5

Number of Copies
 for handouts
 (Max. 999)

START

NOTE

- * The size and orientation of the printed copy and recording paper should match.
- ** Blank page to be inserted before the indicated selected page number.



Making Copies

Insertion/Overlay/Job Memory

Overlay

Overlays a second image onto the first by using a second original.

1st-page




1



or



2

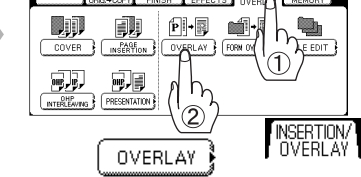

File Edit

 
Up to three* editing functions available in the Form Overlay feature.

REGISTER* : To Add a new file* (HDD = Max. 5 files)


ERASE* : To Erase a registered file

FILE NAME EDIT* : To Change the title of a file

1




or

 


(Register only)

2

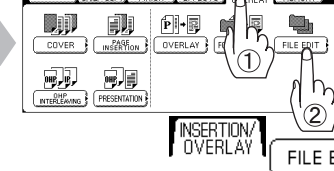

3

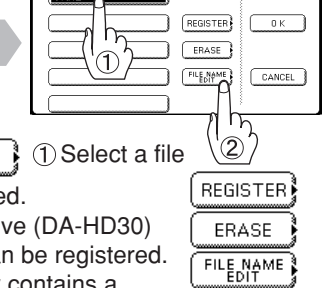

① Select a file



* One image file can be registered.

With the optional Hard Disk Drive (DA-HD30) installed, up to 5 image files can be registered. If the selected File Key already contains a registered file image, the new image will overwrite the current image.

** Without the optional Hard Disk Drive (HDD) installed: After pressing the FILE EDIT button, the machine skips Step 3 and proceeds to Step 4 (Erase Mode).

Form Overlay

Overlay an image stored in memory onto the copy.

File



 
+




1



or



2

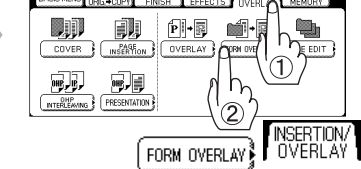


Job Memory

Five Copy Jobs can be stored in Memory (M1 to M5) for recall at a later time.


Set up the copy job to be stored.

 1




JOB MEMORY

2

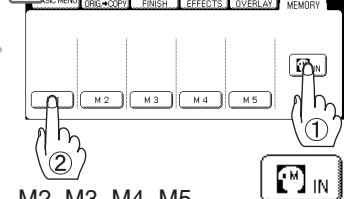

M1, M2, M3, M4, M5

 

NOTE

- The File Edit function for selecting a file is only available when the optional Hard Disk Drive and Image Memory (See page 65) is installed. When the optional Hard Disk Drive is not installed, only one file can be selected.
- When an overlay image is not stored in memory, Form Overlay function is not selectable.

3 Density for second image
LIGHTER or DARKER

4 Number of Copies (Max. 999)

From Platen: Same procedures as for Form Overlay

5 Select the overlay image to store into memory for later use.
YES or NO

REGISTER

4 Density for second image
LIGHTER or DARKER

5 START

To cancel the registration, touch "CANCEL" button.

6 YES

7 File Name
OK

ERASE

4 YES

FILE NAME EDIT

4 Enter the file name
OK

5 OK

3 Select a file
OK

4 Number of Copies (Max. 999)

From Platen:
If "Another Original?" message is displayed, touch the "NO" button.
Ex: 2 originals
① Touch "NO" button.
② Place the next original on the Platen.
③ Press Start Key.
④ Touch "YES" button.

To recall a job stored in memory

1 or

2 M1, M2, M3, M4, M5
M1 M2 M3 M4 M5

3 Number of Copies (Max. 999)

NOTE

- JOB MEMORY mode will not be deleted even if the power switches are turned Off.
- When storing a new job into a programmed memory location, the previously stored job will be overwritten and erased.
- M1, M2 can use as manual skyshot mode by setting the user function mode.




Making Copies



Other Features

Concurrent Copying

The next copy job can be reserved even if the current copy job is not completed.
(Requires the optional Hard Disk Drive and Image Memory (See page 65) to be installed)

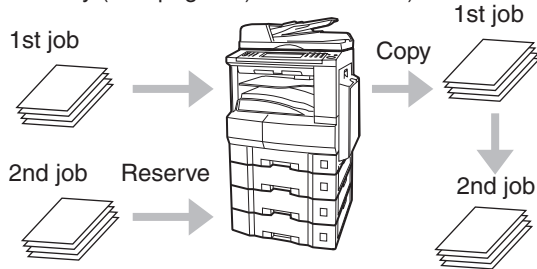

1st job

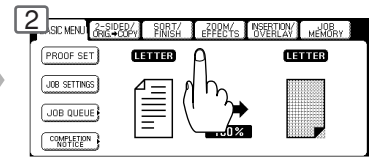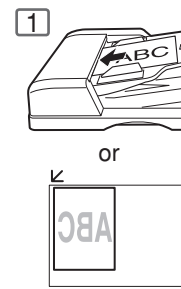


Select Function

Energy Saver (Power Save Mode, Sleep/Shutdown Mode)

These modes save power while the copier is not in use.

1 Power Save Mode

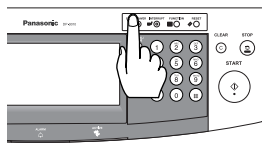

ENERGY SAVER



Indicator


Flash: Power Save Mode
Light: Sleep/Shutdown Mode

Sleep/Shutdown Mode*

Automatically enters the Sleep/Shutdown Mode after 15 minutes from the last copy job.

To clear

2 ENERGY SAVER

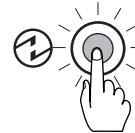

Modes	Power Consumption	Warm Up Time
Normal Operation	Approx. 140 Wh	N/A
Power Save	Approx. 28 Wh	Approx. 30 sec.
Sleep	Approx. 18 Wh	35 sec.
Shutdown	Approx. 3 Wh	35 sec.

The machine will not go into Sleep/Shutdown Mode when the Weekly Timer is selected.

Skyshot Mode

Skyshot allows copying a manuscript without generating dark borders even if the platen cover or ADF is opened.

Two types of Skyshot modes can be selected;

Digital Skyshot Mode : The scanning area (size) is not pre-determined.

Manual Skyshot Mode: The scanning area (size) is pre-registered into memory (M1 and M2) in advance.

Digital Skyshot Mode

NORMAL

 
Default setting (usually select this mode).

QUALITY**

For better definition, select the Quality mode.


The default setting of Digital Skyshot Mode is "NORMAL". In this setting, the unit scans once. If there are black areas around the borders in the copies, set the Digital Skyshot Mode to "QUALITY" to soften the dark borders. In this setting, the unit scans twice.
(See page 52)

1




Opening the ADF

2

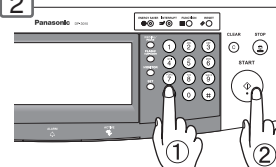

Number of Copies
(Max. 999)

 START




NOTE

* Sleep Mode/Shutdown Mode and entering timer can be selected by the key operator.
(See page 55)


** When copying the Quality mode combined with 1 → 2, BOOK → 2, 2PAGE, N in 1, "Quality" mode will be changed to "Normal" mode.

● An incorrect exposure may occur when there is a black line at the edge of the original or an image which the copier interprets as a black pattern in the skyshot mode.

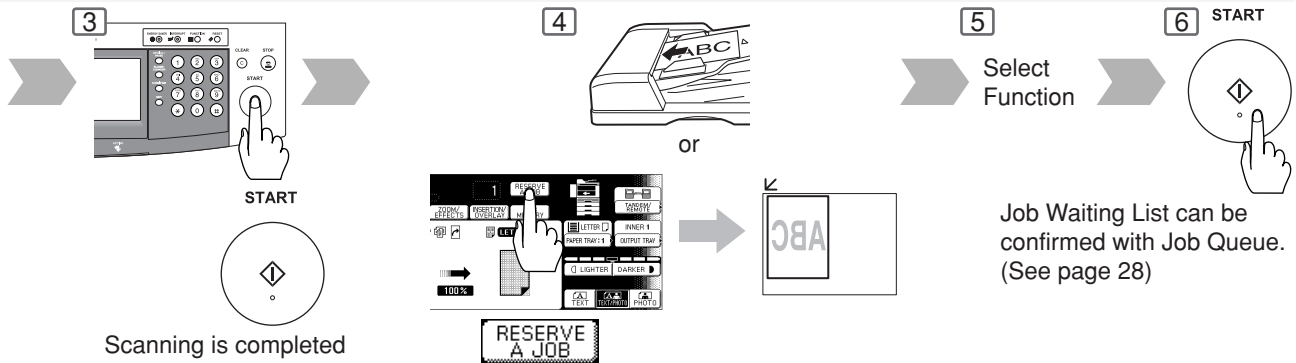


Interrupt Mode

This mode can interrupt other copy jobs while making copies.

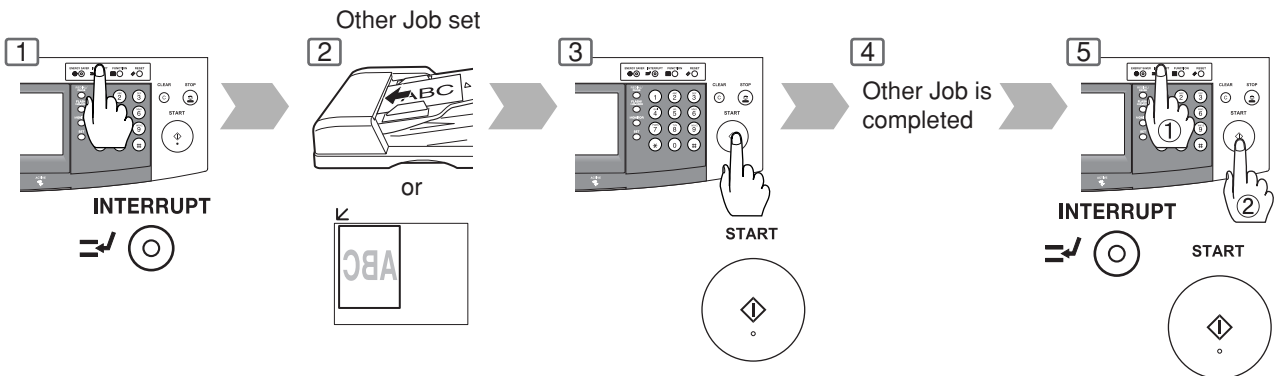

Manual Skyshot Mode


● Set 09 Manual Skyshot Mode in Copier Settings first. (See page 52)

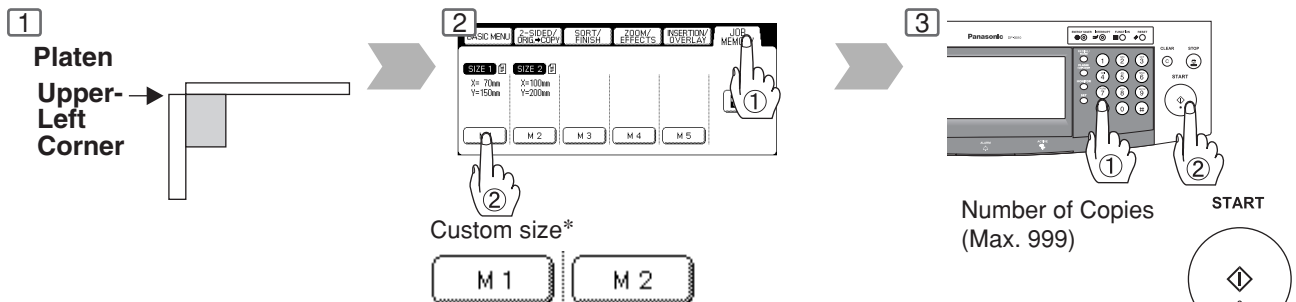

* Default M1/M2 size can be changed by Function mode. (See page 57)


NOTE

- If using ADF, place originals in the center position of ADF Tray. The ADF can feed only 14 - 28 lb plain paper.
- When using the manual skyshot mode, the M1 and M2 are turned On and other job requiring memory cannot be used.
- An incorrect position detection of the original may occur when a strong light shines onto the glass during skyshot mode.

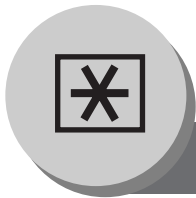

Function

■ Using Function Modes to Change the Initial Copy Modes

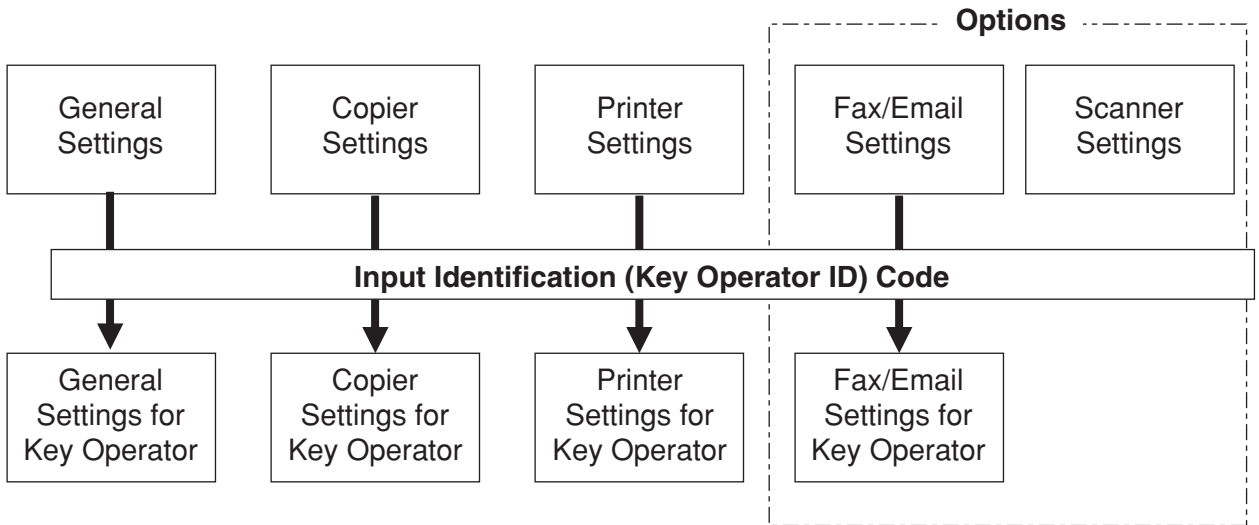

General Settings:


Changing the Initial Machine Modes

- Power On Default mode, Manually add toner, etc. (See page 52)

For Key Operator:

Paper size, Finisher bin/Staple mode, Department Counter, Network TCP/IP settings, etc. (See pages 55 and 56)

■ Procedure

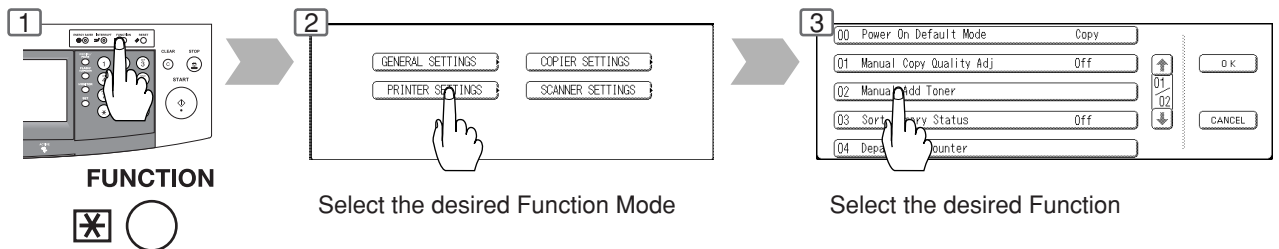

NOTE

- Please refer to the appropriate operating instructions manual for function settings on options.

Copier Settings:

Changing the Initial Copy Modes

- Default function of each copy mode
(See pages 52 and 53)
For Key Operator:
Paper size priority, Original mode, Contrast, Job Build and SADF mode, Original size of Manual Skyshot mode, etc.
(See page 57)

Printer Settings:


Changing the Initial Printer Modes


- Default function of each print mode
(See page 54)
For Key Operator:
Job completion time, Page protection, Error page print, Spool function, PS configuration, Font list print, Mailbox data holding, etc.
(See page 58)

<When Optional accessories are installed>**Scanner Settings:**

Changing the Initial Scanner Modes

- Original mode, Compression mode, Resolution, Job Build and SADF mode, Address book, etc.
(See page 53)
- The Completion Notice will work for other modes (i.e. Copy, etc.) even if the Scanner Option not installed.

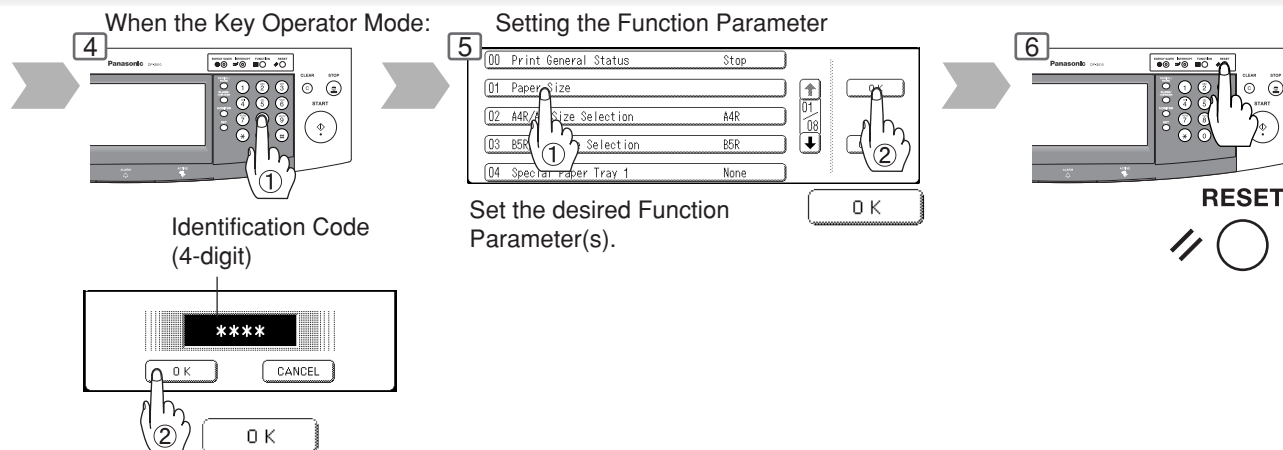Fax/Email Settings:Changing the Initial Fax/Email (i-FAX) Modes
Refer to Operating Instructions (For Fax/Internet Fax function).

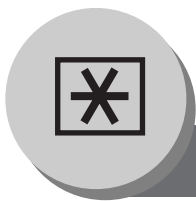

Function

■ General Settings

Screen No.	Modes	Function	Initial Setting
01/02	00 Power On Default Mode	Selects mode. ● Copy, Printer, Scanner*, Fax*/Email*	Copy
	01 Manual Copy Quality Adj	Sets to activate the manual density control. ● Off, On	Off
	02 Manual Add Toner	Adds toner manually. ● Off, On	Off
	03 Sort Memory Status	Indicates the sorting memory status. ● Off, On	Off
	04 Departmental Counter	Indicates the department counter.	Consult with an authorized service provider
02/02	09 Key Operator Mode	Input the Key Operator ID Code.	

* When the optional Network Scanner Module/Fax Communication Board is installed.

■ Copier Settings

Screen No.	Modes	Function	Initial Setting
01/04	00 Margin Value Default	Selects the margin shift value. ● 5 mm, 10 mm, 15 mm, 20 mm	10 mm
	01 Edge Value Default	Selects the edge width. ● 5 mm, 10 mm, 15 mm, 20 mm	5 mm
	02 Book Value Default	Selects the book void width. ● 15 mm, 20 mm, 25 mm, 30 mm	20 mm
	03 Margin Reduction Def.	Selects the reduction ratio in margin mode. ● No, Yes	No
	04 2-Sided Mode Default	Function sets the duplex priority mode. ● No, 1 to 2, 2 to 2, Book to 2	No
02/04	05 N in 1 Default Mode	Selects the N in 1 default mode ● 2 in 1, 4 in 1, 6 in 1	2 in 1
	06 Reduce N in 1 For Space	Selects whether to disable edge deletion ● No, Yes	No
	07 Booklet Default Mag.	Selects the booklet magnification ● 100%, Reduce	Reduce
	08 Digital Skyshot Mode	Enables or disables the use of Skyshot mode. ● No, Normal, Quality	Normal
	09 Manual Skyshot Mode	Enables or disables the use of Manual Skyshot. ● Off, M1 On, M2 On, M1&M2 On	Off

■ Copier Settings

Screen No.	Modes	Function	Initial Setting
03/04	10 Auto Contrast Adjust.	Automatically adjusts the copy density for text, T/P. ● No, Yes	Yes
	11 Sort Priority ADF	Selects the sort mode. ● None (Non-Sort), Sort, Shift*, Staple*, Group*	Sort
	12 Sort Priority Glass	Selects the sort mode. ● None (Non-Sort), Sort, Shift*, Staple*, Group*	None
	13 Stamping Default Mode	Selects the stamping mode. ● Page, Date, Issue	Page
	14 Page Numbering Style	Selects the page numbering style. ● -n-, n/m	-n-
04/04	15 Imag. Repeat Dotted Line	Selects the dotted line. ● None, Print	Print
	19 Key Operator Mode	Input Key Operator ID Code.	

* Shift, Staple and Group modes are available when the optional 1-Bin Finisher is installed and the "Outer" is selected with the touch panel display.

■ Scanner Settings

Screen No.	Modes	Function	Initial Setting
01/02	00 Scanner Settings Print	To print scanner settings. ● Stop, Start	Start
	01 Original Mode Default	Sets the original setting. ● Text, T/P (Text/Photo), Photo	T/P
	02 Compression Mode Def.	Sets the compression mode setting. ● MH, MR, MMR, JBIG	JBIG
	03 Resolution Default	Sets the resolution setting. ● 150 dpi, 300 dpi, 600 dpi	600 dpi
	04 Job Build and SADF Mode	Sets the Job Build and SADF mode initial setting. ● No, Yes	No
02/02	05 Bind Edge 2-Side Orig.	Sets the bind position, 2-sided original initial setting. ● Long, Short	Long
	06 Add New Address	To add new address. ● PC, DD, FTP	0,0,0,0
	07 Edit Address Book	To edit address book. (See page 68)	
	08 Delete Address	To delete address.	



Function

■ Printer Settings

Screen No.	Modes	Function	Initial Setting
01/04	00 Number of Prints	Sets the initial number of prints. ● 1 ~ 999	1
	01 Paper Size	Sets the paper size setting. ● A3, B4, A4, B5, A5, LEDGER, LEGAL, LETTER, INVOICE, 8 x 13, 8.5 x 13	LETTER
	02 Paper Tray	Sets the Paper Tray setting. ● Auto, Bypass, Tray 1, Tray 2, Tray 3, Tray 4	Auto
	03 Print Direction	Sets the print direction setting. ● Portrait, Landscape	Portrait
	04 Auto Tray Selection	Sets the auto tray setting. ● Off, On	On
02/04	05 2-Sided Print	Sets the 2-sided print setting. ● Off, On	Off
	06 Bind Edge	Sets the bind position. ● Long, Short	Long
	07 Resolution	Sets the resolution setting. ● 1200 x 600, 600 x 600, 300 x 300	600 x 600
	08 Font (PCL)	Sets the PCL font. ● 0 ~ 99	0
	09 Symbol Table (PCL)	Sets PCL symbol table. ● 0 ~ 35	11
03/04	10 Pitch (PCL)	Sets the PCL pitch. ● 0.44 - 99.99	10.00
	11 Point Size (PCL)	Sets PCL point size. ● 4.00 - 999.75	012.00
	12 Lines/Page (PCL)	Sets PCL lines/page. ● 5 - 123	60
	13 Return Character (PCL)	Sets PCL return character. ● CR, CR + LF	CR
	14 Mutual A4/LTR	Converts A4 to Letter automatically. ● Off, On	Off
04/04	15 Mailbox Memory Status	Indicates the mailbox memory status. ● Memory, Box	
	16 Print Data	Sets print data. ● Stop, Start	Start
	19 Key Operator Mode	Input the Key Operator ID Code.	

For Key Operator

■ General Settings

Screen No.	Modes	Function	Initial Setting
01/08	00 Print General Settings	Prints the initial user settings of the common menu. ● Stop, Start	Start
	01 Paper Size	Sets the paper size of each Paper Tray. ● Ledger, Legal, Letter, Letter-R, Invoice, A3, B4, A4, A4R, B5, B5R, A5, A5R, 8 x 13, 8.5 x 13	Consult with an authorized service provider
	02 A4R/A5 Size Selection	Sets the Sheet Bypass initial paper size. ● A4R, A5	A4R
	03 B5R/A5R Selection	Sets the Sheet Bypass initial paper size. ● B5R, A5R	B5R
	04 Special Paper Tray 1	Sets the Paper Tray for special paper (ex: colored). ● None, Paper Tray 1, Paper Tray 2, Paper Tray 3, Paper Tray 4, Sheet Bypass	None
02/08	05 Special Paper Tray 2	Sets the Paper Tray for special paper (ex: colored). ● None, Paper Tray 1, Paper Tray 2, Paper Tray 3, Paper Tray 4, Sheet Bypass	None
	06 Auto Paper Out Rotate	Copier will automatically rotate image and print when the selected Paper Tray is empty. ● Off, On	Off
	07 Copy Output Tray	Sets the output Copy Tray. ● Inner 1, Inner 2, Outer	Inner 1
	08 Printer Output Tray	Sets the output Printer Tray. ● Inner 1, Inner 2, Outer	Inner 1
	09 Fax/Email Output Tray	Sets the output Fax/Internet Fax Tray. ● Inner 1, Inner 2, Outer	Inner 1
03/08	10 Auto Reset Time	Sets the Control Panel reset time. ● None, 30 sec., 1 min., 2 min., 3 min., 4 min.	1 min.
	11 Power Save Mode Timer	Sets the Power Save timer. ● 1 - 240 minutes	15
	12 Sleep/Shutdown Select	Sets the Sleep/Shutdown mode. ● Sleep, Shutdown	Sleep
	13 Sleep/Shutdown Timer	Sets the Sleep/Shutdown timer. ● None, 1 - 240 minutes	15
	14 Language Sel. Priority	Selects the display message language. ● Off, On	Off
04/08	15 Language Default	Selects the display message language. ● English, C. French, Spanish	English
	16 TCH Panel Beep Sound	Beep sound when the panel is touched. ● Off, Soft, Loud	Soft
	17 Original Set Beep Sound	Beep sound when original is set on the platen. ● No, Yes	No
	18 Orig. Set In ADF Sound	Beep sound when original is set in the ADF. ● No, Yes	Yes
	19 Dept. Counter Mode	Monitors copy usage of each department (1) Printer usage of each document (2) Print limit of each department (3) ID code of each department	Consult with an authorized service provider

NOTE

● The Key Operator ID Code is required before any changes can be made to items on this page.



Function

For Key Operator

■ General Settings

Screen No.	Modes	Function	Initial Setting
05/08	20 Date Time Setting	Sets the registered date and time. ● Month, Day, Year, Time	
	21 Weekly Timer	Sets the weekly On/Off timer. ● Off, On (Set)	Off
	22 Daylight Time	Sets the daylight time. ● No, Yes	Yes
	23 DHCP Default	Sets the DHCP. ● No, Yes	Yes
	24 TCP/IP Address	Sets user IP address.** ● 3 digits x 4	0. 0. 0. 0
06/08	25 TCP/IP Subnet Mask	Sets the subnet mask.** ● 3 digits x 4	0. 0. 0. 0
	26 TCP/IP Default Gateway	Sets the gateway address.** ● 3 digits x 4	0. 0. 0. 0
	27 DNS Server Address	Sets the DNS server.** ● No, Yes	Yes
	28 MAC Address	Indicates the MAC address.	
	29 Hard Disk Format	* Selects the HDD format ● Stop, Start	Stop
07/08	30 Hard Disk Error Check	Selects the HDD error check ● Stop, Start	Stop
	31 Address Book Group ID	Inputs address book group ID. ● 0 ~ 99	0
	32 Tandem User Parameter	Inputs the Tandem User Parameter.	
	33 Community Name (1)	Selects to change the SNMP of Community Name (1).** ● Enables read only.	public
	34 Community Name (2)	Selects to change the SNMP of Community Name (2).** ● Enables read/write.	public
08/08	35 Device Name	Input the device name when required.** (For Status Monitor/EtherTalk Machine Name)	Panasonic DP-2310 or DP-3010
	36 Device Location	Input the device location when required.** (For Status Monitor)	

NOTE

- The Key Operator ID Code is required before any changes can be made to items on this page.
- * Not required in copying mode, but needed when installing options with advanced functions (See page 65).
- ** When functions No. 24 to 27 and No. 33 to 36 are set, cycle the power by turning the Power Switch on the Left Side of the machine OFF and ON.

■ Copier Settings

Screen No.	Modes	Function	Initial Setting
01/04	00 Copier Settings Print	Prints the copier settings. ● Stop, Start	Start
	01 Paper Size Priority	Selects paper size priority ● LEDGER, LEGAL, LETTER, LETTER-R, INVOICE, A3, B4, A4, A4-R, B5, B5-R, A5, A5-R, 8 x 13, 8.5 x 13	LETTER
	02 Original Mode Default	Selects original setting ● Text, T/P (Text/Photo), Photo	T/P
	03 Text Contrast	Selects contrast for Text mode ● 1 ~ 7	4
	04 T/P Contrast	Selects contrast for Text/Photo mode ● 1 ~ 7	4
02/04	05 Photo Contrast	Selects contrast for Photo mode ● 1 ~ 7	4
	06 Overlay Contrast	Sets the density (transparency) of the page being produced in overlay mode. ● 1 ~ 7	4
	07 Interleaving Default	Selects OHP interleaving paper ● Blank, Copy	Blank
	08 Page Insertion Default	Selects page insertion ● Blank, Copy	Blank
	09 Cover Mode Default	Selects cover paper ● F, Blank, F, Copy FB, Blank, FB, Copy (F: Front, FB: Front + Back)	F, Blank
03/04	10 Job Build And SADF Mode	Enables or disables the SADF function. ● No, Yes	Yes
	11 Maximum Copy Setting	Determines whether to limit number of copies (0-99).	0 (No limit)
	12 M1, Size	Inputs the frequently used size in job memory 1. ● X: 5~432/Y: 5~297 mm (See page 46)	70 x 160 mm (X) (Y)
	13 M2, Size	Inputs the frequently used size in job memory 2. ● X: 5~432/Y: 5~297 mm (See page 46)	95 x 220 mm (X) (Y)
	14 Memory Overflow Warning	Selects performed task when the memory overflow occurs ● Print, Cancel	Print
04/04	15 Add New Tandem Desti.	Inputs a new destination to split the copy job	
	16 Edit Tandem Destination	Edits a copy destination	
	17 Delete Tandem Desti.	Deletes a copy destination	

NOTE

- The Key Operator ID Code is required before any changes can be made to items on this page.



Function

For Key Operator

■ Printer Settings

Screen No.	Modes	Function	Initial Setting
01/03	00 Printer Settings Print	Sets the printer status printout. ● Stop, Start	Start
	01 Job Completion Time	Sets the job completion time setting. ● 1~ 999 sec.	180
	02 Page Protection	Compress automatically then printout. ● Off, On	Off
	03 Error Page Print	Sets the error page printout. ● Off, On	On
	04 Spool Function	Sets the spool function. ● Off, On	On
02/03	05 Text Print	Prints text page only. ● Off, On	On
	06 PS Configuration Print	Sets the status page print of PS. ● Stop, Start	Start
	07 Font List Print (PCL)	Sets the font list print of PCL. ● Stop, Start	Start
	08 Font List Print (PS)	Sets the font list of PS. ● Stop, Start	Start
	09 Mailbox Data Holding	Sets the automatic holding function of mailbox data.* ● Infinity, 1 day, 2 days, 3 days, 4 days, 6 days, 7 days	7 days
03/03	10 Delete Mailbox Data	Sets delete the mailbox data.* ● All, Before	Before
	11 Print Queue Delete	Sets authorization to delete the print queue. ● Free, Key op. (operator)	Key op.
	12 AppleTalk Zone Name	Inputs an AppleTalk Zone name.** ● Maximum 32 characters	

NOTE

● The Key Operator ID Code is required before any changes can be made to items on this page.

* Functions 09 and 10 are available when optional Hard Disk Drive (DA-HD30) is installed.

** When function No. 12 is set, cycle the power by turning the Power Switch on the Left Side of the machine OFF and ON.

MEMO




Function

For Example


■ Changing the Auto Contrast Setting

You can select whether to automatically adjust the copying density for Text and Photo originals.

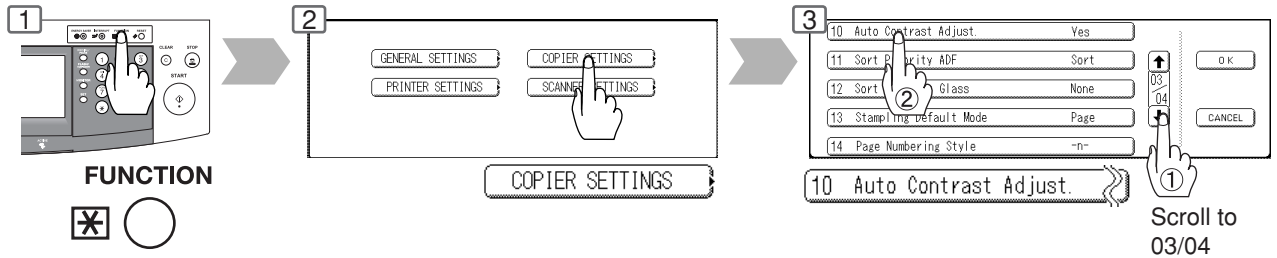


■ Changing the Paper Size




The Paper Trays are designed to accommodate Invoice, Letter, Letter-R, Legal and Ledger Size paper.

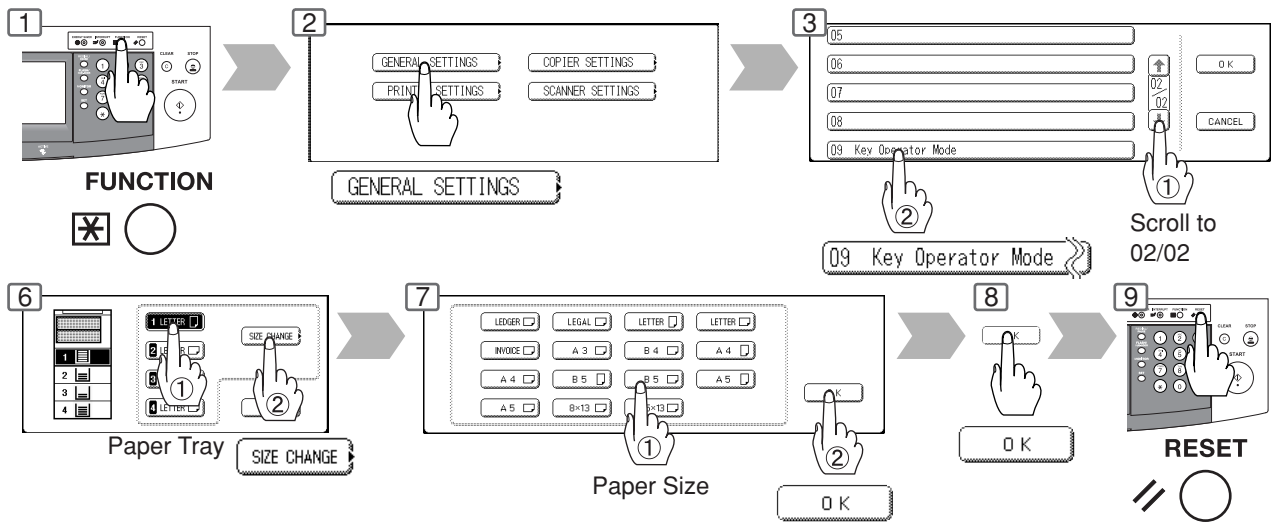


■ Weekly Timer

Key Operator can administer the Weekly Timer. On/Off weekly timers.

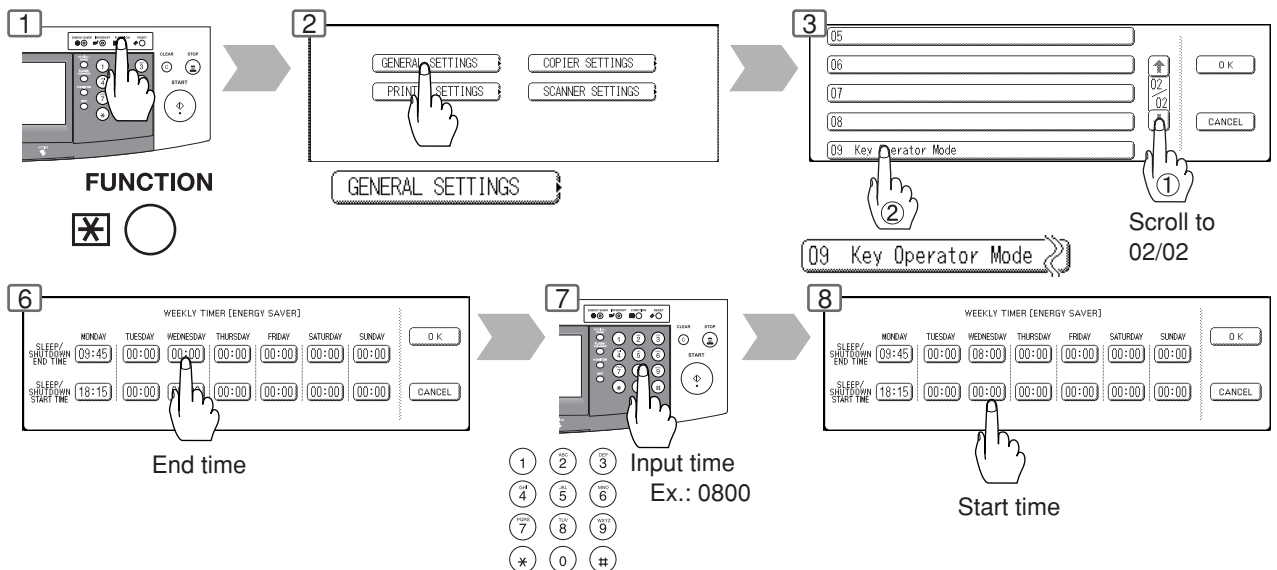

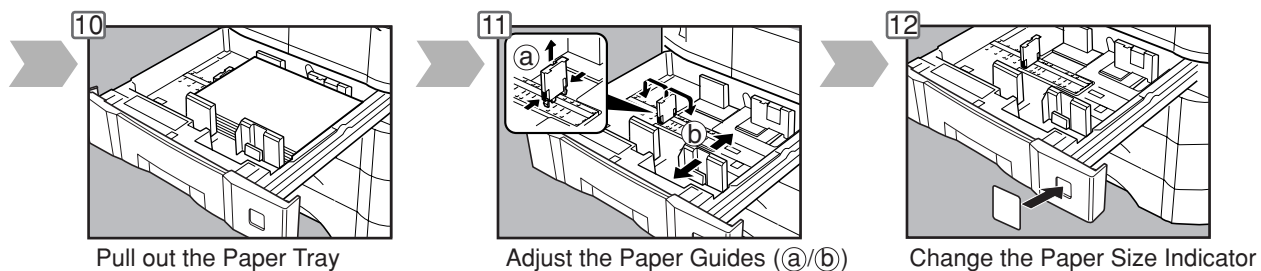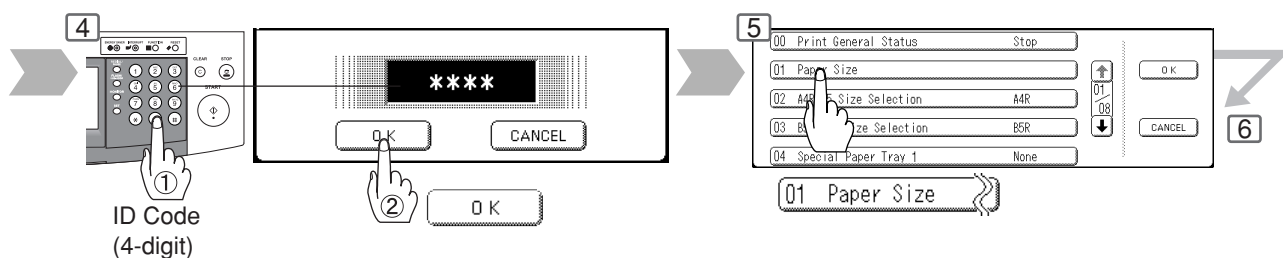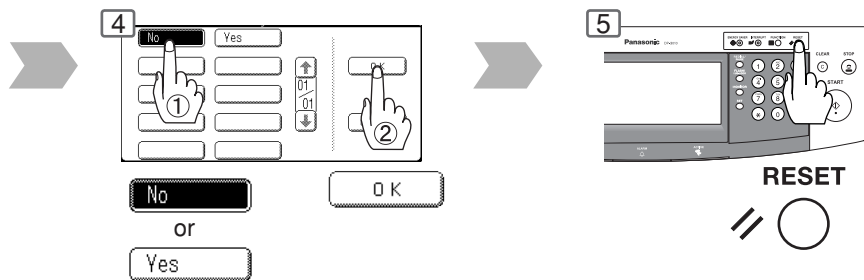

Note: It is recommended that the paper guide (b) is fixed in place with screws. Consult an authorized service provider for details on how to fasten the guide.

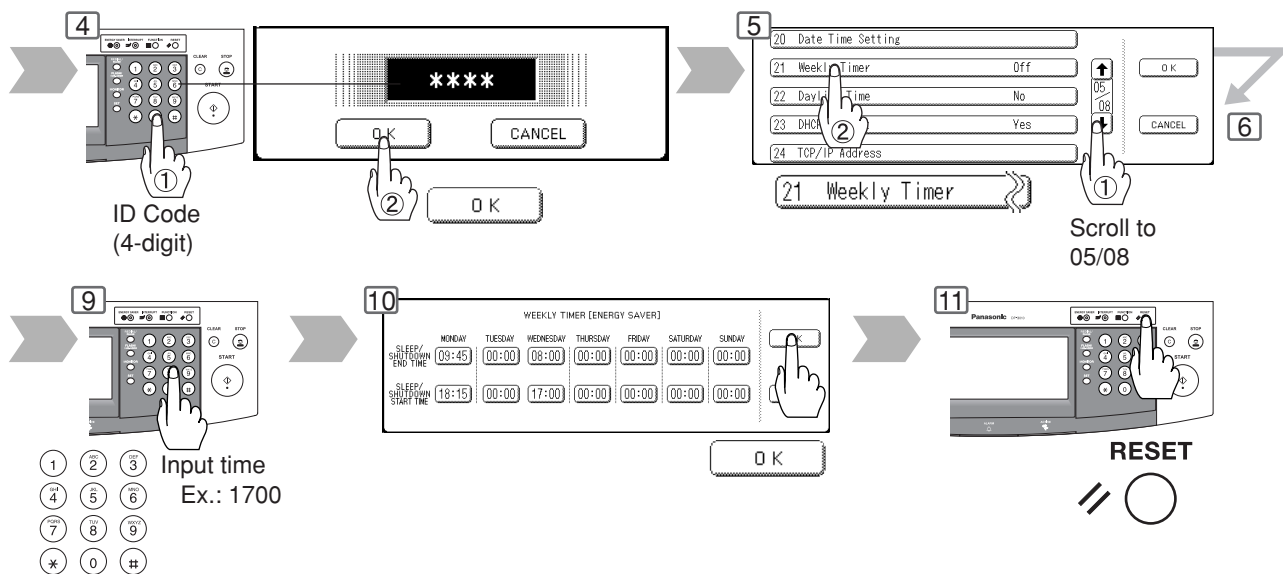




Function

For Example


■ Department Counter

The Department Counter feature can limit the number of copies, administer counters and Identification Code numbers for each department. (Maximum Number of Departments: 300)

Contact your authorized service provider to enable the Department Counter feature.

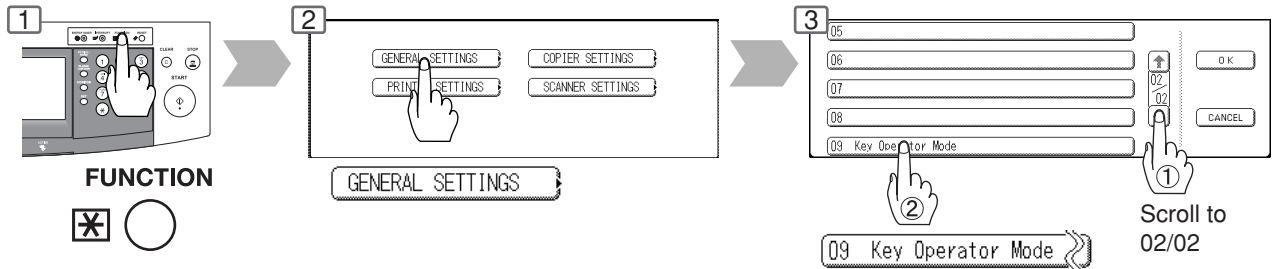


⑥ For Total Counter

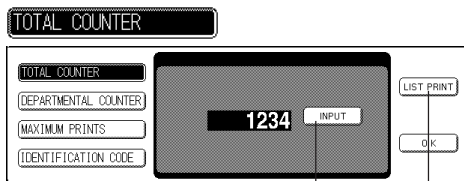


Displays the sum of all the active department counters.

Prints all the active department counters.

To clear the total counter, touch the INPUT button, enter 0 and touch the OK button.

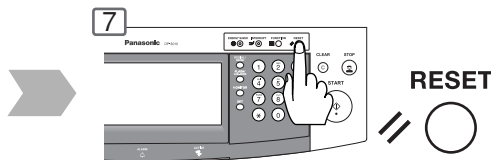



For Identification Code

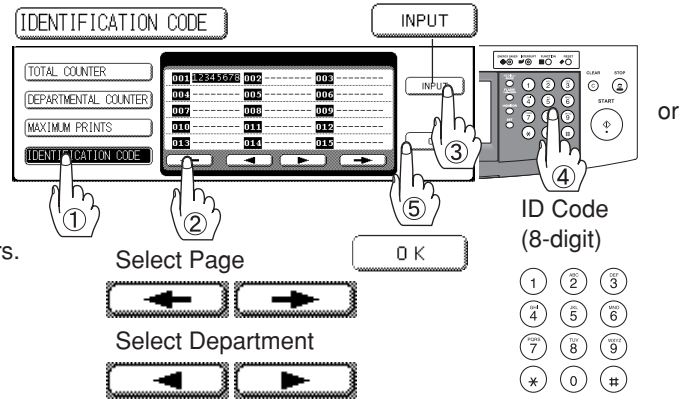


⑥ Input a Department Name (up to 25 characters) using the Keyboard and touch the OK button. (See page 27, How to use the Keyboard)


■ Network Settings

When the Parameter "23 DHCP Default" is set to "No", the Key Operator must administer the Network settings manually.

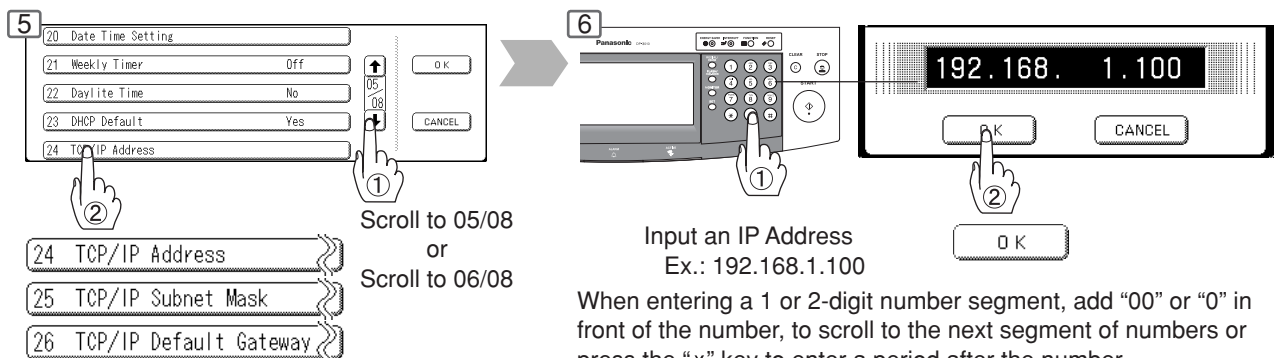
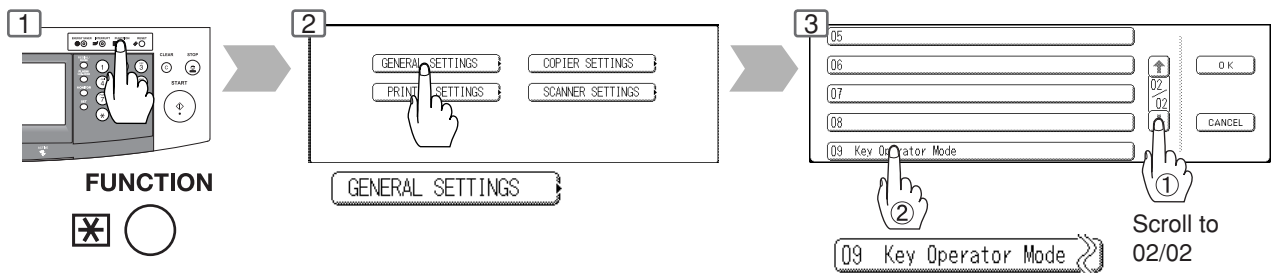


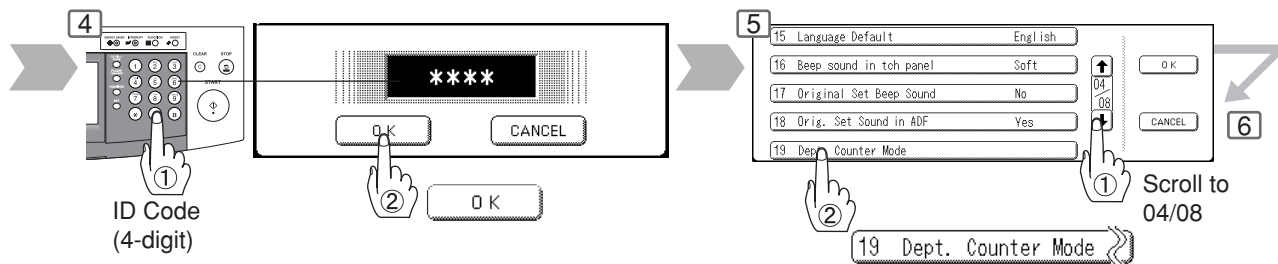


For Department Counter

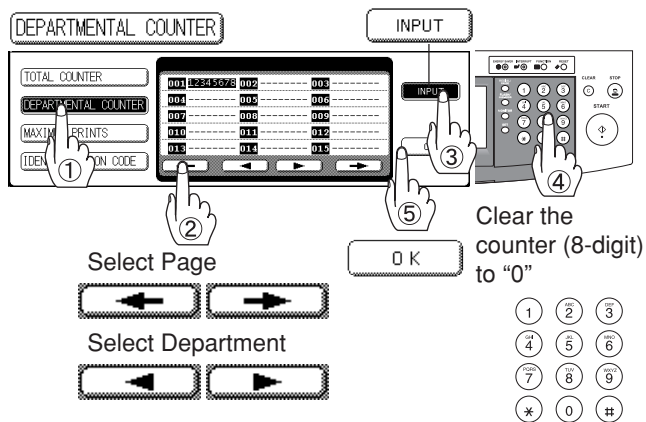

For Maximum Prints

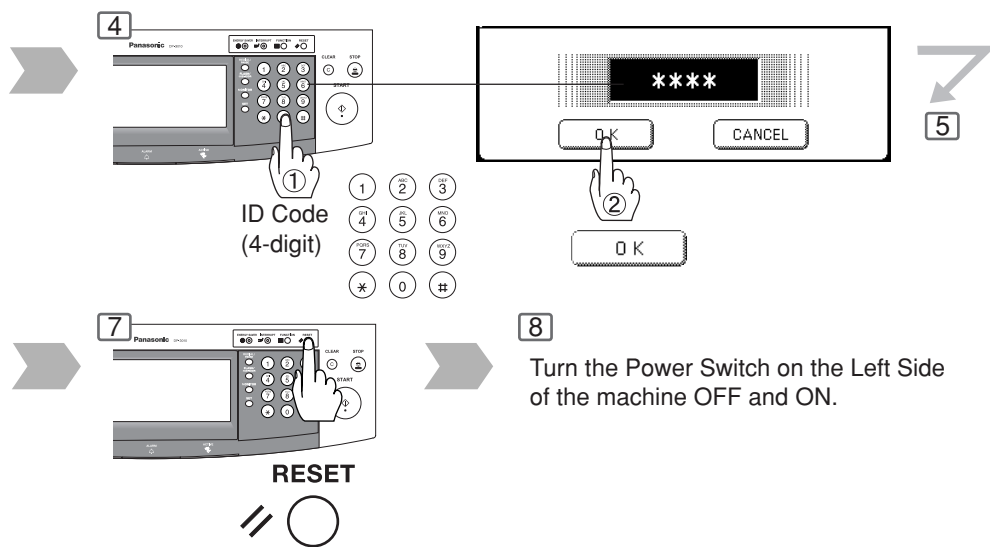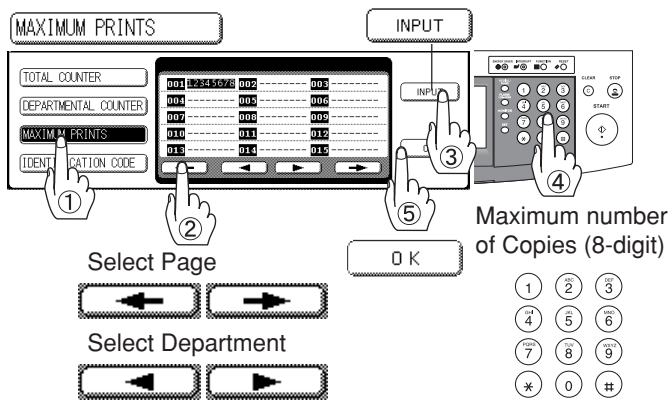

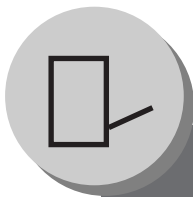

Accessories

Components

- The DP-2310/3010 is a digital photocopier which can produce images with great clarity. Furthermore, its copying functionality can also be greatly enhanced by the addition of the following options and supplies. We hope you find that the wide ranging capabilities will make your office-place more productive and efficient.


Options

Inner Tray
(DA-XN200)

1-Bin Finisher
(DA-FS300)
or
Exit Tray
(DA-XT200)

3rd Paper Tray
(DA-DS303)

4th Paper Tray
(DA-DS304)

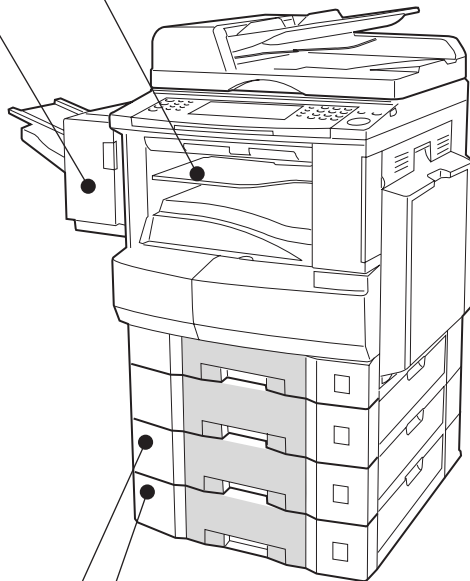

Fax Communication Board
(DA-FG300)

Internet Fax/E-Mail Module
(DA-NF600)

Image Memory

(DA-SM16B/64B/28B)

- 16/64/128 MB
- To increase the memory capacity for electronic sorting.

Hard Disk Drive (HDD) Unit

(DA-HD30)

- This option also requires at least 16 MB of optional Sorting Image Memory (DA-SM16B)
- For PS Printing (for Fonts)
Security Print/Mailbox
Tandem copy/Concurrent copy
I-FAX without mail server
1,000 Station Address Book
Print Job Spooling
OneRIP
Account Management

Expansion Board

(DA-EM600)

- Expansion F-ROM (8 MB)

Network Scanner Module

(DA-NS600)

Printer Controller Module

(DA-PC300)

- Printer Controller for PCL6*

Multi Page Description Language Controller Module

(DA-MC300)

- Printer Controller for PS*/PCL6


Supplies

Part Name	Part No.	Remarks
Staple Cartridge	FQ-SS32	Staple Cartridge Refills (3) for DA-FS300
Toner	DQ-TU15E	Toner

NOTE

* PCL6 is a Page Description Language of the Hewlett-Packard Company. PS is a Page Description Language of the Adobe Cooperation.

- Contact your authorized service provider for details on combinations of options.


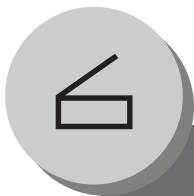


Network Scanner (Option)

Document Scanning/Address Book


Document Scanning


When Panasonic Document Management System (PDMS) is installed and configured on your PC, document(s) can be scanned from the DP-2310/3010 to PC.

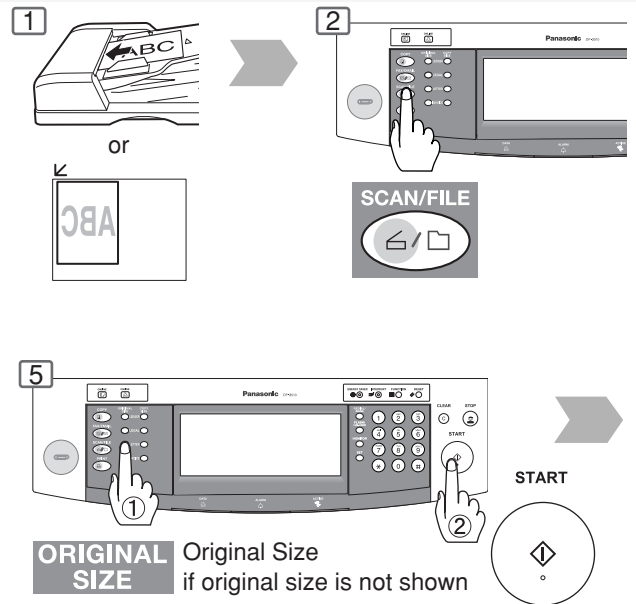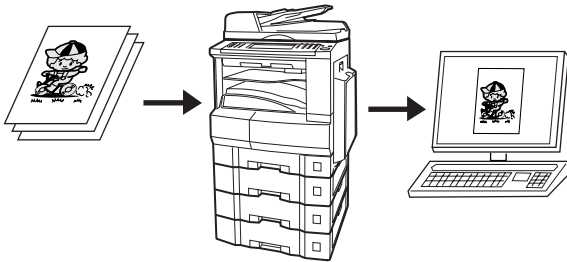


Adding your PC or DD Server IP Address

If the PC or DD Server IP Addresses were not entered with the PDMS software, input the IP Addresses from the copier's Touch Panel.



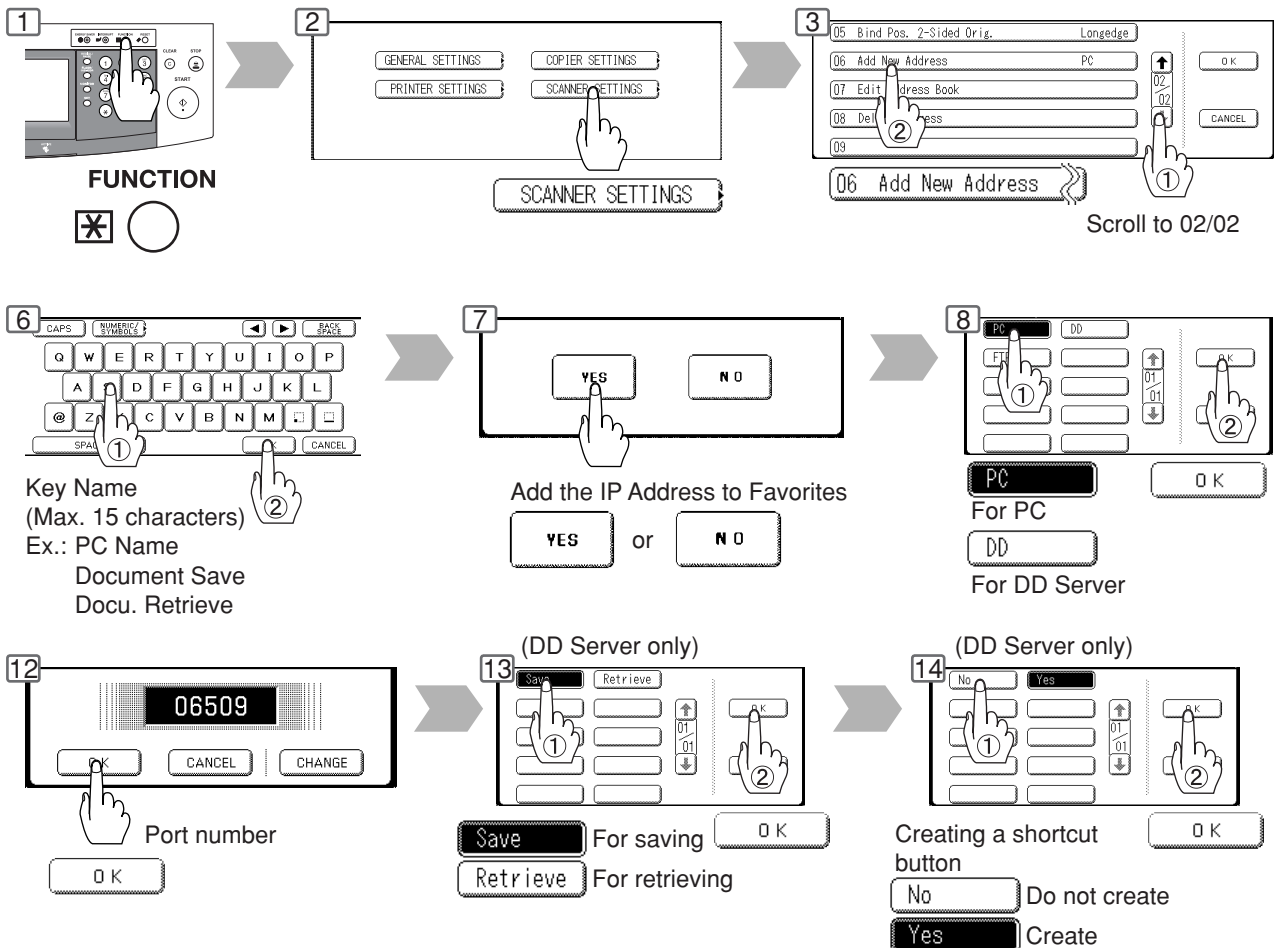


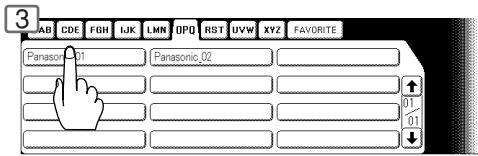


3 Select a destination (PC)*
* A destination will be indicated

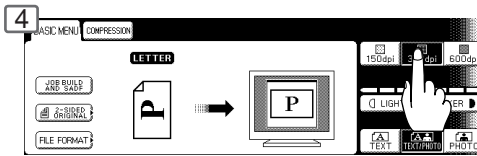


4 Select a Mode if required

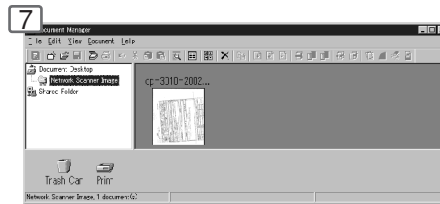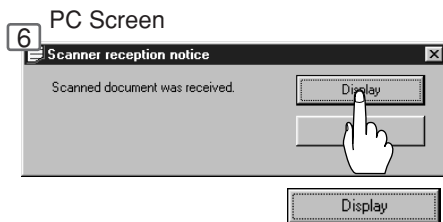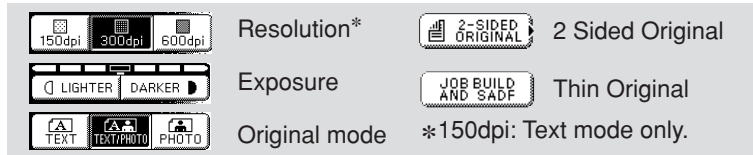


Refer to PDMS Operating Instructions on the CD-ROM.

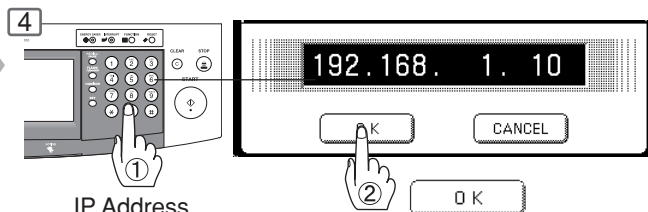


4 IP Address
Ex.: 192.168.1.10**

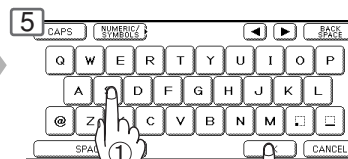


5 Server name
(Max. 15 characters)
Ex.: SALES DEPT

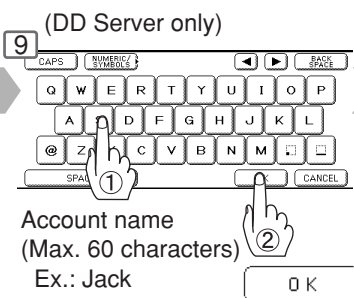

9 (DD Server only)
Account name
(Max. 60 characters)
Ex.: Jack

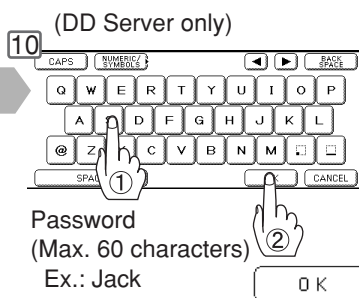

10 (DD Server only)
Password
(Max. 60 characters)
Ex.: Jack

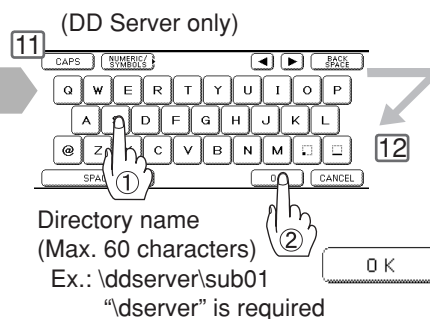


11 (DD Server only)
Directory name
(Max. 60 characters)
Ex.: \\dserver\sub01
"dserver" is required



** When entering a 1 or 2-digit number segment, add "00" or "0" in front of the number, to scroll to the next segment of numbers or press the "*" key to enter a period after the number.

 Button Names on the Keyboard




To input upper case letter(s).




To move the cursor () to the left or right side.



 To input numbers and/or symbols.



To erase the character before the cursor.





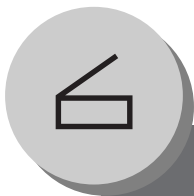


Network Scanner (Option)

Document Scanning/Address Book


■ Editing your PC or DD Server IP Address




If you have to change or erase any of the Address Book stations, follow the steps below.

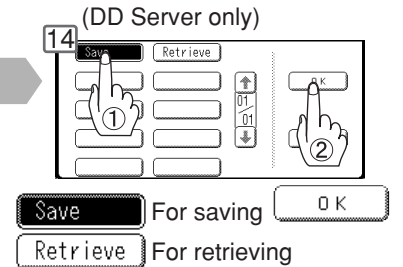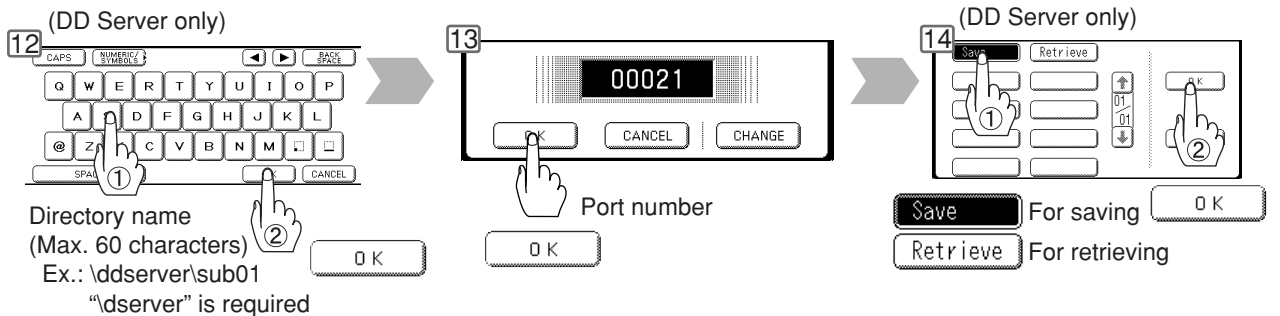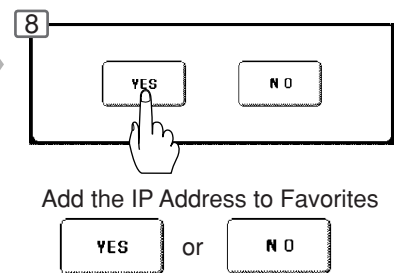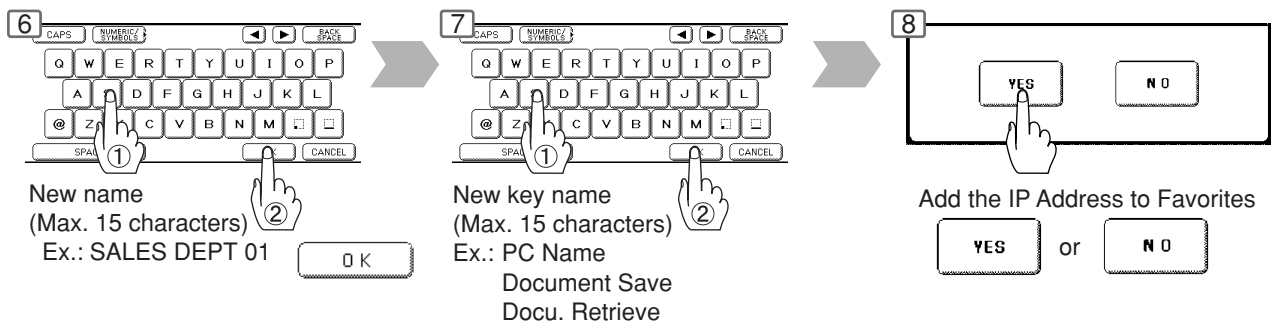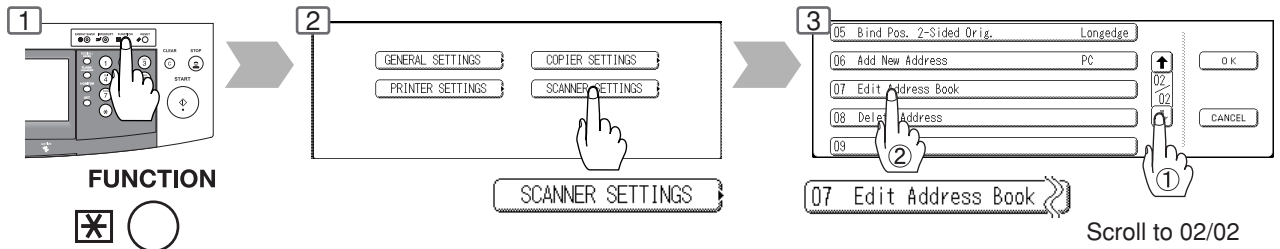


■ Erasing the Address

If you have to delete any of the Address Book entries.

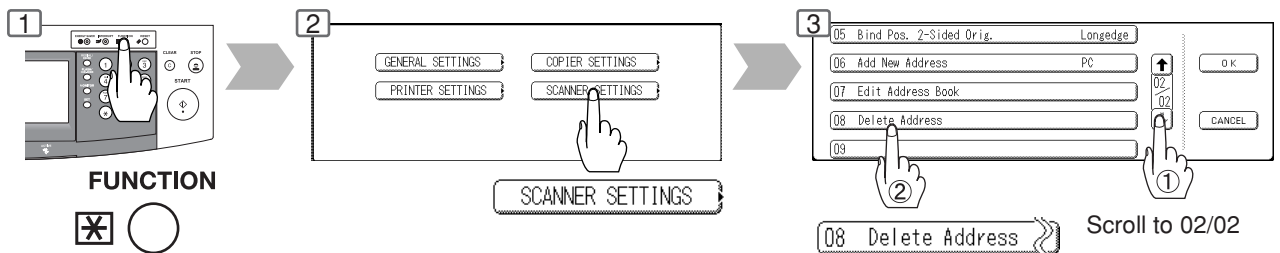

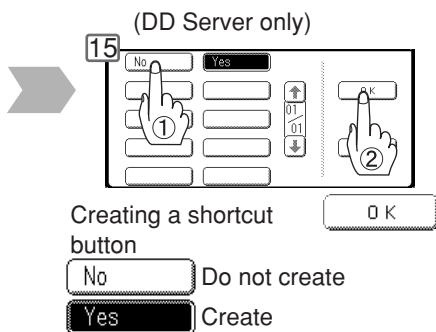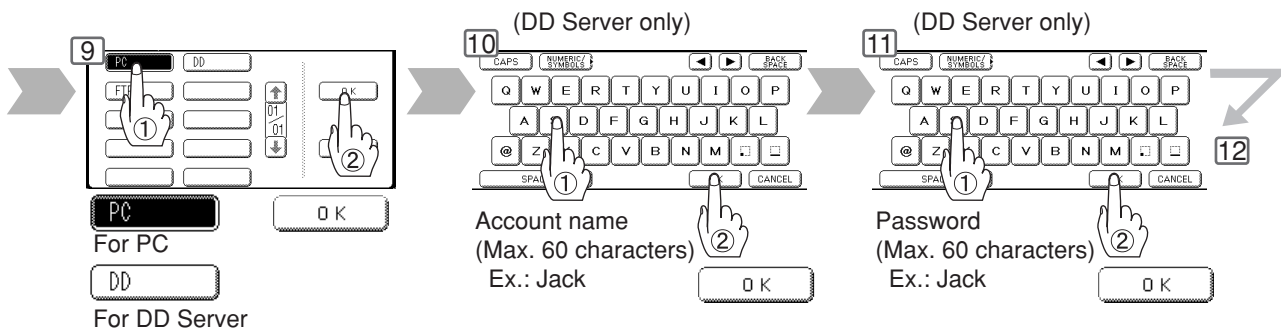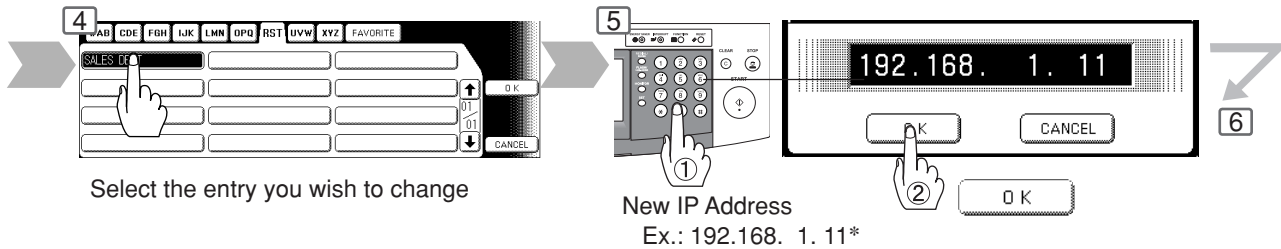

* When entering a 1 or 2-digit number segment, add "00" or "0" in front of the number, to scroll to the next segment of numbers or press the "*" key to enter a period after the number.

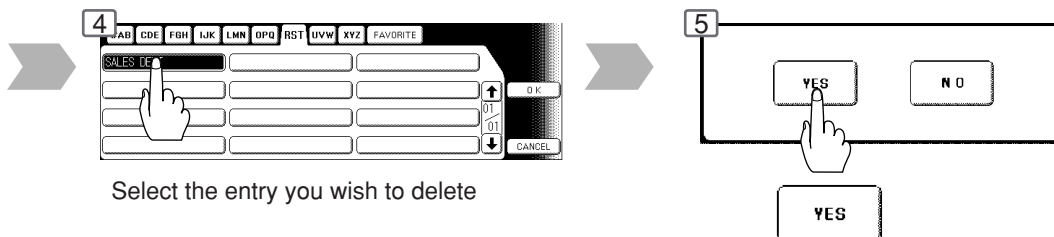



Problem Solving

Troubleshooting

Check

Action

Unit Does Not Operate

Does the display light?



Check if the Power Switches (Main Power Switch on the back and Power Switch on the Left Side of the machine) are turned ON and if the power cord is plugged into the AC outlet.

Does the Energy Saver key flash (or light) and displays are turned OFF?
(See page 48)



Press Energy Saver key on the control panel.

Does any of the U## codes and messages appear on the display?
(U1, U4, U6, U7, U11....etc.)



Perform actions in accordance with each message.

Does the Add Staples indicator and message appear on the display?



Add Staples (See page 12)
Remove all jammed staples. (See page 13)

Does the Add Paper indicator and message appear on the display? (↓)



Add paper. (See page 10)

Does the paper misfeed indicator and message appear on the display? (8V)



Remove the misfed paper. (See pages 14 - 17)

Does E#-## indicator and message appear on the display?



Turn the Power Switch on the Left Side and the Main Power Switch on the Back of the machine to the OFF and ON. If the error code does not clear, call your Service provider.

The machine would not accept the next job during operation, instructed job would not be accepted for a long time period or job would not be completed.



Turn the Power Switch on the Left Side and the Main Power Switch on the Back of the machine to the OFF and ON.

Light Copies

Does the exposure indicator say "LIGHTER"?



Touch the "DARKER" button.

Does the Add Toner indicator and message appear on the display? (↓)



Replace the Toner Bottle.
(See pages 12 and 13)

Check

Action

Marked Copies

Is the copier Platen Glass or Platen Sheet dirty?



Clean the Platen Glass or Sheet.

Is the original an OHP film or a dark original?




Cover the original with a sheet of white paper before copying or lighten the exposure setting.

■ If the measures outlined above do not solve the problem, call your Service provider.


Copier Care

■ As a rule, clean weekly.

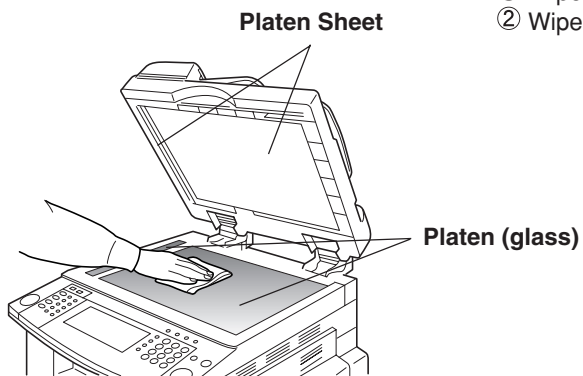

Platen Glass/Platen Sheet



- ① Wipe marks off with a cloth and a neutral detergent.
- ② Wipe again with a dry cloth.

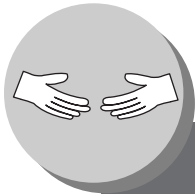

Problem Solving



Replacing the Battery

The copier has an internal battery (Product No.: CR2032) which maintains the date and time. In the event the battery requires replacement, the following message will be displayed.

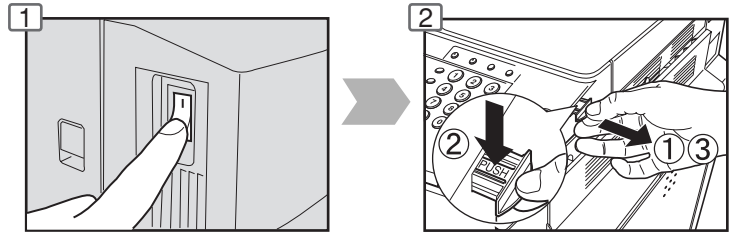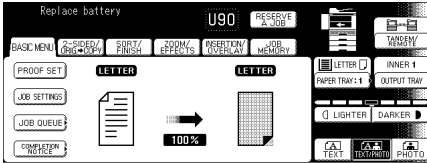




Turn the Power Switch on the Left Side of the machine to the OFF position.

Set the date and time

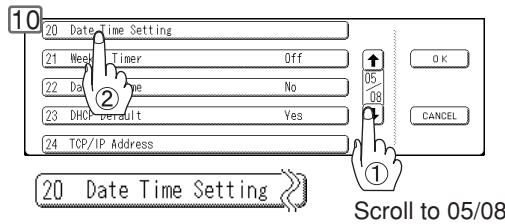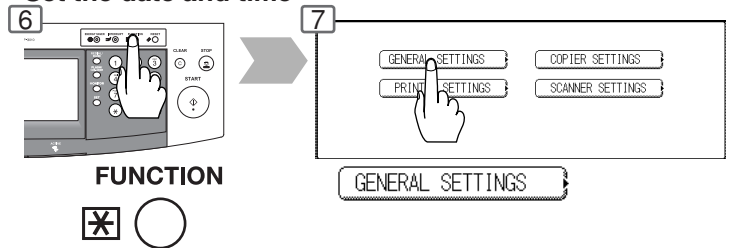

NOTE

- The service life of the battery is approximately 1 year under normal use.

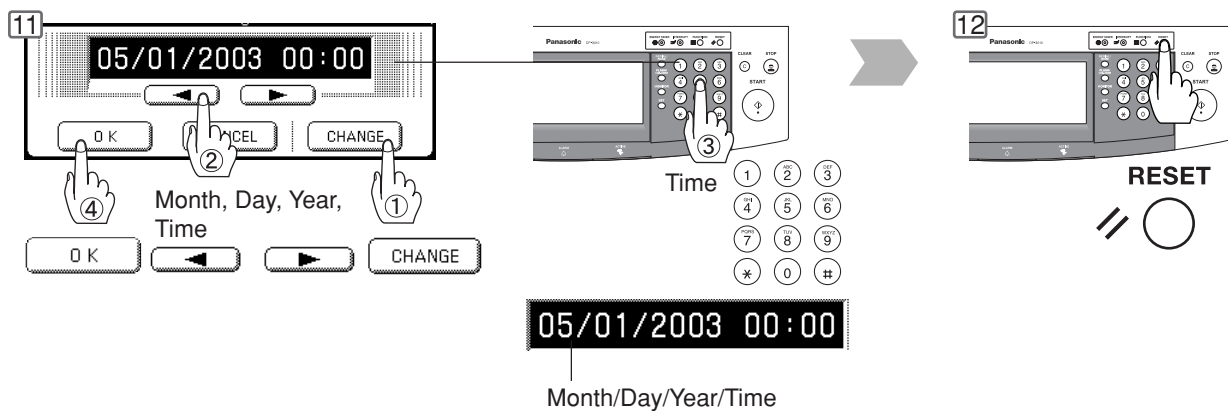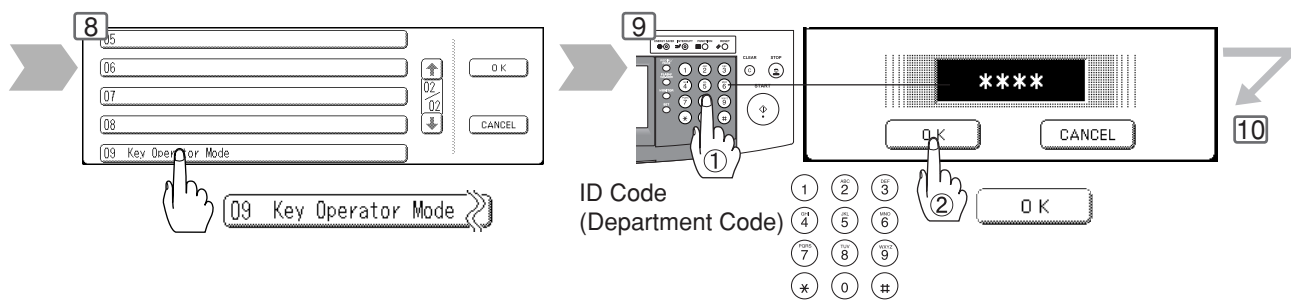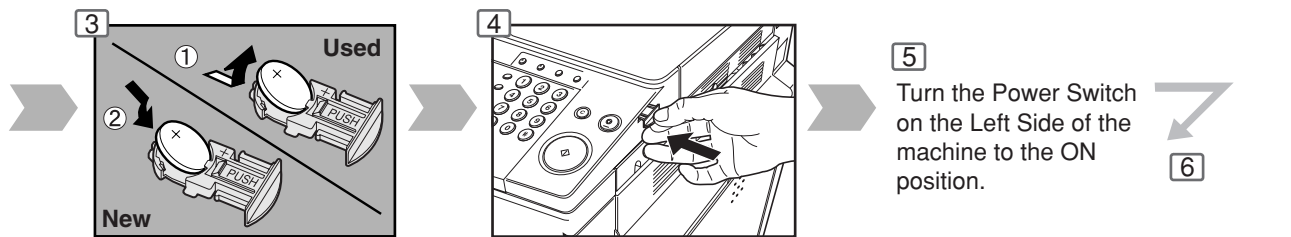

CAUTION

denotes hazards that could result in minor injury or damage to the machine.

- THIS PRODUCT CONTAINS A LITHIUM BATTERY. DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS OF YOUR LOCAL SOLID WASTE OFFICIALS.



Others

Specifications

■ DP-2310/3010 (Copier)

Type:	Desk Top
Platen Type:	Fixed
Acceptable Originals:	Sheets, Books (max. Ledger)
Copying Method:	Laser Electrophotography
Fixing Method:	Heat Roller Fixing
Imaging Method:	Dry-Type Dual components imaging
Resolution:	Max. 600 dpi
Operation Panel:	Touch Panel Display
Maximum Copy Size:	Ledger - Invoice via Paper Tray
Void Area:	Max. 0.2" (5 mm)
Warm Up Time:	Approx. 35 seconds (68°F/20°C)
First Copy Time:	Less than 4.5 seconds (Letter <input type="checkbox"/> , from 1st Tray to Inner Tray)
Multi-Copy Speed:	DP-2310 : 23 cpm (Letter size) DP-3010 : 30 cpm (Letter size)
Enlargement Ratios:	Preset: 121%, 129%, 155%, 200% Variable: from 101% to 400% in 1% increments
Reduction Ratios:	Preset: 79%, 77%, 65%, 61%, 50% Variable: from 99% to 25% in 1% increments
Paper Feed:	Paper Tray (550 sheets × 2) + Sheet Bypass (50 sheets)
Paper Weight:	Paper Tray: 16 - 24 lb (Bypass: 15 - 35 lb)
Quantity Selector:	Max. 999 sheets (Output Tray capacity is 250 sheets)
Electrical Consumption:	AC 120V, 60Hz, 12A
Energy Consumption:	Max. 1.45 kW, 18 Wh in Sleep Mode
Dimensions (W)(D)(H):	23.6" (W) × 27.8" (D) × 27.4" (H) (599 × 707 × 697 mm)
Mass (Weight):	158 lb (72 kg)
Operating Environment:	Temperature: 50°F (10°C) - 86°F (30°C) Relative Humidity: 30% - 80% (However, the humidity should be 70% or less at a temperature of 86°F (30°C), and the temperature should be 80°F (27°C) or less at a humidity level of 80%.)

- Specifications are subject to change without notice.

■ ADF (Standard)

	ADF
Tray Capacity:	Letter, Invoice: 50 sheets (20 lb) Ledger, Legal: 30 sheets (20 lb)
Paper Size:	Invoice/Letter/Legal/Ledger
Paper Weight:	14 – 28 lb
Electrical Requirements:	Supplied from the copier
Dimensions (W)(D)(H):	21.7" (W) × 20.5" (D) × 5.3" (H) (552 × 520 × 135 mm) (without Tray)
Mass (Weight):	20.5 lb (9.3 kg)

■ 1-Bin Finisher (DA-FS300)

Paper Size:	Letter/Legal/Ledger
Paper Weight:	16 – 24 lb
Stacking Capacity:	Letter: 500 sheets, Legal: 250 sheets, Ledger: 250 sheets
Staple Sort :	Letter: 30 sheets, Legal: 20 sheets, Ledger: 20 sheets
Electrical Requirements:	Supplied from the copier
Dimensions (W)(D)(H):	7.1" (W) × 19.7" (D) × 10.1" (H) (182 × 498 × 257 mm)
Mass (Weight):	22.0 lb (10 kg)

■ 3rd/4th Paper Feed Module (DA-DS303/DA-DS304)

	DA-DS303	DA-DS304
Paper Size:	Invoice/Letter/Legal/Ledger	
Paper Weight:	16 – 24 lb	
Electrical Requirements:	Supplied from the copier	
Dimensions (W)(D)(H):	21.7" (W) × 23.5" (D) × 5.8" (H) (550 × 596 × 147 mm)	21.7" (W) × 23.5" (D) × 6.8" (H) (550 × 596 × 173 mm)
Mass (Weight):	18.7 lb (8.5 kg)	19.8 lb (9.0 kg)

● Specifications are subject to change without notice.



Others

INDEX

1-Bin Finisher	
Components	65
Function	55
Functions Indication	20
Making Copies	36
Replacing Staple Cartridge	12
Removing a Misfed Paper	16
Specifications	75
User Error Codes (U##)	12
1-Sided → 2-Sided Copy	30
2 Page Copy	32
2-Sided → 1-Sided Copy	30
2-Sided → 2-Sided Copy	30
2-Sided/Original → Copy	30-35

A

Accessories (Components)	65
ACTIVE LED (GREEN)	19
Adjust the Manual Exposure	11, 23
ALARM LED (RED)	19
Auto Zoom	38

B

Basic Menu	22-29
Book	38
Book → 2-Sided Copy	30
Booklet Copy	32
Button Names on the Keyboard	27, 67

C

Centering	40
Changing the Paper Size	60
CLEAR Key	19
Combined Function Table	64
Completion Notice	28
Completion Notice Button	20, 29
Concurrent Copying	48
Control Panel	19
Copier Care	71
Copy Image and Paper Image Indication	20
COPY Key	10, 19
Copy Ratio Indication	20
Copy Size Indication	20
Copy Size Key	19, 24
Copying the Same Size Originals (1:1)	22
Copying with Preset Ratios	24
Cover	44

D

Density Indicator (7 steps)	11, 20
Digital Skyshot Mode	48
DP-2310/3010 Operating Instructions	2
Duplex Notice Function	30

E

Edge	38
Energy Saver	48
ENERGY SAVER Key	19, 48
Energy Star	18
Exit Destination	11

F

File Edit	46
Form Overlay	46
Function	50
Function (Copier Settings for Key Operator)	57
Function (Copier Settings)	52-53
Function (For Example:	
Changing the Auto Contrast Setting)	60
Function (For Example: Changing the Paper Size)	60
Function (For Example: Department Counter)	62
Function (For Example: Network Settings)	62
Function (For Example: Weekly Timer)	60
Function	
(General Settings for Key Operator)	55-56
Function (General Settings)	52
Function (Printer Settings for Key Operator)	58
Function (Printer Settings)	54
Function (Procedure)	50
Function (Scanner Settings)	53
FUNCTION Key	19, 50

I

Image Repeat	40
Insertion/Overlay	44-47
INTERRUPT Key	19, 49
Inverse	40

J

Job Build and SADF Mode	34
Job Build and SADF/	
Multi-Size Feed Mode Indication	20, 34
Job Memory	46
Job Queue	28
Job Queue Button	20, 28
Job Settings Button	20

K

Keypad	19
--------	----

L

Light Copies	70
Load Paper (Paper Tray)	10
Load Paper (Sheet Bypass)	10

M

Machine Outline with Tray Selection	20
Machine/User Error Code Indication	
(U13, E1-01, etc.)	12, 20, 70

Manual Exposure Select Buttons (Lighter and Darker)	11, 20, 23
Manual Skyshot Mode	49
Margin	40
Marked Copies	71
Multi-Size Feeding	34

N

N in 1 Copy	32
Network Scanner (Option)	66-69
Network Scanner (Option) (Adding your PC or DD Server IP Address)	66
Network Scanner (Option) (Document Scanning)	66
Network Scanner (Option) (Editing your PC or DD Server IP Address)	68
Network Scanner (Option) (Erasing the Address)	68
Non-Sort	36

O

OHP Interleaving	44
Operation Chart (Load Paper)	10
Operation Chart (Problem Solving)	11
Operation Chart (Quick Operation Chart)	10
Operating Instructions Outline	3
Original Image Indication	20
Original Mode Select Button (Text; Text / Photo; Photo)	11, 20, 23
Original Size Indication	20
ORIGINAL SIZE Key	19
Output Tray Button	11, 20
Output Tray Indication	11, 20
Overlay	46

P

Page Insertion	44
Paper Level and Size Indication	20
Paper Tray Selection Button	20
Position of the Original(s)	23
Precautions (Handling, Toner and Paper, Ventilation, Installation)	8
Precautions (For Your Safety)	7
Presentation	44
PRINT DATA LED (GREEN)	19
Problem Solving (Replacing the Battery)	72
Problem Solving (Troubleshooting)	70
Proof Copying	24
Proof Set Button	20, 25

R

Removing a Misfed Paper (2nd/3rd/4th Paper Tray)	14
Removing a Misfed Paper (1-Bin Finisher)	16
Removing a Misfed Paper (ADF)	16
Removing a Misfed Paper (Automatic Duplex Unit)	14
Removing a Misfed Paper (Paper Entry Area/1st Paper Tray)	14

Removing a Misfed Paper (Paper Transport Area)	14
Replacing the Staple Cartridge	12
Replacing Toner Bottle/ Replacing Toner Waste Container	12
Reserve a Job Button	20, 49
RESET Key	19
Rotate Mode Indication	20
Rotate-Group	36
Rotate-Sort	36

S

Select type of Original(s)	23
Shift-Group	36
Shift-Sort	36
Skyshot Mode	48
Sort	36
Sort/Finish	36, 37
Specifications	74
Stamping (Date Stamp)	42
Stamping (Issue Number Stamping)	42
Stamping (Page Numbering)	42
Staple Sort	36
START Key	19
STOP Key	19
Symbols/Icons	4

T

Table of Contents	5
Tandem/Remote Copy Settings (Deleting)	26
Tandem/Remote Copying	24
Tandem/Remote Button	20, 25
Tandem/Remote Button Indication	20, 25
Tandem/Remote Copy Settings (Editing)	26
Tandem/Remote Copy Settings (Registration)	26
Touch Panel Display	20

U

Unit Does Not Operate	70
Useful Office Functions	2
User Error Codes (U Code)	12
Using the ADF	22

W

Warning Indications	11-13, 20
---------------------------	-----------

Z

Zoom	38
Zoom/Effects	38-43



Others

IMPORTANT INFORMATION

When requesting information, supplies or service always refer to the model and serial number of your machine. The model and serial number plate (Main Name Plate) is located on the rear side of machine. For your convenience, space is provided below to record information you may need in the future.

Model No.

Serial No.

Date of Purchase

Dealer

Address

Telephone Number


()

Supplies Telephone Number


()


Service Telephone Number

()

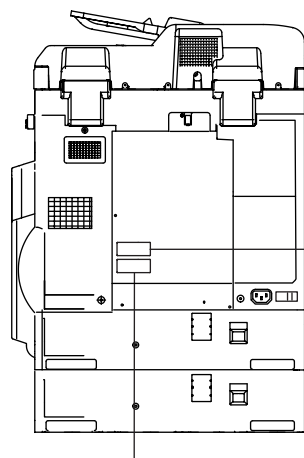

Model and Serial Number

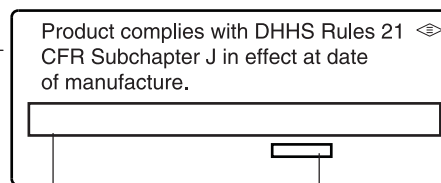

Product complies with DHHS Rules 21 
CFR Subchapter J in effect at date
of manufacture.

Factory ID

Manufacturer's Name and Address

Copyright © 2003 Panasonic Communications Co., Ltd.

All rights reserved. Unauthorized copying and distribution is a violation of law.
The contents of these Operating Instructions are subject to change without notice.

PEERLESSPAGE™ is a trademark of the PEERLESS Systems Corporation; and, PEERLESSPrint® and Memory Reduction Technology® are registered trademarks PEERLESS Systems Corporation; and, COPYRIGHT © 2000 PEERLESS Systems Corporation

Universal Font Scaling Technology (UFST) and all typefaces have been licensed from Agfa Monotype

USA Only

WARRANTY

PANASONIC DIGITAL DOCUMENT COMPANY MAKES NO WARRANTIES, GUARANTEES OR REPRESENTATIONS, EXPRESSED OR IMPLIED, TO CUSTOMER WITH RESPECT TO THIS PANASONIC MACHINE, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PANASONIC DIGITAL DOCUMENT COMPANY ASSUMES NO RISK AND SHALL NOT BE SUBJECT TO LIABILITY FOR ANY DAMAGE, INCLUDING, BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSS OF PROFITS SUSTAINED BY THE CUSTOMER IN CONNECTION WITH THE USE OR APPLICATION OF THIS PANASONIC MACHINE. SEE YOUR DEALER FOR DETAILS OF DEALER'S WARRANTY.

For Service, Call: _____

Panasonic Digital Document Company
Unit of Matsushita Electric Corporation of America
Two Panasonic Way
Secaucus, New Jersey 07094
<http://panasonic.co.jp/pcc/en/>

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario L4W 2T3

Ko0603-1063
DZSD001957-1
June 2003
Printed in Japan

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>