

Facsimile

## Quick Reference Guide

Model No. **KX-PW201CL**  
**KX-PW201CW**



KX-PW201CL

Thank you for purchasing a Panasonic facsimile.

 
### Table of Contents

Finding the controls .....	2
Installations and connections .....	4
Setting the date and time .....	6
Setting your facsimile telephone number .....	6
Setting your logo .....	7
Character input and command key table .....	8
Automatic dialing on the main unit .....	9
Automatic dialing on the portable handset .....	11
Intercom between the main unit and portable handset .....	13
Sending faxes .....	14
Receiving faxes .....	15
Operating the built-in answering device .....	17
Individual e-mail services .....	18
Specifications .....	Back cover

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.  
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

# Finding the controls

## Main unit (control panel)

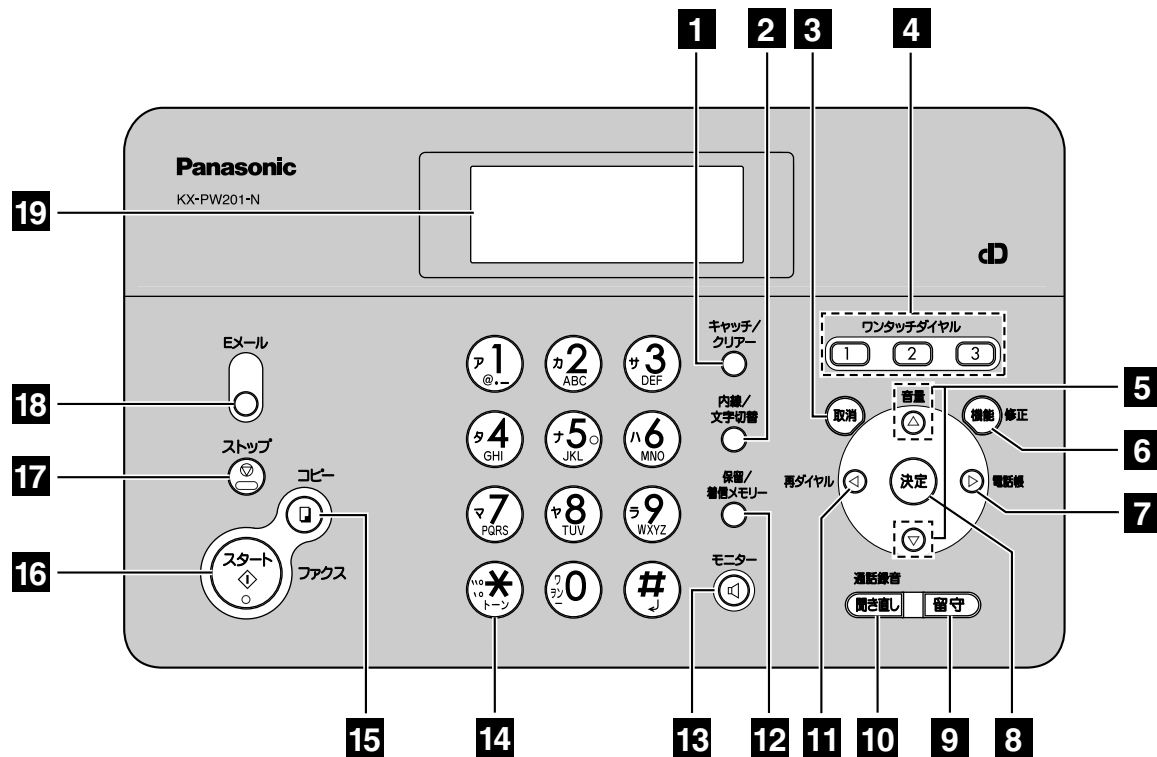

- 1 Flash button**  
(For call waiting service users.)  
**Erase button**
- 2 Intercom button**  
**Character Input Mode button**
- 3 Cancel button**
- 4 One-touch dial buttons**
- 5 Volume buttons**
- 6 Function button** initiates programming.  
**Edit button**
- 7 Phonebook button**
- 8 Set button** stores a parameter.
- 9 Auto Answer button & indicator**  
—light on: answering device activated.  
—light off: used as a regular telephone.  
**Pause button**
- 10 Record button** records telephone calls.  
**Replay button** plays back recorded messages.
- 11 Redial button**  
To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.
- 12 Hold button**  
**Call Memory button** starts a search in the Number Display log.  
(For caller ID display service users.)
- 13 Monitor button**
- 14 Tone button** switches to tone dialing.
- 15 Copy button** starts copying.
- 16 Start/Fax button** starts faxing.
- 17 Stop button**
- 18 E-Mail button & indicator**
- 19 Liquid crystal display**

# Finding the controls

## Portable handset

**How to use key**

- 電話帳** (Phonebook key): To use the phonebook.
- 再ダイヤル** (Redial key): To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.
- 音量** (Volume key): To adjust the volume.

**How to use F1 F2 buttons**

- F1** and **F2** buttons refer to the function displayed on the bottom of the display. They function differently depending on the mode.

**Dial buttons**

- \* (Tone button)**: To switch to Tone dialing mode.
- # (Sharp button)**

**How to use other keys:**

- 外線** (External line): To make/answer calls.
- 内線** (Internal line): To page the main unit or another portable handset. To change the character input mode.
- 切** (End call): To end a call. To end or exit from editing or other operations.
- 保留** (Hold call): To put a call on hold. To start a search in the Number Display log. (For caller ID display service users.)
- クリア キヤッチ** (Clear key): To clear letters/numbers. For call waiting service users.
- ワンタッチ** (One-touch dial): To use the One-touch dial.
- スピーカーホン** (Speakerphone): To use the speakerphone.

**LCD (with back light)**

Displays battery strength, telephone numbers etc.

 
① ..... Portable handset number  
 ② ..... Function menu that is controlled by **F1** or **F2**.  
 ③ ..... Battery strength

**Microphone**  
 (Do not cover the microphone while talking.)


# Installations and connections

## Installing the thermal recording paper


- 1** Open the control panel.

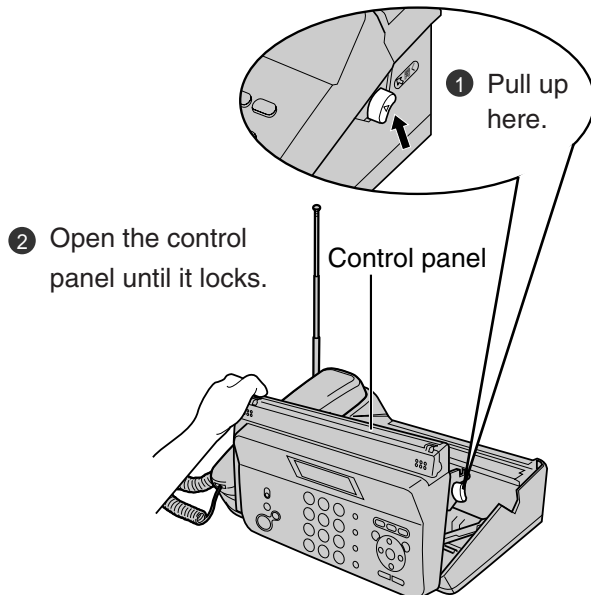

- 2** Install the recording paper.

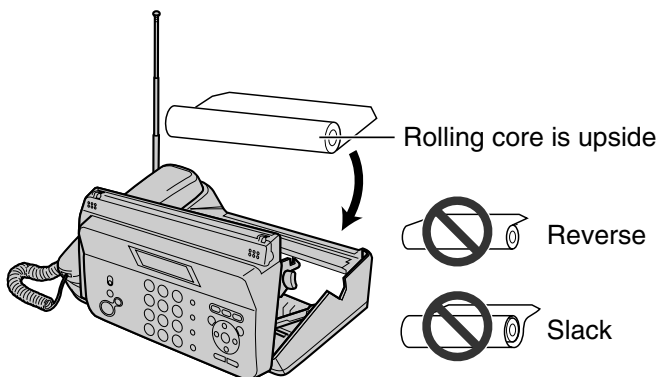 


 - 3** Pull the paper approx. 10 cm out of the unit and close the control panel until it locks.

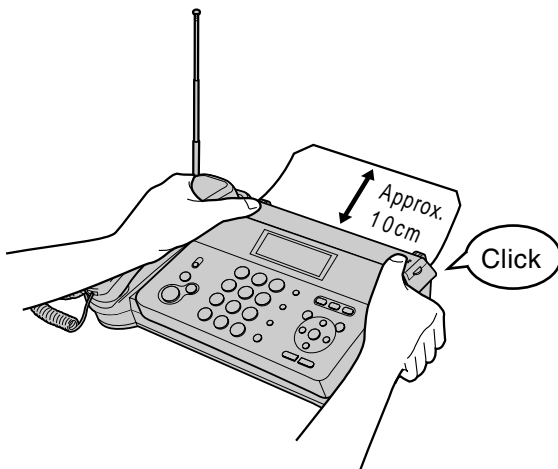

- Approximately 5 cm of the recording paper will come out automatically.

 - 4** Pull the recording paper towards you to cut off.

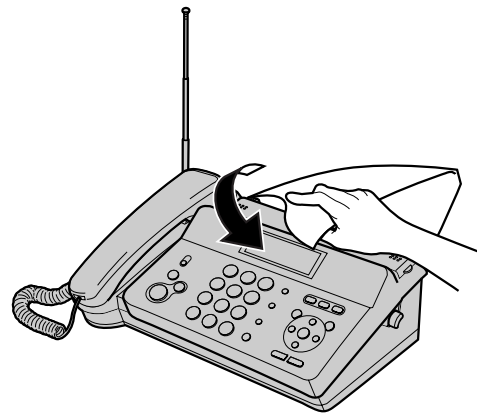


Install a new thermal recording paper.

Replacement thermal recording paper:  
**UG-0010A4** (15 m role type)      ¥450

· As of June 2003.      · Tax not included.

# Installations and connections

 
## Connecting the main unit

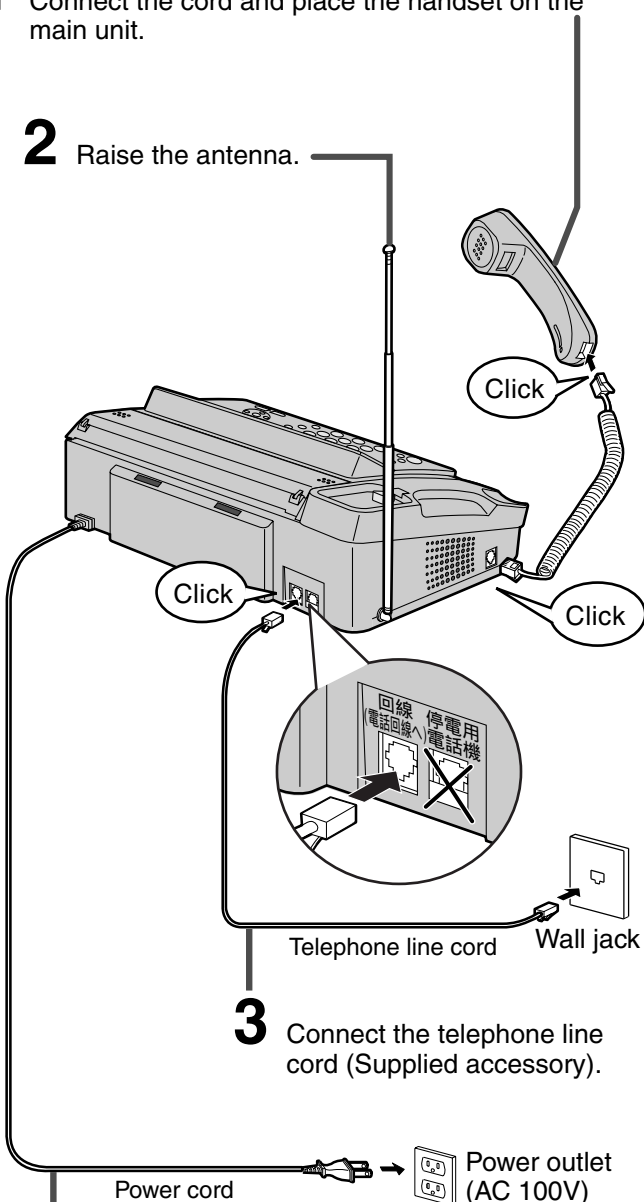- 1 Connect the cord and place the handset on the main unit.
  - 2 Raise the antenna.
  - 3 Connect the telephone line cord (Supplied accessory).
  - 4 Connect the power cord.
- 

### After the Power On...

 This unit will automatically select the dialing mode (Tone/Pulse).

## Setting up the portable handset

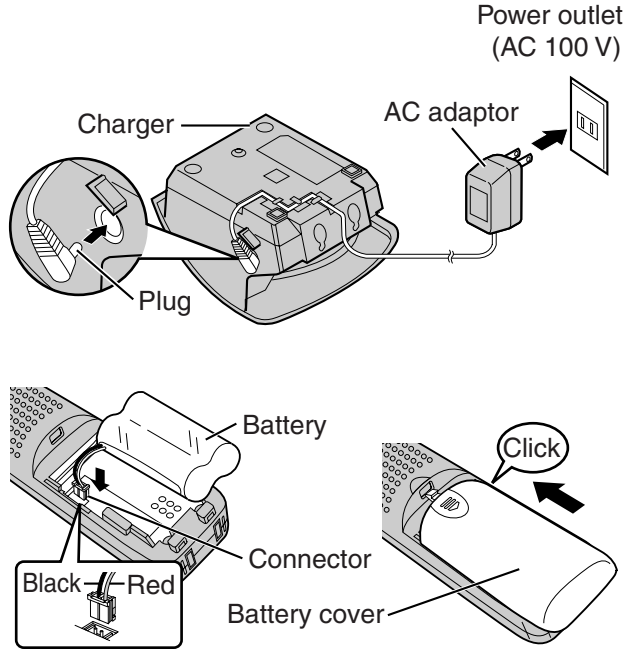
- 1 Charge the battery in the charger for 10 hours.
    - After your Panasonic battery is fully charged, it will last up to about 7 hours of conversation.
  - 2
  - 3
- 

While charging.


シ ュテ ンチュウ

Charging completed.

 シ ュテ ンカンリョウ

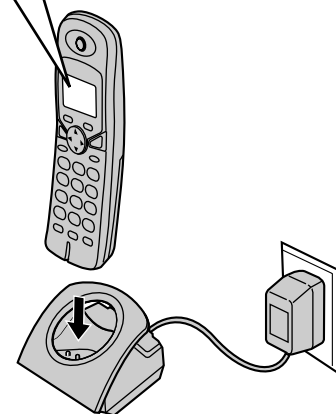

# Setting the date and time

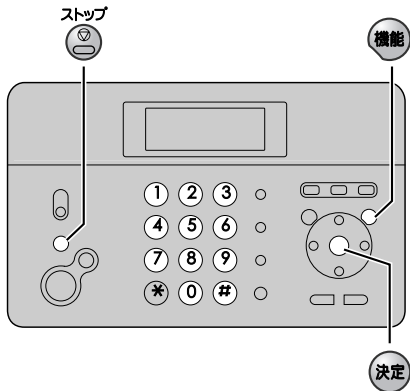 

1 Press **機能** (Function).

キノウ トウロクモード  
[ ]オス

2 Press **# 0 0 1**.

Example : 2003年06月01日  
20:10  
Cursor

3 Enter the correct year/month/day.

Example: **October 1, 2003**

Press **2 0 0 3 1 0 0 1**.

2003年10月01日  
20:10

4 Enter the correct hour/minute in a 24-hour clock entry.

Example: **15:45 (3:45 PM)**

Press **1 5 4 5**.

2003年10月01日  
15:45

5 Press **決定** (Set).

トウロク シマシタ




2003年10月01日  
15:45

6 Press **ストップ** (Stop).

Example : 10月 1日 15:45  
ヨウケン 00ケン

# Setting your facsimile telephone number

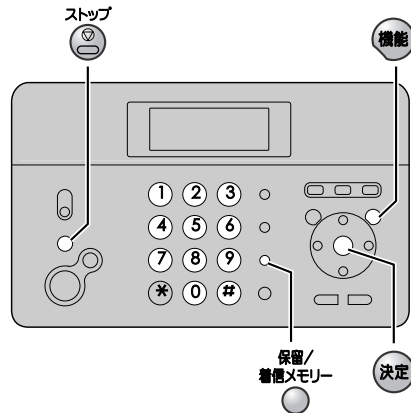 

1 Press **機能** (Function).

キノウ トウロクモード  
[ ]オス

2 Press **# 0 0 4**.

アナタノハ`ンゴ`ウ?  
TEL= . . . . .  
Cursor

3 Enter your facsimile telephone number, up to 20 digits.

Example: **098 765**

アナタノハ`ンゴ`ウ?  
TEL=098 765

The **保留/着信メモリー** (Space) button replaces the digit with a space.

4 Press **決定** (Set).

トウロク シマシタ




アナタノハ`ンゴ`ウ?  
TEL=098 765

5 Press **ストップ** (Stop).

Example : 10月 1日 15:45  
ヨウケン 00ケン

# Setting your logo

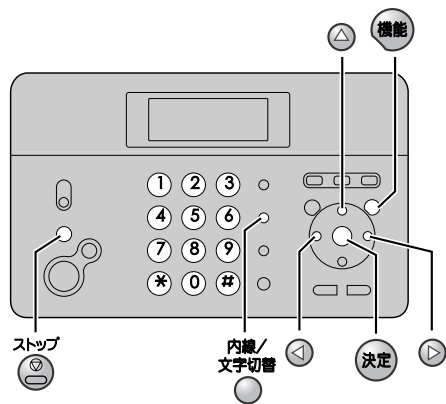 

**1** Press **機能** (Function).

キノウ トウロクモード'  
[ ]オス

**2** Press **# 0 0 2**.

アナタノナマエ?  
Cursor

**3** Enter your logo, up to 30 characters, using the dial keypad.

- To enter English characters easily, press **内線/文字切替** (Character input mode) repeatedly and select “英” (English and sign input mode).
- For details, see the table on page 8 for instructions.

## Example: Micah

1. Press **6** once.

アナタノナマエ?  
M  
Cursor

2. Press **4** six times.

アナタノナマエ?  
Mi

3. Press **2** six times.

アナタノナマエ?  
Mic

4. Press **▶** to move the cursor to the next space and press **2** four times.

アナタノナマエ?  
Mica

5. Press **4** five times.

アナタノナマエ?  
Micah

**4** Press **決定** (Set).

トウロク シマシタ



アナタノナマエ?  
Micah

**5** Press **ストップ** (Stop).

**Example :** 10月 1日 15:45  
ヨウケン 00ケン

# Character input and command key table

Pressing the dial keys will select a character as shown below.

 
Character		Katakana	English	Numbers
Display of the main unit		カナ	英	
Display of the portable handset		[ カナ ]	[ AB ]	[ 12 ]
<b>Dial key</b>				
(Main unit)	(Portable handset)			
①	①	アイウエオアイウエオ	@ . _ - & \$ ¥ % + = ` ^	1
②	②	カキクケコ	A B C a b c	2
③	③	サシスセソ	D E F d e f	3
④	④	タチツテトツ	G H I g h i	4
⑤	⑤	ナニヌネノ	J K L j k l	5
⑥	⑥	ハヒフヘホ	M N O m n o	6
⑦	⑦	マミムメモ	P Q R S p q r s	7
⑧	⑧	ヤユヨヤユヨ	T U V t u v	8
⑨	⑨	ラリルレロ	W X Y Z w x y z	9
⑩	⑩	ワヲンー!? ( )	! ? / - * # , ; :   . ' " ( ) [ ] { } 「 」	0
⊛	⊛	ゝ っ っ っ っ	ゝ っ っ っ っ	
<b>Command keys</b>		内線/文字切替 (Main unit), 内線/文字切替 (Portable handset)	Used to change the character input mode.	
		◀ ▶ (Main unit), ◀ ▶ (Portable handset)	Used to move the cursor to the left and right.	
		キャッチ/クリアー (Main unit), クリアー/キャッチ (Portable handset)	Used to delete a character.	
		保留/着信メモリー (Main unit), 保留 (Portable handset)	Used to insert a space.	

- When entering e-mail address, the small letters are displayed before the capital letters.
- When entering e-mail address, you can not enter the following symbols:
- When entering e-mail address, you can enter only English and Numbers.
- When entering e-mail message, pressing **#** enables you to begin the new line. (“↵” is displayed.)
- The display items of the main unit are somewhat different from those of the portable handset.




# Automatic dialing on the main unit

## Storing telephone numbers in the one-touch dial

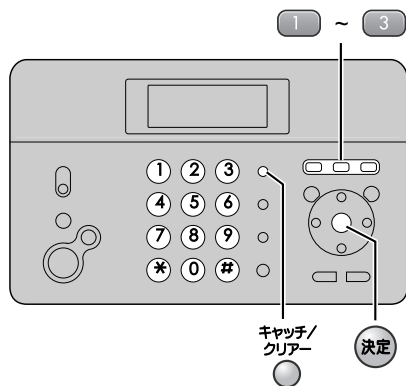


 - 1 Press the desired one-touch dial button ( 1 to 3 ).  
Example: one-touch dial 1

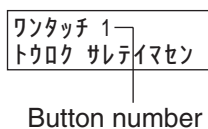


- 2 Enter the telephone number, up to 24 digits.

 - To correct a mistake, press (Clear).



- 3 Press (Set).

## Making a voice call using the one-touch dial

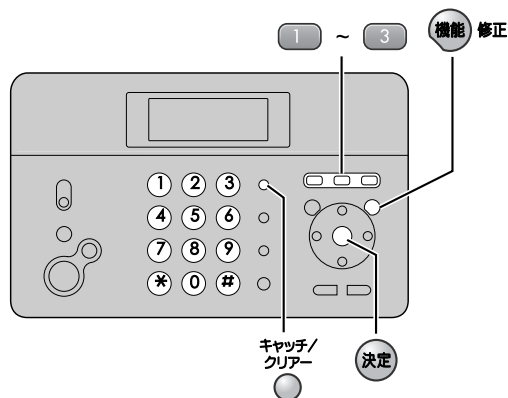 

- 1 Press the desired one-touch dial button ( 1 to 3 ).
  - The unit will start dialing.

- 2 When the other party answers, lift the handset.

## Editing a stored number in the one-touch dial

- 1 Press (Function/Edit).

- 2 Press the desired one-touch dial button ( 1 to 3 ).

- 3 Edit the telephone number, up to 24 digits.

- 4 Press (Set).

## Erasing a stored number in the one-touch dial

- 1 Press (Function/Edit).

 
- 2 Press the desired one-touch dial button ( 1 to 3 ).

- 3 Press and hold (Erase) until the telephone number has been erased.

- 4 Press (Set).

# Automatic dialing on the main unit

## Storing names and telephone numbers in the phonebook

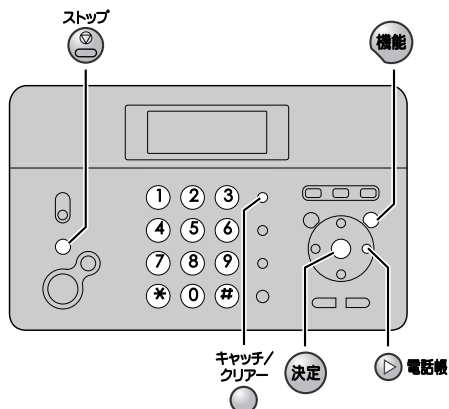

**1** Press 電話帳 (Phonebook).

トウロクハ	[キノウ]	オス
ケンサクハ	[ ]	オス

**2** Press (Function).

- “XX” shows the remaining station numbers you can store.
- You can program up to 100 stations, including 4 pre-programmed stations.

テ	ソワ	チョウ	トウロク
アキ	xx	ケン	

**3** Enter the name, up to 12 characters (see the table on page 8 for instructions).

**4** Press (Set).

**5** Enter the telephone number, up to 24 digits.

- To correct a mistake, press (Clear).

**6** Press (Set).


**7** If necessary, enter the group number (1-9).

**8** Press (Set).

- To program other items, repeat steps 3 to 8.

**9** Press (Stop) to exit the program.

## Making a voice call using the phonebook

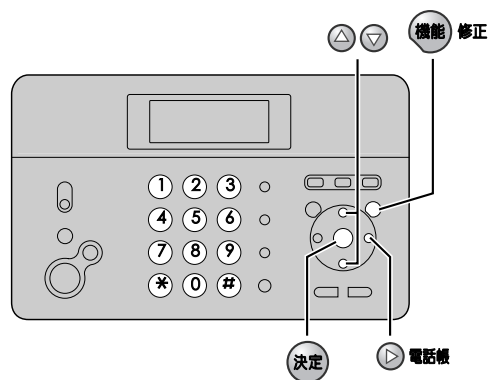 

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Lift the handset.

## Editing a stored name or number in the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press 機能 修正 (Function/Edit).

**4** Edit the name (see the table on page 8 for instructions).

- If you do not need to edit the name, skip to step 5.

**5** Press (Set).

**6** Edit the telephone number.

- If you do not need to edit the telephone number, skip to step 7.

**7** Press (Set).

 
**8** If necessary, enter the correct group number.

**9** Press (Set).

**10** Press (Stop) to exit the program.

# Automatic dialing on the portable handset


## Storing telephone number in the one-touch dial

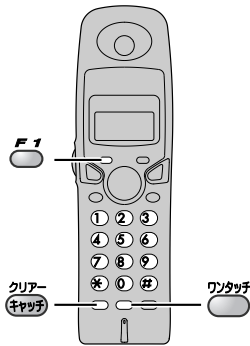

**1** Press  (one-touch).

ワンタッチ  
トウロク サレタイムセン


**2** Enter the telephone number, up to 24 digits.


- To correct a mistake, press  (Clear).

09876543・

**3** Press  (Register).

## Making a voice call using the one-touch dial

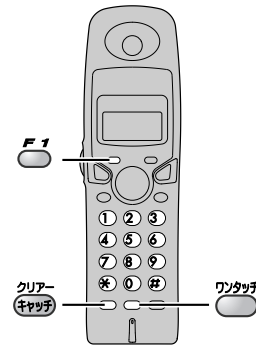 

**1** Press  (one-touch).  
• The unit will start dialing.

**2** When the other party answers, start talking.

## Editing a stored number in the one-touch dial

**1** Press  (Function).

**2** Press  (one-touch).


**3** Edit the telephone number, up to 24 digits.

**4** Press  (Register).

## Erasing a stored number in the one-touch dial

**1** Press  (Function).

 
**2** Press  (one-touch).

**3** Press and hold  (Erase) until the telephone number has been erased.

**4** Press  (Register).

# Automatic dialing on the portable handset

## Storing names and telephone numbers in the phonebook

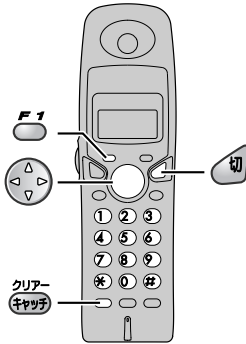

**1** Press (Phonebook).

ケンサケハ [ ] オス

**2** Press (Register).

- “XX” shows the remaining station numbers you can store.
- You can program up to 100 stations, including 4 pre-programmed stations.

ナマエ? [カナ]  
アキ x xケン



ナマエ? [カナ]

**3** Enter the name, up to 12 characters (see the table on page 8 for instructions).

**4** Press (Register).

**5** Enter the telephone number, up to 24 digits.  
• To correct a mistake, press (Clear).

**6** Press (Register).


**7** If necessary, enter the group number (1-9).

**8** Press (Register).

- To program other items, repeat steps 3 to 8.

**9** Press (Off) to exit the program.

## Making a voice call using the phonebook

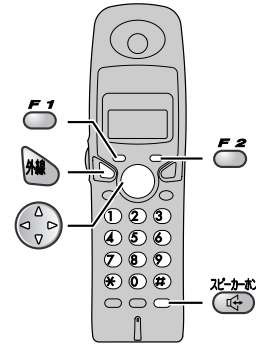 

**1** Press (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press (Talk) or press (Speakerphone).

## Editing a stored name or number in the phonebook

**1** Press (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press (Edit).

**4** Edit the name (see the table on page 8 for instructions).

- If you do not need to edit the name, skip to step 5.

**5** Press (Register).

**6** Edit the telephone number.

- If you do not need to edit the telephone number, skip to step 7.

**7** Press (Register).

**8** If necessary, enter the correct group number.

 
**9** Press (Register).

**10** Press (Off) to exit the program.

# Intercom between the main unit and portable handset

An intercom is available between the main unit and portable handset.

## Using the main unit:

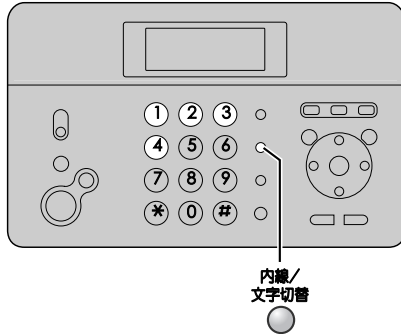

### 1 ■ For single portable handset users

- ① Lift the handset.

ハンコウ?



- ② Press  (Intercom).

コキ1ヨビタシチュウ

### ■ For multiple portable handset users

- ① Lift the handset.

- ② Press  (Intercom).

- ③ Press the portable handset number (  to  ) which you want to call.

 
ナイセン ハンコウ  
[ 12 . . . . ]オス

### 2 Start talking.

コキ1 ナイセンツウワ

### 3 Replace the handset to end the intercom call.

## Using the portable handset:

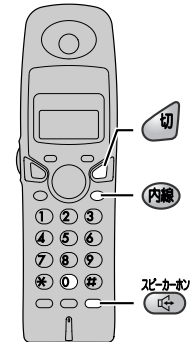

### 1 ■ For single portable handset users

- Press  (Intercom).

### ■ For multiple portable handset users

- Press , then press .

### 2 Start talking.

- You can switch to the speakerphone by pressing

 
ナイセンツウワ チュウ

-  (Speakerphone).

### 3 Press (Off) to end the intercom call.

# Sending faxes

## Sending a fax manually

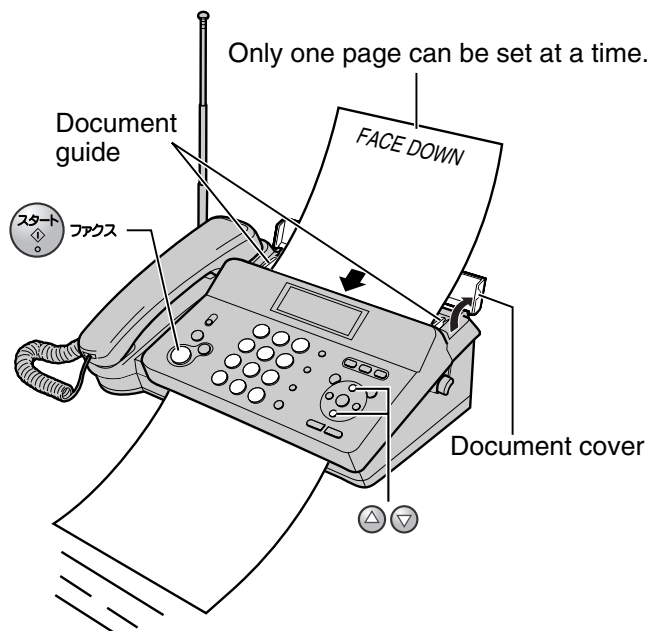

- 1 Open the document cover, and adjust the width of the document guides to the size of the document.
- 2 Insert the document (1 page only) FACE DOWN until a single beep is heard.
- 3 If necessary, press repeatedly to select the desired resolution (see below).
  - Select within 10 seconds, while 


カ <sup>*</sup> シツ=フツウ
ハンコウハ [ ] オス

 is displayed.
- 4 Dial the fax number.
- 5 Press (Fax).
  - The unit will start fax transmission.
  - After scanning a page, 2 short beeps will sound, and 

ツキ <sup>*</sup> ノケ <sup>*</sup> ショウウ
イレテ クタ <sup>*</sup> サイ

 will be displayed for about 4 seconds. To send more than 2 pages, set the next page during the above display.

## Sending a fax using automatic dialing

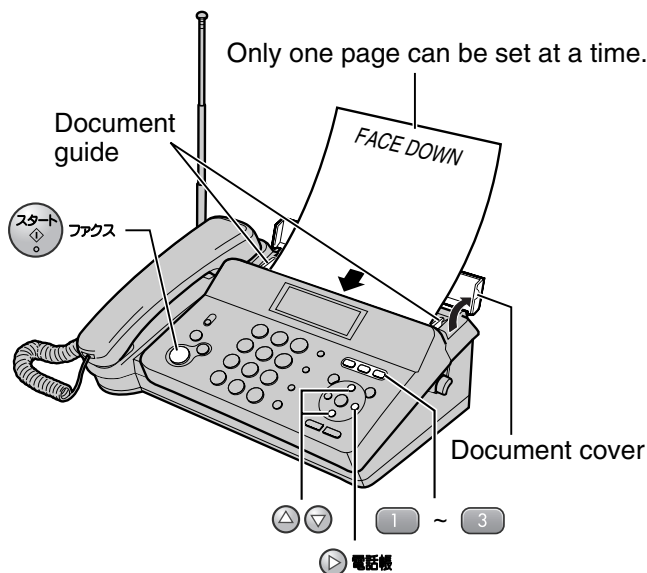 

### Using the one-touch dial

- 1 Insert the document (1 page only) FACE DOWN until a single beep is heard.
- 2 Press the desired one-touch dial button ( to ).
  - The unit will start fax transmission.

### Using the phonebook

- 1 Insert the document (1 page only) FACE DOWN until a single beep is heard.
- 2 Press .
- 3 Press (Search button) repeatedly until the desired name is displayed.
- 4 Press (Fax).
  - The unit will start fax transmission.

### To select the resolution

Select the desired resolution according to the type of document, by pressing .

カ<sup>\*</sup> シツ=フツウ

(Standard) for printed or typewritten originals with normal-sized characters.

カ<sup>\*</sup> シツ=チイサイ

(Fine) for originals with minute printing.

 
カ<sup>\*</sup> シツ=シャシン

(Photo) for originals containing photographs.


# Receiving faxes

## Receiving a fax manually (AUTO ANSWER off)


Using the main unit:

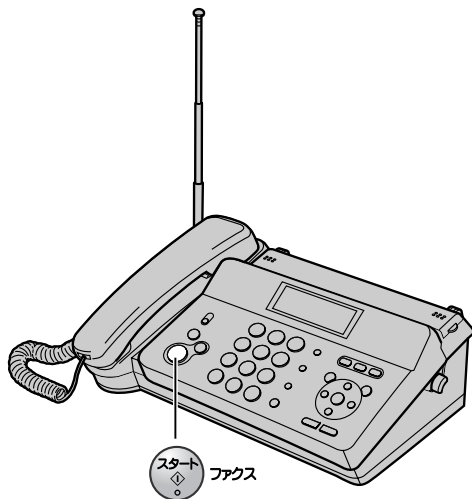




**1** When you hear a ring, lift the handset to answer the call.

 **2** When:  
– document reception is required,  
– a fax calling tone (slow beep) is heard, or  
– no sound is heard,  
press  (Fax), then replace the handset.  
• The unit will start fax reception.

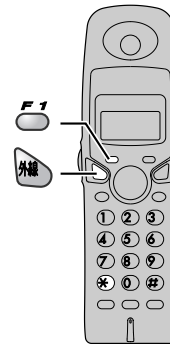Using the portable handset:




**1** When you hear a ring, lift the portable handset from the charger to answer the call.  
• If the portable handset is not set on the charger, press  (Talk).

**2** When:  
–document reception is required,  
–a fax calling tone (slow beep) is heard, or  
–no sound is heard,  
press  (Function), then press .  
• The main unit will start fax reception.

# Receiving faxes

 
## Receiving a fax automatically (AUTO ANSWER on)

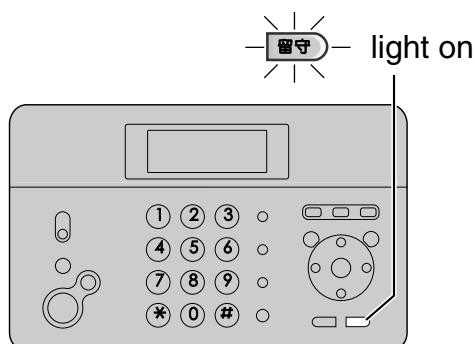

**1** If the **留守** (Auto answer) light is off, turn it on by pressing **留守**.

**2** When receiving a call, the unit will receive a fax document or record a voice message automatically depending on the caller's request.

## Recording your own greeting message

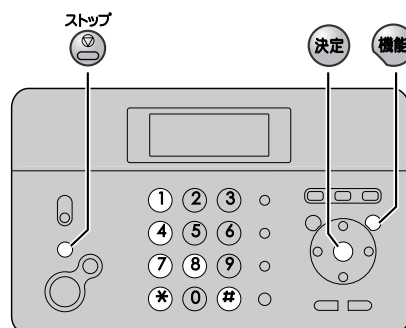 

You can record your own greeting message. When receiving a call, it will be played to callers instead of the pre-recorded Japanese greeting message.

**1** Press **機能** (Function).

**2** Press **# 1 4 7**.

ジ\* サクアウトウロクオン  
[ケッテイ] オス

**3** Press **決定** (Set).

**4** Lift the handset.

**5** Press **決定** (Set) and speak your greeting message, up to 16 seconds, to the handset.

**6** Press **ストップ** (Stop) and replace the handset.  
• Your greeting message will be played back automatically.

## Erasing your own greeting message

**1** Press **機能** (Function).

**2** Press **# 1 4 8**.

ジ\* サクアウトウ ショウ  
キョ [ケッテイ] オス

**3** Press **決定** (Set).

 
**4** Press **\***.

• The pre-recorded Japanese greeting message will be played when you receive a call.



# Operating the built-in answering device

## Activating the answering device

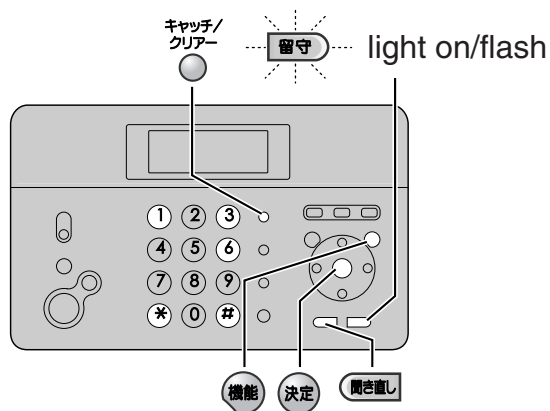

- 1 Turn the **留守** (Auto answer) light on by pressing **留守**.
- 2 When receiving a call, a greeting message will be played and the unit will record a voice message.
  - To record your own greeting message, see page 16.

## Listening to recorded messages

When new messages are recorded, the **留守** (Auto answer) light will flash.

Press **留守** to listen to recorded messages.

After the messages are played back, the following will be displayed.

■ To erase the messages, push **\***.

■ To save the messages, push **#**.

サイセイシタ ヨウケンヲ  
ケス = \* ノコス = #

## Listening to all of the recorded messages

Press **聞き直し** (Replay).

After the messages are played back, the following will be displayed.

■ To erase the messages, push **\***.

■ To save the messages, push **#**.

サイセイシタ ヨウケンヲ  
ケス = \* ノコス = #

## Erasing a specific message

Press **キャッチ/クリアー** (Erase) while listening to the message you want to erase, then press **\***.

## Erasing all of the recorded messages

 
1 Press **機能** (Function), then press **# 1 6 3**.

2 Press **決定** (Set).

3 Press **\***.

スヘテ ケシマスカ?  
ハイ = \* イイエ = #

## Operating the answering device from a remote location

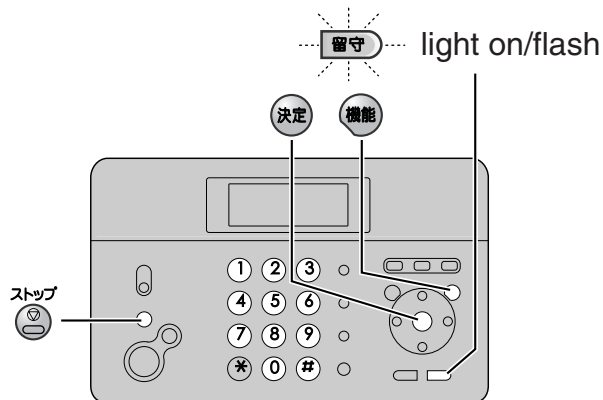

### Preparation: Programming the remote operation ID

1. Press **機能** (Function).
2. Press **# 0 0 6**.
3. Enter any 4-digit number (remote operation ID) except \* or #.

Example : アンショウNo=1234  
[4ケタ, ケツテイ] オス

4. Press **決定** (Set).

5. Press **ストップ** (Stop).

### Operation: Listening to a recorded message from a remote location

Turn the **留守** (Auto answer) light on before you go out. Remote operations are available only from a touch tone telephone.

1. Call your unit.
2. Enter the remote operation ID during the greeting message.
3. Press **2** or wait 4 seconds.
  - Only the new recorded messages will be played back.
  - To listen to all the recorded messages, press **4** after the new messages have been played back.

# Individual e-mail services

## Using the e-mail services

Panasonic Communications Co., Ltd. (hereafter called "PCC") offers individual information services, such as e-mail.

Your fax machine with e-mail features will enable you to send an e-mail to another party's personal computer (PC) or another e-mail fax machine anywhere in the world through the Internet. Also, you will be able to receive an e-mail from them.

To access the Internet using your fax machine,

- you need a credit card (VISA, JCB or MASTER as of June 2003) and
- have to subscribe to individual information services offered by PCC beforehand.

The application fee including call charges will be charged to your Credit Card.

### Important:

- If your fax machine is connected to a home telephone system or a private branch exchange (PBX) system, these services are not available.

### Application fee and call charges

PCC information services	Registration fee	¥500
	Information Service fee (Call charge included)	¥20/minute (8 am-11 pm) ¥18.5/minute (11 pm-8 am)

- As of June 2003.
- Tax not included.

## PCC information services

The following services are available with your fax machine. The information service fee including the call charge will be applied.

 
- E-mail reception and printing (page 20)
- Text e-mail sending (page 21)
- Fax e-mail sending (page 22)
- Storing e-mail addresses in the addressbook (free of charge) (page 23)
- Others

### Note:

- PCC plans to add new information services and the information service fee is subject to change. PCC will announce them by e-mail to its customers.
- For the PC user to view your fax e-mail sent from your fax machine, the following PC software will be required.
  - E-mail software that can read the MIME format
  - TIFF viewer software

# Individual e-mail services

## Subscribing to PCC information services

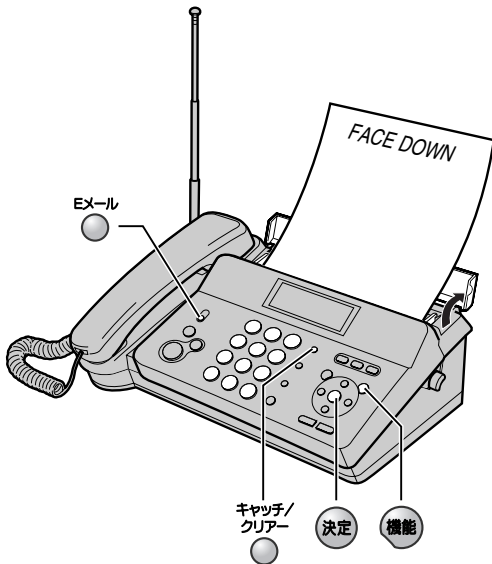

**1** Fill in the included application form.

Your signature

Your name

Your address

Date of application

The telephone no. you wish to subscribe to PCC

Your telephone no. for contact

Check your credit card type

**2** Press **機能** (Function), then press **EX-メール** (E-mail).

**3** Press **決定** (Set).

クレジットカード No  
. . . . .

**4** Enter your 16-digit credit card number.

• To correct a mistake, press **キャッチ/クリアー** (Clear).

**5** Press **決定** (Set).

カクニノタメ サイト  
. . . . .

**6** Enter your credit card number again, then press **決定** (Set).

**7** Enter the valid date of your credit card.

ユウコウキケン?  
. / . (月/年)  
Month Year

**8** Press **決定** (Set).

**9** Insert the application form FACE DOWN.

**10** Press **決定** (Set).

• The unit will start fax transmission.

**11** After approx. 5 minutes, the unit will ring, and a data communication will start automatically between your unit and PCC.

• If you answer this call, hang up and wait for a while until the communication is completed.

**12** When the communication is completed, a user registration form will be printed.

「ユーザー登録完了」案内

こちらはパナソニック コミュニケーションズ株式会社です。

このたびは、「おたくず情報サービス」にお申し込みいただきましてありがとうございます。おたくずEメールのご利用が可能になりましたので、お知らせいたします。

あなたの電話番号 :  
あなたのEメールアドレス : pxxxx @fem.dion.ne.jp  
あなたのセキュリティID :  
EメールアドレスとセキュリティIDは、新サービスの提供時や引越しに伴う電話番号の変更連絡等に必要になりますので、取扱説明書 紙の「おたくずEメールお着様メモ」欄に必ず記入しておいてください。

Your e-mail address  
Your security ID code

• Please save the address and ID code for future reference.


**13** Press **EX-メール** (E-mail).

**14** Press **決定** (Set).

• An information service guide will be printed.

# Individual e-mail services
 
## Receiving and printing an e-mail

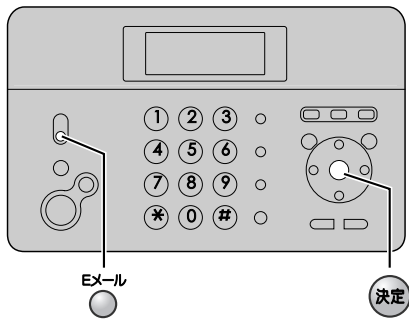

**1** Press  (E-mail).

**2** Press  (Set).

- If there is an e-mail you have not viewed yet, the unit will print the received e-mail.
- If there is no e-mail, the following will be displayed.

ミシ ュシシ 0ケシ


### The file formats recognized by your fax machine are:

 - JPEG
- TIFF
- BMP
- TXT
- ~. doc
- ~. xls
- ~. ppt
- ~. pdf

(as of June 2003)

# Individual e-mail services

## Sending a text e-mail from the main unit

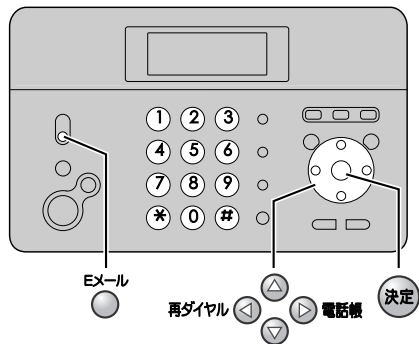

**1** Press **Eメール** (E-mail).

**2** Press **▽ ▲** (Search button) repeatedly until the following is displayed.

モシ\* Eメール ソウシン  
[ ケッテイ ] オス

**3** Press **決定** (Set).

**4** Enter the desired e-mail address (see the table on page 8 for instructions).

- You can enter the address of the last e-mail you sent by pressing **再ダイヤル** (Redial).
- You can select the desired address using the addressbook.
  1. Press **電話帳** (Addressbook).
  2. Press **▽ ▲** (Search button) repeatedly until the desired name is displayed.
  3. Press **決定** (Set).

To store an address, see page 23.

**5** Press **決定** (Set).

**6** Enter the title of your e-mail, up to 32 characters (see the table on page 8 for instructions).

- You can enter the title of the last e-mail you sent by pressing **再ダイヤル** (Redial).

**7** Press **決定** (Set).


**8** Enter your e-mail message, up to 200 characters (see the table on page 8 for instructions).

- You can enter the message of the last e-mail you sent by pressing **再ダイヤル** (Redial).

**9** Press **決定** (Set).

# Individual e-mail services
 
## Sending a fax e-mail

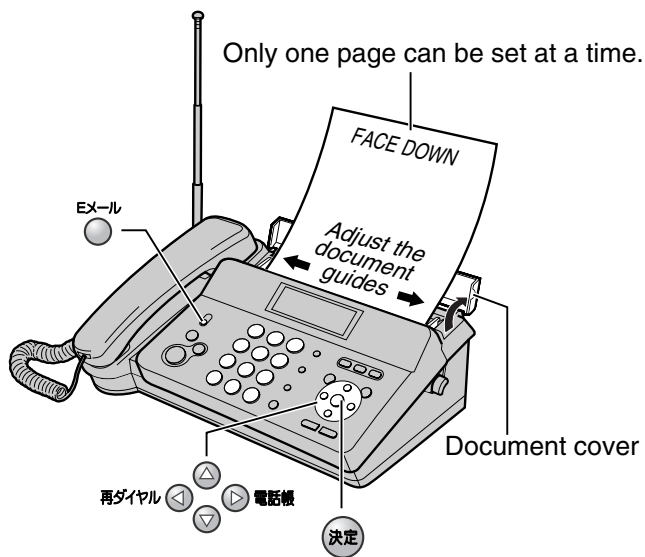

**1** Open the document cover, and adjust the width of the document guides to the size of the document.

**2** Insert the document (1 page only) FACE DOWN until a single beep is heard.

**3** If necessary, press  $\nabla$   $\blacktriangle$  repeatedly to select the desired resolution (see page 14).

**4** Press  $\text{Eメール}$  (E-mail), then press  $\text{決定}$  (Set).

**5** Enter the desired e-mail address (see the table on page 8 for instructions).

- You can enter the address of the last e-mail you sent by pressing  $\text{再ダイヤル}$  (Redial).

- You can select the desired address using the addressbook.

1. Press  $\text{電話帳}$  (Addressbook).

2. Press  $\nabla$   $\blacktriangle$  (Search button) repeatedly until the desired name is displayed.

3. Press  $\text{決定}$  (Set).

To store an address, see page 23.

**6** Press  $\text{決定}$  (Set).

**7** Enter the title of your fax e-mail, up to 32 characters (see the table on page 8 for instructions).

- You can enter the title of the last e-mail you sent by pressing  $\text{再ダイヤル}$  (Redial).

**8** Press  $\text{決定}$  (Set).


- After scanning a page, 2 short beeps will sound, and 

ツキノゲソウヲ
イレテクタサイ

 will be displayed for about 4 seconds. To send more than 2 pages, set the next page during the above display.

# Individual e-mail services

 
## Storing names and e-mail addresses in the addressbook

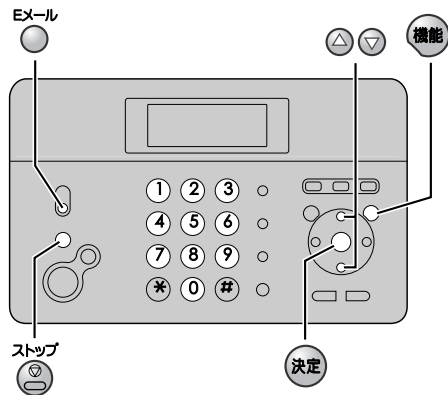

- 1 Press **機能** (Function), then press **EX-メール** (E-mail).
- 2 Press **▽ ▲** (Search button) repeatedly until the following is displayed.  

アドレス ちょう [ケッテイ] オス
-----------------------
- 3 Press **決定** (Set).
- 4 Press **機能** (Function).
- 5 Enter the name, up to 12 characters (see the table on page 8 for instructions).
- 6 Press **決定** (Set).
- 7 Enter the e-mail address, up to 60 characters (see the table on page 8 for instructions).
- 8 Press **決定** (Set).
  - To program other items, repeat steps 5 to 8.
- 9 Press **ストップ** (Stop) to exit the program.

## Editing a stored name or e-mail address in the addressbook

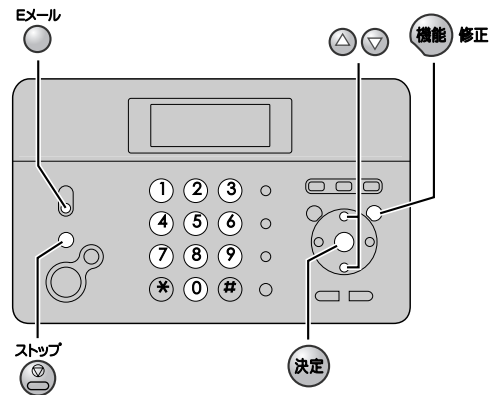 

- 1 Press **機能** (Function), then press **EX-メール** (E-mail).
- 2 Press **▽ ▲** (Search button) repeatedly until the following is displayed.  

アドレス ちょう [ケッテイ] オス
-----------------------
- 3 Press **決定** (Set).
- 4 Press **▽ ▲** (Search button) repeatedly until the desired name is displayed.
- 5 Press **機能 修正** (Function/Edit).
- 6 Edit the name (see the table on page 8 for instructions).
  - If you do not need to edit the name, skip to step 7.
- 7 Press **決定** (Set).
- 8 Edit the e-mail address (see the table on page 8 for instructions).
  - If you do not need to edit the e-mail address, skip to step 9.
- 9 Press **決定** (Set).
- 10 Press **ストップ** (Stop) to exit the program.

# Specifications

KX-PW201CL KX-PW201CW	Main unit	Portable handset	Battery charger
<b>Power supply</b>	AC 100 V (50 Hz/60 Hz)	Ni-Cd battery (Part no. KX-FAN37) DC 2.4 V, 600 mAh	AC adaptor (Part no. PFAP1009) AC 100 V (50 Hz/60 Hz) DC 7.5 V, 100 mA
<b>Power consumption</b>	Transmission: Approx. 8 W Reception: Approx. 13 W Copy: Approx. 12 W Stand by: Approx. 0.5 W (When the F-net service is not in use.) Maximum(*1): Approx. 60 W		<ul style="list-style-type: none"> <li>• Charging: Approx. 1.2 W</li> <li>• Stand by: Approx. 0.6 W</li> </ul>
<b>Dimensions (H x W x D)</b>	Approx. 122 X 290 X 198 mm (without projections)	Approx. 161 X 47 X 39 mm	Approx. 64 X 80 X 90 mm
<b>Mass (Weight)</b>	Approx. 2.4 kg (recording paper installed)	Approx. 150 g (battery installed)	Approx. 80 g
<b>Operating environment</b>	5 °C – 35 °C, 45 % – 85 % RH (Relative Humidity)		

KX-PW201CL KX-PW201CW	Main unit
<b>Applicable line</b>	Public Switched Telephone Network (Tone/Pulse), F-Net, NCC Lines
<b>DC resistance</b>	285 Ω
<b>Compatibility</b>	G3 compatible
<b>Document size</b>	A4-A6(Max.210 mm in width, Max. 800 mm in length)
<b>Effective scanning size</b>	208 mm
<b>Effective printing size</b>	202 mm
<b>Transmission time</b>	Approx. 30 s/page (Original mode) (*2)
<b>Modem speed</b>	9,600 / 7,200 / 4,800 / 2,400 bps; Automatic fallback
<b>Halftone level</b>	64-level
<b>Scanning density</b>	Horizontal: 8 pels/mm Vertical : 7.7 lines/mm (Fine/Photo), 3.85 lines/mm (Standard)
<b>Scanner type</b>	Contact image sensor
<b>Printer type</b>	Thermal printing
<b>Data compression system</b>	Modified Huffman (MH), Original mode
<b>Recording paper size</b>	Thermal paper (Role type) A4: 210 mm x 15 m (Spindle diameter : approx. 1/2".)
<b>Answering device</b>	Greeting message: Digital recording system (up to 16 sec) Pre-recording greeting message ICM Recording: Digital recording system (Approx. 18 min. in total) (*3)
<b>Memory capacity</b>	Max. Approx. 46 pages (Only receiving fax etc.) (*4) Max. Approx. 18 min. (Only Recording message) (*3)

\*1 When copying a 100% black document.

\*2 Transmission speed is based on an A4-size document of 700 characters sent in standard resolution at 9,600 bps. The actual transmission speed depends upon the contents of the page, resolution, telephone line conditions and capability of the other party's machine.

\*3 If there is a silent pause, the total recording time will be longer.

\*4 The memory capacity is based on an A4-size document of 700 characters.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>