


Panasonic®

Operating Instructions (For Facsimile) Facsimile

Model No. **UF-5950**

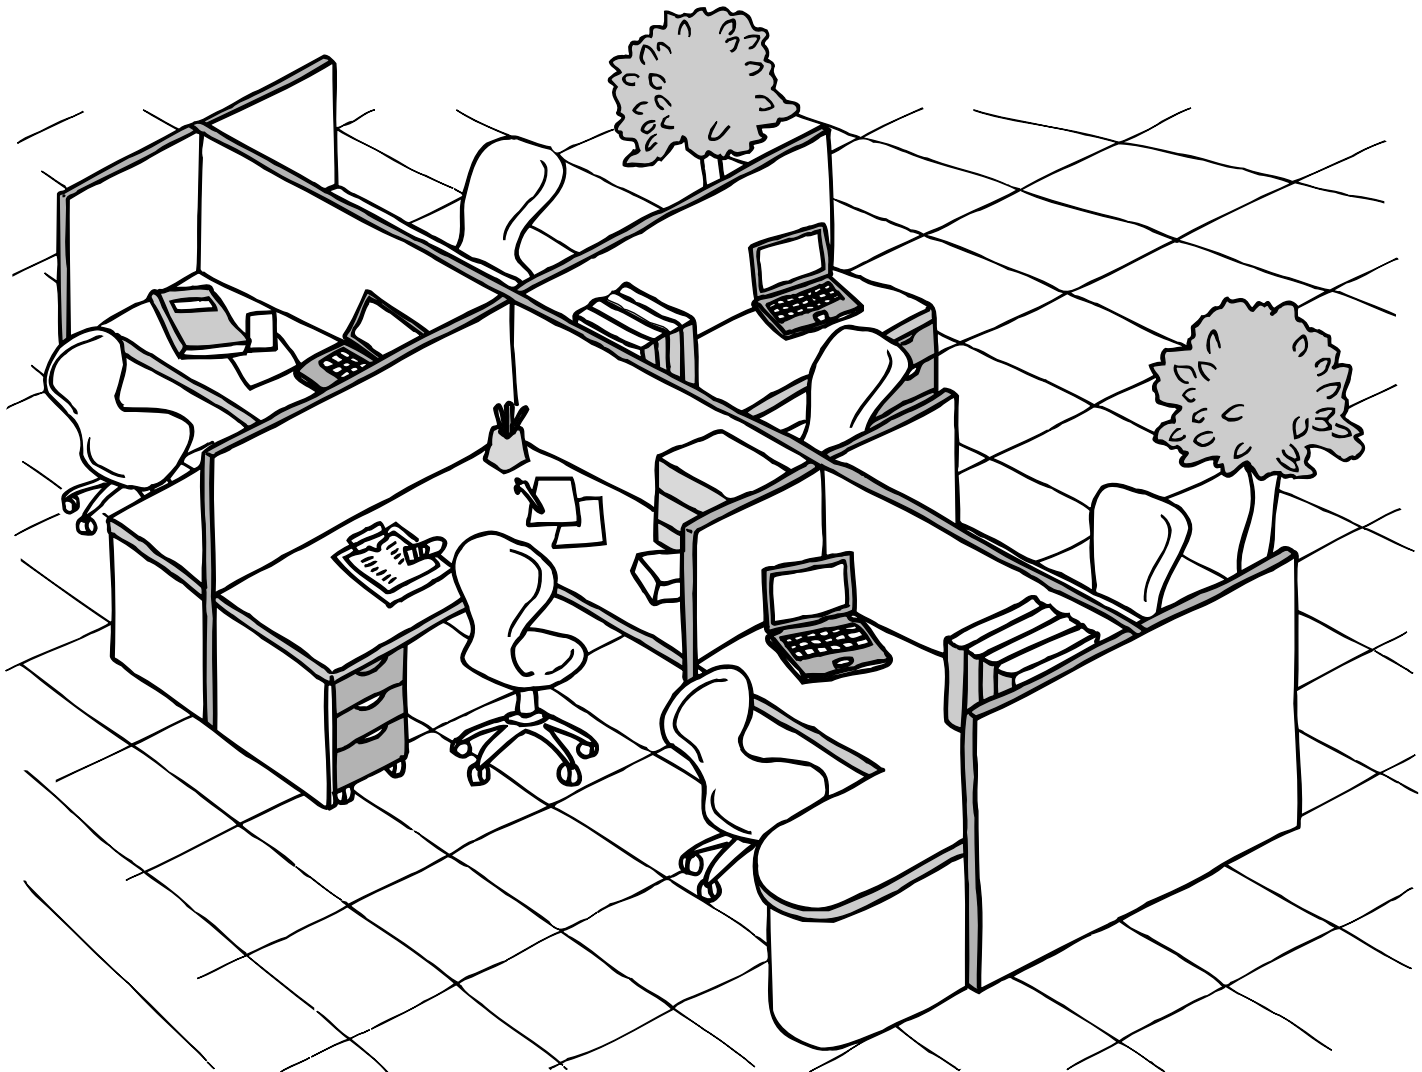

Panafax

Before operating this machine, please carefully read this manual, and keep this documentation in a safe place for future reference.

English

IMPORTANT INFORMATION

When requesting information, supplies, or service always refer to the model and serial number of your machine. The model and serial number plate (Main Name Plate) is located on the machine as shown below. For your convenience, space is provided below to record information you may need in the future.

Model No. _____

Serial No. _____

Date of Purchase _____

Dealer _____

Address _____

Telephone Number


() - _____

Supplies Telephone Number

() - _____

Service Telephone Number

() - _____

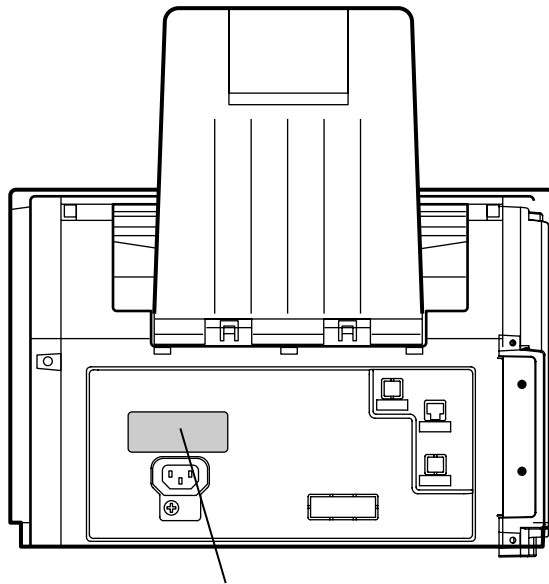

Model and Serial Number

© 2006 by Panasonic Communications Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.
The contents of these Operating Instructions are subject to change without notice.

Table of Contents

Getting to Know Your Machine

Safety Information.....	7
Precaution.....	9
Function Key.....	10
External View.....	11
Control Panel.....	12

Installing Your Machine

Main Unit and Accessories.....	14
Installing the Accessories.....	15
Installing the Toner Cartridge.....	16
Loading the Recording Paper.....	18
■ How to Load the Recording Paper.....	18
Adjusting the Paper Cassette for the Paper Length.....	20
■ How to Adjust the Paper Cassette for the Paper Length.....	20
Adjusting the Paper Cassette for the Paper Width.....	21
■ How to Adjust the Paper Cassette for the Paper Width.....	21
Connecting the Telephone Line Cable and Power Cord.....	22
Setting the Dialing Method (Tone or Pulse).....	24
Adjusting the Volume.....	25
User Parameters.....	26
■ General Description.....	26
■ Setting the Date and Time.....	26
■ Setting Your LOGO.....	27
■ Setting Your Character ID.....	28
■ Setting Your ID Number (Fax Telephone Number).....	29

Programming Your Machine

One-Touch/Abbreviated Dialing Numbers.....	30
■ Entering One-Touch/Abbreviated Dialing Numbers.....	30
■ Editing One-Touch/Abbreviated Dialing Numbers.....	32
■ Printing Out a Directory Sheet.....	34
Customizing Your Machine.....	35
■ General Description.....	35
■ Setting the Fax Parameters.....	35
■ Fax Parameter Table.....	36

Basic Operations

Loading Documents.....	40
■ Documents You Can Send.....	40
■ Documents You Cannot Send.....	40
■ How to Load Documents.....	41

Table of Contents

Basic Operations

Basic Transmission Settings	42
■ General Description	42
■ Contrast	42
■ Resolution	42
■ Verification Stamp	43
■ Communication Journal (COMM. JOURNAL)	44
Sending Documents	45
■ General Description	45
■ Memory Transmission	46
■ Direct Transmission	52
■ Voice Mode Transmission	56
■ Transmission Reservation	58
■ Redialing	60
Receiving Documents	62
■ Reception Modes	62
■ Telephone Mode	63
■ Fax / Tel Auto Switching Mode	64
■ Fax Mode	65
■ TAM (Telephone Answering Machine) Interface Mode	65
■ Print Reduction	67
■ Receiving Oversize Documents	68
■ Substitute Memory Reception	69
■ Print Collation Mode	69
Making Copies	70

Advanced Features

Timer Controlled Communications	71
■ General Description	71
■ Deferred Transmission	71
■ Deferred Polling	72
Polling	73
■ General Description	73
■ Setting the Polling Password	73
■ Preparing to be Polled	74
■ To Poll Documents from Another Station	75
Program Keys	76
■ General Description	76
■ Setting for Group Dialing	76
■ Setting for Deferred Transmission	77
■ Setting for Deferred Polling	78
■ Setting for Normal Polling	79
■ Setting for One-Touch Key	80
■ Changing or Erasing the Program Key Settings	81

Advanced Features

Edit File Mode	82
■ General Description.....	82
■ Printing a File List.....	82
■ Viewing the Contents of a File List.....	83
■ Changing the Start Time or the Station of a File	84
■ Deleting a File	86
■ Printing Out a File.....	87
■ Adding Documents into a File	88
■ Retry an Incomplete File	89
Access Code	90
■ General Description.....	90
■ Setting the Access Code	90
■ Operating Your Machine with the Access Code (Restrict All Operations)	91
■ Operating Your Machine with the Access Code (Restrict Access of Fax Parameters Only)	91
Receive To Memory	92
■ General Description.....	92
■ Setting the RCV To Memory Password.....	92
■ Setting RCV To Memory	92
■ Printing Out Documents	93
Distinctive Ring Detector (DRD)	94
■ General Description.....	94
Fax Cover Sheet	95
■ General Description.....	95
■ To Use the Fax Cover Sheet.....	95
PIN Code Access	97
■ General Description.....	97
■ Selecting the Access Method (Prefix or Suffix)	97
■ Dialing with a PIN Code	98
Fax Forward	99
■ Setting Fax Forward	99

Network Features

Selective Reception	100
■ General Description.....	100
■ Setting the Selective Reception.	100
Password Communications	101
■ General Description.....	101
■ Compatibility with Other Machines	101
■ Setting Password Transmission	102
■ Setting Password Reception	103
■ Using Password Transmission	104
■ Using Password Reception	105

Table of Contents

Network Features

Confidential Mailbox	106
■ General Description	106
■ Confidential Mailbox.....	106
■ Sending a Confidential Document to a Remote Station's Mailbox.....	107
■ Polling a Confidential Document from a Remote Station's Mailbox	108
■ Receiving a Confidential Document to Your Machine's Mailbox.....	109
■ Storing a Confidential Document in Your Machine's Mailbox	110
■ Printing Out a Confidential Document from Your Machine's Mailbox	111
■ Deleting a Confidential Document Stored in Your Machine's Mailbox	112
Sub-addressing	113
■ General Description	113
■ To Set the Sub-address Into a One-Touch/ABBR. Dialing Numbers.....	114
■ To Send a Document with Sub-address	115

Printout Journals and Lists

Journals and Lists.....	116
■ General Description	116
■ Transaction Journal	116
■ Individual Transmission Journal (IND. XMT JOURNAL).....	117
■ Communication Journal (COMM. JOURNAL).....	120
■ One-Touch/Abbreviated and Directory Search List	122
■ Program List.....	125
■ FAX Parameter List.....	126
■ Toner Cartridge Order Forms	127

Problem Solving

Troubleshooting	128
■ If You Have Any of These Problems.....	128
■ Information Codes.....	132
■ Clearing a Recording Paper Jam	135
■ Clearing a Document Jam	136
■ Cleaning the Document Scanning Area.....	137
■ Cleaning the Printer Roller.....	138
■ Adjusting the Automatic Document Feeder (ADF).....	139
■ Verification Stamp.....	140
■ Checking the Telephone Line	141

Appendix

Specifications	142
Recording Paper Specifications	145
Options and Supplies	146
FCC Notice for Users in USA	147
Notice to Users in Canada	149
Glossary	151
ITU-T Image No. 1	154
Index	155

Safety Information

WARNING

Denotes a potential hazard that could result in serious injury or death.

- TO PREVENT FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.
- TO MINIMIZE THE POSSIBILITY OF SHOCK OR DAMAGE TO THE MACHINE, IT MUST BE PROPERLY GROUNDED.

LASER SAFETY


THIS PRODUCT UTILIZES A LASER. ONLY QUALIFIED SERVICE PERSONNEL SHOULD ATTEMPT TO SERVICE THIS DEVICE DUE TO POSSIBLE EYE INJURY.

CAUTION

USE OF CONTROLS, OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.




- THE POWER CORD ON THIS EQUIPMENT MUST BE USED TO DISCONNECT THE MAIN POWER. PLEASE ENSURE THAT THE SOCKET OUTLET IS INSTALLED NEAR THE EQUIPMENT, AND IS EASILY ACCESSIBLE.
- MAKE SURE THAT THE MACHINE IS INSTALLED IN A SPACIOUS OR WELL VENTILATED ROOM SO AS NOT TO INCREASE THE AMOUNT OF OZONE IN THE AIR. SINCE OZONE IS HEAVIER THAN AIR, IT IS RECOMMENDED THAT AIR AT FLOOR LEVEL BE VENTILATED.
- UNPLUG THIS UNIT FROM POWER OUTLETS IF IT EMITS SMOKE, AN ABNORMAL SMELL, OR MAKES AN UNUSUAL NOISE. THESE CONDITIONS CAN CAUSE FIRE OR ELECTRIC SHOCK. CONFIRM THAT SMOKE HAS STOPPED AND CONTACT AN AUTHORIZED SERVICE CENTER.
- KEEP THE VERIFICATION STAMP OUT OF THE REACH OF CHILDREN. IF A STAMP IS SWALLOWED ACCIDENTALLY, GET MEDICAL TREATMENT IMMEDIATELY.

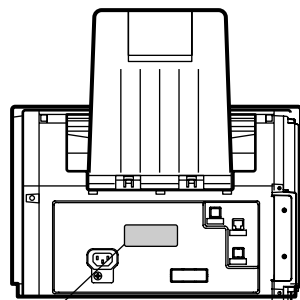

Complies with FDA radiation performance standards, 21 CFR Subchapter J

Factory ID

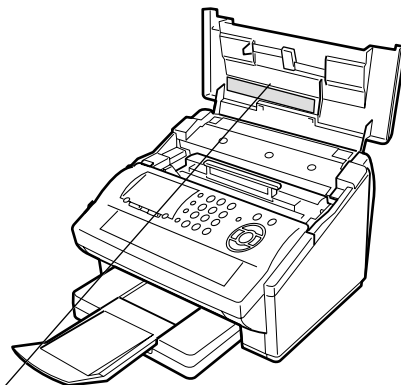

Manufacturer's Name and Address

CAUTION : CLASS 3B INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO THE BEAM.
 ATTENTION : Rayonnement laser classe 3B invisible en cas d'ouverture et de défaut de sécurité. EXPOSITION DANGEREUSE AU FAISCEAU.
 Vorsicht : Um bei geöffnetem Deckel den Austritt von Klasse 3B unsichtbare Laserstrahlung zu verhindern, muss die Stromversorgung des Lasers unterbrochen werden.
 PRECAUCIÓN : RADIACIÓN LASER DE CLASE 3B INVISIBLE CUANDO SE ABRE LA PUERTA CON EL BLOQUEO INVALIDADO. EVITE LA EXPOSICIÓN A LOS RAYOS.
 VAROITUS : LUOKKA 3B NÄKYMÄTÖNTÄ JA VAARALLISTA LASERSÄTEILYÄ, JOS LAITTEEN KANSI AVATAAN KESKEN SKANNAUKSEN JA SUOJALUKITUS OHITETAAN. VÄLTÄ SUORAA ALTISTUMISTA SÄTEELLE.
 ADVARSEL : KLASSE 3B USYNLIG LASERSTRÅLING NÅR ÅBEN OG SIKKERHEDSLÅS BRYDES. UNDGÅ EKSPONERING FOR STRÅLEN.
 ADVARSEL : KLASSE 3B USYNLIG LASERSTRÅLING NÅR MASKINEN ER ÅPEN OG SIKKERHETSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
 WARNING : CLASS 3B OSYNLIG LASER ÖPPEN OCH NÅR SÄKERHETSSPÄRRAR ÄR URKOPPLADE. UNDVIK EXPONERING AV LASER
 注意：当打开本机及连锁装置失效时，为防止CLASS 3B不可见激光照射，请勿暴露在光柱下。
 주의：커버(덮개)가 열려 있거나 인터록이 파손된 경우 눈에 보이지 않는 클래스3B의 레이저 광선이 유출 될 수 있습니다. 레이저 광선에 노출되지 않도록 주의 하십시오. FBS8932B

Safety Information

WARNING

Denotes a potential hazard that could result in serious injury or death.

- THE POWER SOURCE VOLTAGE OF THIS UNIT IS LISTED ON THE NAMEPLATE. ONLY PLUG THE UNIT INTO AN AC OUTLET WITH THE PROPER VOLTAGE. IF YOU USE A CORD WITH AN UNSPECIFIED CURRENT RATING, IT MAY BE UNDERRATED, AND THE UNIT OR PLUG MAY EMIT SMOKE OR BECOME HOT TO THE TOUCH.
- PLUG THE POWER CORD FIRMLY INTO AN AC OUTLET. OTHERWISE, IT CAN CAUSE FIRE OR ELECTRIC SHOCK.
- TAKE PRECAUTIONS TO MAKE SURE THE POWER CORD AND PLUG DO NOT BECOME DAMAGED. DO NOT PULL, BEND, REST OBJECTS ON, OR CHAFE THE POWER CORD AND PLUG. DAMAGE TO THE POWER CORD OR PLUG CAN CAUSE FIRE OR ELECTRIC SHOCK. DO NOT ATTEMPT TO REPAIR THE POWER CORD OR PLUG. IF THE POWER CORD, OR PLUG IS DAMAGED OR FRAYED, CONTACT AN AUTHORIZED SERVICE REPRESENTATIVE FOR A REPLACEMENT.
- ENSURE THAT THE PLUG CONNECTION IS FREE OF DUST. IN A DAMP ENVIRONMENT, A CONTAMINATED CONNECTOR CAN DRAW A SIGNIFICANT AMOUNT OF CURRENT THAT CAN GENERATE HEAT, AND EVENTUALLY CAUSE FIRE IF LEFT UNATTENDED OVER AN EXTENDED PERIOD OF TIME.
- NEVER TOUCH THE PLUG WITH WET HANDS. DANGER OF ELECTRIC SHOCK EXISTS.

CAUTION

Denotes hazards that could result in minor injury or damage to the machine.

- TO REDUCE THE RISK OF SHOCK OR FIRE, USE ONLY NO. 26 AWG OR LARGER TELEPHONE LINE CABLE.
- DISCONNECT ALL POWER TO THE MACHINE BEFORE COVER(S) ARE REMOVED. REPLACE THE COVER(S) BEFORE THE UNIT IS RE-ENERGIZED.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:


- DO NOT USE THIS PRODUCT NEAR WATER, FOR EXAMPLE, NEAR A BATH TUB, WASH BOWL, KITCHEN SINK OR LAUNDRY TUB, IN A WET BASEMENT, OR NEAR A SWIMMING POOL.
- AVOID USING A TELEPHONE (OTHER THAN A CORDLESS TYPE) DURING AN ELECTRICAL STORM. THERE MAY BE A REMOTE RISK OF ELECTRIC SHOCK FROM LIGHTNING.
- DO NOT USE THE TELEPHONE TO REPORT A GAS LEAK IN THE VICINITY OF THE LEAK.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.


Precaution

CAUTION


Denotes hazards that could result in minor injury, or damage to the machine.

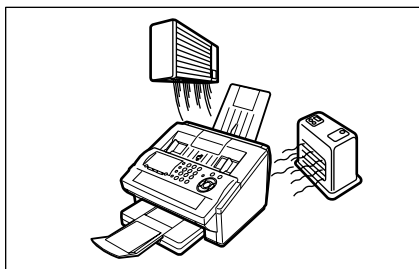


Do not install the machine near heating, or an air conditioning unit.

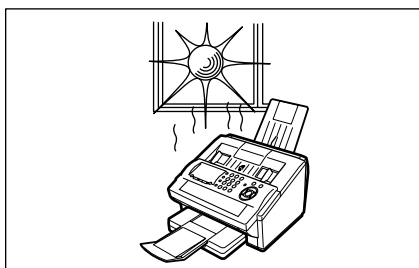


Avoid exposure to direct sunlight.

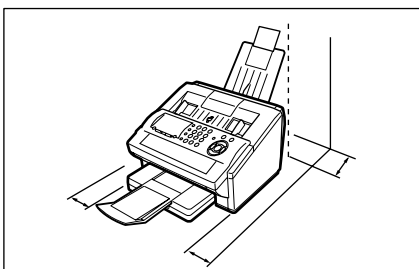

Install the machine on a flat surface, leave at least 4 inches (10 cm) of space between the machine and other objects.

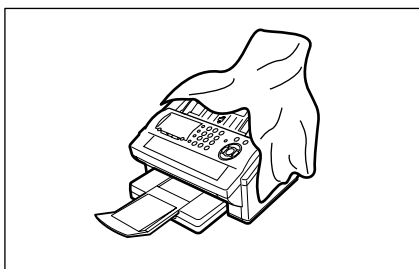


Do not block the ventilation openings.

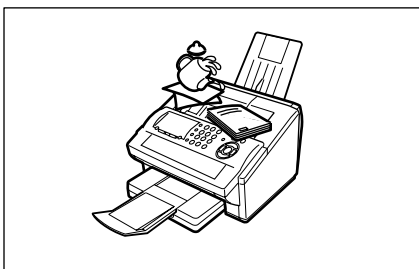


Do not place heavy objects, or spill liquids on the machine.

Function Key

Any function can be started by first pressing **FUNCTION** key, and then entering the function number, or by pressing **▼** or **▲** scroll key repeatedly until the desired function appears on the display.

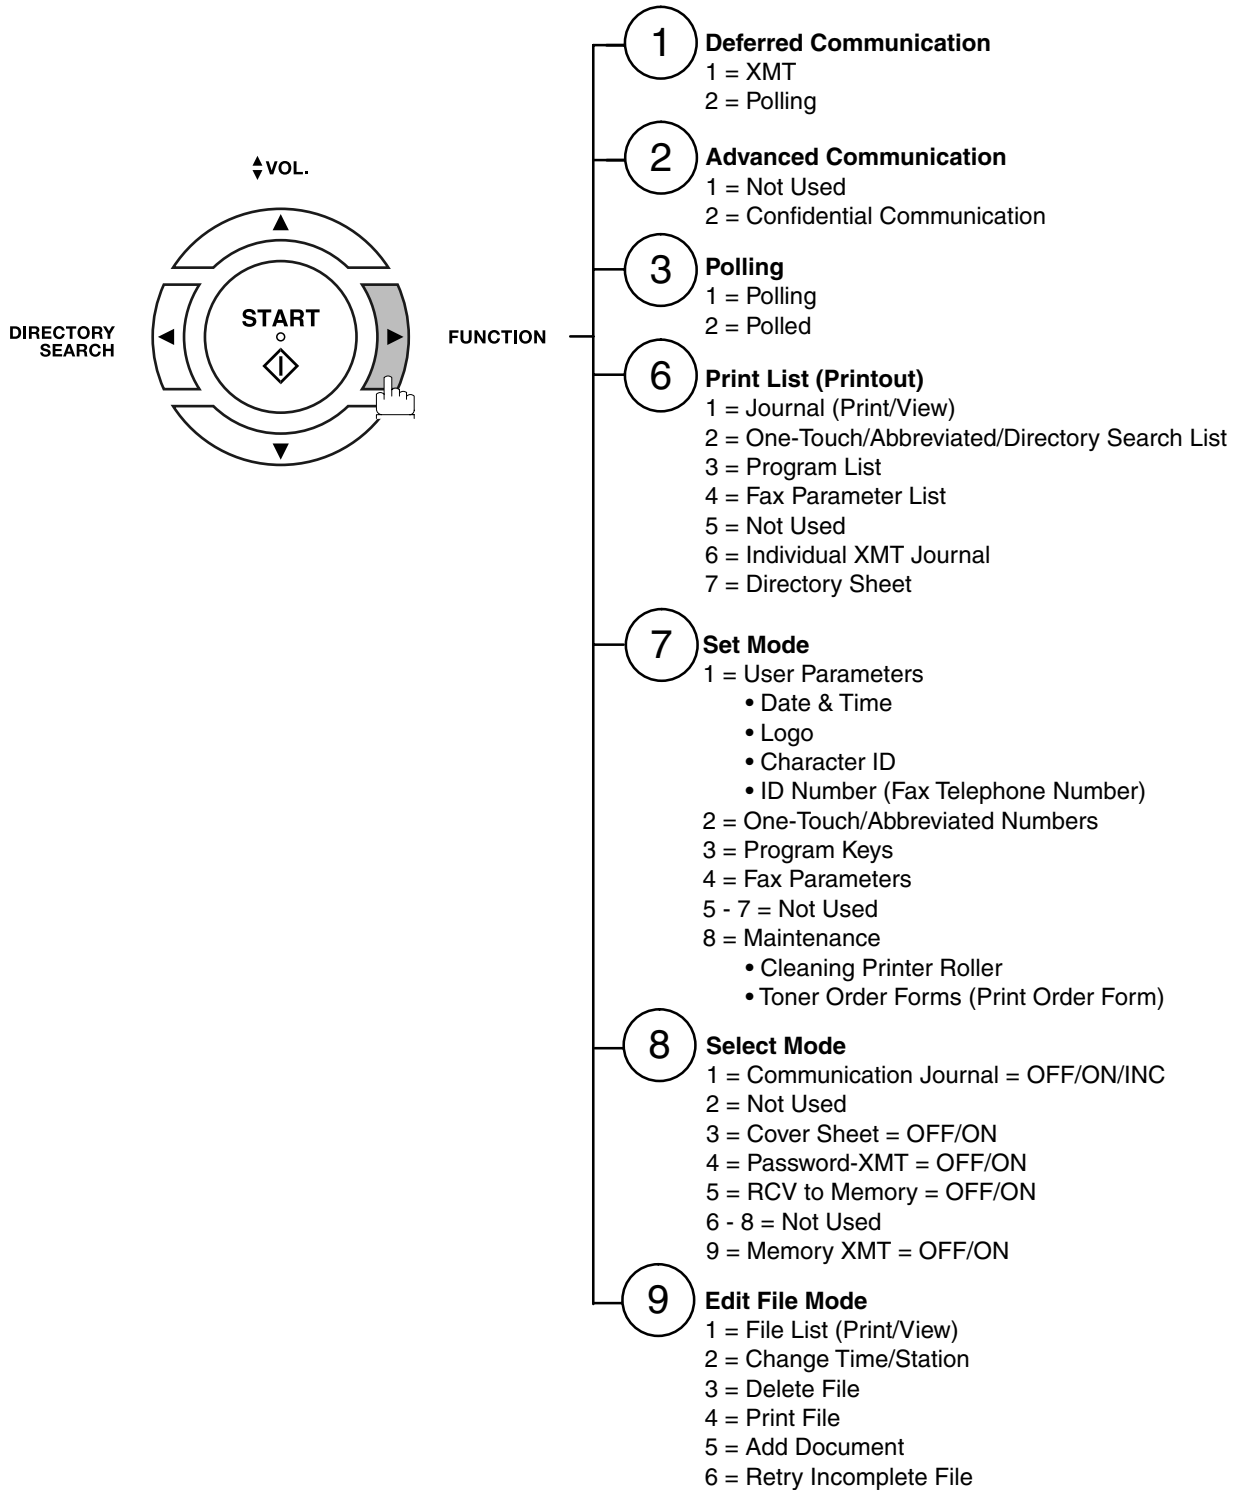


External View

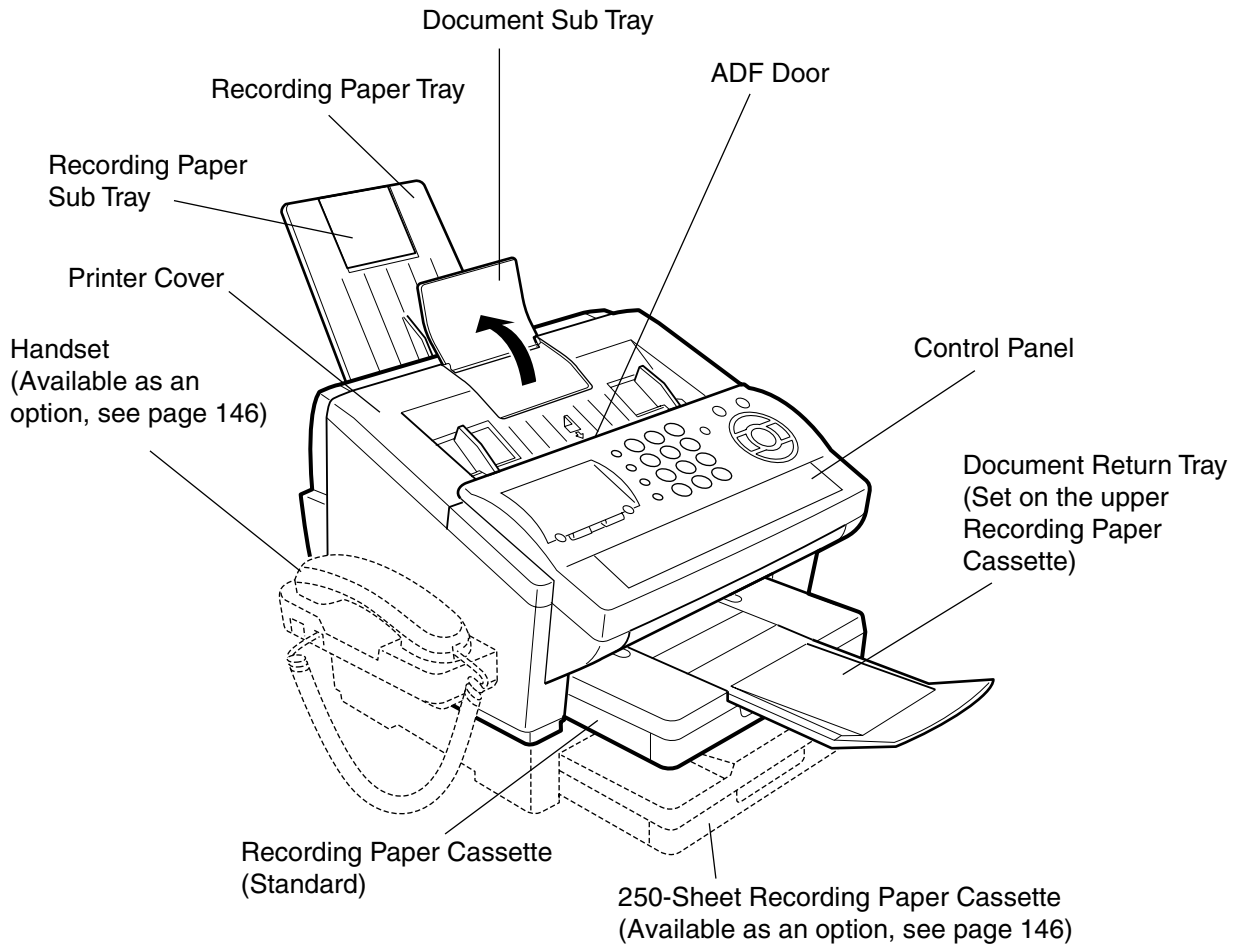

Control Panel


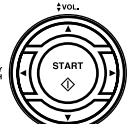


- REDIAL / PAUSE** - Used to enter a pause when recording, or dialing a telephone number, or to redial the last dialed number.
- ABBR DIAL** - Used to start Abbreviated Dialing. (See pages 49 and 54)
- FLASH / SUB-ADDR** - Used to separate the Sub-Address from the telephone number
- MONITOR** - Used to start On-Hook Dialing. (See page 57)

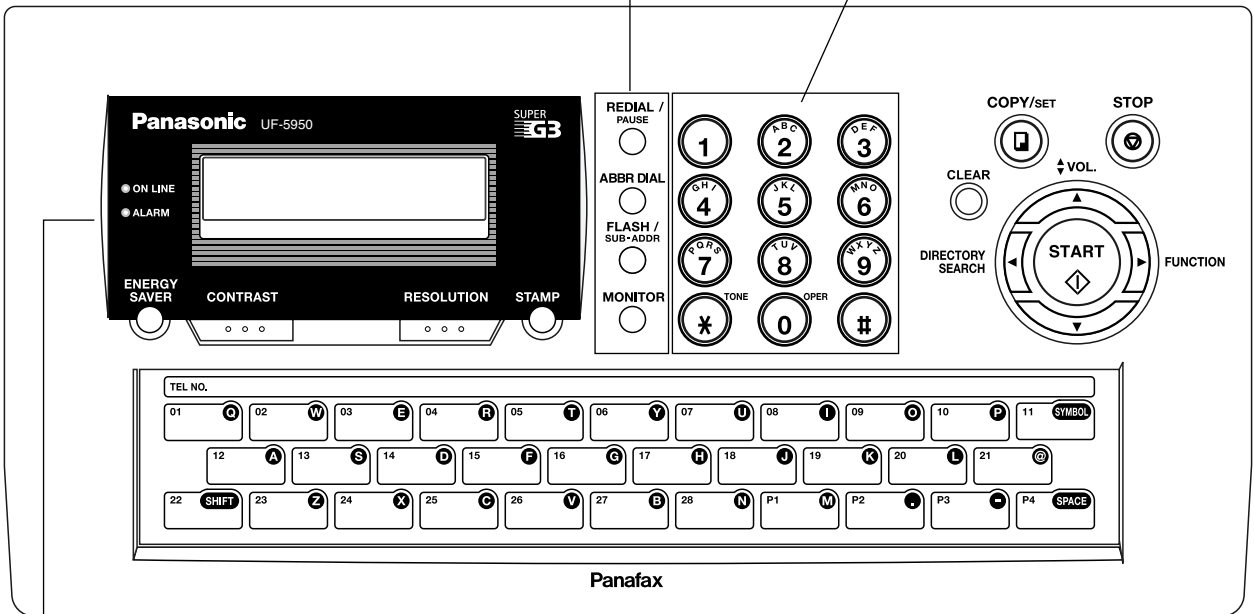
- Keypad**
- Used for manual number dialing, recording phone numbers, and numerical entries.
- Tone Key**
- Used to temporarily change the dialing mode to Tone when Pulse mode is set.



- ENERGY SAVER** - Used to switch the machine into energy saving mode. (See page 38)
- CONTRAST** - Used to set the Contrast to Normal, Lighter or Darker. (See page 42)
- RESOLUTION** - Used to set the Resolution to Standard, Fine, Super-Fine, or Halftone. (See page 42)
- STAMP** - Used to turn the verification stamp ON or OFF. Lights when the verification stamp is set to ON.
- ON LINE** - Blinks when the machine is transmitting, or receiving a document.
- ALARM** - Lights when trouble occurs.

Control Panel

<p>STOP</p>  <p>- Press this key when you want to stop telecommunication, registration operation, or an audible tone.</p>	 <p>Used for the following:</p> <ul style="list-style-type: none"> - Start, or select a function. - Search for a station name. (See pages 50, and 55) - Adjust the monitor, and ringer volume. (See page 25) - Move the cursor while entering numbers, and characters. - Search the station name for Directory Search Dialing. - Confirm the entered station for multi-station communication. - Confirm the current communication modes (e.g. Page number, ID, Dialed Telephone number, File number) when the unit is ON LINE.
<p>COPY / SET</p>  <p>- Used to make copies, and set operations. (See page 70)</p>	
<p>CLEAR</p>  <p>- Use this key when resetting all the previously set functions.</p>	

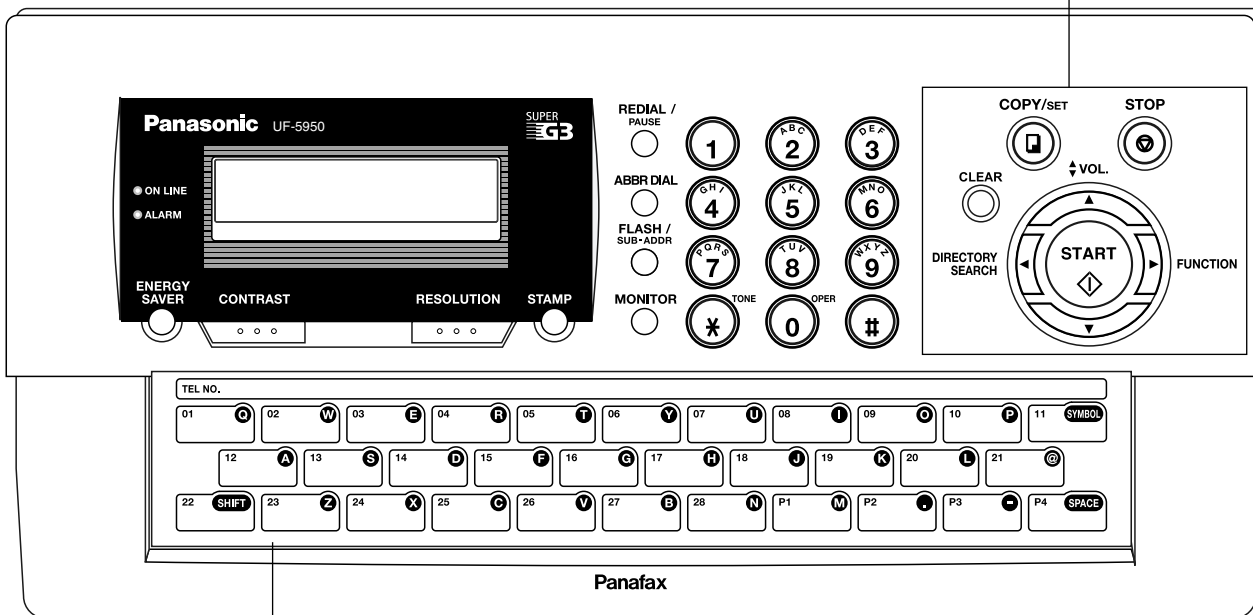

One-Touch Keys (01-28)


 
- Used for One-Touch Dialing. (See pages 49, and 53)

Program Keys (P1-P4)

- Used to record long dialing procedures, or Group Dialing Number keys. (See pages 76 to 81)

Character Keys

- The One-Touch Keys, and Program Keys operate as character and symbol input keys which are used to record your LOGO, character ID, and station name.






SYMBOL - Used to enter a symbol for LOGO, character ID, and station name. Use  or  to select the symbols.

SPACE - Used to insert a space while entering LOGO, character ID, and station name.


SHIFT - Used to switch between upper (**Ex:** A), and lower (**Ex:** a) character set.

Main Unit and Accessories


Unpack the carton and check that you have all the illustrated accessories.

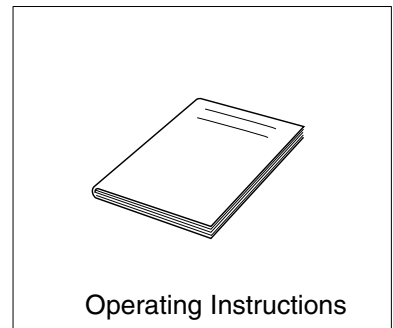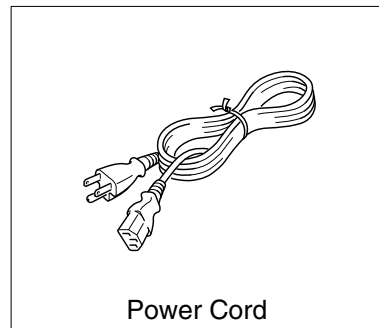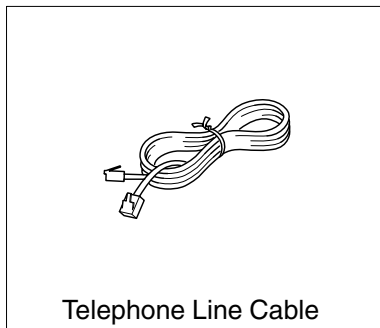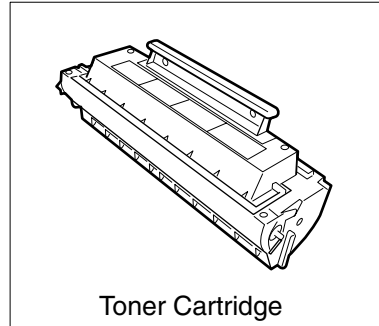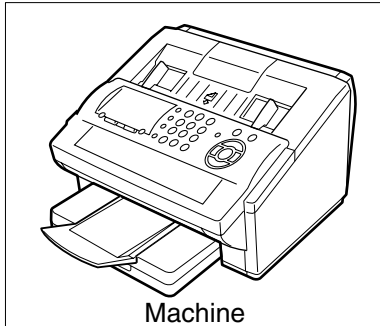

Installing the Accessories

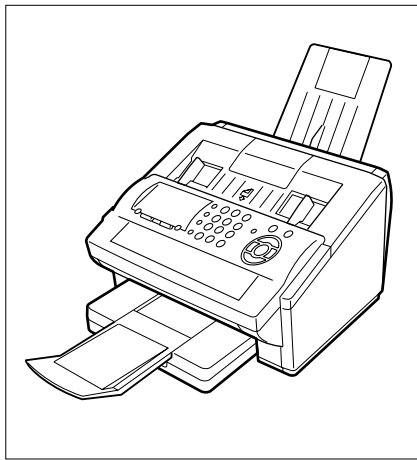


Final Installed View

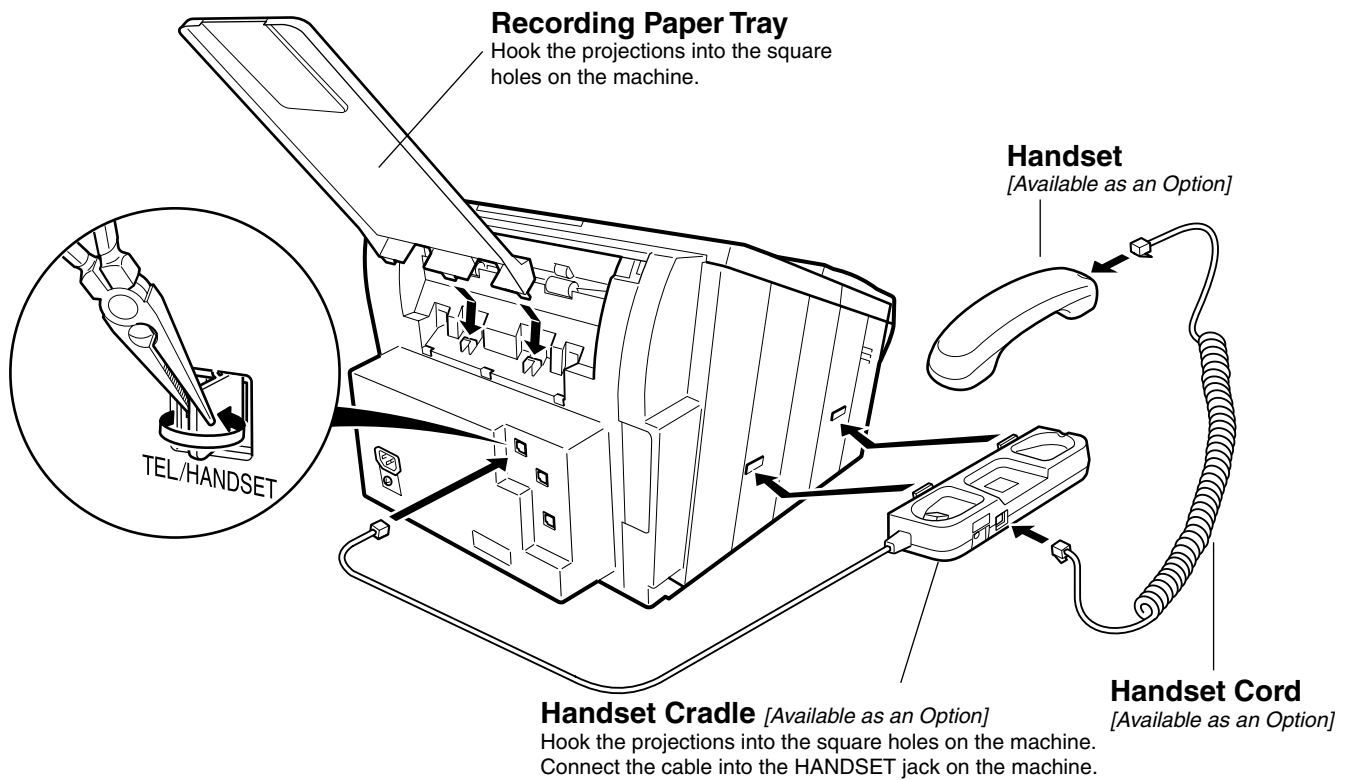


Installing the Toner Cartridge

1

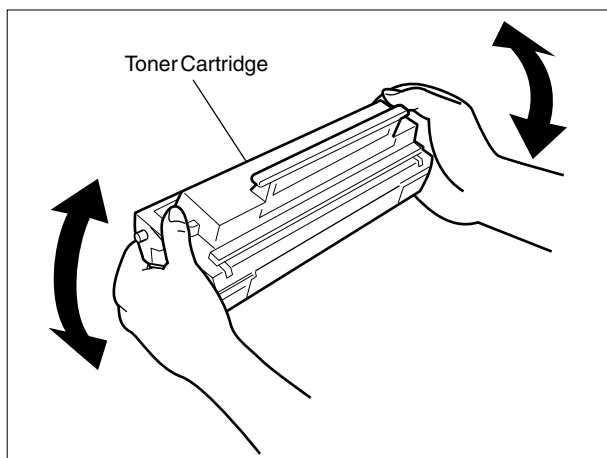

Unpack the Toner Cartridge, and rock it back and forth as shown 5 or 6 times to even the toner inside.


2

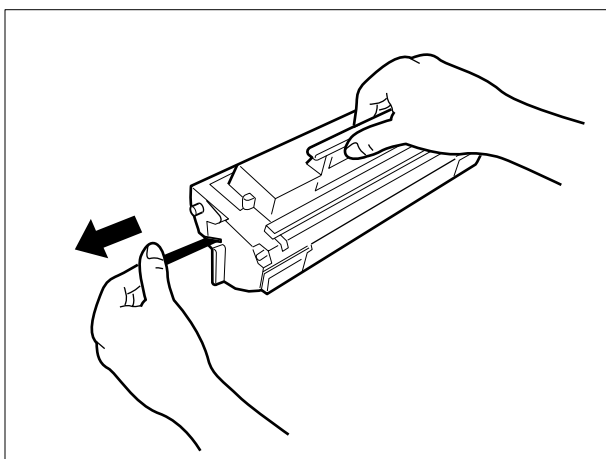

Remove the protective seal.

Note: Pull on the seal slowly, and straight out.


3

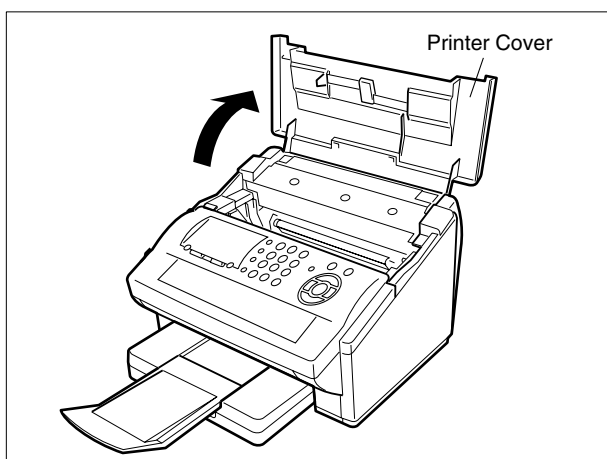

Open the Printer Cover.

Installing the Toner Cartridge


4

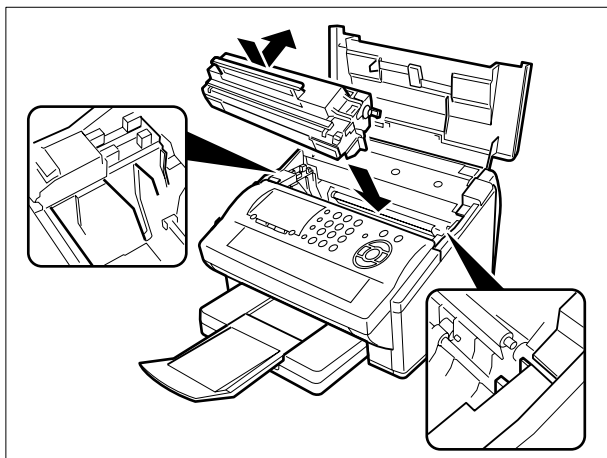

Align the projections on both sides of the Toner Cartridge with the grooves in the machine as shown, and insert the Toner Cartridge into the machine.

Note: Lock the Toner Cartridge into place by pressing the handle down, and then pushing towards the rear of the machine.

5

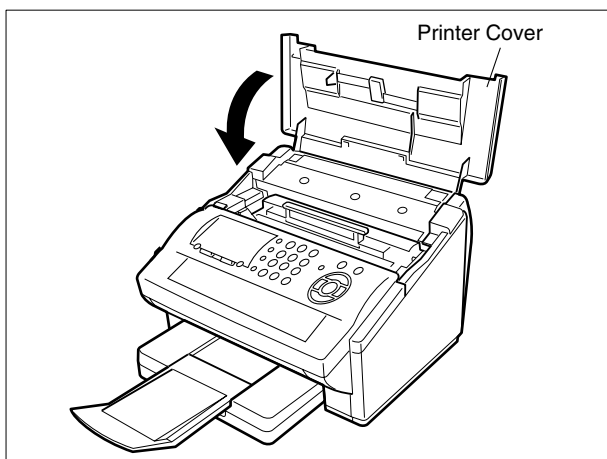

Close the Printer Cover.

6

If you are replacing the Toner Cartridge, it is recommended to clean the Printer Roller to maintain good printing quality. To clean the Printer Roller, follow the procedure on page 138.

Loading the Recording Paper


How to Load the Recording Paper

Paper Specifications

In general, most bond papers will produce excellent results. Most photocopy papers will also work very well. There are many "name", and "generic" brands of paper available. We recommend that you test various papers until you obtain the results you are looking for. For detailed recommended paper specifications, (See page 145).


How to Load the Recording Paper

1

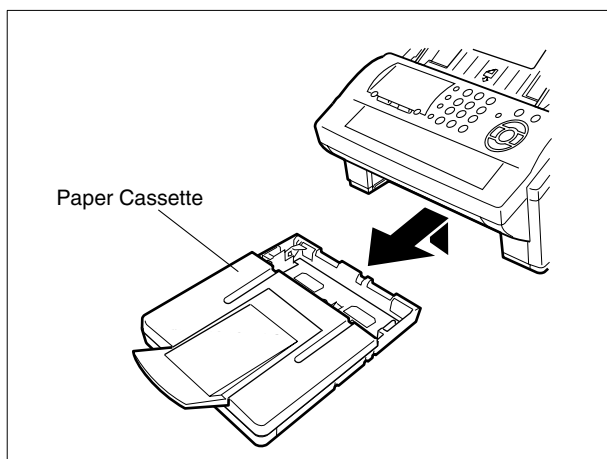


Lift up the Paper Cassette slightly, and slide it out from the machine.

2

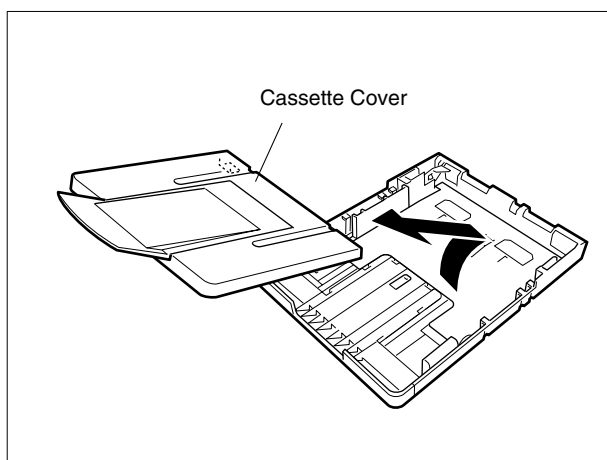

Remove the Paper Cassette Cover.


3

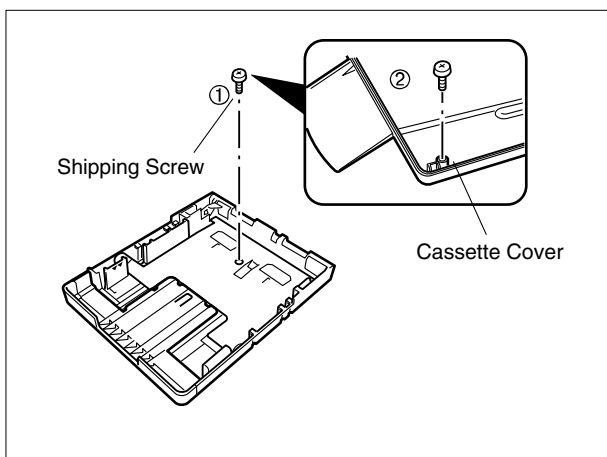

1. Remove the Shipping Screw securing the Pressure Plate, and instruction sheet.
2. Store the screw by attaching it to the post provided under the Paper Cassette Cover for future use.

How to Load the Recording Paper

4

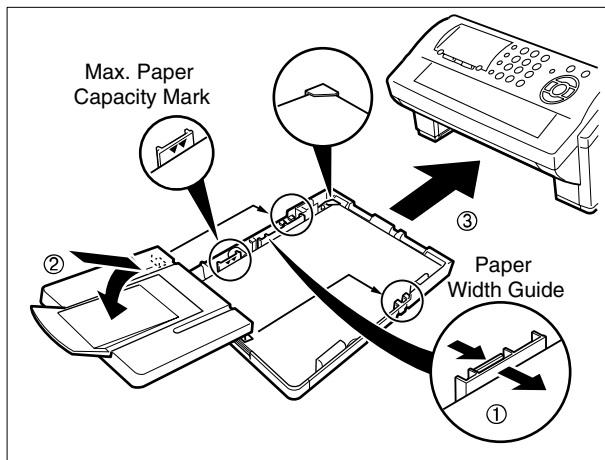

1. Load the paper into the Paper Cassette. Slide the paper width guide to the left until it lightly touches the stack of paper without bending the paper. The paper must fit squarely, and firmly between the Paper Width Guide, and the right side of tray. If it does not, the paper may feed into the printer incorrectly resulting in a paper jam.

Caution: Make sure that the paper is set under the metal Paper Separation Clips, and that it does not exceed the Maximum Paper Capacity Mark. You can load about 250 sheets (20 lb weight). For paper specification, see page 145.


2. Re-install the Paper Cassette Cover.
3. Slide the Paper Cassette into the machine.

Adjusting the Paper Cassette for the Paper Length

How to Adjust the Paper Cassette for the Paper Length

The factory default Paper Length setting for the Paper Cassette is on Letter size. To change the paper length to A4 or Legal size, follow the steps below.

1

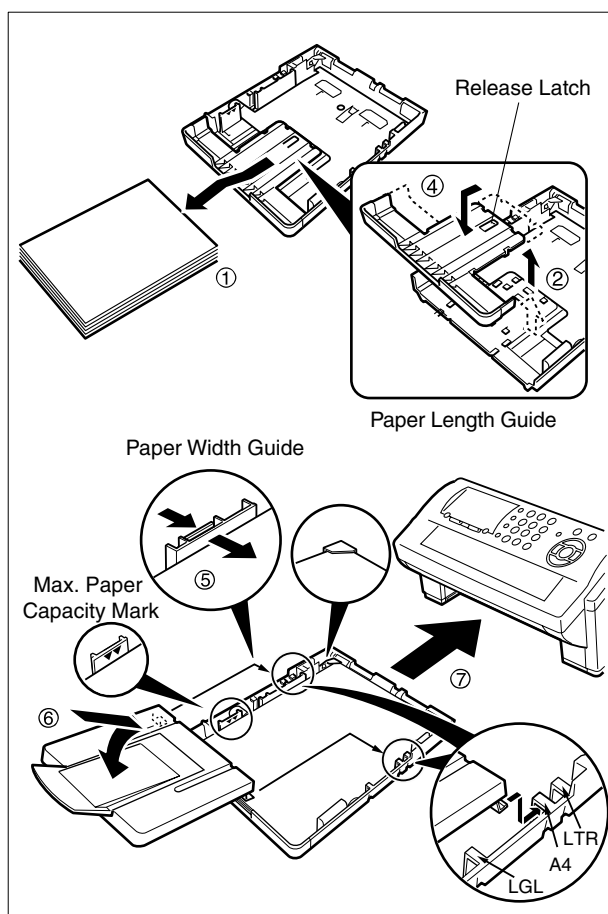

1. Remove the paper from the Paper Cassette, and place the cassette upside down on a flat surface.
2. While pushing down on the release latch, pull out the Paper Length Guide.
3. Turn the Paper Cassette upright.
4. Insert the Paper Length Guide hooks into the appropriate paper length slots (A4 or Legal), and slide the guide towards the back of the cassette until it locks in place.
5. Load the paper into the Paper Cassette.

Slide the paper width guide to the left until it lightly touches the stack of paper without bending the paper. The paper must fit squarely, and firmly between the Paper Width Guide, and the right side of tray. If it does not, the paper may feed into the printer incorrectly resulting in a paper jam.

Caution: Make sure that the paper is set under the metal Paper Separation Clips, and that it does not exceed the Maximum Paper Capacity Mark. You can load about 250 sheets (20 lb weight). For paper specification, see page 145.

6. Replace the Paper Cassette Cover to the appropriate paper position (LTR, A4 or LGL).
7. Slide the Paper Cassette into the machine.

2

The Recording Paper Size setting of the Fax Parameter No. 23 must match the paper loaded in the cassette. If you change the Recording Paper Size, please change the setting accordingly. (See page 37)

NOTE


1. If you forget to change the Recording Paper Size setting in Fax Parameter No. 23 when different paper is loaded in the cassette, the unit will Stop printing after the 1st page of an Incoming Fax, and display a "PAPER SIZE MISMATCH ADJUSTING PAPER SIZE" error. Then, the Recording Paper Size setting automatically adjusts to the proper size, and the unit resumes printing the Incoming Fax from the 1st page.

Adjusting the Paper Cassette for the Paper Width

How to Adjust the Paper Cassette for the Paper Width


The factory default Paper Width setting for the Paper Cassette is on Letter/Legal size. To change the paper width to A4 size, follow the steps below.

1

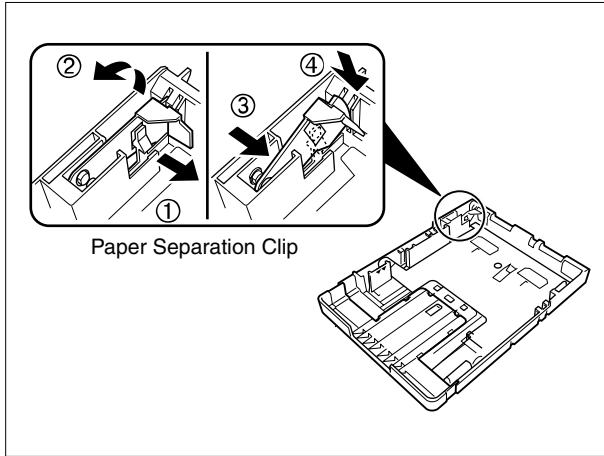

1. Release the left Paper Separation Clip latch.
2. Pull up the Paper Separation Clip to remove it.
3. Reposition the Paper Separation Clip into the A(A4) slot.
4. Swing the Paper Separation Clip downward to latch it in place.

2

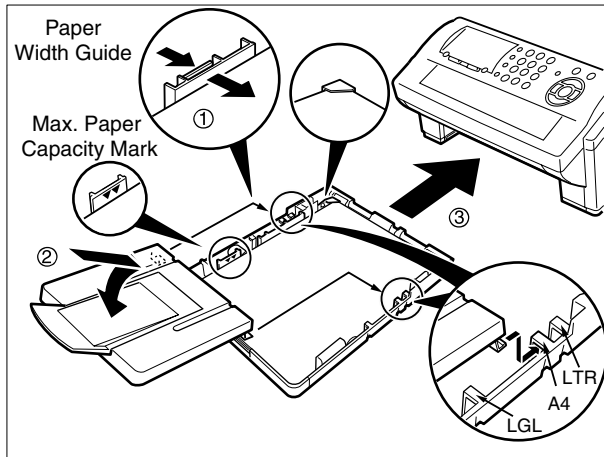

1. Load the paper into the Paper Cassette. Slide the paper width guide to the left until it lightly touches the stack of paper without bending the paper. The paper must fit squarely, and firmly between the Paper Width Guide, and the right side of tray. If it does not, the paper may feed into the printer incorrectly resulting in a paper jam.

Caution: Make sure that the paper is set under the metal Paper Separation Clips, and that it does not exceed the Maximum Paper Capacity Mark. You can load about 250 sheets (20 lb weight). For paper specification, see page 145.

2. Replace the Paper Cassette Cover to the appropriate paper position (A4).
3. Slide the Paper Cassette into the machine.

3

The Recording Paper Size setting of the Fax Parameter No. 23 must match the paper loaded in the cassette. If you change the Recording Paper Size, please change the setting accordingly. (See page 37)

NOTE


1. If you forget to change the Recording Paper Size setting in Fax Parameter No. 23 when different paper is loaded in the cassette, the unit will Stop printing after the 1st page of an Incoming Fax, and display a "PAPER SIZE MISMATCH ADJUSTING PAPER SIZE" error. Then, the Recording Paper Size setting automatically adjusts to the proper size, and the unit resumes printing the Incoming Fax from the 1st page.

Connecting the Telephone Line Cable and Power Cord

■ Power Cord


Plug one end of the power cord into an ordinary 3 prong AC outlet, and the other end into the receptacle on the rear of the machine.

Warning: This apparatus must be properly grounded through an ordinary 3 prong AC outlet. Do not break off the earth (ground) prong to fit a 2 prong outlet.

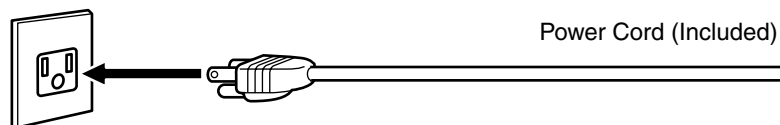

■ Telephone Line Cable


Plug one end of the telephone line cable into the "RJ-11C" telephone jack supplied by the telephone company, and the other end into the LINE jack on the left side of the machine.

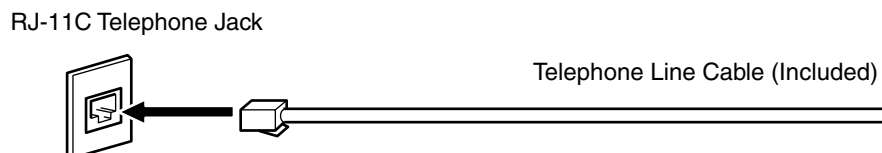

NOTE


1. Your machine uses little power, and you should keep it ON at all times. If the power is turned OFF for too long, the clock contents may be lost.

Connecting the Telephone Line Cable and Power Cord

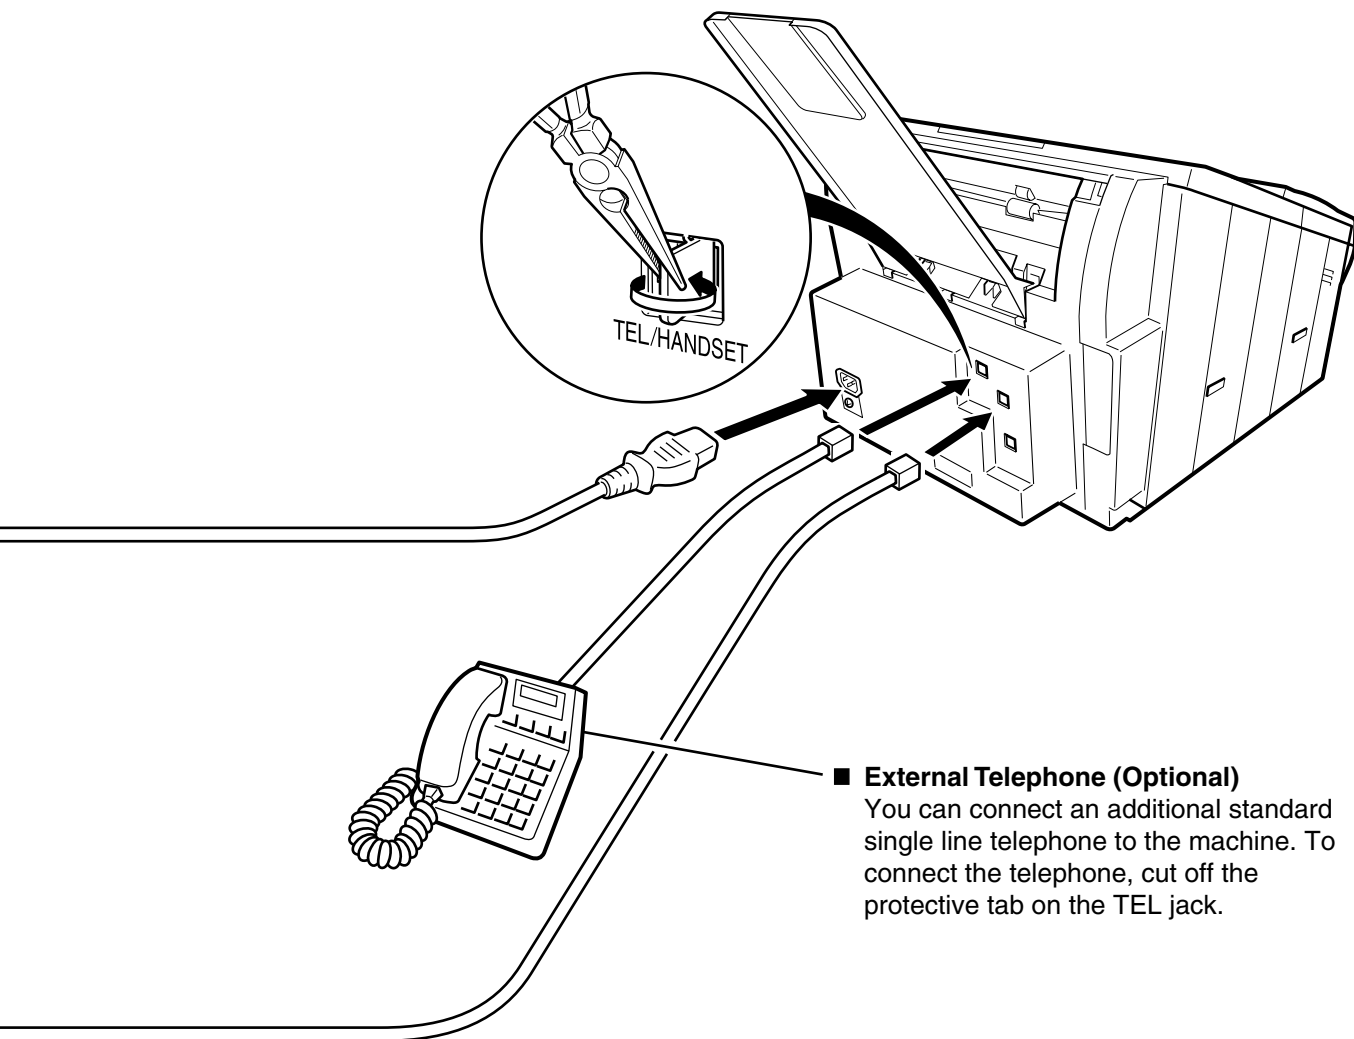


Setting the Dialing Method (Tone or Pulse)


Your machine can operate with either of two dialing methods (Tone or Pulse), depending on the type of telephone line you are connected to. If you need to change the dialing method to Tone or Pulse, follow the procedure below.

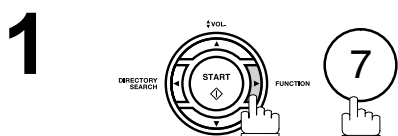


```
SET MODE          (1-8)
ENTER NO. OR ∨ ^
```

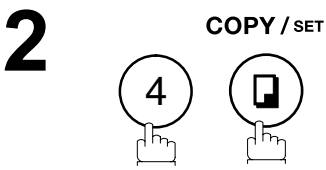

```
FAX PARAMETER (01-99)
NO. = ■
```

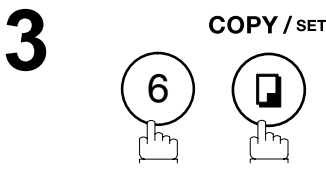


```
06 DIALING METHOD
2:TONE
```

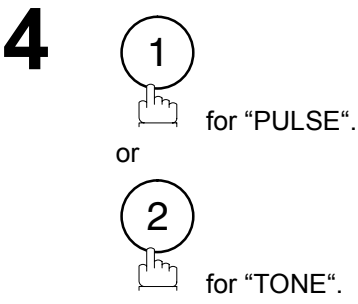

```
06 DIALING METHOD
1:PULSE
```

or

```
06 DIALING METHOD
2:TONE
```

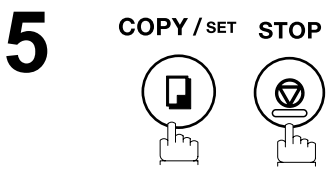

Adjusting the Volume

You can adjust the monitor, and ringer volume on your machine. The built-in speaker enables you to hear the dial tone, dialing signals, and busy tone. The ringer sounds when your machine receives a call.

Setting the Monitor Volume

 
1

MONITOR




You will hear the dial tone through the speaker.


2




repeatedly to raise the volume.

 

or

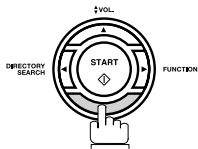

repeatedly to lower the volume.

 

3

 
MONITOR




Setting the Ringer Volume

1


Standby




2

 

repeatedly to raise the volume.

 

or

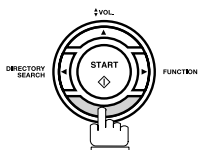

repeatedly to lower the volume.



3

STOP



NOTE

- You can also adjust the volume of the key touch tone, and the volume of the buzzer in the Fax Parameter No. 10 (KEY/BUZZER VOLUME). (See page 36)

User Parameters


General Description

Your facsimile machine has several basic settings (User Parameters) to help you keep records of the documents you send or receive. For example, the built-in clock keeps the current date and time, and your LOGO and ID Number help to identify you when sending, or receiving documents.

Setting the Date and Time

At standby the display will show the date and time. Once the standby display is set, it will automatically be updated.

1

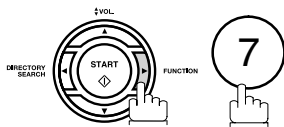

```
SET MODE      (1-8)
ENTER NO. OR ∨ ^
```

 
2



```
1:USER PARAMETERS?
PRESS SET TO SELECT
```

3

COPY / SET



```
DATE & TIME
■1-01-2006 00:00
```

4

Enter the new date and time.

Ex: ① ① Month : October

① ① Date : 11th

② ① ① ① Year : 2006

 
① ⑤ ① ① Time : 3:00 PM

If you make a mistake, use ◀ or ▶ to move the cursor over the incorrect number, then overwrite it with a correct one.

```
DATE & TIME
10-11-2006 15:00
```

5

COPY / SET STOP




NOTE

1. The clock of your machine is equipped with D.S.T (Daylight Saving Time) system. Refer to Fax Parameter No.35 (DAYLIGHT TIME). (See page 38)
2. The current Date & Time must be set because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of this Operating Instructions)

Setting Your LOGO

When you send a document, your LOGO appears on the top of the printed copy at the other station. The LOGO helps to identify you to someone who receives your document.

1

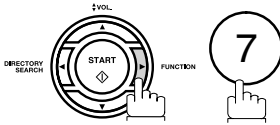

```
SET MODE      (1-8)
ENTER NO. OR ∨ ^
```

2



```
1:USER PARAMETERS?
PRESS SET TO SELECT
```

3

COPY / SET



repeatedly until display shows;

```
LOGO
█
```

4

Enter your LOGO (max. 25 characters and digits) by using the Character keys.

Ex: P A N A S O N I C

 
If you make a mistake, use ◀ or ▶ to move the cursor one space beyond the incorrect character, press **CLEAR** then re-enter the new character.

If more than 19 characters are entered, the left side characters will scroll off the display.

```
LOGO
PANASONIC█
```

5

COPY / SET STOP



NOTE


1. Your Company Name, or your name must be set as your LOGO because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of this Operating Instructions)

User Parameters

Setting Your Character ID


If the remote machine has Character ID capabilities, when sending, or receiving, your Character ID will appear on the remote machine's display, and the remote machine's Character ID will appear on your display.

1

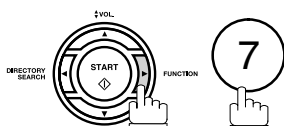

SET MODE (1-8)
ENTER NO. OR V ^

 2



1:USER PARAMETERS?
PRESS SET TO SELECT

3

COPY / SET



repeatedly until display shows;

CHARACTER ID

4

Enter your Character ID (max. 16 characters and digits) by using the Character keys.


Ex: H E A D SPACE O F F I C E

If you make a mistake, use ◀ or ▶ to move the cursor beyond the incorrect character, press CLEAR then re-enter the new character.

CHARACTER ID
HEAD OFFICE■

5

 COPY / SET STOP



NOTE


1. The special characters of Å, Ä, Ö, Ü, Æ, è, and é cannot be used for Character ID.

Setting Your ID Number (Fax Telephone Number)

If the remote machine does not have a Character ID but it has an ID Number, when sending or receiving, your ID Number will appear on the remote machine's display, and their ID Number will appear on your display.


We suggest you use your facsimile telephone number as your ID number. (max. 20 digits)

1

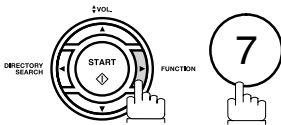

```
SET MODE          (1-8)
ENTER NO. OR ∨ ^
```

 2



```
1:USER PARAMETERS?
PRESS SET TO SELECT
```

3

COPY / SET



repeatedly until display shows;

```
ID NO.
█
```

4

Enter your ID (max. 20 digits) by using the keypad, and **[SPACE]** key to enter a space between numbers.

Ex: **[2]** **[0]** **[1]** **[SPACE]** **[5]** **[5]** **[5]** **[SPACE]** **[1]** **[2]** **[1]** **[2]**

If you make a mistake, use **[◀]** or **[▶]** to move the cursor one space beyond the incorrect number, press **[CLEAR]** then re-enter the new number.

```
ID NO.
201 555 1212█
```

5

COPY / SET STOP



NOTE

- You may use **[*]** to enter a "+" character at the beginning of the ID number to indicate the following digit(s) for your country code.
Ex : +1 201 555 1212 +1 for U.S.A. country code.
 +81 3 111 2345 +81 for Japan country code.
- Your Fax Telephone Number must be set as your ID Number because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of this Operating Instructions manual)


One-Touch/Abbreviated Dialing Numbers

Entering One-Touch/Abbreviated Dialing Numbers

One-Touch, and Abbreviated Dialing are two fast ways of dialing full telephone numbers. To use these dialing methods, you must first store the telephone number using the following procedure.


To enter a One-Touch key, follow the steps below

1

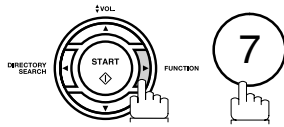


```
SET MODE (1-8)
ENTER NO. OR v ^
```

2

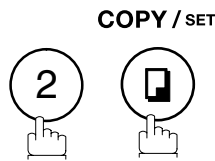


```
1: ONE-TOUCH
2: ABBR NO.
```

 3



```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

 4



```
<01>
ENTER TEL. NO.
```

5

Enter the telephone number
(up to 36 digits including pauses and spaces).

Ex: ⑨ PAUSE ⑤ ⑤ ⑤ SPACE ① ② ③ ④

```
<01>
9-555 1234■
```

6



```
<01> ENTER NAME
9-555 1234
```

7

Enter the station name using character keys
(up to 15 characters).

Ex: S A L E S SPACE D E P T

```
<01> SALES DEPT■
9-555 1234
```

8



```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

To record another number, repeat step 4 to 8.


To return to standby, press STOP.

One-Touch/Abbreviated Dialing Numbers

Entering One-Touch/Abbreviated Dialing Numbers


To set an Abbreviated Dialing Number, follow the steps below

1

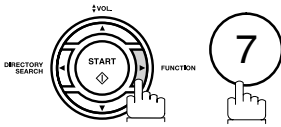

SET MODE (1-8)
ENTER NO. OR ∨ ^

2

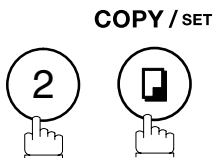

1: ONE-TOUCH
2: ABBR NO.

3



ABBR []
ENTER NO. OR ∨ ^

4

Ex: ① ② ② (001 to 100)

[022]
ENTER TEL. NO.

5

Enter the telephone number
(up to 36 digits including pauses and spaces).

Ex: ⑨ PAUSE ⑤ ⑤ ⑤ SPACE ② ③ ④ ⑤

[022]
9-555 2345

6

COPY / SET



[022] ENTER NAME
9-555 2345

7

 
Enter the station name using character keys
(up to 15 characters).

Ex: A C C O U N T I N G

[022] ACCOUNTING
9-555 2345

8

COPY / SET



ABBR []
ENTER NO. OR ∨ ^

To record another number, repeat step 4 to 8.

To return to standby, press STOP.

NOTE

- If you require a special access number to get an outside line, enter it first, and then press PAUSE. A hyphen "-" is displayed for pause.
- If you are using Pulse dialing, and you wish to change to Tone dialing in the middle of dialing, press TONE (represented by a "/"). The dialing method will change from Pulse to Tone after dialing the digit "/".
Ex : 9 PAUSE TONE 5551234
- You can search for an unused One-Touch key, or ABBR. number by pressing ▲ or ▼ in step 3 or 4.


One-Touch/Abbreviated Dialing Numbers

Editing One-Touch/Abbreviated Dialing Numbers

If you have to change, or erase any of the One-Touch/Abbreviated dialing numbers, follow the steps below.

To change the settings of a One-Touch/ABBR dialing number

1

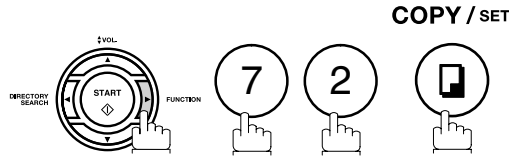

```
1: ONE-TOUCH
2: ABBR NO.
```

2

Select ① for One-Touch Dialing number
Select ② for ABBR. Dialing Number

 
```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

Ex: ①

3

Enter the station you wish to change.

```
<01> SALES DEPT
9-555 1234
```



4

CLEAR



```
<01> SALES DEPT
ENTER TEL. NO.
```

then enter a new telephone number. (See Note 1)

```
<01> SALES DEPT
9-555 3456
```

Ex: ⑨ [PAUSE] ⑤ ⑤ ⑤ [SPACE] ③ ④ ⑤ ⑥

5

COPY / SET



```
<01> SALES DEPT
9-555 3456
```

6

CLEAR



```
<01> ENTER NAME
9-555 3456
```

then enter a new station name. (See Note 1)

```
<01> PANAFAX
9-555 3456
```

Ex: [P][A][N][A][F][A][X]

7

COPY / SET



```
ONE-TOUCH< >
PRESS ONE-TCH OR v ^
```

To return to standby, press [STOP].

NOTE


- If you make a mistake, use ◀ or ▶ to move the cursor beyond the incorrect number, press [CLEAR] then re-enter the new number.

One-Touch/Abbreviated Dialing Numbers

Editing One-Touch/Abbreviated Dialing Numbers

To erase the settings of One-Touch/ABBR Dialing number

1

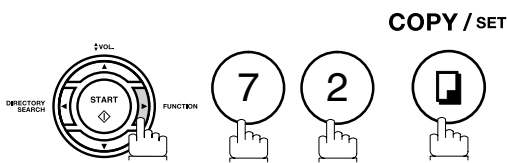

```
1:ONE-TOUCH  
2:ABBR NO.
```

2

Select ① for One-Touch Dialing number
Select ② for ABBR. Dialing Number

```
ONE-TOUCH< >  
PRESS ONE-TCH OR ∨ ^
```

Ex: ①

3

Enter the station you wish to erase.

Ex: 01

```
<01> SALES DEPT  
9-555 1234
```

4

CLEAR



```
<01> SALES DEPT  
ENTER TEL. NO.
```

5

COPY / SET




```
ONE-TOUCH< >  
PRESS ONE-TCH OR ∨ ^
```

To return to standby, press **STOP**.


One-Touch/Abbreviated Dialing Numbers

Printing Out a Directory Sheet

After programming a one-touch dialing number, you can print the directory sheet which includes the first 12 characters of each station name. Cut along the dotted line and place it over the One-Touch key under the Directory Sheet Cover. To print a directory sheet, follow the steps below.


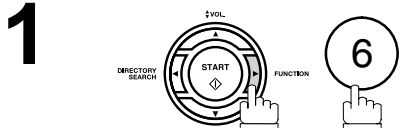


PRINT OUT (1-7)
ENTER NO. OR ∨ ^

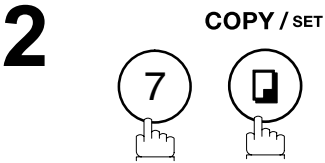

* PRINTING *
DIRECTORY SHEET

Your machine prints out the directory sheet.

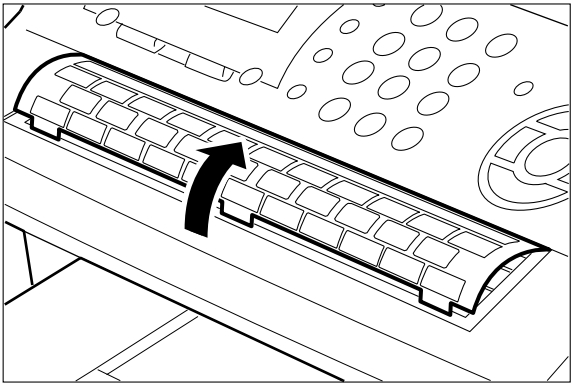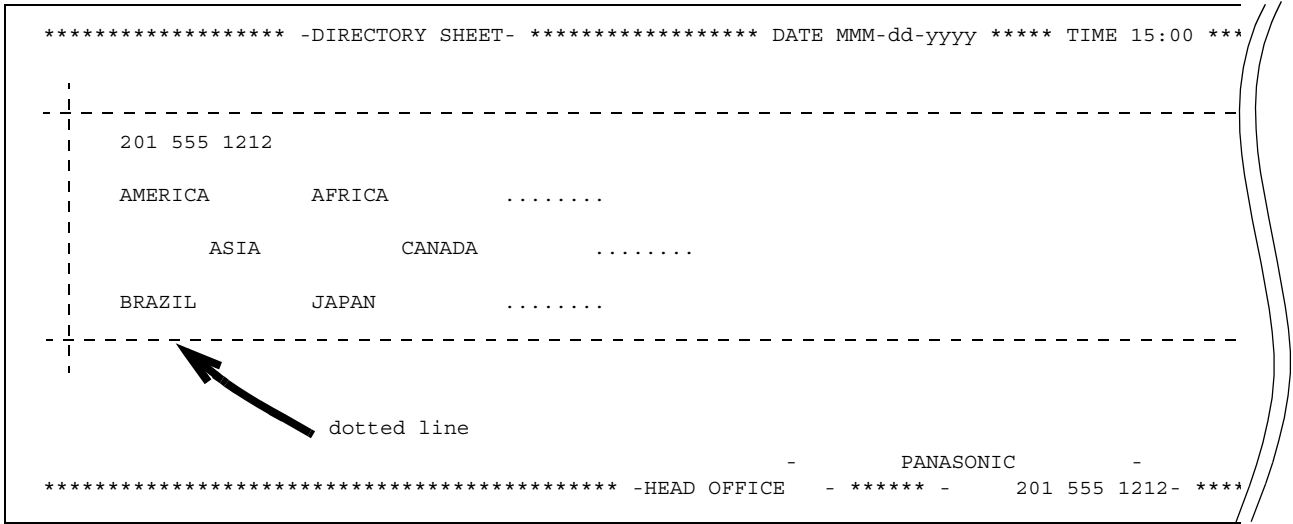


Customizing Your Machine

General Description

Your facsimile machine has a variety of adjustable Fax Parameters. These parameters, listed in the Parameter Table, are preset for you, and do not need to be changed. If you do want to make a change, read the table carefully. Some parameters, such as the Resolution and Contrast parameters, can be temporarily changed by simple key operation just before a transmission is made. When the transmission ends, however, these parameters return to their preset values (Home position). Other parameters can only be changed by the procedure described below.


Setting the Fax Parameters

1

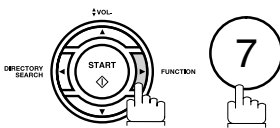

```
SET MODE      (1-8)
ENTER NO. OR ∨ ∧
```

2

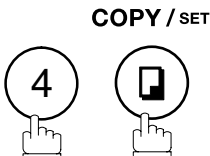

```
FAX PARAMETER (01-99)
NO. =■
```

3

Enter Fax Parameter number from the Parameter Table.
Ex: ② ① for **CONTRAST**

```
FAX PARAMETER (01-99)
NO. =01
```

4



```
01 CONTRAST
1: NORMAL
```

5

Enter the new setting value.
Ex: ② for **LIGHTER**

```
01 CONTRAST
2: LIGHTER
```

6



```
02 RESOLUTION
1: STANDARD
```

To set another parameter, press **CLEAR** to return to step 3, or press **STOP** to return to standby.

NOTE

1. To scroll the Fax Parameters in Step 2 or 4, press ▼ or ▲.
2. To print out a Fax Parameter List, see page 126.

Customizing Your Machine

Fax Parameter Table

No.	Parameter	Setting Number	Setting	Comments
01	CONTRAST	*1	Normal	Setting the home position of the CONTRAST key.
		2	Lighter	
		3	Darker	
02	RESOLUTION	*1	Standard	Setting the home position for the RESOLUTION.
		2	Fine	
		3	S-Fine	
		4	Halftone (Fine)	
		5	Halftone (S-Fine)	
04	STAMP (HOME)	*1	Off	Setting the home position of the STAMP key. To select the stamp function when document is stored in memory, see Fax Parameter No. 28.
		2	On	
05	MEMORY (HOME)	1	Off	Setting the home position for memory transmission/copy mode. (This setting can be temporarily changed by using F8-9 (MEMORY XMT))
		*2	On	
06	DIALING METHOD	1	Pulse	Selecting the dialing method.
		*2	Tone	
07	HEADER PRINT	*1	Inside	Selecting the printing position of the header. Inside : Inside TX copy area. Outside : Outside TX copy area. No print : Header is not printed.
		2	Outside	
		3	No print	
08	HEADER FORMAT	*1	Logo, ID No.	Selecting the header format.
		2	From To	
09	RCV'D TIME PRINT	*1	Invalid	Selecting whether the machine prints the received date & time, remote ID, percentage of reduction and page number on the bottom of each received page.
		2	Valid	
10	KEY/BUZZER VOLUME	1	Off	Selecting the volume of the Key/Buzzer tone.
		*2	Soft	
		3	Loud	
12	COMM. JOURNAL	1	Off	Selecting the home position of printout mode for COMM. Journal Off/Always/INC. Off : Does not print Always : Always prints Inc. only : Prints only when communication has failed.
		2	Always	
		*3	Inc. only	
13	AUTO JRNL PRINT	1	Invalid	Selecting whether the machine prints the journal automatically after every 32 transactions.
		*2	Valid	
17	RECEIVE MODE	1	TEL	Setting the receive mode.
		*2	FAX	
		3	FAX/TEL SW.	
		4	TAM/FAX	

Fax Parameter Table

No.	Parameter	Setting Number	Setting	Comments
18	OP CALL TIMER	*1	20 sec.	Selecting the length of time that your machine signals (rings) for an incoming voice call in Fax/Tel Auto Switching mode. (See page 64)
		2	30 sec.	
		3	40 sec.	
		4	50 sec.	
19	OGM LENGTH (TAM I/F)	1	1 sec.	Setting for the OGM length of your TAM from 1 to 60 seconds. The machine will not start to detect SILENCE until the time setting has lapsed. (Default = 20 sec.)
		---	---	
		60	60 sec.	
20	SILENT DETECTION (TAM I/F)	1	Invalid	Selecting the Silent Detection Mode.
		*2	Valid	
22	SUBSTITUTE RCV	1	Invalid	Selecting whether the machine receives to memory when recording paper runs out, toner runs out or recording paper is jammed.
		*2	Valid	
23	REC. PAPER SIZE	1	A4	Setting the recording paper size loaded in your machine.
		*2	Letter	
		3	Legal	
24	PRINT REDUCTION	1	Fixed	Selecting print reduction mode. Fixed : Reduce received document according to setting of Parameter No. 25. Auto : Reduce received document according to the length of received documents.
		*2	Auto	
25	REDUCTION RATIO	70	70%	Selecting fixed print reduction ratio from 70% to 100%. This parameter functions only when fixed print reduction is selected on Fax Parameter No. 24.
		----	----	
		*100	100%	
26	POLLING PASSWORD		(----	Setting a 4-digit password for secured polling.
27	POLLED FILE SAVE	*1	Invalid	Selecting whether the machine retains the polled document in memory even after the document is polled once.
		2	Valid	
28	STAMP AT MEM. XMT	1	Invalid	Selecting whether the machine stamps the original documents when storing the documents into memory. (Depending on the Stamp setting on the Control Panel)
		*2	Valid	
31	INC. FILE SAVE	*1	Invalid	Selecting whether the machine retains the document in memory if the document is not successfully transmitted.
		2	Valid	
32	COPY REDUCTION	1	Manual	Selecting whether the machine performs the copy reduction ratio automatically or manually. Manual : The machine will prompt you for the Zoom ratio (100% to 70%) when making copies. Auto : The machine will automatically determine the reduction ratio according to the length of the original document.
		*2	Auto	

Customizing Your Machine

Fax Parameter Table

No.	Parameter	Setting Number	Setting	Comments
34	ENERGY SAVER MODE	1	Off	To reduce the power consumption in standby, select either Energy-Saver or Sleep mode and specify the Delay Time (1 to 120 minutes) for the machine to enter into the selected mode. The Delay Timer setting is only available in the Energy-Saver or Sleep Modes. Off : The unit will remain in standby mode and consume more energy than when in Energy-Saver or Sleep modes. Energy-Saver : Saves energy by consuming less power than when in standby mode by turning off the fuser unit after the specified time. Sleep : This is the lowest power state that the machine enters after the specified time without actually turning off.
		2	Energy-Saver	
		*3	Sleep	
35	DAYLIGHT TIME	1	OFF	Set Daylight Time according to your local regulation. OFF : Daylight Time is not applied. Mar 2nd : From 2 a.m. on the 2nd Sunday of March to 2 a.m. on the 1st Sunday of November. Note : The date setting shown above reflects the New Regulation starting in 2007. In 2006, the Daylight Time will end on the Last Sunday of October. Apr 1st : From 2 a.m. on the 1st Sunday of April to 2 a.m. on the Last Sunday of October.
		*2	Mar 2nd	
		3	Apr 1st	
36	RING PATTERN DETECT (DRD) (See Note 2)	*1	Invalid	All ring patterns.
		2	Valid	Select a ring pattern for automatic answering. 1: A Standard ring pattern. 2: B Double ring pattern. 3: C Triple ring pattern (Short-Short-Long). 4: D All other triple ring patterns, except the type C described above.
37	RCV TO MEMORY		(----	Enter a 4-digit password used to print out the received document in memory by using F8-5 (RCV TO MEMORY). When F8-5 is set to On, this parameter will not be shown on the LCD display. (See page 92)
38	ACCESS CODE		(----	Enter a 4-digit Access Code to secure the machine from unauthorized use. (See page 90)
39	PIN CODE ACCESS	*1	None	Selecting the access method (Prefix or Suffix) to dial a number with PIN Code. (See page 97)
		2	Suffix	
		3	Prefix	
42	CONF. FILE SAVE	*1	Invalid	Selecting whether the machine saves the confidential polled file even after the file is polled once.
		2	Valid	
43	PASSWORD-XMT	*1	Off	Setting a 4-digit XMT-Password and selecting whether the machine performs and checks the XMT-Password of the receiving station when transmitting. (See page 102)
		2	On	
44	PASSWORD-RCV	*1	Off	Setting a 4-digit RCV-Password and selecting whether the machine performs and checks the RCV-Password of the transmitting station when receiving. (See page 103)
		2	On	
46	SELECT RCV	*1	Invalid	Selecting whether the machine performs selective reception. (See page 100)
		2	Valid	

Fax Parameter Table

No.	Parameter	Setting Number	Setting	Comments
47	REMOTE RCV	1	Invalid	Selecting whether or not the machine accepts remote reception command. (See page 63)
		*2	Valid	
51	REMOTE DIAGNOSTIC	*1	Invalid	Selecting whether or not the machine accepts to update the firmware or Remote Diagnostics from the remote station. Please ask your Panasonic Authorized Dealer for details.
		2	Valid	
52	DIAG. PASSWORD		(----	Setting the password for Remote Diagnostic Mode. Please ask your Panasonic Authorized Dealer for details.
53	SUB-ADDRESS PSWD		(----	Setting a 20-digit password for secured sub-address communication.
54	FAX FORWARD	*1	Invalid	Selecting whether the machine performs Fax Forwarding to the specified destination. (See page 99)
		2	Valid	
56	COVER SHEET	*1	Off	Setting the home position of the Cover Sheet parameter in the Select Mode. (See page 95)
		2	On	
58	LANGUAGE	*1	A-English	Selecting the language to be shown on the display and reports.
		2	C-French	
		3	Spanish	
65	PRINT COLLATION	1	Invalid	Selecting whether the machine prints out documents in sequence. (See page 69)
		*2	Valid	
82	QUICK MEMORY XMT	1	Invalid	Selecting whether the machine performs Quick Memory Transmission. (See page 48 to 51) Invalid : Stores all documents into memory first before dialing the telephone number. Valid : Starts dialing the telephone number immediately after storing the first page.
		*2	Valid	
99	MEMORY SIZE (Flash Memory)	-	-	Displays the memory size.


NOTE

1. Setting number marked with an asterisk (*) indicates the factory standard setting.
2. This parameter supports an optional telephone service "Distinctive Ring Service" provided by your local telephone company. It allows up to 4 different telephone numbers to be assigned on a single telephone line with a distinctive ring for each telephone number. By selecting the appropriate ring pattern associated with the telephone number assigned for your fax machine. It can differentiate, and answer the incoming call on the fax number. All other calls on the other telephone numbers will not be answered. This optional service from your local phone company is also called Custom Ringing, Distinctive Ringing, Ident-a-call, Ident-a-ring, Personalized Ringing, RingMaster, RingMate, Selective Ringing, Smart Ring, or something similar. Check with your local telephone company on the availability of this service in your area.

Loading Documents

Documents You Can Send


In general, your machine will send any document printed on A4, Letter, or Legal size paper.

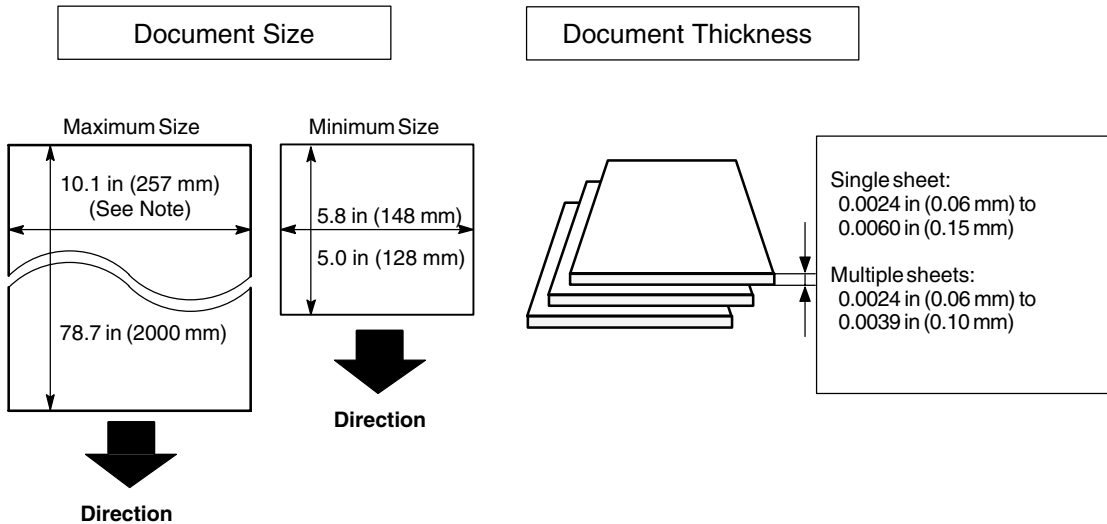


Note: The maximum document width that can be sent through the machine is 10.1 in (257mm). However, the effective scanning width is 8.3 in (212mm)

Documents You Cannot Send


You must never try to send documents that are:

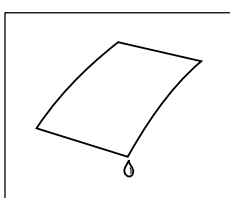


Wet

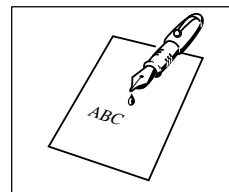


Covered with wet ink, or paste

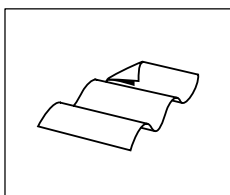


Too thin (e.g., onionskin, airmail paper, pages from some magazines, etc.)

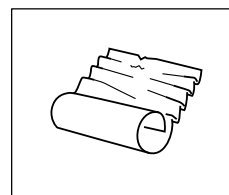

Wrinkled, curled, or folded

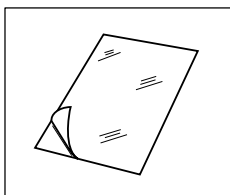

Coated (e.g., glossy paper, etc.)

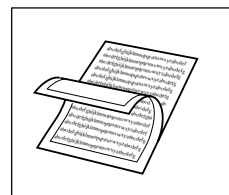


Chemically processed (e.g., pressure-sensitive paper, carbon-coated paper, etc.), or made of cloth or metal

To transmit these kinds of documents, make a photocopy first, and then transmit the copy instead.

How to Load Documents

1. Be sure the document(s) is free of staples, paper clips, and is not torn, greasy, or covered by foreign objects.
2. Place the document(s) **FACE DOWN** on the Automatic Document Feeder (ADF) until the leading edge placed into the machine stops.
If sending multiple pages, make sure that **the bottom sheet enters first**. You can also stack **up to 50 PAGES** on the ADF at one time **by setting the documents as stairs shape as the figure below**. If you have more than 50 pages, wait until transmission, or storing in memory starts as pages feed through, place any remaining pages on top of the last page in the feeder.
3. Adjust the Document Guides to center the document on the ADF.

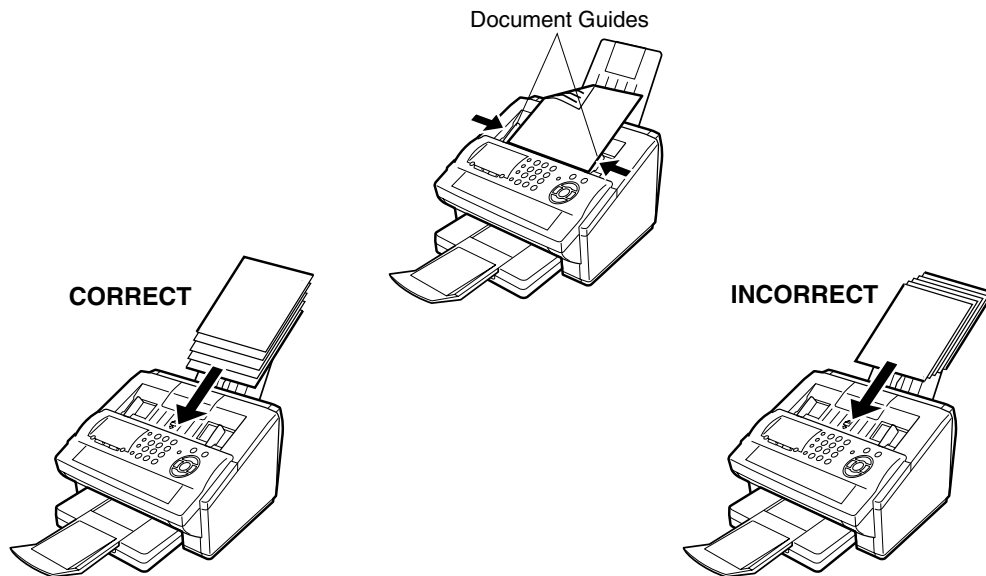

When you set a document on the ADF, the display message will change from date and time (standby) to the following message. You can now change basic transmission settings, or begin the dialing procedure.

ENTER STATION (S)
THEN PRESS START 00%


NOTE

1. The document limitation to send multiple pages is as follows.

	Document Size	Document Thickness
Up to 20 pages	Up to 10.1 x 14.3 in (257 x 364 mm)	0.0024 - 0.0048 in
Up to 50 pages*	A4 or Letter size	0.0024 - 0.0039 in

* Please note that although the size, and thickness meets the specifications, you might not be able to set 50 pages with some types of papers.

2. Transmitting documents longer than 14 in (356 mm) requires user's assistance.
3. When transmitting documents longer than Letter size (8.5 x 11 in), please extend the sub-tray as shown below.

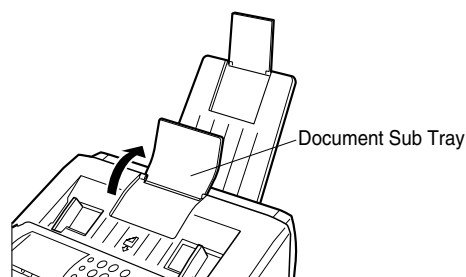

Basic Transmission Settings

General Description

You can temporarily change the transmission settings either before, or after you place the document on the ADF.

These settings are as follows


- Contrast
- Resolution
- Stamp
- Communication Journal

After your document(s) have been sent, your machine will automatically return to the preset settings.

Contrast

Your machine is preset to **Normal** contrast. If you wish to send a document with lighter contrast, change the setting to **Lighter**. If you wish to send a document with darker contrast, change the setting to **Darker**.

Press **CONTRAST** to:

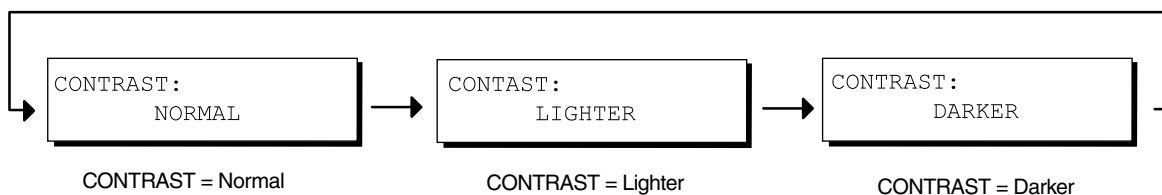


Resolution

Your machine is preset to **Standard** resolution, which is suitable for most documents.

If you want to send it with more detail, change the setting to **Fine**, **Super Fine**, or **Halftone**.

Press **RESOLUTION** to:

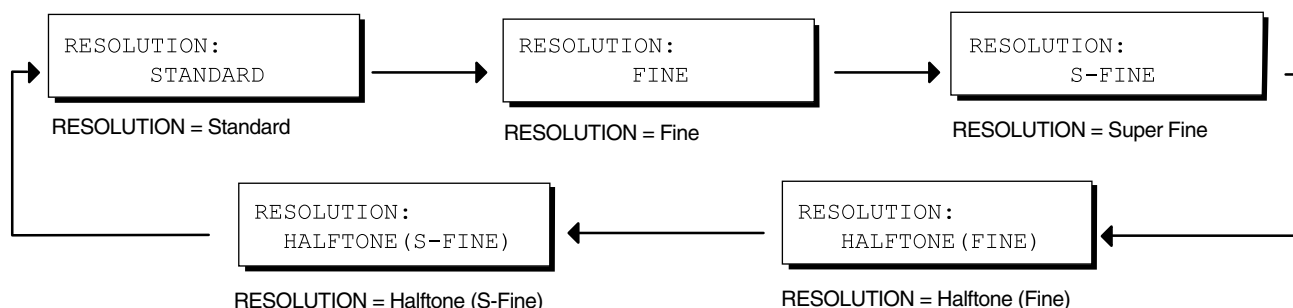


NOTE

1. To change the preset Contrast position, change the setting of Fax Parameter No. 01. (See page 36)
2. To change the preset Resolution position, change the setting of Fax Parameter No. 02. (See page 36)

Verification Stamp

The Verification Stamp helps you to confirm successful transmissions by stamping the bottom of each successfully transmitted page with a small ⊗ mark.

Press **STAMP** to:

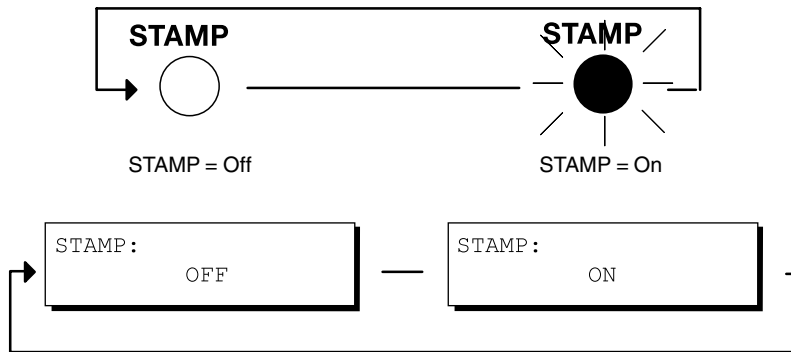

NOTE

1. When you store a document in memory, the Verification Stamp will stamp on the document if it is successfully stored in memory. In this case the Verification Stamp is not a confirmation that the document was successfully transmitted. If you wish to disable the use of the Verification Stamp when storing document in memory, change the setting of Fax Parameter No. 28. (See page 37)
2. To change the preset Verification Stamp position, change the setting of Fax Parameter No. 04. (See page 36)


Basic Transmission Settings

Communication Journal (COMM. JOURNAL)

A Communication Journal lets you verify if the transmission was successful. You can select the condition to print the Communication Journal as follows.


- When you set COMM. JOURNAL = **OFF** : a Communication Journal will not print.
- When you set COMM. JOURNAL = **ON** : a Communication Journal is printed automatically after every communication.
- When you set COMM. JOURNAL = **INC.** : a Communication Journal is printed automatically only if the communication has failed.

1

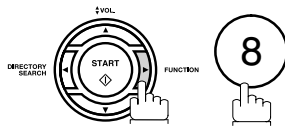


```
SELECT MODE (1-9)
ENTER NO. OR V ^
```

2

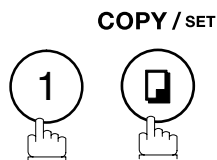

```
COMM. JOURNAL=INC
1:OFF 2:ON 3:INC
```

3

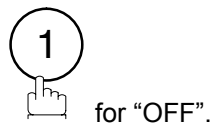

for "OFF".

or



for "ON" (Always print out).

or



for "INCOMPLETE" only.

```
COMM. JOURNAL=OFF
1:OFF 2:ON 3:INC
```

or

```
COMM. JOURNAL=ON
1:OFF 2:ON 3:INC
```

or

```
COMM. JOURNAL=INC
1:OFF 2:ON 3:INC
```

4



NOTE

- To change the preset Comm. Journal condition, change the setting of Fax Parameter No. 12. (See page 36)

Sending Documents

General Description

You can choose either Memory, or Direct Transmission.

Use Memory Transmission if:

- You want to send the document to multiple stations.
- You have to retrieve the document immediately.
- You want to take advantage of Dual Operation design.

Use Direct Transmission if:

- The memory is full.
- You want to send the document immediately.

Use Voice Mode Transmit if:

- You want to send the document after talking with the other party.
- You want to send the document after listening to a voice prompting.


Sending Documents

Memory Transmission

Your machine quickly stores the document into the machine's memory.

Then, starts to dial the telephone number.

If the transmission fails, your machine will re-transmit the remaining unsuccessful page(s) automatically.

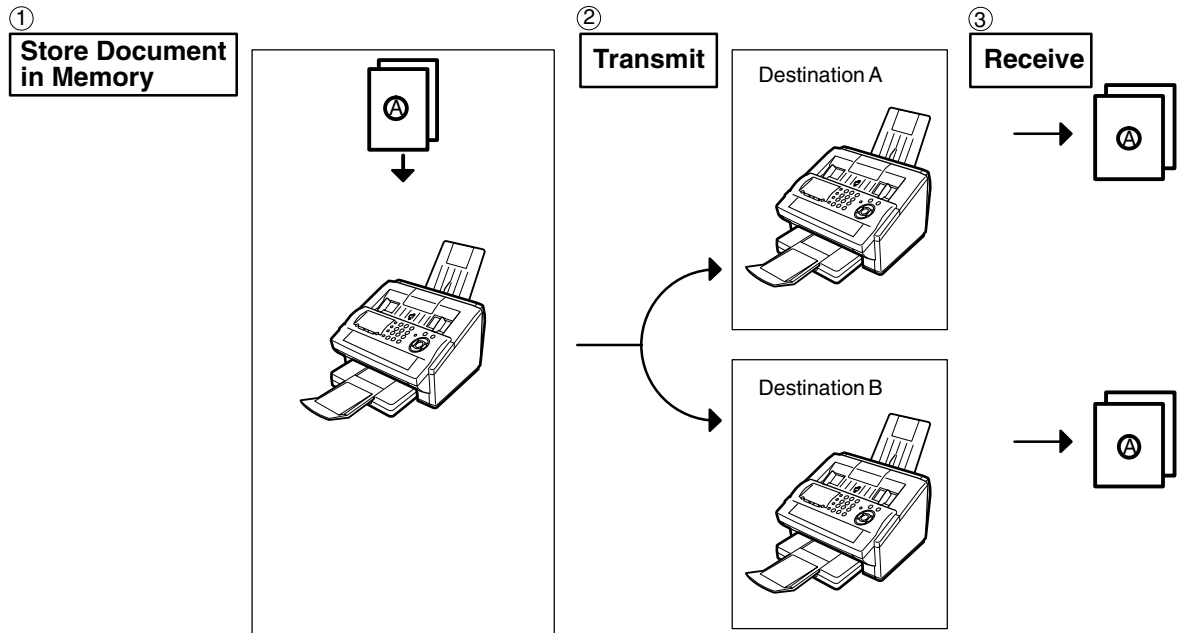

NOTE

1. The File Number of the document being stored is shown at the upper right corner of the display while storing the document. It is also printed on the Communication Journal (COMM. JOURNAL), Transaction Journal, and File List. The percentage of memory used is shown on the lower right corner of the display after each page is stored.

```
* STORE *      NO.003
          PAGES=002 10%
```

```
* STORE * COMPLETED
TOTAL PAGES=005 30%
```

2. If memory overflow occurs while storing documents, the remaining documents on the ADF will be ejected. The machine prompts you whether to transmit the successfully stored documents, or to cancel the transmission. Press ① to cancel, or press ② to transmit.

```
MEMORY OVERFLOW
INFO. CODE=870
```

See the Specifications on page 143 for the image memory capacity.

If no action is taken within 10 seconds, the machine will start transmitting the stored documents.

3. An Information Code will display if the transmission has failed, or no answer at the receiving side after the last automatic redial.

The document stored for this transmission will be erased from the memory automatically, and the information code is printed for the transmission on the Communication Journal (COMM. JOURNAL).

If you need to retain the incomplete documents even after the last redial, change Fax Parameter No. 31 (INC. FILE SAVE) to "Valid" in advance. (See page 37)

To retry the incomplete documents, refer to page 89.

```
INCOMPLETE
INFO. CODE=XXX
```

Memory Transmission

4. To stop the transmission, press .

The display shows:

```
COMMUNICATION STOP ?  
1: YES 2: NO
```

Press **1** to stop the transmission. The document you stored will be erased automatically. If you do not want to erase the documents, change the setting of Fax Parameter No. 31 (INC. FILE SAVE) to "Valid" in advance. (See page 37)

Then the following display will appear, and you can select whether to save the file as an incomplete file for editing and retry, or delete the file manually.

```
SAVE AS INCOMP. FILE?  
1: YES 2: NO
```

5. If you would like to print a Communication Journal (COMM. JOURNAL) after stopping a transmission, press **1** when the display shows:

```
PRINT COMM. JOURNAL?  
1: YES 2: NO
```

6. If the file memory capacity reaches 10 files, and you try to store another file, the following display appears, and the machine will not accept additional files until a file is completed and becomes available.

```
FILE STORAGE IS FULL  
PLEASE WAIT!
```

Sending Documents

Memory Transmission

Manual Number Dialing

To dial the telephone number manually, follow the steps below.

1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2

Enter a telephone number from the keypad.
(Up to 36 digits)
You can also designate more than one destination.

TEL. NO.
5551234■

Ex: (5) (5) (5) (1) (2) (3) (4)

3

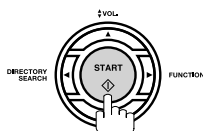

The document is stored into memory with a file number.
Then starts dialing the telephone number immediately
after storing the first page. (See Note 3)
The remaining page(s) continue to store into memory.

* STORE * NO.002
PAGES=001 05%

* DIALING * NO.002
5551234

NOTE

1. If you need a special access number to get an outside line, dial it first then press **PAUSE** to enter a pause (represented by a "-") before dialing the full number.
Ex: 9 PAUSE 5551234
2. If you are using Pulse dialing, and you wish to change to Tone dialing in the middle of dialing, press **TONE** (represented by a "/").
The dialing mode will be changed from Pulse to Tone after dialing the digit "/".
Ex: 9 PAUSE TONE 5551234
3. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 82 (QUICK MEMORY XMT) to "Invalid". (See page 39)

Memory Transmission

One-Touch Dialing

One-Touch Dialing allows you to dial a full telephone number by pressing a single key. To set up the One-Touch keys. (see page 30)

1

 


Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2

Press a One-Touch key.



<01>(Station name)
5551234

3

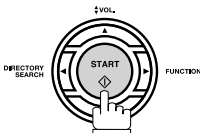

The document is stored into memory with a file number.
Then starts dialing the telephone number immediately
after storing the first page. (See Note 1)
The remaining page(s) continue to store into memory.

* STORE * NO.002
PAGES=001 05%

* DIALING * NO.002
(Station name)

Abbreviated Dialing

Abbreviated dialing is a speedy way to dial a frequently dialed telephone number by preprogramming the telephone number into the built-in auto-dialer with a 3-digit abbreviated code. To program an abbreviated dialing number. (see page 31)

1




Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2

Press **ABBR DIAL** then enter a 3-digit code.

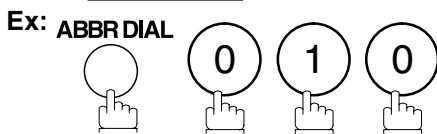

[010] (Station name)
5553456

3

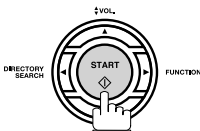

The document is stored into memory with a file number.
Then starts dialing the telephone number immediately
after storing the first page. (See Note 1)
The remaining page(s) continue to store into memory.

* STORE * NO.002
PAGES=001 05%

* DIALING * NO.002
(Station name)

NOTE

1. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 82 (QUICK MEMORY XMT) to "Invalid". (See page 39)

Sending Documents

Memory Transmission

Directory Search Dialing

Directory Search dialing allows you to dial a full telephone number by searching the station name entered in One-Touch keys, or Abbreviated dialing numbers.


1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%

2

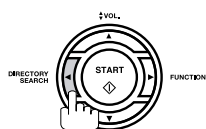

ENTER LETTER(S)


3

Enter the full station name, or part of a station name by using the Character keys.

Ex: **P** **A** **N** **A** for searching **PANASONIC**

ENTER LETTER(S)
PANA■

4

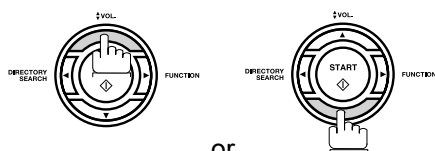


or

repeatedly until the display shows the station name you want to send to.

[010] PANASONIC
5553456

5

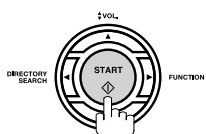

The document is stored into memory with a file number. Then starts dialing the telephone number immediately after storing the first page. (See Note 1) The remaining page(s) continue to store into memory.

* STORE * NO.002
PAGES=001 05%

* DIALING * NO.002
PANASONIC

NOTE

1. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 82 (QUICK MEMORY XMT) to "Invalid". (See page 39)

Memory Transmission

Multi-Station Transmission (Broadcasting)

If you have to send the same document(s) to multiple stations, you can save time in feeding the document(s) by using memory transmission. That is, you can store the document(s) into memory, and then send it to the station(s) automatically.

1



Set document(s) face down.

 
ENTER STATION(S)
THEN PRESS START 00%

2


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press SET after each station is entered (Up to 12 stations)
- Directory Search Dialing, press SET after each station is entered (For details, see pages 48 to 50.)

Ex:



ABBR DIAL

 


- If you want to confirm the number of stations you have entered, press SET.

<01>(Station name)
5551234

[010] (Station name)
5553456

2 STN(S) ARE SET
ADD MORE OR START

3

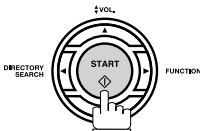

The document is stored into memory with a file number. Then starts dialing the telephone numbers in sequence.

* STORE * NO.001
PAGES=001 01%

* STORE * COMPLETED
TOTAL PAGE=005 25%

* DIALING * NO.001
(Station name)

NOTE

1. You can review the stations you entered in step 3 before storing your document into memory by pressing ▼ or ▲. Press CLEAR to clear an entered station, or group shown on the display if needed.
2. The "Quick Memory Transmission" is disabled if multiple stations are set.

Sending Documents

Direct Transmission

If your machine's memory is full or you wish to send the document immediately, use Direct Transmission.

Manual Number Dialing (Direct Transmission)

To dial the telephone number manually, follow the steps below.


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

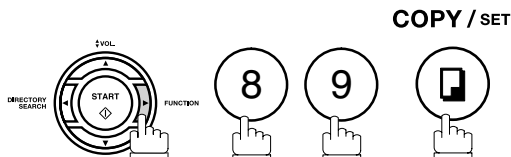

MEMORY XMT=ON
1:OFF 2:ON

3

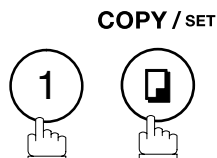

ENTER STATION
00%


4

Enter a telephone number from the keypad.

Ex: ⑤ ⑤ ⑤ ① ② ③ ④

PRESS START TO DIAL
5551234 ■

5

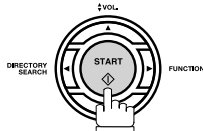

Your machine starts to dial the telephone number.

* DIALING *
5551234

NOTE

1. If you need a special access number to get an outside line, dial it first then press **PAUSE** to enter a pause (represented by a "-") before dialing the full number.
Ex: 9 PAUSE 5551234
2. If using Pulse dialing, and you wish to change to Tone dialing in the middle of dialing, press **TONE** (represented by a "/").
The dialing mode will change from Pulse to Tone after dialing the digit "/".
Ex: 9 PAUSE TONE 5551234
3. To stop the transmission, press **STOP**.
The display shows:

COMMUNICATION STOP ?
1: YES 2: NO

Press ① to stop the transmission. The Communication Journal will not print, regardless of the printout mode setting of the Communication Journal.

Direct Transmission

One-Touch Dialing (Direct Transmission)

One-Touch Dialing allows you to dial a full telephone number by pressing a single key. To set up the One-Touch keys. (see page 30)


1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2

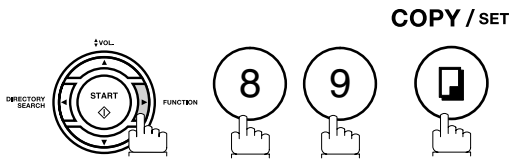

COPY / SET

MEMORY XMT=ON
1:OFF 2:ON

3

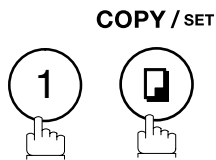


COPY / SET

ENTER STATION
00%

4

 Press a One-Touch key.



The display will show the One-Touch number, and station name. The full number (e.g. 5551234) will then be dialed.

<01>(Station name)
5551234

* DIALING *
(Station name)

Sending Documents

Direct Transmission

Abbreviated Dialing (Direct Transmission)

Abbreviated dialing is a speedy way to dial a frequently dialed telephone number by preprogramming the telephone number into the built-in auto-dialer with a 3-digit abbreviated code. To program an abbreviated dialing number. (see page 31)


1



Set document(s) face down.


```
ENTER STATION(S)  
THEN PRESS START 00%
```

2

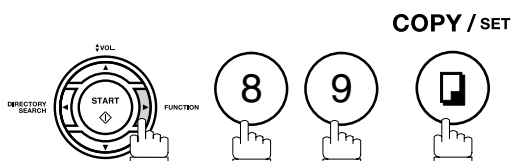

```
MEMORY XMT=ON  
1:OFF 2:ON
```

3

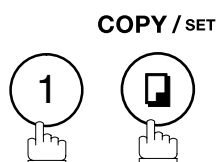


```
ENTER STATION  
00%
```

4

Press **ABBR DIAL** and a 3-digit code.

 Ex: **ABBR DIAL**



The display will show the ABBR number, and station name.

The full number (e.g. 5553456) will then be dialed.

```
[010] (Station name)  
5553456
```

```
* DIALING *  
(Station name)
```

Direct Transmission

Directory Search Dialing (Direct Transmission)

Directory Search dialing allows you to dial a full telephone number by searching the station name entered in One-Touch keys, or Abbreviated dialing numbers.


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

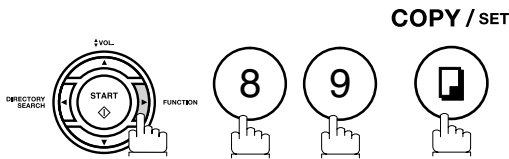


MEMORY XMT=ON
1:OFF 2:ON

3

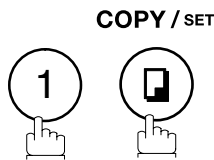

ENTER STATION
00%

4

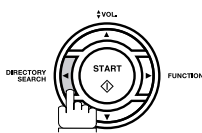

ENTER LETTER(S)
█


5

Enter the full station name, or part of a station name by using the Character keys. (See page 13)

Ex: P A N A for searching **PANASONIC**

ENTER LETTER(S)
PANA█

6

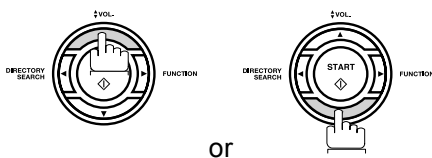


OR

repeatedly until the display shows the station name you want to send to.

[010] PANASONIC
5553456

7

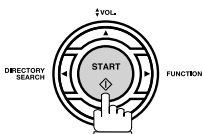

The full number (e.g. 5553456) will be dialed.

* DIALING *
PANASONIC

Sending Documents

Voice Mode Transmission

If you wish to talk with other party first before sending the document, use Voice Mode Transmission. Your machine requires an optional fax handset, or an external telephone.

Off-Hook Dialing

For Off-Hook Dialing, follow the steps below.

1



Set document(s) face down.

```
ENTER STATION(S)  
THEN PRESS START 00%
```

2

Lift the fax handset, or the external telephone, and dial the telephone number from the keypad.

Ex: (5) (5) (5) (1) (2) (3) (4)

```
* PHONE OFF HOOK *
```


```
* DIALING *  
5551234■
```

3

When you hear the voice of the other party, tell the other party to prepare to receive a document.

```
ON LINE * XMT *
```

Then, when you hear a beep,

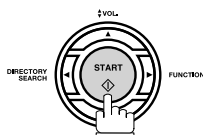

and hang up the handset.

NOTE

1. To stop the transmission, press **STOP**.

The display shows:

```
COMMUNICATION STOP ?  
1: YES 2: NO
```

Press **1** to stop the transmission. The Communication Journal will not print, regardless of the printout mode setting of the Communication Journal.

Voice Mode Transmission

On-Hook Dialing

For On-Hook Dialing, follow the steps below.

1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%

2

MONITOR



You will hear dial tone through the monitor speaker.

* MONITOR *

3


Dial the telephone number from the keypad.

Ex: (5) (5) (5) (1) (2) (3) (4)

* DIALING *
5551234█

4

When you hear a beep,

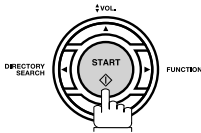

ON LINE * XMT *

NOTE

1. If you need a special access number to get an outside line, dial it first, then press **PAUSE** to enter a pause (represented by a "-") before dialing the full number.
Ex: 9 PAUSE 5551234
2. If you are using Pulse dialing, and you wish to change to Tone dialing in the middle of dialing, press **TONE** (represented by a "/").
The dialing mode will be changed from Pulse to Tone after dialing the digit "/".
Ex: 9 PAUSE TONE 5551234

Sending Documents

Transmission Reservation

You can do the following while sending a document from memory, or receiving a document.

- Reserve the next transmission into memory. (Up to 10 different files)
- Reserve a priority transmission.

Memory Transmission Reservation (Multi-tasking)

If your machine is on-line busy transmitting from memory, receiving, or printing received documents, you can reserve a transmission by the following procedure.

- 1** Your machine is on-line, the ON LINE lamp is blinking, or printing received documents.

```
ON LINE * MEM.XMT *  
ID:(Identification)
```

```
ON LINE * RCV *  
ID:(Identification)
```

```
* PRINTING *  
MEMORY RCV'D DOC
```

```
ENTER STATION(S)  
THEN PRESS START 00%
```

2

 


Set document(s) face down.


3

Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered (Up to 12 stations)
- Directory Search Dialing, press after each station is entered (For details, see pages 48 to 50.)



ABBR DIAL

 


- If you want to confirm the number of stations you have entered, press .

```
<01>(Station name)  
5551234
```

```
[010](Station name)  
5553456
```

4

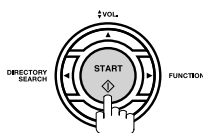

Your machine will store the document(s) into memory.

```
* STORE * NO.005  
PAGES=001 01%
```

```
* STORE * COMPLETED  
TOTAL PAGE=005 25%
```

NOTE

1. To cancel the memory transmission reservation, see page 86.

Transmission Reservation

Direct Transmission Reservation (Priority Transmission Reservation)

If you are in a rush to send an urgent document, however there are many files in the memory, use Direct Transmission Reservation to send the urgent document. The urgent document will be sent immediately after the current communication is finished.

Note that you cannot send documents to multiple stations.

To reserve your machine for sending the urgent documents

1 Your machine is on-line, the ON LINE lamp is blinking, or printing received documents.


```
ON LINE * MEM.XMT *
ID: (Identification)
```


```
ON LINE * RCV *
ID: (Identification)
```

```
* PRINTING *
MEMORY RCV'D DOC
```


```
ENTER STATION(S)
THEN PRESS START 00%
```

```
MEMORY XMT=ON
1:OFF 2:ON
```

2  Set document(s) face down.

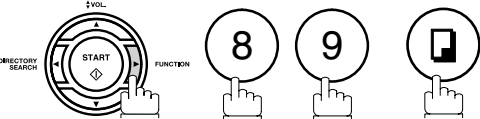
3  **COPY / SET**

4 **COPY / SET**

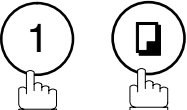

5 Dial by using any one of the following methods:

 - One-Touch Dialing
 - Abbreviated Dialing
 - Manual Number Dialing, and press START
 - Directory Search Dialing, and press START
- (For details, see pages 52 to 55.)

Ex: 

```
ENTER STATION
00%
```

```
<01>(Station name)
5551234
```

You can reserve sending an urgent document to a single station only. A message "DIRECT XMT RESERVED" will be shown on the display.

Sending Documents

Transmission Reservation


To cancel the direct transmission reservation

1 Make sure the document is on the ADF.

```
DIRECT XMT RESERVED  
<01>(Station name)
```

2 **STOP**


```
CANCEL XMT RESERVE ?  
1:YES 2:NO
```

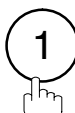3  and then remove the document from ADF.

Redialing

Automatic Redialing

If a busy line is detected, the machine will redial the number up to 5 times at 3 minutes interval. However, if a busy line is not detected, the machine will redial only one time. During that time, a message will appear as shown to the right.


```
WAIT TO DIAL NO.001  
<01>(Station name)
```

A file number is shown in the upper right hand corner of the display if it is a memory transmission file.

Manual Redialing

You can also redial the last dialed number manually by pressing **REDIAL** key.


To redial the last dialed number through memory

1  Set document(s) face down.

```
ENTER STATION(S)  
THEN PRESS START 00%
```

2 **REDIAL / PAUSE**


```
TEL. NO.  
5551234
```

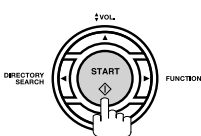3 

```
* STORE * NO.002  
PAGES=001 01%
```

The document is stored into memory with a file number. Then dials the last dialed number.

```
* DIALING * NO.002  
5551234
```

Redialing

To redial the last dialed number through ADF


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

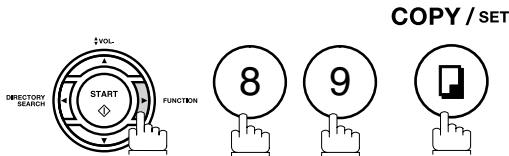


MEMORY XMT=ON
1:OFF 2:ON

3

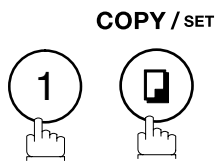

ENTER STATION
00%

4

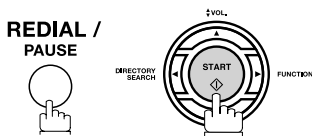

Your machine starts to dial the last dialed number.

PRESS START TO DIAL
5551234

* DIALING *
5551234

NOTE

1. While the unit is displaying "WAIT TO DIAL", you can press **REDIAL** to start redialing immediately.

Receiving Documents

Reception Modes

You can select one of the four modes as shown below.

Conditions	Suggested Reception Mode	Settings
You normally receive only voice calls.	<u>Telephone Mode</u> You can answer the incoming call via an External Telephone (Optional). If you receive a fax calling signal, simply press START to receive manually. (See page 63)	Fax Parameter No. 17 set to 1: Tel MMM-dd-yyyy 15:00 RCV MODE=TEL 00%
You receive both voice and fax calls.	<u>Fax / Tel Auto Switching Mode</u> Unit will answer the incoming call then distinguishes whether it is voice or fax call. If it is a fax call, the unit will receive automatically. If it is a voice call, the unit will signal (Ring) through the speaker for your attention. (See page 64)	Fax Parameter No. 17 set to 3: Fax / Tel SW. MMM-dd-yyyy 15:00 RCV MODE=FAX/TEL 00%
You normally receive fax calls only.	<u>Fax Mode</u> Unit will receive the document automatically. All incoming calls (including a voice call) are answered by the fax machine. (See page 65)	Fax Parameter No. 17 set to 2: Fax MMM-dd-yyyy 15:00 00%
You receive both voice, and fax calls, and a Telephone Answering Machine (TAM) is connected.	<u>TAM Interface Mode</u> The TAM answers the incoming call. During that time, the unit also monitors whether it is a voice call, the TAM continues to operate. If it is a fax call, the unit will automatically switch the line to the Fax, and begin receiving document. (See page 65)	Fax Parameter No. 17 set to 4: TAM / FAX. MMM-dd-yyyy 15:00 RCV MODE=TAM/FAX 00%

NOTE

1. Depending on the model of the Telephone Answering Machine (TAM) that is connected, some of the features may not be compatible with your fax machine operating in the TAM Interface mode.
2. If you are using the "Distinctive Ring Service" provided by your local telephone company, please note that the ring pattern for your fax number must match with the setting of Fax Parameter No. 36 (RING PATTERN DETECT). (See page 38)
If the setting does not match with the ring pattern, your machine will not receive a document automatically, and the telephone will continue to ring.
Furthermore, if your TAM does not support the "Distinctive Ring Detector" service, it may not function properly in TAM Interface.

Telephone Mode

When your machine is set to this mode, your machine will not receive documents automatically. If you receive a fax call, follow the procedure below to receive documents manually.

Setting the Telephone Mode


- 1** Change Fax Parameter No. 17 (RECEIVE MODE) to 1: Tel.
(See page 36)

Operation of Telephone Mode


- 1** When your telephone rings, lift the handset of the External Telephone.
If you hear a beep from the phone, it means someone wants to send a fax. Or, if the caller answers, and says he/she wants to send a fax, then...

- 2** Remove any document from the ADF.


- 3a** If you answered the call using the External Telephone,

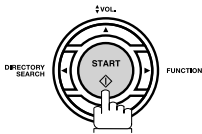

- 3b** If you answered the call on an Extension phone,

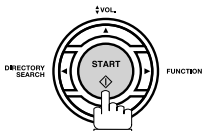

or

 

within 1 second from the telephone key pad. (See Note 1)
Your machine will be activated remotely.

- 4** Hang up the phone.

NOTE

1. This procedure is called "REMOTE RCV", and will only work on a touch tone phone. If your extension phone is not a touch tone phone, press **START** on the control panel of your fax machine.

Receiving Documents

Fax / Tel Auto Switching Mode

When your machine is set to this mode, your machine will switch to document reception, or voice communication automatically.

Setting the Fax / Tel Auto Switching Mode

- 1** Change Fax Parameter No. 17 (RECEIVE MODE) to 3: Fax / Tel SW. (See page 36)

Operation of Fax / Tel Auto Switching Mode

If it is a Fax call,

- 1** Your machine will answer the call when a call is received, then distinguish whether it is a voice, or fax call.
- 2** Your machine begins to receive the documents.

If it is a Voice call,

- 1** Your machine will answer the call when a call is received, then distinguish whether it is a voice or fax call.
- 2** Your machine begins to signal (Ringing) through the machine's speaker for your attention. (See Note 1)
- 3** Lift the handset of the External Telephone, and press .
- 4** Begin the conversation.

NOTE

- 1. The length of time the machine signals can be changed by Fax Parameter No. 18 (OP CALL TIMER) (See page 37).*
- 2. To adjust the Ringer Volume refer to page 25.*

Fax Mode

When your machine is set to this mode, it will immediately begin to receive documents automatically when a call is received.

Setting the Fax Mode

- 1 Change Fax Parameter No. 17 (RECEIVE MODE) to 2: Fax.
(See page 36)


Operation of Fax Mode

Your machine will begin receiving automatically when a fax call is received.

TAM (Telephone Answering Machine) Interface Mode

Your machine is equipped with a unique feature called TAM Interface which enables it to automatically switch a single telephone line either to Fax or TAM. You can connect most TAMs in the market to your machine, and use your existing telephone line very efficiently. However, some TAMs may not be compatible with this machine. Answering Services (Voice Mail) provided by your Local Phone company are not compatible with this feature. For the operation of your TAM, please refer to the User's Guide of the TAM.

Installing your TAM

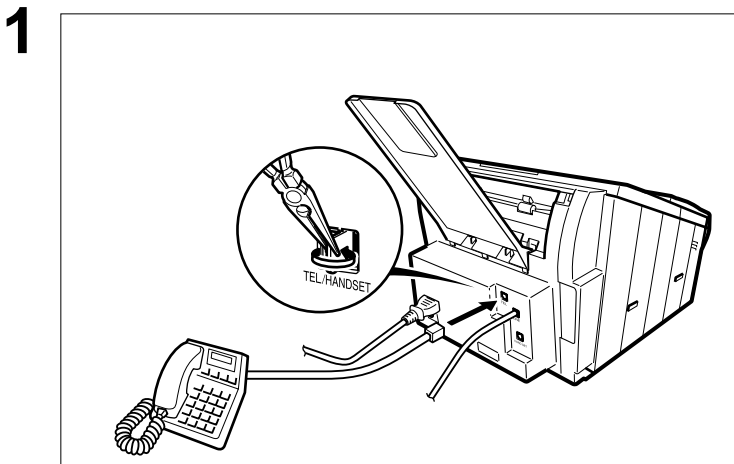

1. Remove the telephone line cable of your TAM from the wall jack.
2. Plug the telephone line cable of your TAM into the TEL jack on the rear of the fax machine as shown.

Receiving Documents

TAM (Telephone Answering Machine) Interface Mode

Setting the TAM Interface Mode

- 1 Change Fax Parameter No. 17 (RECEIVE MODE) to 4: TAM / FAX.
(See page 36)

Operation of TAM Interface Mode

If it is a Fax call,

- 1 When your TAM, and Fax receives an incoming call, the TAM always answers the call first, and then the TAM plays the OGM (Outgoing Message) recorded in your TAM to the calling station. During the time the TAM is answering the call, your fax machine will be monitoring the line to distinguish whether it is a voice, or fax call.
- 2 Your machine will switch the line to the fax, and then begin to receive the documents immediately from the calling station.

If it is a Voice call,

- 1 When your TAM, and Fax receives an incoming call, the TAM always answers the call first, and then the TAM plays the OGM (Outgoing Message) recorded in your TAM to the calling station. During the time the TAM is answering the call, your fax machine will be monitoring the line to distinguish whether it is a voice, or fax call.
- 2 Your TAM continues to record a message (ICM) after playing the OGM.

Sample of OGM

Hello, this is Smith. Sorry I am unable to take your call. Please leave your message after the beep or if you are calling to send a fax, press the asterisk button twice on your touch tone phone now to start your machine. Thank you for calling.

Silent Detection Mode

Enables your Fax machine to switch to the Fax Mode when receiving from units that do not send fax signal (short beep), and prevents your TAM from recording blank (long silence) incoming message.

To activate this feature,

1. Change Fax Parameter No. 20 (SILENT DETECTION) to 2 : Valid. (See page 37)
2. Set the time length of the OGM recorded in your TAM with the Fax Parameter No. 19 (OGM LENGTH). (See page 37)

[We recommend to set the time length 5 or 6 seconds longer than the actual time length of the OGM.]

Print Reduction

This machine can use Letter, Legal, or A4 size plain paper for recording. Sometimes, oversized documents sent to you by the other parties cannot be printed within a single page. When this occurs, the document will be divided into separate pages.

This machine is equipped with a Print Reduction function to solve this problem. You may select the most appropriate setting from the selections described below.

1. Automatic Reduction

Each page of a received document is first stored in memory. Based on the document length, your machine will automatically calculate the suitable reduction ratio (70% to 100%) to print the entire document on a single page. If the received document is extremely long (over 39% longer than the recording paper), the document will be divided into separate pages, and print without reduction.

2. Fixed Reduction

You can pre-determine the reduction ratio from 70% to 100% in 1% steps. The document(s) you receive will be reduced to the fixed ratio regardless of size.

Selecting the Print Reduction Mode

Set Fax Parameters as shown below. PRINT REDUCTION

1. To set Automatic Reduction mode.

1) No. 24 Print Reduction set to "Auto".

2. To set Fixed Reduction mode.

1) No. 24 Print Reduction set to "Fixed".

2) No. 25 Reduction Ratio set to any number between 70% through 100%. (See Note 1)

Ex: A4 to A4	: 96%
A4 to Letter	: 90%
Letter to Letter	: 96%
Legal to Letter	: 75%


NOTE

1. If the sending side is set to print the header on the outside of the copy area, more reduction ratio will be required.

Receiving Documents

Receiving Oversize Documents

If the received document is extremely long (over 39% longer than the recording paper), the document will be divided into separate pages. When printing on separate pages, the bottom 0.4 in (10 mm) of first page will be overlapped on top of the next page.

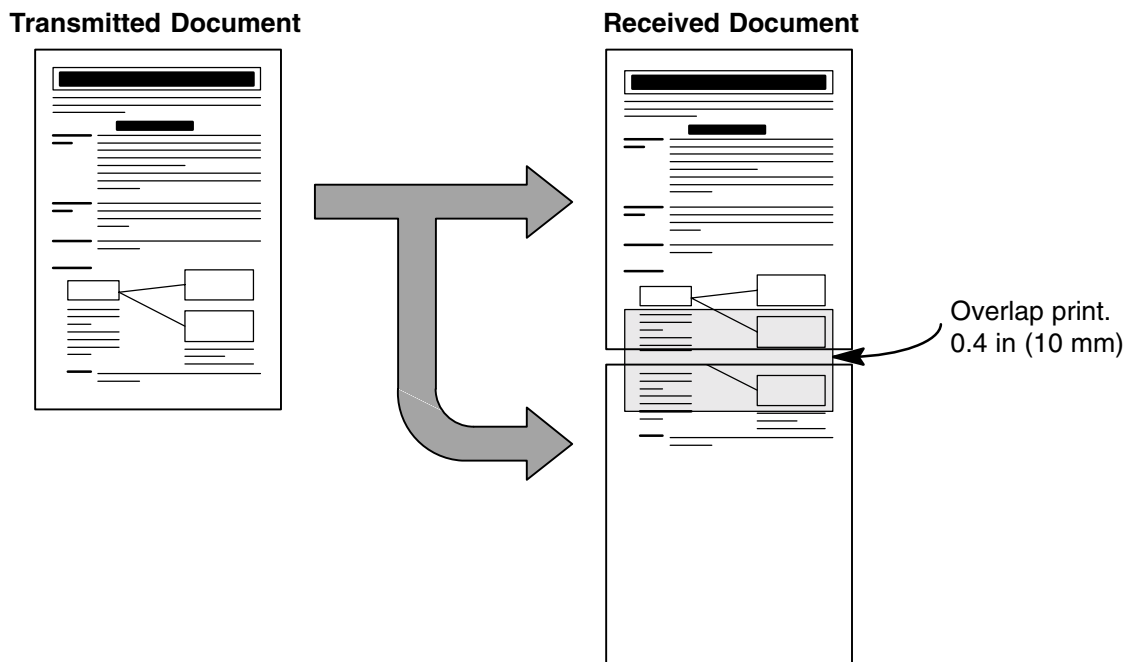

The receiving document is divided into two sheets with overlap printing.

NOTE

1. If the reduction method is set to the Automatic Reduction mode, the document is printed with no reduction when printing separate pages. If the reduction method is set to Fixed Reduction mode, the document is printed by the ratio you set in Fax Parameter No. 25. (See page 37)

Substitute Memory Reception

If the recording paper runs out, jams, or if the toner runs out during reception, the machine automatically starts receiving documents into its image data memory. Stored documents are printed automatically after clearing the jam, replacing the recording paper, or the toner cartridge. (See Note 1 and 2)

1 When the machine finishes the memory reception, and there is no recording paper or toner, an Information Code appears on the display.

NO RECORDING PAPER
INFO. CODE=010

2 Install the recording paper (See page 18), or replace the toner cartridge (See page 16).

OUT OF TONER
INFO. CODE=041


The machine will automatically start printing the document stored in the memory.

* PRINTING *
MEMORY RCV'D DOC

Print Collation Mode

The printing mechanism of the machine is a Reverse Order Stacking construction. The machine has Print Collation Mode that stacks received documents in the correct order. When the Print Collation Mode is enabled, all received documents are stored into memory first, then printed in Correct Order Stacking. The requirements for the Print Collation Mode to be active are: 1) Fax Parameter No. 65 (PRINT COLLATION) set to "Valid", and 2) enough remaining memory.

The unit will print in Reverse Order Stacking (Non-Collation Mode) whenever one of the above requirements is not met.

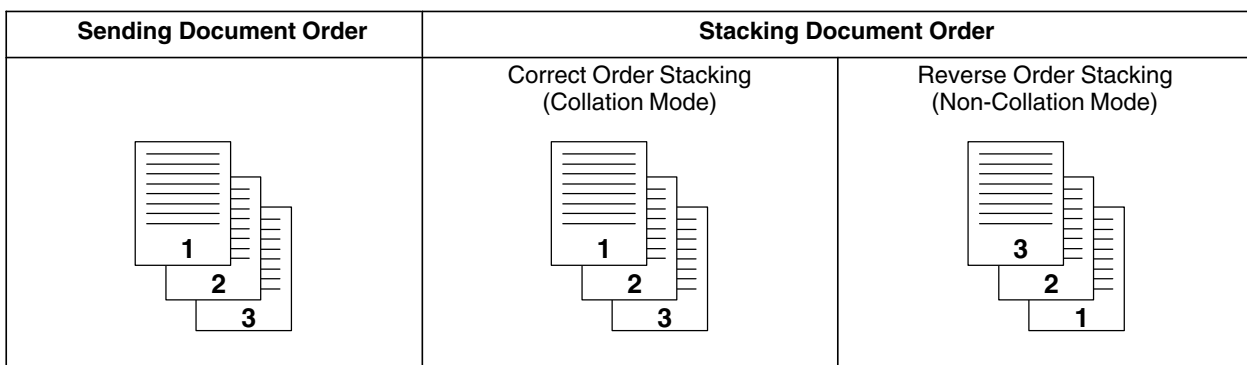

NOTE

1. If the memory overflows, the machine will stop receiving, and release the communication line. The document(s) stored in the memory up to that moment will print out.
2. If you wish to turn off the substitute reception function, change the setting of Fax Parameter No. 22 to "Invalid". (See page 37)

Making Copies

Your machine has a copy function which can make single, or multiple copies.

1

 


Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%

2

COPY / SET



COPY
NO. OF COPY=1


3

Enter the number of copies.

Ex: ① ⑩

COPY
NO. OF COPY=10

4

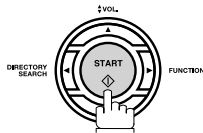



The machine stores the document, then prints the copies.

* STORE * NO.005
PAGES=001 01%

* COPY *
NO. OF COPY=01/10

NOTE

1. The copy is reduced automatically depending on the length of the original document. If you wish to be prompted for the reduction ratio when making copies, change the setting of Fax Parameter No. 32 (COPY REDUCTION) to "Manual". (See page 37)
If Copy Reduction is set to Manual, press  and  to set the zoom ratio in 1% steps. (100% to 70%)
2. If making a copy with Super Fine resolution, it will be reduced slightly even if the reduction ratio is set to 100% in order to fit the data on one page.
3. You can change the Contrast, and Resolution without Standard Resolution in Copy Mode.
4. If you experience a memory overflow error while making copies, you may turn "Off" the Memory XMT feature temporarily by pressing **FUNCTION** ⑧ ⑨ **SET** ①.
However, the printed copies will not be collated.

Timer Controlled Communications

General Description

You can send a document to one, or multiple stations at any preset time within the next 24 hours. Up to 10 built-in timers can be set for deferred transmission, and deferred polling.

Deferred Transmission


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

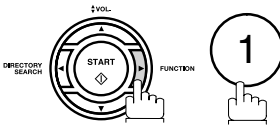

DEFERRED COMM. (1-2)
ENTER NO. OR ∨ ^

3

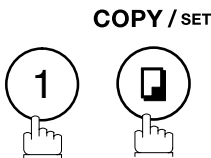

DEFERRED XMT
START TIME ■ :

4

Enter the start time from the keypad.
(Use a 4-digit, 24-hour clock)

 
Ex: ② ③ ③ ① (11:30 p.m.) and **SET**

ENTER STATION(S)
THEN PRESS START

5


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press **SET** after each station is entered (Up to 12 stations)
- Directory Search Dialing, press **SET** after each station is entered (For details, see pages 48 to 50.)



<01>(Station name)
5551234

6

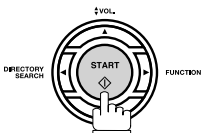

to store documents into the memory.

* STORE * NO.002
PAGES=001 05%

* STORE * COMPLETED
TOTAL PAGES=005 30%

NOTE


1. If you enter a wrong number in Step 4, press **CLEAR** then re-enter the right number.
2. To change, or cancel the Deferred Communication settings, see pages 84 and 86.
3. When reserving a deferred transmission without storing a document into memory, the following message will be shown on the display after pressing **START** in the last step.

DEF DIRECT XMT RSV'D
<01>(Station name)

Timer Controlled Communications


Deferred Polling

1

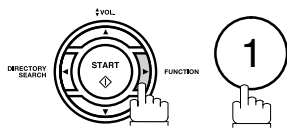

DEFERRED COMM. (1-2)
ENTER NO. OR ∨ ^

2

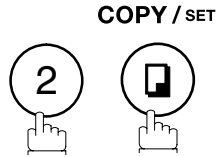

DEFERRED POLLING
START TIME ■ :

3

Enter the start time from the keypad.
(Use a 4-digit, 24-hour clock)

Ex: ③ ③ ③ ③ (3:30 a.m.) and

DEFERRED POLLING
PASSWORD=■■■■

4

Enter a 4-digit polling password.

 
Ex: ⑨ ⑧ ⑦ ⑥ and

ENTER STATION(S)
THEN PRESS START

5


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press after each station is entered (Up to 12 stations)
- Directory Search Dialing, press after each station is entered (For details, see pages 48 to 50.)



<01> (Station name)
5551234

6

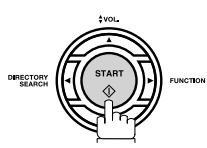

* STORE * NO.001

NOTE

1. If you enter a wrong number in Step 3, press , then re-enter the right number.
2. To change, or cancel the Deferred Communication settings, see pages 84 and 86.

Polling

General Description


Polling means calling other station(s) to retrieve a document. The other station must know in advance that you will call, and must have a document set on the ADF, or stored in the memory. You may need to set a polling password, shared by the other station, to ensure security.

Setting the Polling Password

If the polling password does not match with the polled station, your polling request will be refused automatically.


To set the polling password, follow the steps below.

1

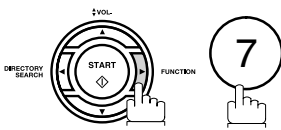


SET MODE (1-8)
ENTER NO. OR ∨ ^

2

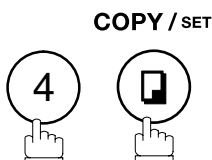

FAX PARAMETER (01-99)
NO. = ■

3

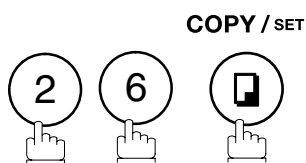

26 POLLING PASSWORD
■■■■


4

Enter a 4-digit polling password.

Ex: ① ② ③ ④

26 POLLING PASSWORD
1234

5

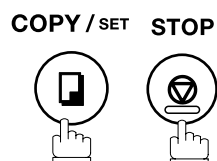

NOTE

1. Polling might not function with all fax machines. We suggest you attempt a trial polling before you actually poll important documents.
2. If a password is not set in the polled station, you may poll the other station even though your machine has a password.

Polling

Preparing to be Polled

In order to let other stations poll your machine, you must prepare your machine with a document stored in memory. Be sure to set the polling password before storing the document into memory. After being polled, the documents stored in the memory will be erased automatically. To retain the documents in memory so that they can be polled repeatedly change Fax Parameter No. 27 (POLLED FILE SAVE) to "Valid".


1



Set document(s) face down.

```
ENTER STATION(S)  
THEN PRESS START 00%
```

2

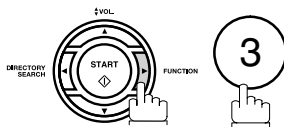

```
POLLING NO. =  
1: POLLING 2: POLLED
```

3



```
POLLED  
PASSWORD=1234
```


4

Enter a 4-digit polling password. (See Note 3)

Ex: ④ ③ ② ①

```
POLLED  
PASSWORD=4321
```

5

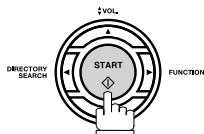

The document(s) will be stored into memory.

```
* STORE * NO.015  
PAGES=001 01%
```

```
* STORE * COMPLETED  
TOTAL PAGES=005 24%
```


NOTE

1. You can still send, or receive documents even when set to be polled.
2. Only 1 polled file can be stored in memory. If you need to add document(s) into the same polled file, see page 88.
3. If you have set the polling password in Fax Parameter No. 26, the password will appear on the display.
You can still change the password temporarily by overwriting it with a new one.

To Poll Documents from Another Station


The following procedure lets you poll a document from one, or multiple stations. Be sure to set the polling password before polling. (See page 73)

1

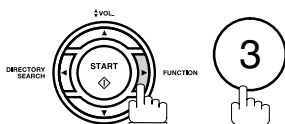

```
POLLING          NO. = █
1: POLLING 2: POLLED
```

 2



```
POLLING
PASSWORD=1234
```

3

 
Enter a 4-digit polling password. (See Note 2)

Ex: ① ① ① ①

```
POLLING
PASSWORD=1111
```

4

COPY / SET



```
ENTER STATION(S)
THEN PRESS START
```

5


Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press **SET** after each station is entered (Up to 12 stations)
- Directory Search Dialing, press **SET** after each station is entered (For details, see pages 48 to 50.)

Ex: 01

```
<01>(Station name)
5551234
```

6

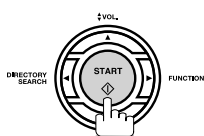

```
* STORE *      NO.001
```

NOTE

1. You can review the entered stations in step 5 by pressing **▼** or **▲** key, press **CLEAR** to erase the displayed station, or group as needed.
2. If you have set the polling password in Fax Parameter No. 26, the password will appear on the display.
You can still change the password temporarily by overwriting it with a new one.

Program Keys


General Description

Your fax machine has special Program Keys. These keys are useful if you frequently need to send, or poll the same group of stations. You can use these keys to store a One-Touch group key, a sequence of stations to be polled, a deferred transmission or polling sequence, or an additional One-Touch key.

Setting for Group Dialing


To set a Program Key for Group Dialing

1

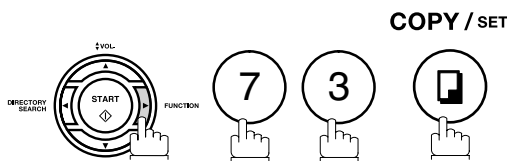


PROGRAM (1-4)
ENTER NO. OR ∨ ^

2

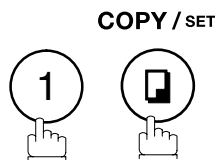

PROGRAM[P]
PRESS PROGRAM KEY

 3



PROGRAM[P1] NAME
ENTER NAME

4


Enter the program name (up to 15 characters) by using the Character keys. (See page 13)

Ex: PROG.A and

ENTER STATION(S)
THEN PRESS START

5

Enter the station numbers by using One-Touch Key, or and 3-digit code.

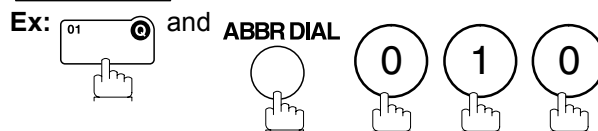


<01> (Station name)
5551234

[010] (Station name)
5553456

You may use the or keys to review the entered station(s) before going to next step. If you find an error, press to erase the displayed station.

6

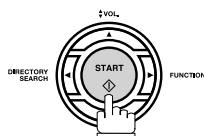

PROGRAM[P]
PRESS PROGRAM KEY


You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

.

Setting for Deferred Transmission


To set a Program Key for deferred transmission

1

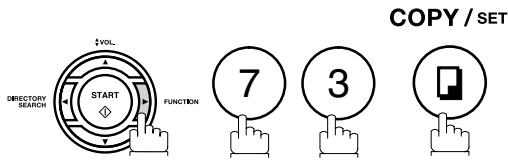


```
PROGRAM          (1-4)
ENTER NO. OR ∨ ^
```

2

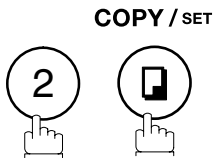

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

 3



```
PROGRAM[P1]     NAME
ENTER NAME
```


4

Enter the program name (up to 15 characters) by using the Character keys. (See page 13)

Ex: PROG.A and

```
PROGRAM[P1]
PRESS FUNCTION KEY
```

5

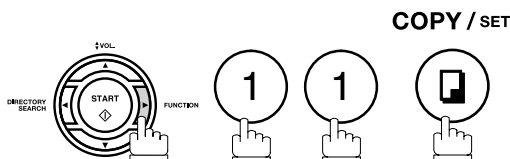

```
DEFERRED XMT
START TIME      ■ :
```

6

Enter the starting time using 4 digits.

 
Ex: ② ③ ③ ① (11:30 p.m.) and

```
ENTER STATION(S)
THEN PRESS START
```

7


Enter the station by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Directory Search Dialing, press after each station is entered (For details, see pages 48 to 50.)



```
<01>(Station name)
5551234
```

8

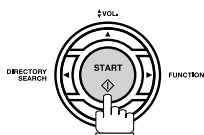

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing


.

Program Keys

Setting for Deferred Polling


To set a Program Key for deferred polling

1

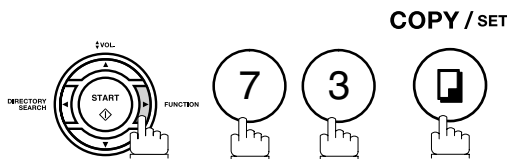


PROGRAM (1-4)
ENTER NO. OR ∨ ^

2

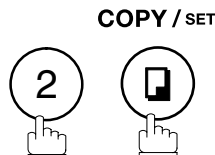

PROGRAM[P]
PRESS PROGRAM KEY

 3



PROGRAM [P1] NAME
ENTER NAME


4

Enter the program name (up to 15 characters) by using the Character keys. (See page 13)

Ex: PROG.A and

PROGRAM[P1]
PRESS FUNCTION KEY

5

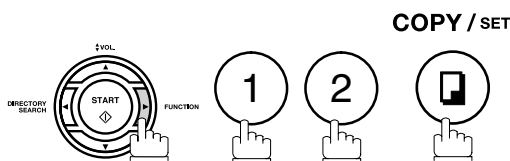

DEFERRED POLLING
START TIME ■ :

6

Enter the starting time.

Ex: (10:00 p.m.) and

DEFERRED POLLING
PASSWORD=■■■■

7

Enter a 4-digit polling password.

Ex: and

 
The polling password appears if it has been previously set.

ENTER STATION(S)
THEN PRESS START

8


Enter the station by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Directory Search Dialing, press after each station is entered (For details, see pages 48 to 50.)



<01>(Station name)
5551234

9

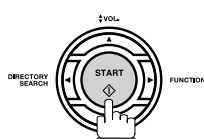

PROGRAM[P]
PRESS PROGRAM KEY


You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

.

Setting for Normal Polling


To set a Program Key for normal polling

1

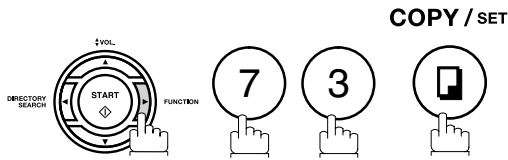


```
PROGRAM          (1-4)
ENTER NO. OR ∨ ^
```

2

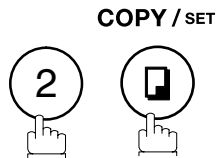

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

 3



```
PROGRAM [P1]    NAME
ENTER NAME
```


4

Enter the program name (up to 15 characters) by using the Character keys. (See page 13)

Ex: PROG.A and

```
PROGRAM [P1]
PRESS FUNCTION KEY
```

5

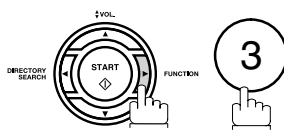

```
POLLING
PASSWORD=■■■■
```

6

Enter a 4-digit polling password.

Ex: and

 
The polling password appears if it has been previously set.

```
ENTER STATION(S)
THEN PRESS START
```

7


Enter the station by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Directory Search Dialing, press after each station is entered (For details, see pages 48 to 50.)



```
<01>(Station name)
5551234
```

8

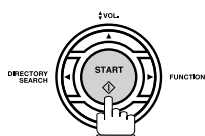

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing


.

Program Keys

Setting for One-Touch Key


To set a Program Key for One-Touch Key

1

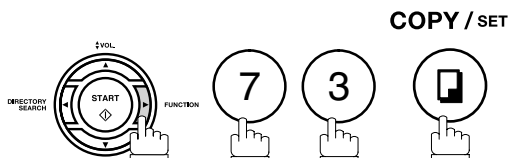


```
PROGRAM          (1-4)
ENTER NO. OR ∨ ^
```

2

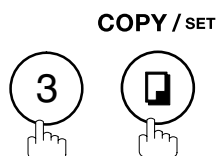

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

 3



```
PROGRAM[P1]      NAME
ENTER NAME
```

4

Enter the program name (up to 15 characters) by using the Character keys. (See page 13)

Ex: PROG.A and

```
[P1] PROG.A
ENTER TEL. NO.
```


5

Enter a telephone number (up to 36 digits including pauses and spaces).

Ex:

```
[P1] PROG.A
9-555 1234■
```

6

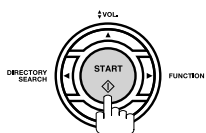

You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

.

```
PROGRAM[P ]
PRESS PROGRAM KEY
```



Changing or Erasing the Program Key Settings

To change the settings in a Program Key, follow the procedure on setting a Program Key on pages 76 to 80.

- Start time, or station(s) for deferred transmission
- Station(s) for normal polling
- Start time, or station(s) for deferred polling
- Station(s) for group dialing
- Telephone number, and station name for One-Touch key


To erase the settings in a Program Key

1

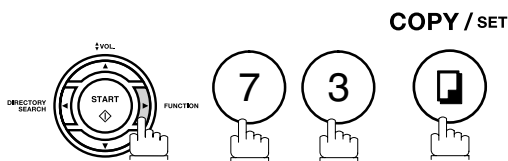

```
PROGRAM          (1-4)
ENTER NO. OR ∨ ^
```


2

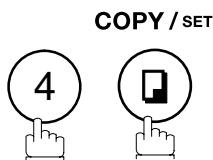

```
PROGRAM[P ]
PRESS PROGRAM KEY
```


3

 Press the Program key you want to erase.



```
PROGRAM[P1]
DELETE? 1:YES 2:NO
```

 4



```
* DELETING *
PROGRAM[P1]
```

5

You can now erase other Program Keys by repeating the procedures from Step 3, or return to standby by pressing

STOP.

```
PROGRAM[P ]
PRESS PROGRAM KEY
```

Edit File Mode

General Description


Your machine has a document image memory which enables you to reserve memory transmission, memory deferred transmission, memory polling and so on.

After reserving the communications in memory, you may need to change the settings of the communication(s) while it is still in memory. This section describes how to use the file editing features.

Printing a File List


The contents of the communication settings may have to be modified, or deleted. To verify the contents, follow the steps below to print a file list.

1

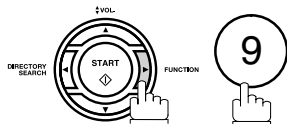

```
EDIT FILE MODE (1-6)
ENTER NO. OR V ^
```

 2



```
1:FILE LIST?
PRESS SET TO SELECT
```

3



```
FILE LIST
1:PRINT 2:VIEW
```

4



```
* PRINTING *
FILE LIST
```

Sample File List

```
***** -FILE LIST- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****
```

(1) FILE No.	(2) COMM. TYPE	(3) CREATED TIME	(4) START TIME	(5) PAGES	(6) DESTINATION(S)
001	DEFERRED XMT	MMM-dd 13:20	20:30		[001]
002	MEM. DEF. XMT	MMM-dd 13:20	22:30	003	[011] [012] [013] [016] [017]
					- PANASONIC -

```
***** -HEAD OFFICE - ***** 201 555 1212- *****
```


Explanation of Contents

- (1) File number If the file is now being executed, a "*" is indicated on the left of the file number.
- (2) Communication type
- (3) Stored date/time Date/time that these files were stored.
- (4) Executing time If the file is a Timer Controlled Communication, the start time is printed in this column.
If the file is an incomplete file, "INCOMP" is printed in this column.
- (5) Number of stored page(s)
- (6) Destination ABBR. No./One-Touch No./Manual Dialing No.

Viewing the Contents of a File List

To view the contents of a file list on the display without printing it, follow the steps below.

1

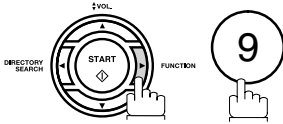

```
EDIT FILE MODE (1-6)
ENTER NO. OR V ^
```

2



```
1:FILE LIST?
PRESS SET TO SELECT
```

3

COPY / SET




```
FILE LIST
1:PRINT 2:VIEW
```

4



```
USE THE V ^ KEYS TO
SCROLL EACH FILE
```


5

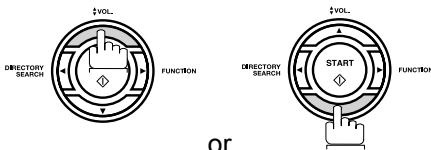

or

repeatedly until the

display shows a file you want to edit.

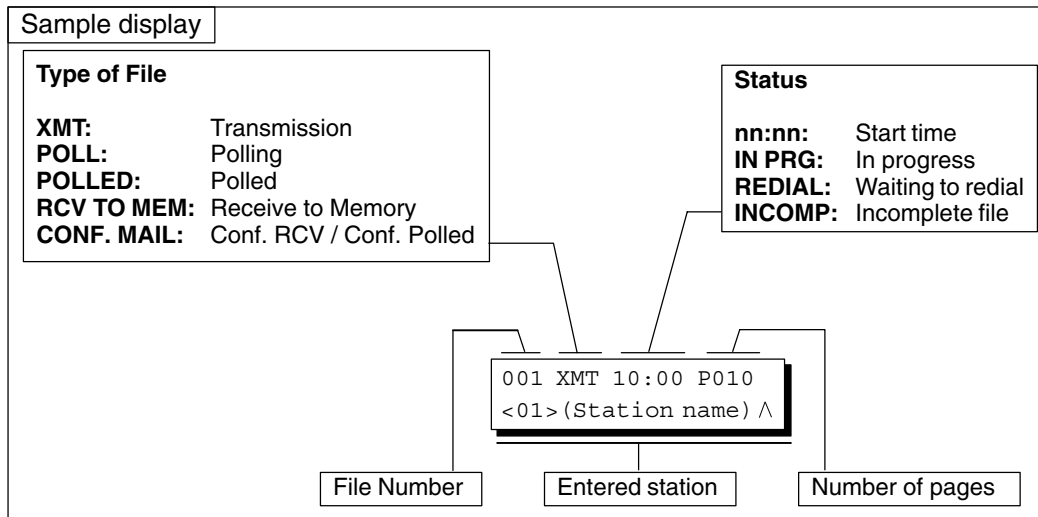

6

STOP




Edit File Mode

Changing the Start Time or the Station of a File


To change the start time, and/or stations in a communication file, follow the steps below.

1

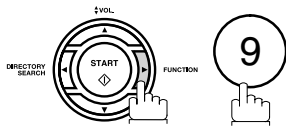

```
EDIT FILE MODE (1-6)
ENTER NO. OR V ^
```

2

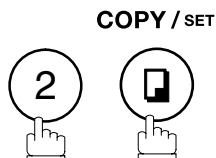

```
ENTER FILE NO. OR V ^
FILE NO. =■■■
```


3

Enter the file number, or use ▼ or ▲ to select the file that you want to change.

Ex: 0 0 1

```
ENTER FILE NO. OR V ^
FILE NO. =001
```

4

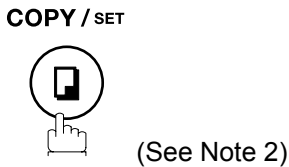

```
DEFERRED XMT
START TIME 22:30
```

5

Enter a new start time.

Ex: 0 6 0 0 (6:00 a.m.)

(If you do not have to change the time, skip to step 6.)

```
DEFERRED XMT
START TIME 06:00
```

6



```
<01>(Station name)
5551234
```

 
7

To delete the station(s), press ▼ or ▲ key until the station you want to delete appears. Then press CLEAR.

or

Enter the station(s) you want to add.


COPY / SET



```
ENTER STATION(S)
THEN PRESS START
```

```
1 STN(S) ARE SET
ADD MORE OR START
```

8

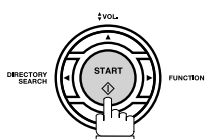

```
* STORE * NO.005
```

Changing the Start Time or the Station of a File

NOTE

1. Your machine cannot change the start time and/or stations in the file while it is being sent, or waiting to redial.
2. If the file is not a Deferred Communication File, the following message is shown on the display.

```
SET DEFERRED COMM. ?  
1: YES 2: NO
```

Press ① to change the type of the file for deferred communication file.

3. If editing an incomplete saved file, after pressing **START** in step 8, your machine will prompt you whether to execute the file immediately.
The display shows:

```
RETRY INCOMP. FILE?  
1: YES 2: NO
```


Press ① to execute the file immediately.

Edit File Mode

Deleting a File


To delete the file in memory, follow the steps below.

1

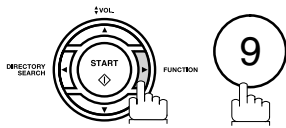

```
EDIT FILE MODE (1-6)
ENTER NO. OR V ^
```

2

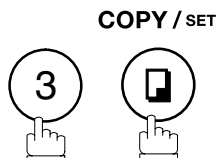

```
ENTER FILE NO. OR V ^
FILE NO. =■■■
```

3

Enter the file number, or use ▼ or ▲ to select the file that you want to delete.

Ex: ① ① ① (See Note 2)

```
ENTER FILE NO. OR V ^
FILE NO. =001
```

4



```
DELETE FILE NO.001?
1:YES 2:NO
```

5



Enter the next file number you want to delete, or press **STOP** to return to standby.

```
* DELETING *
FILE NO. =001
```

```
ENTER FILE NO. OR V ^
FILE NO. =■■■
```

NOTE

1. Your machine cannot delete the file while it is being sent.
2. Enter * * * as the file number, and press **SET** to delete all files (except when there is the file in progress).
The following message is shown on the display.


```
DELETE ALL FILES?
1:YES 2:NO
```

Press ① to delete all files.

Printing Out a File


To print the contents of the communication file, follow the steps below.

1

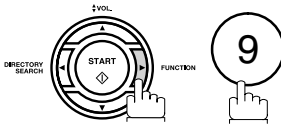

```
EDIT FILE MODE (1-6)
ENTER NO. OR ∨ ^
```

2

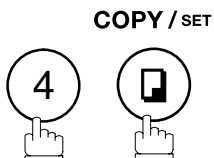

```
ENTER FILE NO. OR ∨ ^
FILE NO. =■■■
```


3

Enter the file number, or use ▼ or ▲ to select the file that you want to print.

Ex: 0 0 1

```
ENTER FILE NO. OR ∨ ^
FILE NO. =001
```

4

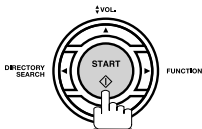

```
* PRINTING *
PAGE=001/003
```

Your machine will print the file. The document(s) will remain in memory even after printing the file.

NOTE

1. Your machine cannot print the file while it is being sent.

Edit File Mode

Adding Documents into a File

To add documents into the file, follow the steps below.


1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 05%


2

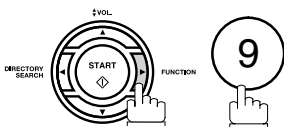

EDIT FILE MODE (1-6)
ENTER NO. OR ∨ ^

3

COPY / SET

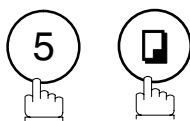


ENTER FILE NO. OR ∨ ^
FILE NO. =■■■

ENTER FILE NO. OR ∨ ^
FILE NO. =001

Enter the file number, or use ▼ or ▲ to select the file that you want to add.

Ex: ① ① ①

4

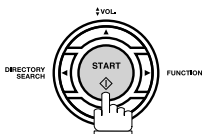

* STORE * NO.001
PAGES=002 10%

Your machine will start storing the document(s) into a file.

NOTE

1. Your machine cannot add the document into a file while it is being sent, or waiting to redial.


Retry an Incomplete File

If a memory communication has been unsuccessful due to a busy line or no answer, the document you stored is automatically erased from memory after the last redial.

If you need to retain the document in memory, even if the communication failed, change the setting of Fax Parameter No. 31 (INC. FILE SAVE) to Valid in advance. (See page 37)


To retry the incomplete file, print a File List first to verify the file number. (See page 82)
Then, follow the steps below.

1

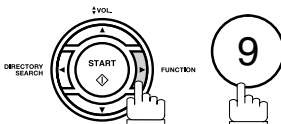

```
EDIT FILE MODE (1-6)
ENTER NO. OR ∨ ^
```

2

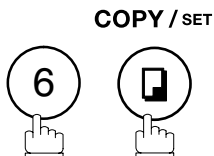

```
ENTER FILE NO. OR ∨ ^
FILE NO. =■■■
```


3

Enter the file number, or use ▼ or ▲ to select the file that you want to retry.

Ex: 0 0 1

```
ENTER FILE NO. OR ∨ ^
FILE NO. =001
```

4

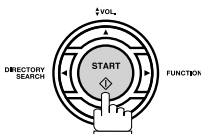

Your machine will retry the file and start dialing immediately.

```
* STORE *      NO.001
<01>(Station name)
```

```
* DIALING *    NO.001
(Station name)
```

NOTE

1. To confirm, or change the entered telephone number for the file, see pages 82 and 85.

Access Code


General Description

The Access Code prevents an unauthorized user from operating the machine. Once a 4-digit Access Code is registered, no one can operate the machine without entering the correct access code.

Automatic Receiving, however, is always available. After you complete any operation, such as mode setting or transmission, and the display returns to standby, you have to re-enter the access code in order to use the machine again. Registering the Access Code does not affect the use of the machine in any other way.


Setting the Access Code

1

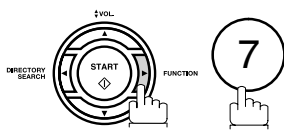


SET MODE (1-8)
ENTER NO. OR ∨ ^

2

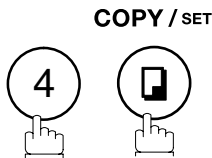

FAX PARAMETER (01-99)
NO. =■

3

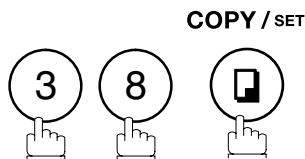

38 ACCESS CODE ■■■■

4

Enter a 4-digit Access Code.

Ex: ① ② ③ ④

38 ACCESS CODE
1234

5

COPY / SET



38 ACCESS CODE
1:ALL 1234

6

Select Restriction Level.

① for All operations

or

 
② for Setting and Printing the Fax Parameters only.

Ex: ②

38 ACCESS CODE
2:PARAMETERS 1234

7

COPY / SET STOP



NOTE


1. To erase the Access Code, enter the Access Code, and press **SET** and follow the procedure above to step 3, then press **CLEAR**, **SET**, and **STOP**.

Operating Your Machine with the Access Code (Restrict All Operations)

- 1** Enter the Access Code.
Ex: ① ② ③ ④

MMM-dd-yyyy 15:00
ACCESS CODE=■

MMM-dd-yyyy 15:00
ACCESS CODE=****


- 2** COPY / SET


MMM-dd-yyyy 15:00
00%


Now you can operate the machine normally.

Operating Your Machine with the Access Code (Restrict Access of Fax Parameters Only)

The machine can restrict the operation of setting/printing the Fax Parameters only.
EX: When setting the Fax Parameter.

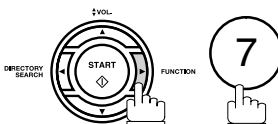- 1**  7


SET MODE (1-8)
ENTER NO. OR ∨ ^

- 2** COPY / SET
4 

INPUT ACCESS CODE
■■■■

- 3** Enter a 4-digit Access Code.
Ex: ① ② ③ ④

INPUT ACCESS CODE

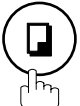- 4** COPY / SET


FAX PARAMETER (01-99)
NO. =■

Now you can operate the machine normally.


Receive To Memory

General Description

This feature is used to secure all received documents by storing them into the memory. To print the document from memory, the authorized operator must enter the correct password.


Setting the RCV To Memory Password

1

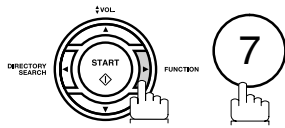


```
SET MODE      (1-8)
ENTER NO. OR ∨ ^
```

2

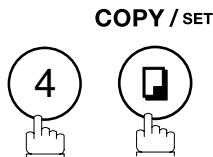

```
FAX PARAMETER (01-99)
NO. = ■
```

3

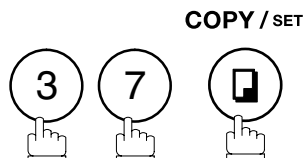

```
37 RCV TO MEMORY
■■■■
```


4

Enter a 4-digit RCV to Memory Password.

Ex: ① ② ③ ④


```
37 RCV TO MEMORY
1234
```

5

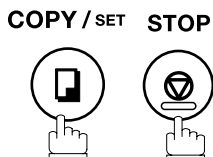


Setting RCV To Memory

1

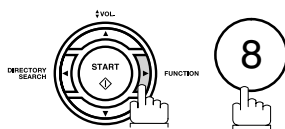

```
SELECT MODE  (1-9)
ENTER NO. OR ∨ ^
```

2

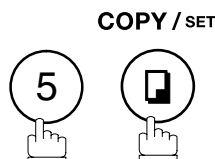

```
RCV TO MEMORY=OFF
1:OFF 2:ON 3:PRINT
```

3



```
RCV TO MEMORY=ON
1:OFF 2:ON 3:PRINT
```

4



```
MMM-dd-yyyy 15:00
< RCV TO MEMORY >
```

NOTE

1. When the memory overflows, the machine will stop receiving, and releases the line. The machine will not answer the next incoming call until there is space available in the memory.


Printing Out Documents

After receiving a document with the Receive To Memory feature, the following message will appear on the display.

```
MESSAGE IN MEMORY
< RCV TO MEMORY >
```


To print the document, follow the steps below.

1

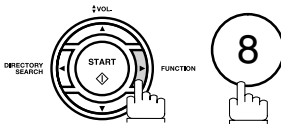

```
SELECT MODE (1-9)
ENTER NO. OR ∨ ^
```

2

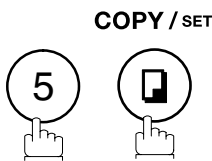

```
RCV TO MEMORY=ON
1:OFF 2:ON 3:PRINT
```

3



```
RCV TO MEMORY=PRINT
1:OFF 2:ON 3:PRINT
```

4



```
INPUT PASSWORD
```


5

Enter the password to print the documents.
(See Note 1)

Ex: ① ② ③ ④

```
INPUT PASSWORD
1234
```

6

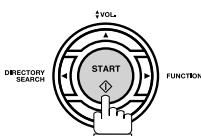

```
* PRINTING *
MEMORY RCV'D DOC
```

Machine will start to print the documents.

NOTE

1. If the password has not been set, your machine will not prompt you to enter the password.
2. The documents will print immediately after pressing **SET** in step 4.
3. Once the RCV TO MEMORY feature is set to "On", the password cannot be changed (Fax Parameter No. 37 will not be shown on the LCD display). If you wish to change the password, set RCV TO MEMORY feature to "Off" first. Then change the password. (See page 92)

Distinctive Ring Detector (DRD)

General Description

Your machine has a special feature in conjunction with an optional service provided by many local telephone companies. It can distinguish up to 4 telephone numbers with a corresponding ring pattern identifying each number. "DRD" lets you provide multiple phone numbers, one for your fax, business or personal use with only one single phone line.


Please check with your local telephone company on the availability of this service in your area.

Your machine can be programmed to respond to only 1 of the 4 distinctive ring patterns. To select the corresponding ring pattern for your fax number, refer to the Fax Parameter Table on page 38.

The following table shows a typical example with 4 telephone numbers on a single phone line

Telephone No.	Usage	Distinctive Ring Sound	Ring Pattern
555-1111	Business	Riiing.....Riiing.....	Type A, Standard Ring
555-2222	Fax	Ring...Ring.....Ring...Ring.....	Type B, Double Ring
555-3333	Personal	Ring...Ring...Riiing.....Ring...Ring...Riiing.....	Type C, Triple Ring (Short-Short-Long)
555-4444	Teenager	Ring...Riiing...Ring.....Ring...Riiing...Ring.....	Type D, Triple Ring (All other than type C)

The following illustration shows a typical set up, with your machine set to detect Type B (double ring) ring pattern.

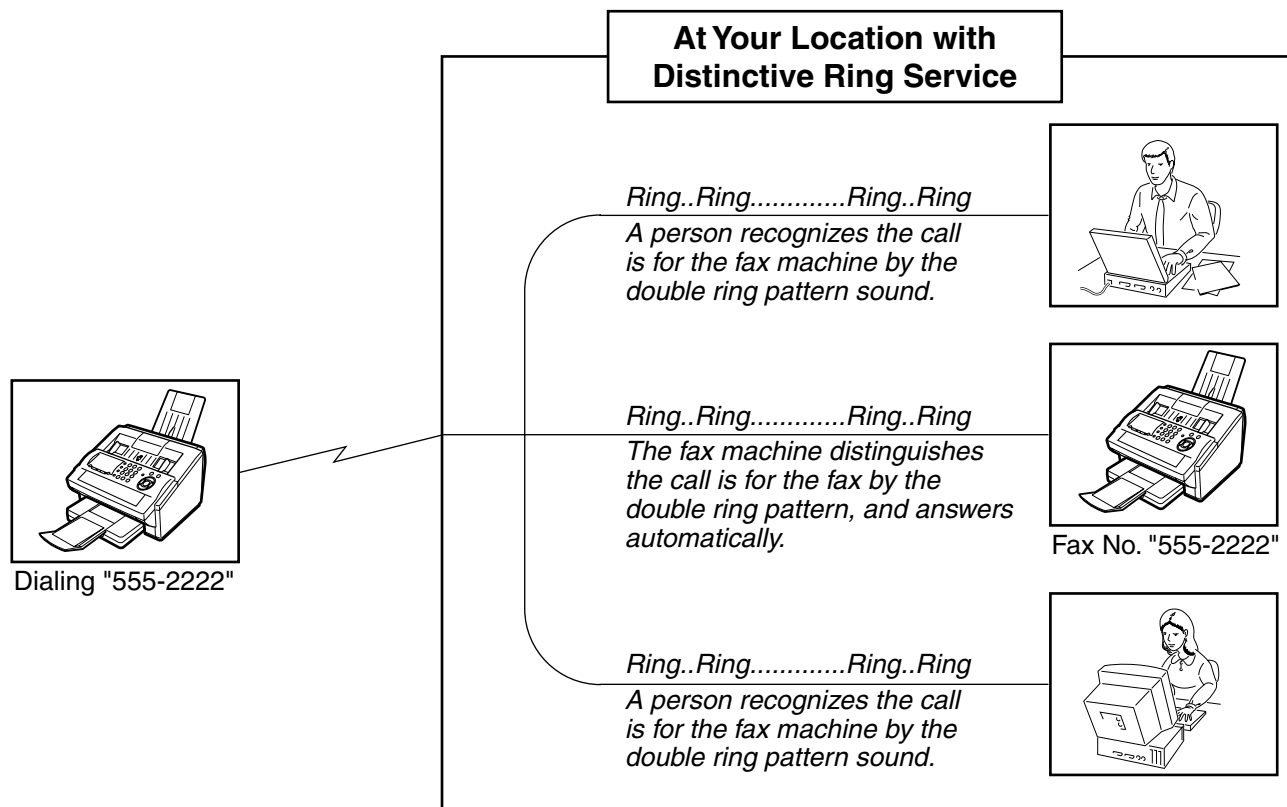


NOTE

1. "Riiing" means a long ringing sound, and "Ring" means a short ringing sound.

Fax Cover Sheet

General Description

A Fax Cover Sheet can be automatically attached to your transmit document(s) that shows the recipient's name, originator's name, and the number of pages attached.

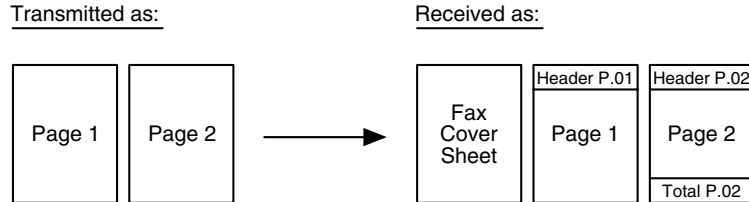

To Use the Fax Cover Sheet

To attach a Fax Cover Sheet to a transmission, follow the procedure below.


1



Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2

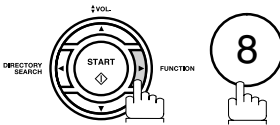

COPY / SET


SELECT MODE (1-9)
ENTER NO. OR ∨ ^

 3



COVER SHEET=OFF
1:OFF 2:ON

 4



for "OFF" (Cover Sheet is not attached)

COVER SHEET=OFF
1:OFF 2:ON

or

 


for "ON" (Cover Sheet is attached)

COVER SHEET=ON
1:OFF 2:ON

5


COPY / SET



6

Dial the station(s) you wish to send the documents to.

Ex:

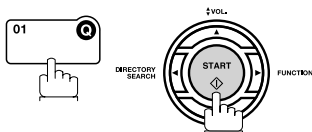

ENTER STATION(S)
THEN PRESS START 00%

NOTE

- To change the preset Fax Cover Sheet Setting, change the setting of Fax Parameter No. 56. (see page 39).
- This function is available for memory, or direct transmission modes.
- The Fax Cover Sheet is not counted in the number of pages column of the journals.

Fax Cover Sheet

To Use the Fax Cover Sheet

Fax Cover Sheet Sample

***** FACSIMILE COVER SHEET *****

(1)
MMM-dd-yyyy 15:00

(2)
Message To:

┌-----┐
│ SALES DEPT. │
└-----┘

(3)
Message From:

┌-----┐
│ PANASONIC │
│ 201 555 1212 │
└-----┘

(4)
02
Page(s)
Following This Cover Page

Explanation of Contents

- (1) Starting time of communication.
- (2) Recorded name in the One-Touch, ABBR. No., or dialed telephone number.
- (3) Your LOGO (up to 25 characters), and ID Number. (Up to 20 digits)
- (4) The number of pages to follow. This information is not shown when transmitting by Direct Transmission Mode.


PIN Code Access

General Description

If your PBX requires a PIN (Personal Identification Number) code to get an outside line, your machine can be set to prompt the user to enter a PIN code before any dialing.


Selecting the Access Method (Prefix or Suffix)

1

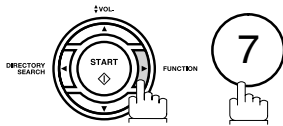


SET MODE (1-8)
ENTER NO. OR ∨ ^

2

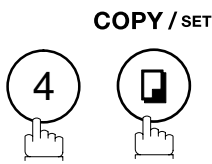


FAX PARAMETER (01-99)
NO. = ■

3

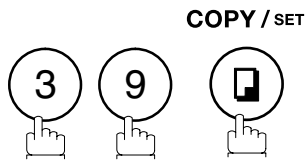

39 PIN CODE ACCESS
1:NONE

4

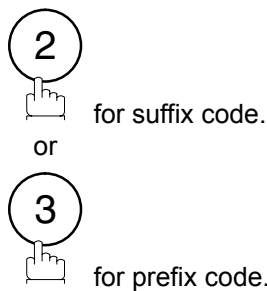


39 PIN CODE ACCESS
2:SUFFIX

or

39 PIN CODE ACCESS
3:PREFIX

5

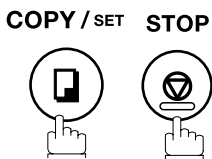

PIN Code Access

Dialing with a PIN Code

1



 
Set document(s) face down.

ENTER STATION(S)
THEN PRESS START 00%


2

Dial by any combination of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press **SET** after each station is entered (up to 12 stations)
- Directory Search Dialing, press **SET** after each station is entered (For details, see pages 48 to 50.)



ABBR DIAL

 


If you want to confirm the number of stations you have entered, press **SET**.

<01>(Station name)
5551234

[010] (Station name)
5553456

2 STN(S) ARE SET
ADD MORE OR START

3

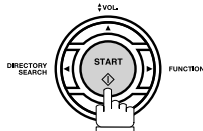


ENTER PIN CODE

4

Ex: **9** **8** **7** **6** (up to 36 digits)

ENTER PIN CODE
9876■

5

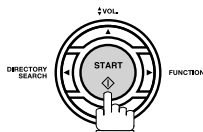

Your machine stores the document, and starts dialing the PIN code, and telephone number as you specified.

* STORE * NO.002
PAGES=001 05%

* DIALING * NO.002
(Station name)

NOTE

1. The PIN code is shown as " ■ " on the display when dialing the number.
2. This feature is not available when dialing a number by using Off-Hook, or On-Hook Direct Dialing mode.


Fax Forward

Setting Fax Forward

This feature allows all incoming faxes to be forwarded to the station registered in the one-touch, or abbreviated dialing number. Once the faxes are received in the memory, the machine will forward the received document(s) to the telephone number registered in the one-touch, or abbreviated dialing number.


This function is convenient when you would like to receive faxes in another place (i. e. your home) at night, or during a holiday.

1

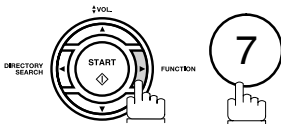


SET MODE (1-8)
ENTER NO. OR ∨ ^

2

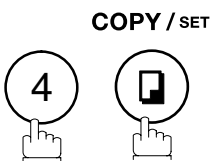

FAX PARAMETER (01-99)
NO. = ■

3

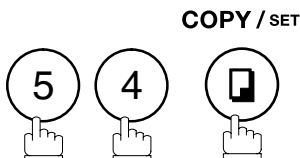

54 FAX FORWARD
1 : INVALID

4



54 FAX FORWARD
2 : VALID

 
5



54 FAX FORWARD
ENTER STATION


6

Enter the station to forward the received faxes to, by assigning a one-touch key, or an abbreviated dialing number.



<01>(Station name)
5551234

7

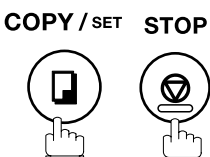

NOTE

1. When the Fax Forward feature is set, the one-touch, or the abbreviated dialing number is restricted from editing. Please change this function to "Invalid" when you would like to edit the telephone number.
2. If the communication to transfer a received document(s) fails, the received document will print, and then is erased from memory even if the Fax Parameter No. 31 (INC. FILE SAVE) is set to "Valid".
If you wish to save the document into memory in case of communication failure, set your machine to Receive To Memory. (See page 92)
3. It is not possible to receive a document if the memory of your machine overflows, or is about 95% used.






Selective Reception

General Description

Your machine has a special feature, Selective Reception, which can prevent the receiving of unnecessary documents (i.e. junk fax, direct mail, etc.).

Before receiving the document, the last 4 digits of the ID Number received from the sending machine will be compared with the last 4 digits of the telephone number programmed in each One-Touch, or Abbreviated station. When a match is found, your machine will start receiving the document. If a match is not found, your machine will cancel the reception, and an Information Code 406 will be recorded on the Journal.

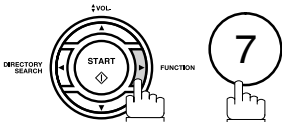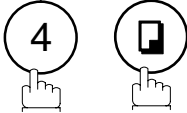Setting the Selective Reception.

1		<div style="border: 1px solid black; padding: 5px; width: fit-content;">SET MODE (1-8) ENTER NO. OR ∨ ^</div>
2	COPY / SET 	<div style="border: 1px solid black; padding: 5px; width: fit-content;">FAX PARAMETER (01-99) NO. =■</div>
3	COPY / SET 	<div style="border: 1px solid black; padding: 5px; width: fit-content;">46 SELECT RCV 1:INVALID</div>
4		<div style="border: 1px solid black; padding: 5px; width: fit-content;">46 SELECT RCV 2:VALID</div>
5	COPY / SET STOP 	

NOTE

1. When the Selective Reception is set, your machine can receive only from those stations which are programmed in the built-in auto-dialer.
2. If your ID number has not been set, your machine might not be able to receive from some models.
To set your ID number, see page 29.

Password Communications

General Description

Password Communications, including Password Transmission, and Password Reception will prevent your machine from sending a fax to a wrong station, or receiving a fax from an unauthorized stations. You can set Password Transmission, and Password Reception independently, or both together.

To use Password Transmission, you must set a 4-digit transmission password in advance. The password must be shared with other compatible Panafax machine(s). If the transmission password in your machine does not match the transmission password in the other compatible Panafax machine(s), the transmission will fail. You can select password transmission by setting Function 8-4 (PASSWORD-XMT) to "ON" when sending a document.

To use Password Reception, you must set a 4-digit receiving password in advance. The password must be shared with the other compatible Panafax machine(s). If the password in your machine does not match the receiving password in the other compatible Panafax machine(s), the reception will fail. Once you set password reception, and set the parameter to "ON", the setting will remain until it is changed to "OFF".

Compatibility with Other Machines

You can only use password transmission, and reception with another Panafax compatible machine(s) listed below.


- DF-1100
- DP-180
- DP-190
- DP-1810F
- DP-1820E
- DP-1820F
- DP-2000
- DP-2310
- DP-2330
- DP-2500
- DP-3000
- DP-3010
- DP-3030
- DP-3510
- DP-3520
- DP-3530
- DP-4510
- DP-4520
- DP-4530
- DP-6010
- DP-6020
- DP-6030
- DP-8020E
- DP-C213
- DP-C262
- DP-C263
- DP-C264
- DP-C322
- DP-C323
- DP-C354
- DX-600
- DX-800
- FP-D250F
- FP-D350F
- UF-160
- UF-160M
- UF-170
- UF-180
- UF-190
- UF-260
- UF-270
- UF-270M
- UF-280M
- UF-300
- UF-312
- UF-322
- UF-550
- UF-560
- UF-585
- UF-590
- UF-595
- UF-650
- UF-733
- UF-745
- UF-750
- UF-755e
- UF-750D
- UF-755
- UF-780
- UF-788
- UF-766
- UF-770
- UF-885
- UF-890
- UF-790
- UF-880
- UF-895
- UF-990
- UF-5950
- UF-6000
- UF-895
- UF-990
- UF-7950
- UF-8000
- UF-6950
- UF-7000
- UF-7950
- UF-8000
- UF-9000
- UF-M500

Password Communications

Setting Password Transmission


To set transmission password, and parameter,

1

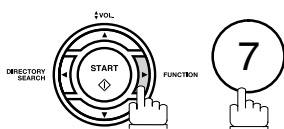


SET MODE (1-8)
ENTER NO. OR V ^

2

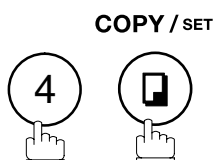

FAX PARAMETER (01-99)
NO. = ■

3

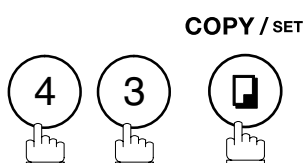


43 PASSWORD-XMT

4


Enter a 4-digit Transmission Password.
Ex: ① ② ③ ④ and press **SET**

43 PASSWORD-XMT
1: OFF 1234

5

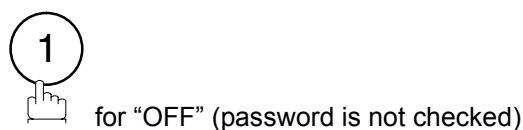

or

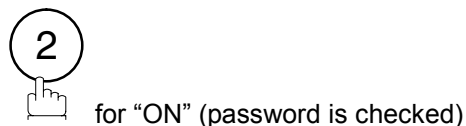


43 PASSWORD-XMT
1: OFF 1234

or

43 PASSWORD-XMT
2: ON 1234

6

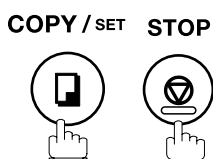


NOTE

- You can change the setting temporarily by using FUNCTION 8-4 (PASSWORD-XMT) for each transmission. See page 104 for details.
- To change the password, press **CLEAR** in step 4, then re-enter a new one.

Setting Password Reception


To set the receiving password, and parameter,

1

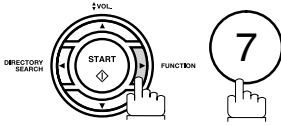


```
SET MODE          (1-8)
ENTER NO. OR ∨ ^
```

2

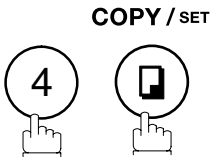

```
FAX PARAMETER (01-99)
NO. =■
```

3

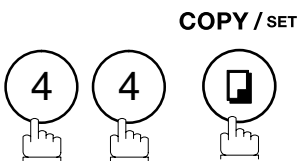

```
44 PASSWORD-RCV
■■■■
```

4

Enter a 4-digit Transmission Password.
Ex: ① ② ③ ④ and press **SET**

```
44 PASSWORD-RCV
1:OFF          1234
```

5


① for "OFF" (password is not checked)
or
② for "ON" (password is checked)

```
44 PASSWORD-RCV
1:OFF          1234
```

or

```
44 PASSWORD-RCV
2:ON           1234
```

6

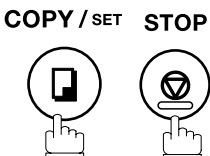

NOTE

- Once you set the parameter, you cannot select the parameter, "OFF" or "ON", for each reception. It is always "OFF" or "ON" until you change the setting.
- To change the password, press **CLEAR** in step 4, then re-enter a new one.

Password Communications

Using Password Transmission

To use Password Transmission, you can select PASSWORD-XMT "OFF", or "ON" for each Transmission by following the procedure below.


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

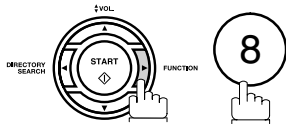


SELECT MODE (1-9)
ENTER NO. OR V ^

3

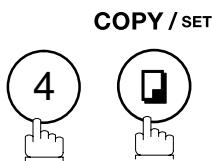

PASSWD-XMT=OFF
1:OFF 2:ON

4

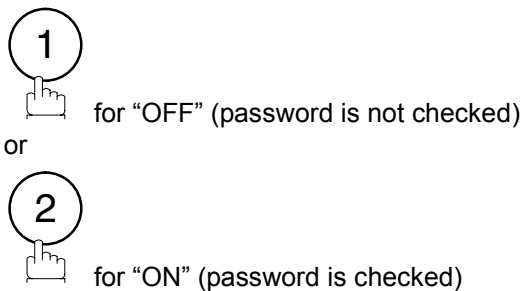

PASSWD-XMT=OFF
1:OFF 2:ON

or

PASSWD-XMT=ON
1:OFF 2:ON

5

 


ENTER STATION(S)
THEN PRESS START 00%

6

Dial by any combination of the following methods:


- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing, press **SET** after each station is entered (Up to 12 stations)
- Directory Search Dialing, press **SET** after each station is entered (For details, see page 48 to 50.)



<01>(Station name)
5551234

Using Password Transmission

1

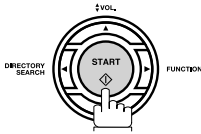

If your machine's Transmission Password coincides with the other station's Transmission Password, your machine starts sending the document.

When transmission is completed, PASSWORD-XMT returns to standard setting (**OFF** or **ON**).

Using Password Reception

There is no additional operation required once you set the parameter by following the procedure on page 103. The PASSWORD-XMT parameter (**OFF** or **ON**), cannot be selected for each individual reception. It remains as it was originally set (**OFF** or **ON**) until the setting is changed.


Confidential Mailbox

General Description

Your machine is equipped with two Confidential Communication features which ensure that the Confidential information you send is received only by the person with the correct confidential code.

Confidential Mailbox

The confidential mailbox feature can be used as a mailbox to communicate with other compatible models using a 4-digit confidential code. The Confidential Mailbox feature receives document(s) with a confidential code into memory. These documents can only be printed by the person who has the correct confidential code.

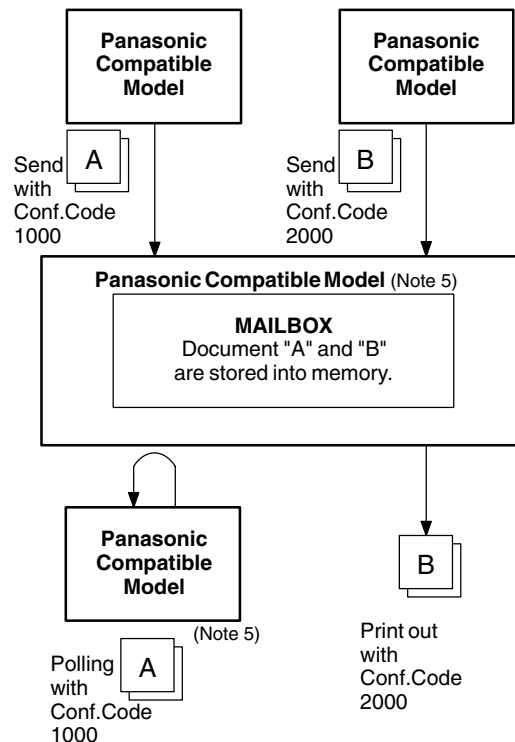

Compatibility with Other Machines

Table 1 shows a list of compatible Panafax models which have the Confidential Mailbox feature. It also shows whether special settings are required.

Table 1 : Confidential Mailbox Requirement

Compatible Model								Special Settings
DF-1100	DP-180	DP-190	DP-1810F	DP-1820F	DP-1820E	DP-2000	DP-2310	Not required.
DP-2330	DP-2500	DP-3000	DP-3010	DP-3030	DP-3510	DP-3520	DP-3530	
DP-4510	DP-4520	DP-4530	DP-6010	DP-6020	DP-6030	DP-8020E	DP-C213	
DP-C262	DP-C263	DP-C264	DP-C322	DP-C323	DP-C354			
DX-600	DX-800	UF-280M	UF-312	UF-322	UF-332	UF-333		
UF-342	UF-344	UF-550	UF-560	UF-585	UF-590	UF-595	UF-733	
UF-744	UF-745	UF-755	UF-755e	UF-766	UF-770	UF-780	UF-788	
UF-790	UF-880	UF-885	UF-890	UF-895	UF-990	UF-5100	UF-5950	
UF-6000	UF-6100	UF-6950	UF-7000	UF-7100	UF-7950	UF-8000	UF-8100	
UF-9000								

NOTE

1. If your machine receives two confidential faxes with same confidential code, both documents are stored together in the same confidential mailbox.
2. Up to 10 Mailbox files can be stored in memory. So, you can receive the confidential fax using 10 different confidential codes.
3. If the memory overflows, the machine will stop receiving, and release the line.
4. If confidential faxes were received in the mailbox of UF-733, you cannot poll those documents. The UF-733 is designed to print the received confidential document locally only.

Sending a Confidential Document to a Remote Station's Mailbox


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

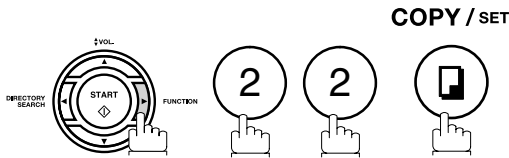

CONF. COMM. (1-5)
ENTER NO. OR ∨ ^

3

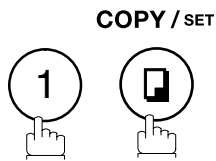

CONFIDENTIAL XMT
CONF. CODE=■■■■

4

Enter a 4-digit Confidential Code.

Ex: ② ② ③ ③

CONFIDENTIAL XMT
CONF. CODE=2233

5

 


ENTER STATION
THEN PRESS START

6


Dial by any one of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing
- Directory Search Dialing



<01>(Station name)
5551234

7

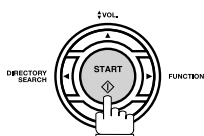


If necessary, inform the receiving person, and tell them the Confidential Code.

Confidential Mailbox

Polling a Confidential Document from a Remote Station's Mailbox


After you have been informed that someone has transmitted a confidential document to a remote station's mailbox, you can poll the confidential document from the remote station by following the procedure below.

1

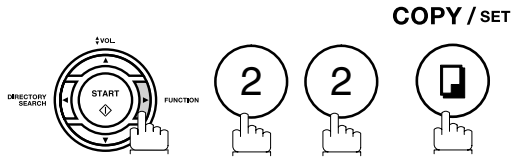

CONF. COMM. (1-5)
ENTER NO. OR V ^

2

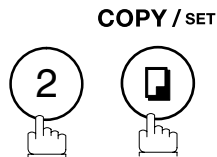

CONFIDENTIAL POLL
CONF. CODE=■■■■

3

Enter a 4-digit Confidential Code.

Ex: (2) (2) (3) (3)

CONFIDENTIAL POLL
CONF. CODE=2233

4

COPY / SET

 


ENTER STATION
THEN PRESS START

5


Dial by any one of the following methods:

- One-Touch Dialing
- Abbreviated Dialing
- Manual Number Dialing
- Directory Search Dialing



<01>(Station name)
5551234

6

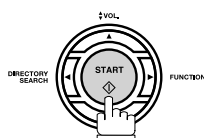

NOTE

1. The confidential file will be erased automatically at the center station after being polled.

Receiving a Confidential Document to Your Machine's Mailbox

No special setting is required, your machine comes with this feature ready to use. Your machine receives a confidential fax the same way it receives a normal fax message. When receiving the confidential fax, the display shows the following message (CONF. RCV REPORT), and prints the Confidential Receive Report.

MESSAGE IN MAIL BOX

Sample CONF. RCV Report

```

***** -CONF. RCV REPORT- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****

** NOTICE OF CONFIDENTIAL DOCUMENT HELD **

(1)          (2)          (3)          (4)
FILE NO.     RECEIVED FROM    PAGES        TIME RECEIVED

    040       PANAFAX          001          MMM-dd 15:00

                                - PANASONIC          -

***** -HEAD OFFICE - ***** - 201 555 1212- *****
    
```

Explanation of Contents

- | | |
|----------------------------------|-----------------------------|
| (1) File number | 001 to 999 |
| (2) Received remote station's ID | Character ID, or Numeric ID |
| (3) Number of pages received | |
| (4) Received date and time | |

NOTE

1. If your machine receives two confidential faxes with same confidential code, both documents are stored together in the same confidential mailbox.
2. Up to 10 Mailbox files can be stored in memory. So, you can receive the confidential fax using 10 different confidential codes.
3. If the memory overflows, the machine will stop receiving, and releases the line.
4. You can verify whether the unit has received a confidential fax by printing the File List. (See page 82)

Confidential Mailbox

Storing a Confidential Document in Your Machine's Mailbox

Use the following procedure to store a document in a confidential mailbox in your machine. Once the confidential document is stored in your machine, it can be polled by another machine.


1



Set document(s) face down.


ENTER STATION(S)
THEN PRESS START 00%

2

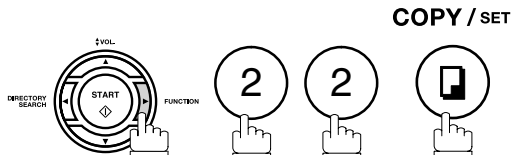

CONF. COMM. (1-5)
ENTER NO. OR V ^

3

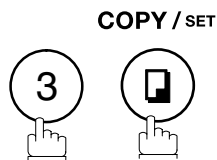

CONFIDENTIAL POLLED
CONF. CODE=■■■■


4

Enter a 4-digit Confidential Code.

Ex: ② ② ③ ③

CONFIDENTIAL POLLED
CONF. CODE=2233

5

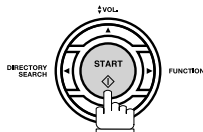

The document(s) will be stored into memory.
If necessary, inform the receiving party of the confidential document, and tell them the confidential code needed to poll the document.

* STORE * NO.002
PAGES=001 01%


NOTE

1. The confidential file will be erased automatically after being polled.
If you wish to retain the confidential file even after being polled, change the setting of Fax Parameter No. 42 (CONF. FILE SAVE) to "Valid".

Printing Out a Confidential Document from Your Machine's Mailbox


After you have been notified that someone has transmitted a confidential document to your machine's mailbox, use the following procedure to print the confidential document.

1

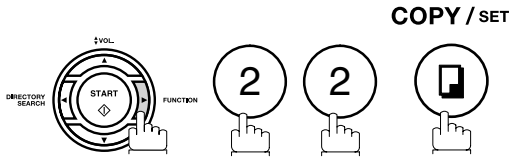

```
CONF. COMM.      (1-5)
ENTER NO. OR ∨ ^
```

2

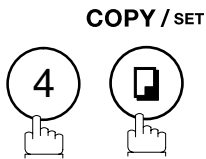

```
PRINT CONF. FILE
CONF. CODE=■■■■
```


3

Enter the Confidential Code of the document you want to print out.

Ex: ② ② ③ ③

```
PRINT CONF. FILE
CONF. CODE=2233
```

4

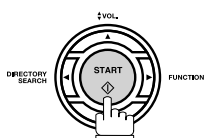

```
* PRINTING *
PAGE=001/001
```

The machine will print out the confidential documents.

NOTE

1. The confidential file will be erased automatically after being printed even if the setting of Fax Parameter No. 42 (CONF. FILE SAVE) is changed to "Valid".


Confidential Mailbox


Deleting a Confidential Document Stored in Your Machine's Mailbox

If your memory becomes full, or you just want to clean out your confidential documents, you may delete one, or more confidential faxes stored in your machine by using the following procedure.


There are two types of confidential file deletions, one is to delete the file individually by its Confidential Code, and the other is to delete all confidential files in memory.

To delete a file using Confidential Code

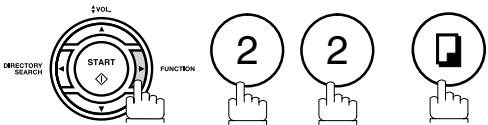1  **COPY / SET**

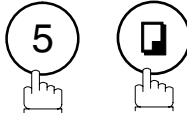2  **COPY / SET**

3 Enter a 4-digit Confidential Code.
Ex: ② ② ③ ③

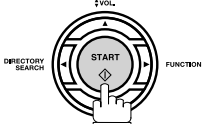4 


CONF. COMM. (1-5)
ENTER NO. OR ∨ ^


DELETE CONF. FILE
CONF. CODE=■■■■


DELETE CONF. FILE
CONF. CODE=2233


* DELETING *
CONF. CODE=2233

To delete all confidential files in memory

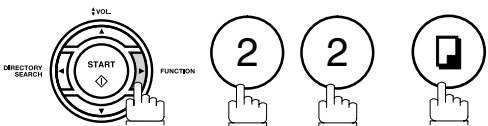1  **COPY / SET**

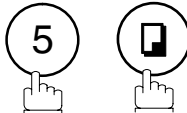2  **COPY / SET**

3  **COPY / SET**

4 

CONF. COMM. (1-5)
ENTER NO. OR ∨ ^

DELETE CONF. FILE
CONF. CODE=■■■■

DELETE ALL CONF.
FILES? 1: YES 2: NO


* DELETING *
ALL CONF. FILES

Sub-addressing

General Description

The Sub-Addressing function allows you further routing, forwarding or relaying of document(s) to the desired recipient(s) when used in combination with Panasonic Internet Fax capable models, and/or the Networking version of HydraFax/LaserFAX software. This function conforms to the ITU-T recommendation for T. Routing-Facsimile Routing utilizing the Sub-Address.

Example of a Network

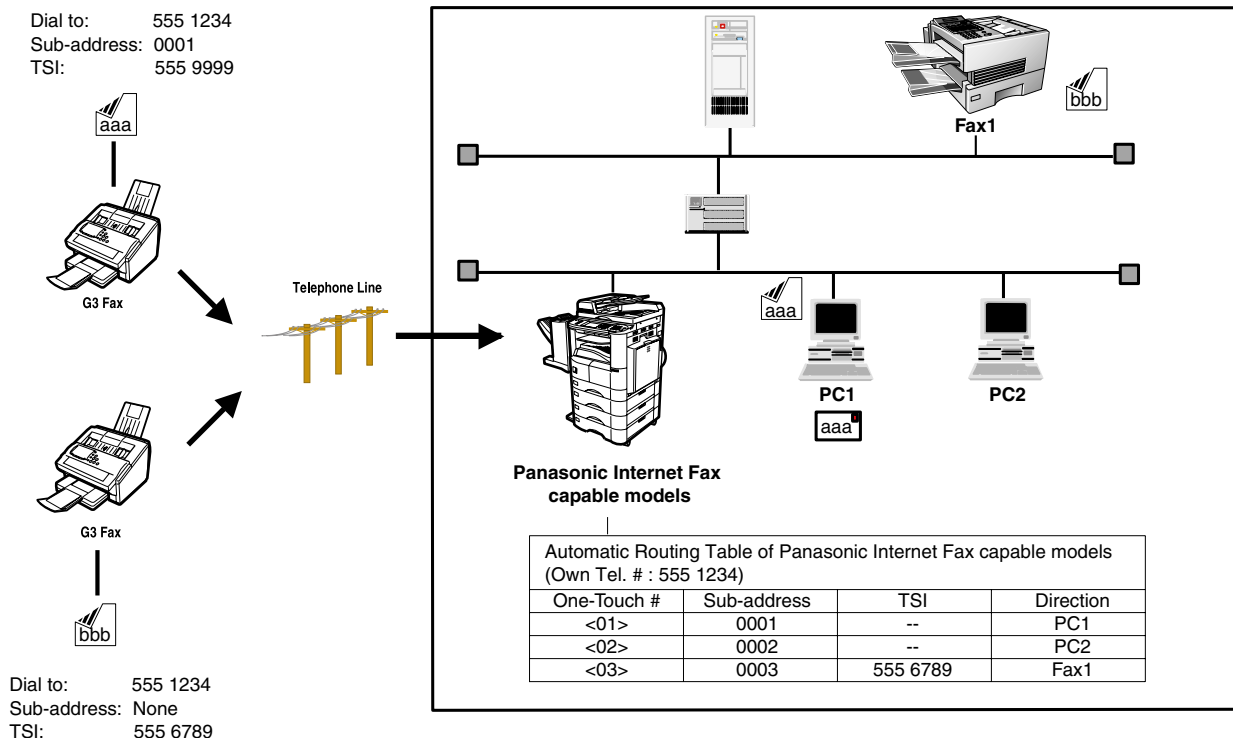

Compatibility with Other Machines

- Sub-Addressing Transmission: DF-1100/DP-135FP/150FP/150FX/190/1810F/1820E/1820P/2000/2310/2330/2500/3000/3010/3030/3510/3520/3530/4510/4520/4530/6010/6020/6030/8020E/C213/C263/C323/C264/C354/DX-600/800/1000/2000/FPD250F/D350F/UF-332/333/342/344/490/550/560/585/590/595/770/790/880/885/890/895/990/4000/4100/5100/5950/6000/6100/7000/7100/8000/8100/9000 (see note 1)
- Sub-Addressing Reception: DX-600/800/UF-7000/7100/8000/8100/9000 and DP-1810F/1820E/1820P/2000/2310/2330/2500/3000/3010/3030/3510/3520/3530/4510/4520/4530/6010/6020/6030/8020E/C213/C263/C323/C264/C354/ with Internet Fax.

Sub-addressing Transmission Methods

You can send a document with Sub-address information to the desired recipient by the following methods.

- By registering the Sub-address information into One-Touch/ABBR. Dialing Numbers.
- By specifying the Sub-address information in the Manual Number Dialing Mode.

Setting of Routing, Forwarding or Relaying

You can customize the Automatic Routing to any combination of LAN (Local Area Network), PSTN (Public Switched Telephone Network), or PBX Extension with Panasonic Internet Fax capable models.


NOTE

1. UF-788 with PC Interface Option, or the Option ROM installed.

Sub-addressing


To Set the Sub-address Into a One-Touch/ABBR. Dialing Numbers

1

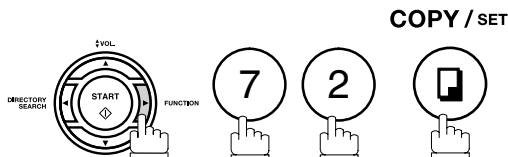


1: ONE-TOUCH
2: ABBR. NO.

2

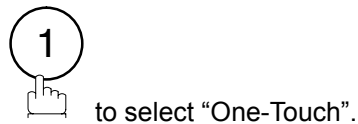


ONE-TOUCH< >
PRESS ONE-TCH OR ∨ ^

or

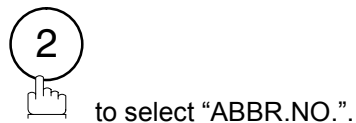

Ex: ①

 3



<01>
ENTER TEL. NO.

4

Enter the telephone number, press **FLASH** then enter the Sub-address. (Up to 20 digits)
(Up to 36 digits including telephone number, pauses, spaces, FLASH and Sub-address)

Ex: Telephone number = 5551234, Sub-address = 2762

 
Enter as: ⑤ ⑤ ⑤ ① ② ③ ④

FLASH ② ⑦ ⑥ ②

<01>
5551234s2762■

5

COPY / SET




Enter the station name.

Ex: SALES DEPT

<01> SALES DEPT■
5551234s2762

6

 COPY / SET STOP



NOTE

1. **FLASH** separates the Sub-address from the Telephone number, and is indicated by an "s" in the display.

To Send a Document with Sub-address

Using One-Touch/ABBR. Number Dialing

The operation is the same as for normal dialing

 
1



Set document(s) face down.


```
ENTER STATION(S)
THEN PRESS START 00%
```

2



```
<01>(Station name)
5551234s2762
```

3

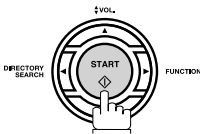

The document is stored into memory, and your machine starts to dial the number of the station, and sends the document(s) with Sub-addressing information.

```
* STORE *      NO.001
      PAGES=001 01%
```

Using Manual Number Dialing

Use **FLASH** to separate the Telephone number, and the Sub-address.

1



Set document(s) face down.

```
ENTER STATION(S)
THEN PRESS START 00%
```

2

Enter the telephone number, press **FLASH** then enter the Sub-address (up to 20 digits).
(Up to 36 digits including telephone number, pauses, spaces, FLASH and Sub-address)


Ex: Telephone number = 5551234, Sub-address =2762

Enter as: ⑤ ⑤ ⑤ ① ② ③ ④

FLASH ② ⑦ ⑥ ②

```
TEL. NO.
5551234s2762■
```

3

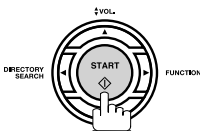

The document is stored into memory, and your machine starts to dial the number of the station, and sends the document(s) with Sub-addressing information.

```
* STORE *      NO.001
      PAGES=001 01%
```

NOTE

1. **FLASH** separates the Sub-address from the Telephone number, and is indicated by an "s" in the display.
2. Manual Off-Hook, or On-Hook Dialing cannot be used with the Sub-addressing Transmission.
3. The Sub-address is not transmitted during Manual Redial Mode.

Journals and Lists


General Description

To help you maintain records of the documents you sent and received, as well as lists of the numbers you record, your facsimile machine is equipped to print the following journals and lists: Transaction Journal, Individual Transmission Journal, Communication Journal, One-Touch/Abbreviated/Directory Search No. List, Program List, Fax Parameter List, Directory Sheet, and File List.

Transaction Journal


The "Journal" is a record of the last 32 transactions (a transaction is recorded each time you send or receive a document). It is automatically printed after every 32 transactions (See Note 1), or you can print or view it manually by using the following procedure:

1

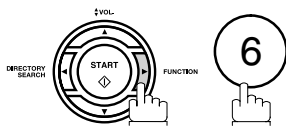

PRINT OUT (1-7)
ENTER NO. OR ∨ ^

2

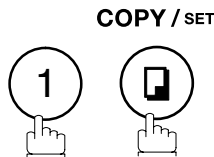

JOURNAL
1:PRINT 2:VIEW

3a

① To print a Journal

* PRINTING *
JOURNAL

3b

② To view a Journal

JOURNAL VIEW
1:XMT ONLY 2:ALL

4

Select the viewing mode.

- ① to view transmission transactions only
- ② to view all transactions

Ex: ②

You can view the transactions in the journal by pressing

▼ or ▲. Press **STOP** to return to standby.

USE THE ∨ ^ KEYS TO
SCROLL EACH RECORD

<p>Date & Time</p> <p>03/12 10:00 OK P01 XMT ☎ 5551234 ^</p>		<p>Communication Result</p> <p>OK : Communication was successful. P-OK : Reserved transmission was successful under memory full condition. R-OK : Confidential transmission was successful. BUSY : Line busy STOP : STOP was pressed. 3-digit Info Code : Communication has failed (Refer to page 132 for details.)</p>	
<p>Type of Communication</p> <p>XMT : Transmission RCV : Reception POL : Polling PLD : Polled FWD : Fax Forward RMT : Remote Diagnostic/ Firmware Update</p>	<p>Received ID, Recorded name or the dialed telephone number</p>	<p>Number of pages successfully transmitted or received.</p>	
		<p>Scroll Marker</p> <p>^ : Latest transaction ∨ : Oldest transaction ■ : Only 1 transaction</p>	


NOTE

1. If you wish to disable the automatic printing of the Transaction Journal, change the setting of Fax Parameter No. 13 to "Invalid". (See page 36)

Individual Transmission Journal (IND. XMT JOURNAL)

An Individual Transmission Journal contains the information on the latest transmission.

1

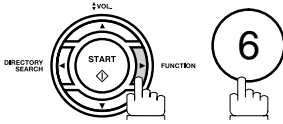


PRINT OUT (1-7)
ENTER NO. OR ∨ ^

2



6:IND. XMT JOURNAL?
PRESS SET TO PRINT

3

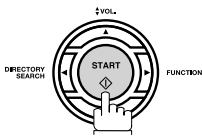

* PRINTING *
IND. XMT JOURNAL

Journals and Lists

Journal/Individual Transmission Journal

Sample Transaction Journal

***** -JOURNAL- *****											
							(1)	(2)			
							DATE	MMM-dd-yyyy	*****	TIME 15:00	*****
(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)		
NO.	COMM.	PAGES	FILE	DURATION	X/R	IDENTIFICATION	DATE	TIME	DIAGNOSTIC		
01	OK	005/005	001	00:00:22	XMT	SERVICE DEPT.	MMM-dd	17:35	C0044903C0000		
02	OK	003	002	00:01:17	RCV	111 222 333	MMM-dd	17:41	C0044903C0000		
03	OK	001	003	00:00:31	XMT	ACCOUNTING DEPT.	MMM-dd	17:50	C0044903C0000		
04	BUSY	000/005	004	00:00:00	XMT	☎ 342345676	MMM-dd	17:57	0800420000000		
05	STOP	000	005	00:00:34	XMT	☎ 12324567	MMM-dd	18:35	0210260200000		
06	OK	001/001	006	00:00:20	XMT	☎ 44567345	MMM-dd	18:44	C8044B03C0000		
07	408	*003	007	00:02:14	XMT	☎ 2345678	MMM-dd	18:55	0040440A30080		
31	OK	002/002	050	00:00:31	XMT	☎ 0245674533	MMM-dd	08:35	C8044B03C1000		
32	OK	003/003	051	00:01:32	XMT	☎ 0353678980	MMM-dd	08:57	C8044B03C1000		
							(13)				
							-PANASONIC				
							***** -HEAD OFFICE	- *****	201 555 1212-	*****	
							(15)				(14)

Sample Individual Transmission Journal (IND. XMT JOURNAL)

***** -IND. XMT JOURNAL- *****											
							(1)	(2)			
							DATE	MMM-dd-yyyy	*****	TIME 15:00	*****
(10)	(11)	DATE/TIME		=		MMM-dd-yyyy	09:00				
(3)	JOURNAL No.		=		21						
(4)	COMM. RESULT		=		OK						
(5)	PAGE(S)		=		001/001						
(7)	DURATION		=		00:00:16						
(6)	FILE No.		=		010						
(16)	MODE		=		MEMORY TRANSMISSION						
(17)	DESTINATION		=		[001] / 555 1234 /ABCDEFG						
(18)	RECEIVED ID		=								
(19)	RESOLUTION		=		STD						
							(13)				
							-PANASONIC				
							***** -HEAD OFFICE	- *****	201 555 1212-	*****	
							(15)				(14)

Journal/Individual Transmission Journal

Explanation of Contents

- | | |
|---|--|
| (1) Printout date | |
| (2) Printout time | |
| (3) Journal number | |
| (4) Communication result | <p>"OK" indicates that the communication was successful.
 "BUSY" indicates that the communication has failed because of busy line.
 "STOP" indicates that STOP was pressed during communication.
 "M-OK" indicates that the substitute reception message in memory did not print.
 "P-OK" indicates that memory overflow or document misfeeding occurred while storing the documents into memory for transmission but successfully stored document(s) was sent.
 "R-OK" indicates that the Confidential Communication was successful.
 "3-digit Info Code (See page 132) indicates that the communication has failed.</p> |
| (5) Number of pages transmitted or received | <p>The 3-digit number is the number of pages successfully transmitted or received. When the documents are stored into memory, two 3-digit numbers will appear. The first 3-digit number represents the number of pages successfully transmitted. The second 3-digit number represents the total number of pages that were attempted to be transmitted.
 Asterisk "*" indicates that the quality of some received copies was poor.</p> |
| (6) File number | 001 to 999 (If the communication is stored into memory, a file number is assigned for each communication.) |
| (7) Duration of communication | |
| (8) Type of communication | <p>"XMT" means Transmission
 "RCV" means Reception
 "POL" means Polling
 "PLD" means Polled
 "FWD" means Fax Forward
 "RMT" means Remote Diagnostic/Firmware Update</p> |
| (9) Remote station identification | <p>Name : Recorded name in One-Touch or ABBR. Numbers or remote station's Character ID.
 ☎ Number : Dialed telephone number
 Number : Remote station's ID number</p> |
| (10) Communication date | |
| (11) Communication Start time | |
| (12) Diagnostic | For service personnel only |
| (13) Own LOGO | Up to 25 characters |
| (14) Own ID number | Up to 20 digits |
| (15) Own Character ID | Up to 16 characters |
| (16) Type of communication | Direct Transmission, Memory Transmission, and so on |
| (17) Destination | <p>If a One-Touch or ABBR was used for the transmission:
 One-Touch or ABBR. No./Telephone Number/Recorded Name
 If not : Telephone number</p> |
| (18) Received remote station's ID | Character ID or ID Number |
| (19) Resolution | <p>"STD" means standard resolution
 "FINE" means fine resolution
 "S-FINE" means super fine resolution</p> |

Journals and Lists

Communication Journal (COMM. JOURNAL)

The Communication Journal (COMM. JOURNAL) lets you verify whether the transmission, or polling was successful. You may select the printout condition (Off/Always/Inc. only) in Function 8-1, or Fax Parameter No. 12.

Sample COMM. JOURNAL

```

***** -COMM. JOURNAL- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****

(1)                                (2)                                (3)
MODE = MEMORY TRANSMISSION        START=MMM-dd 14:50        END=MMM-dd 15:00

FILE NO.= 050 (4)

(5)  (6)  (7)  (8)                                (9)  (10)
STN  COMM. ONE-TOUCH/ STATION NAME/TEL NO.        PAGES  DURATION
NO.   ABBR NO.
001   OK   <01>   SERVICE DEPT.                    001/001  00:01:30
002   OK   <02>   SALES DEPT.                      001/001  00:01:25
003   407  <03>   ACCOUNTING DEPT.                 000/001  00:01:45
004   BUSY  ☎     021 111 1234                000/001  00:00:00

                                -PANASONIC
***** - HEAD OFFICE          - ***** - 201 555 1212 - *****

THE SLEREXE COMPANY LIMITED
SAPORS LANE . BOOLE . DORSET . BH 25 8 ER
TELEPHONE BOOLE (945 13) 51617 - TELEX 123456

Our Ref. 350/PJC/EAC                                18th January, 1972.

Dr. P.N. Cundall,
Mining Surveys Ltd

variations of print density can
cause the photocell to generate an analogous electrical video signal.
This signal is used to modulate a carrier, which is transmitted to a
remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video
signal, which is used to modulate the density of print produced by a
printing device. This device is scanning in a raster scan synchronised
with that at the transmitting terminal. As a result, a facsimile
copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

Phil.

P.J. CROSS
Group Leader - Facsimile Research
    
```


Communication Journal (COMM. JOURNAL)

Explanation of Contents


- | | |
|--|---|
| (1) Indication of communication mode | |
| (2) Start time of communication | |
| (3) End time of communication | |
| (4) File number | 001 to 999 (When the communication is stored into memory, a file number is assigned for each communication.) |
| (5) Station number | Sequential number of the Stations. |
| (6) Communication result | "OK" indicates that the communication was successful.
"BUSY" indicates that the communication has failed because of busy line.
"STOP" indicates that STOP was pressed during communication.
"M-OK" indicates that the substitute reception message in memory did not print.
"P-OK" indicates that memory overflow or document misfeeding occurred while storing the documents into memory for transmission but successfully stored document(s) was sent.
"R-OK" indicates that the Confidential Communication was successful.
"3-digit Info Code" (See page 132) Information Codes indicates that the communication has failed. In this case, the machine will print out the attached report with first page of your document as shown on the previous page. |
| (7) Abbreviated number, or ☎ mark | ☎ mark indicates dialed by direct number dial. |
| (8) Recorded name in One-Touch, ABBR. or direct dialing number | |
| (9) Number of pages transmitted or received | The 3-digit number is the number of pages successfully transmitted or received. When the documents are stored into memory, two 3-digit numbers will appear. The first 3-digit number represents the number of pages successfully transmitted. The second 3-digit number represents the total number of pages that were attempted to be transmitted. |
| (10) Duration of Communication | |

Journals and Lists

One-Touch/Abbreviated and Directory Search List

To print a One-Touch/Abbreviated Number, and Directory Search List of the telephone numbers you have stored.

1

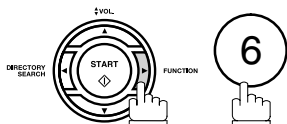

PRINT OUT (1-7)
ENTER NO. OR V ^

 
2



2:ONE-TCH/ABBR LIST?
PRESS SET TO PRINT

3

COPY / SET



1:ONE-TOUCH/ABBR NO.
2:DIR. SEARCH

4



for One-Touch/ABBR. Number List

* PRINTING *
ONE-TOUCH/ABBR LIST



for Directory Search List

* PRINTING *
DIR. SEARCH LIST

One-Touch/Abbreviated and Directory Search List

Sample One-Touch List

```
***** -ONE-TOUCH LIST- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****

      (1)      (2)      (3)
ONE-TOUCH  STATION NAME  TELEPHONE NO.

<01>      SERVICE DEPT.  121 555 1234
<02>      SALES DEPT.   222 666 2345
<03>      ACCOUNTING DEPT 313 333 3456

NO. OF STATIONS = 03 (4)

                                     -PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212- *****
```

Sample ABBR. Number List

```
***** -ABBR NO. LIST- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****

      (1)      (2)      (3)
ABBR NO.  STATION NAME  TELEPHONE NO.

[001]     ENG. DEPT.   888 555 1234
[002]     PURCHASE DEPT. 999 666 2345
[003]     REGULATION DEPT 777 333 3456

NO. OF STATIONS = 003 (4)

                                     -PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212- *****
```

Explanation of Contents

- (1) One-Touch number, or Abbreviated number : <nn>= One-Touch number, [nnn] = Abbreviated number
- (2) Station name recorded in the machine : Up to 15 characters
- (3) Telephone number recorded in the machine : Up to 36 digits
- (4) Number of recorded One-Touch and ABBR. numbers

Journals and Lists

One-Touch/Abbreviated and Directory Search List

Sample Directory Search List

```
***** -DIR. SEARCH LIST- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****

(5)  (2)          (1)          (3)
      STATION NAME  ABBR NO.  TELEPHONE NO.

[A]  ACCOUNTING DEPT <03>      313 333 3456
[E]  ENG. DEPT.      [001]      888 555 1234
[P]  PURCHASE DEPT  [002]      555 666 2345
[R]  REGULATION DEPT [003]      777 333 3456
[S]  SALES DEPT.    <01>      121 555 1234
      SERVICE DEPT  <02>      222 666 2345

      NO. OF STATIONS = 006 (4)

                                  -PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212 - *****
```


Explanation of Contents

- (1) One-Touch number, or Abbreviated number : <nn>= One-Touch number, [nnn] = Abbreviated number
- (2) Station name recorded in the machine : Up to 15 characters
- (3) Telephone number recorded in the machine : Up to 36 digits
- (4) Number of recorded One-Touch and ABBR. numbers
- (5) The first letter of station name recorded in your machine

Program List

To print a Program List of the Dialing Patterns that you have previously entered into the Program Keys.

1

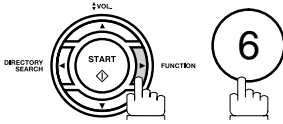

PRINT OUT (1-7)
ENTER NO. OR ∨ ^

2



3:PROGRAM LIST?
PRESS SET TO PRINT

3

COPY / SET



* PRINTING *
PROGRAM LIST

Sample Program List

```
***** -PROGRAM LIST- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****
(1)      (2)      (3)      (4)      (5)
PROGRAM  PROGRAM NAME  TYPE      TIMER     ABBR NOS.
[P1]     TIMER XMT      XMT       12:00     [001]
[P2]     TIMER POLL     POLL      19:00     [002]
[P3]     PROG. A       POLL      -----   [001] [002]
                                                - PANASONIC -
***** -HEAD OFFICE - ***** 201 555 1212- *****
```


Explanation of Contents

- (1) Program key
- (2) Program name Up to 15 characters
- (3) Type of communication "XMT" indicates transmission.
"POLL" indicates polling.
"ABBR/GRP" indicates that the Program key is programmed as a group key.
"ONE-TOUCH" indicates that the Program key is programmed as a One-Touch key.
- (4) Timer Indicates the starting time.
"----" indicates that the Program key contains "non-deferred" program.
- (5) Numbers recorded in the program One-Touch/ABBR. numbers

Journals and Lists

FAX Parameter List

1

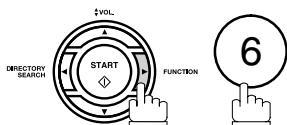

PRINT OUT (1-7)
ENTER NO. OR ∨ ^

 
2



4:FAX PARAM. LIST?
PRESS SET TO PRINT

3

COPY / SET



* PRINTING *
FAX PARAMETER LIST

Sample FAX Parameter List

```

***** -FAX PARAMETER LIST- ***** DATE MMM-dd-yyyy ***** TIME 15:00 *****

(1)      (2)      (3)      (4)      (5)
PARAMETER DESCRIPTION SELECTION CURRENT STANDARD
NUMBER                                     SETTING  SETTING

(7) 01  CONTRAST (HOME) (1:Normal  2:Lighter  3:Darker)    1          1
* 02  RESOLUTION (HOME) (1:Standard 2:Fine    3:S-Fine
                               4:Halftone (Fine) 5:Halftone (S-Fine)) 2          1

99  MEMORY SIZE                                     (8MB) (6)

                                           -PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212- *****
    
```


Explanation of Contents

- (1) Parameter number
- (2) Description : "(HOME)" means home position setting.
- (3) Selection
- (4) Current setting : "(-)" indicates code or password is not set. When the code or password is set, it is shown in parenthesis.
- (5) Standard setting : Factory preset standard setting
- (6) Memory size
- (7) Changed setting : "*" indicates that the Factory preset setting was changed.

Toner Cartridge Order Forms


To print the Toner Cartridge Order Forms

1

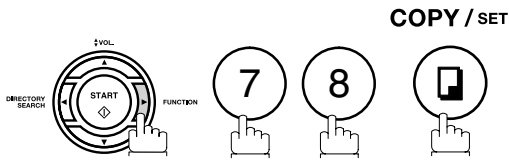

1: CLEAN ROLLER?
3: PRINT ORDER FORM?

2

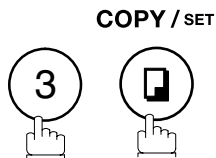

* PRINTING *
TONER ORDER FORM

Sample Toner Cartridge Order Form

> TONER CARTRIDGE ORDER FORM <

**** The toner supply in your machine is running low ****
To order a replacement Cartridge from your Authorized Dealer

by Phone:
by Fax:

Thank you for your order.

Customer Name and Address
=====

Ship to: _____ Bill to: _____

Attention: _____ Attention: _____

Phone No.: _____ Phone No.: _____

Customer ID: _____ P.O. No. (if required): _____

Toner Cartridge: UG-5515-AUC Serial No.: _____

Quantity Required:

Print your name and title

Signature & Date

Troubleshooting

If You Have Any of These Problems

Mode	Symptom	Cause / Action	Page
During Transmission	Document doesn't feed/multiple feed	1. Check that your document is free of staples, and paper clips, and that it is not greasy or torn.	40
		2. Check that your document is the right type to send through a fax machine by consulting the list on "Documents You Cannot Send". If your document has the characteristics listed, make a photocopy of your document, and send the copy instead.	41
	3. Check that the document is loaded properly.	139	
	4. Adjust the ADF Pressure.	139	
	Document jam	The Information Code 030 or 031 will appear on the display if the document becomes jammed.	136
	Does not stamp	1. Check if Stamp LED is lit. 2. Check Fax Parameter No. 04, and No. 28 settings.	43 36 37
	Stamp too light	Replace stamp.	140
Transmission Copy Quality	Vertical lines on the transmitted document	Check own copy quality. If copy is OK, your machine has no problem, report to the receiving party that they have a problem. If copy is NG, clean the Document Scanning Area.	137
	Transmitted document is blank	1. Make sure the document is set face down. 2. Check own copy quality. If copy is OK, your machine has no problem, report to the receiving party that they have a problem. If copy is NG, clean the Document Scanning Area.	137
During Reception	No recording paper	The Information Code 010 will appear on the display if the paper runs out.	18
	Recording paper jam	The Information Code 001, 002, 007, or 008 will appear on the display if the paper gets jammed.	135
	Recording paper doesn't advance into machine	Make sure that there is paper in the Paper Cassette. Follow the instructions for loading paper.	18
	Recording paper doesn't eject after printing	Check to see if the recording paper is jammed inside of the machine.	135
	Recording papers are not stacked in sequence. Machine does not print from the last page received.	Check if Fax Parameter No. 65 is set to "Valid".	39
	Document auto reduction doesn't work	Check Print Reduction settings.	67
	Out of toner	The Information Code 041 will appear on the display if the Toner Cartridge runs out of toner.	16

If You Have Any of These Problems

Mode	Symptom	Cause / Action	Page
Print Copy Quality	Vertical lines printing on the received document	Print a Journal report (e.g. FUNCTION, 6, 1, SET and 1), and check quality to make sure whether your machine has trouble. If Journal report quality is OK, your machine has no problem, report to the sending party that they have a problem. If copy is NG, replace the Toner Cartridge.	116 16
	Fuzzy print	1. Make sure you are using the correct paper for the best possible print quality. 2. Try reversing the recording paper to the other side.	145
	Missing dots, or lines/ inconsistent darkness within print	1. Make sure you are using the correct paper for the best possible print quality. 2. Replace the Toner Cartridge.	145 16
	Fading print	Your Toner Cartridge may be running out of toner. Replace the Toner Cartridge.	16
	Faint print	You may need to choose a different paper for the best possible print quality.	145
Communication	No dial tone	1. Check the connection of the telephone line. 2. Check the telephone line.	141
	No auto answer	1. Check the connection of the telephone line. 2. Check the Reception mode setting. 3. If the Fax Parameter No. 13 (AUTO JRNL PRINT) is set to "Valid" (default setting), and the machine is printing the received document from memory, which also happens to be the 32th transaction, the machine will not auto answer until the Transaction Journal completes printing.	141 62
	Cannot transmit or receive	An information code will be shown on the display. Refer to the information code table to find out the trouble.	132
No Unit Operation	No unit operation	To reset the machine, turn-off the Power Supply for a few seconds then turn it on again.	22

Troubleshooting

If You Have Any of These Problems

Mode	Symptom	Cause / Action	Page
TAM Interface Trouble in Unattended TAM I/F Mode (OUT Mode)	Cannot utilize the remote turn-on feature of the telephone answering machine (TAM). The fax machine always answers after the 8th ring.	This feature is not compatible. The fax machine is designed to answer after 8 rings if the TAM does not answer.	--
	Fax machine will not start up when the telephone answering machine is set to give only an outgoing message (OGM).	TAM that gives outgoing announcement only, is not compatible. The fax machine will work with a TAM that will record Incoming message (ICM).	--
	A beep...beep sound is recorded on the telephone answering machine.	Speak a little slower between each word while recording an outgoing message (OGM).	--
	Fax machine starts up in the middle of the outgoing message even though the caller wants to leave a voice message.	Make sure the outgoing message (OGM) does not have a silent pause longer than 5 seconds.	--
	Cannot record any incoming message (ICM). The fax machine always starts up at the end of the OGM, and before the tape advances to the end of last ICM. (Your TAM only uses a single cassette tape to give OGM and record ICM.)	Set Fax Parameter No. 20 (SILENT DETECTION) to "Invalid", and instruct the calling party to press (*) twice on their touch-tone phone during the OGM to start up your fax machine remotely.	37
	Cannot receive from a machine that does not send CNG signal (a short beep tone every 3 seconds) after dialing.	Set Fax Parameter No. 20 (SILENT DETECTION) to "Valid", or Instruct the calling party to press (*) twice on their touch-tone phone during the OGM to start up your fax machine remotely.	37
	Cannot retrieve message from the answering machine remotely, the fax machine always starts up after the command code is entered.	Set Fax Parameter No. 20 (SILENT DETECTION) to "Invalid".	37
	Cannot receive a fax message, but can record voice message.	Check your outgoing message, if it is too long, the calling fax machine may have timed out. Try to shorten your outgoing message to less than 15 seconds, or ask the calling party to program your telephone number in their fax machine with 3 pauses, and a "#" at the end. (ex. 5551212 PAUSE PAUSE PAUSE #)	--

If You Have Any of These Problems

Mode	Symptom	Cause / Action	Page
TAM Interface Trouble In Unattended Fax Mode (OUT Mode)	Fax machine will not start to receive with the telephone answering machine in the auto-answer mode.	Increase the ring count for detection on the telephone answering machine.	--

Troubleshooting

Information Codes

When something unusual occurs, the display may show one of the Information Codes listed below. These will help you to identify and correct the problem.

Info. Code	Meaning	Action	Page
001	Recording paper jammed when feeding from the 1st cassette.	Remove the jammed paper.	135
002	Recording paper jammed when feeding from the 2nd cassette.	Remove the jammed paper.	135
007	Recording paper did not completely exit out of machine.	Remove the Toner Cartridge and remove the jammed paper.	135
008	Paper cassette is opened while paper is feeding.	Remove the jammed paper and close the cassette.	135
010	No recording paper.	Load the recording paper.	18
011	Recording Paper Cassette is not loaded properly.	Install the Recording Paper Cassette.	--
017	Incorrect paper size loaded in the Paper Cassette.	Load the Paper Cassette with proper paper size (A4, LTR or LGL).	20 21
030	Document is misfeeding.	1. Reload the document properly. 2. Remove the document jam. 3. Adjust ADF.	41 136 139
031	Document paper is too long, or it is jammed. Document length exceeds 78.8 inches (2 meters).	1. Reload the document properly. 2. Remove the document jam.	41 136
041	Out of toner.	Replace the Toner Cartridge.	16
043	Toner is getting low.		
045	Toner Cartridge is not installed.	Install the Toner Cartridge.	16
060	Printer Cover is open.	Close the Printer Cover.	--
061	ADF Door is open.	Close the ADF Door.	--
400	During initial handshake, receiving station did not respond, or communication error occurred.	1. Check with the other party. 2. Reload the document and send again.	--
401	Remote station required a Receiving Password to receive the document. Remote station does not have Confidential Mailbox. Remote station requires the sending unit's ID Number. (Fax Telephone Number)	Check the remote station. Program your ID Number (Fax Telephone Number). (See page 29)	--
402	During initial handshake, communication error occurred.	Reload the document, and send again.	--
403	No polling capability at the remote side.	Ask remote side to set "POLLED=ON".	--
404/405	During initial handshake, communication error occurred.	Reload the document, and send again.	--
406	Transmission Password does not match. Receiving Password does not match. Received from an unauthorized station in Selective Reception mode.	Check the password, or the telephone number in One-Touch, or Abbreviated station.	100 102 103
407	No confirmation from the receiving station for the previous page sent.	Wait a few minutes, and send again.	--
408/409	Remote side confirmation of previous page is illegible.	Wait a few minutes, and send again.	--
410	Communication aborted by the transmitting side.	Check with the other party.	--
411	Polling password does not match.	Check the polling password.	73

Information Codes

Info. Code	Meaning	Action	Page
412	No data from the transmitting side.	Check with the other party.	--
414/504	Polling password does not match.	Check the polling password.	73
415/505	Polling transmission error.	Check the polling password.	73
416/417 418	Received data has too many errors.	Check with the other party.	--
420/421	Machine goes to receiving mode, but receives no command from the transmitting side.	1. Remote side misdial. 2. Check with the other party.	--
422/427	Interface is incompatible.	Check with the other party.	--
434	Communication error occurred while receiving.	Check with the other party.	--
436/490	Received data has too many errors.	Check with the other party.	--
456	<ul style="list-style-type: none"> • Unit received a confidential document, or was requested to be polled of a confidential document under any of following conditions. 1. Not enough space in memory to receive the confidential document. 2. Confidential Mailbox is full. 3. While printing received document. • Unit was requested to relay a document. 	1. Print a File List, and check the contents. 2. Wait until unit finishes printing.	82
490	(See Info. Code 436 above)		--
493/494	Communication error occurred while receiving.	Check with the other party.	--
495	Telephone line disconnected.	Check with the other party.	--
501/502	Communication error occurred using the internal V.34 Modem.	Check with the other party.	--
504	(See Info. Code 414 above)		--
505	(See Info. Code 415 above)		--
540/541 542/543 544	Communication error occurred while transmitting.	1. Reload the document and send again. 2. Check with the other party.	--
550	Telephone line disconnected.	Check with the other party.	--
553/554 555	Communication error occurred while receiving.	Check with the other party.	--
580	Sub-address transmission to a unit that has no Sub-address function.	Check the remote station.	113
581	Sub-address Password transmission to a unit that has no Password Sub-address function.	Check the remote station.	113
623	No document loaded on the ADF.	Reload the document and, send again.	--
630	Redial was not successful due to a busy line.	Reload the document and, send again.	--
631	During dialing, STOP was pressed.	Reload the document and, send again.	--
634	Redial was not successful due to no response from the called station, or wrong number dialed. Note: If busy tone was not detected, the machine will only redial once.	Check the telephone number and, send again.	--
638	Power failure occurred during the communication.	Check the power cord, and plug.	22
800/816 825	Unit was requested to relay a document, or Confidential Communication but has no capability.	Check with the other party.	--

Troubleshooting

Information Codes

Info. Code	Meaning	Action	Page
815	Mailbox is full.	Delete a Confidential Mailbox.	112
870	Memory overflow occurred while storing documents into memory for transmission.	Transmit documents without storing into memory.	52

NOTE


1. After identifying the problem, and verifying the recommended action, if the information Codes keep reoccurring or for help on Information Codes that appear on your machine but are not listed above, please contact your local Panasonic Authorized Dealer.

Clearing a Recording Paper Jam

If the recording paper becomes jammed in the machine, the display will show an Information Code 001, 002, 007, or 008.

To clear the jam, Info. Code 001, 002, or 008


1

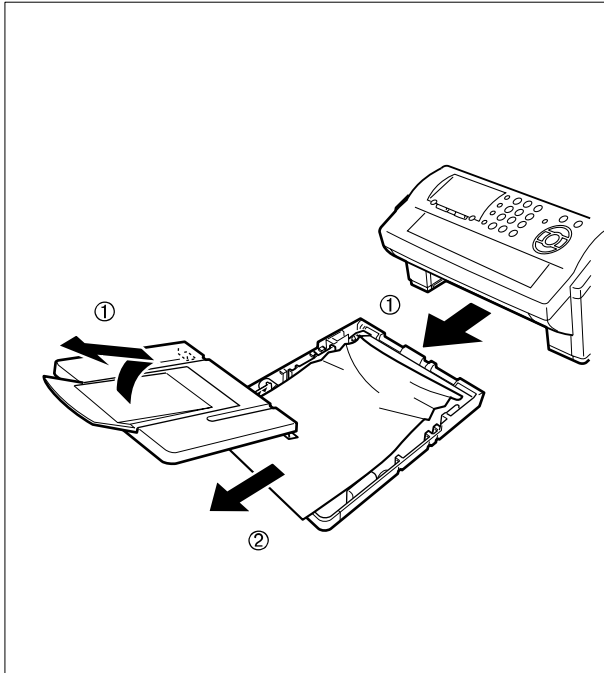

- (1) Slide the Paper Cassette out, and remove the Paper Cassette Cover.
- (2) Remove the jammed, or wrinkled paper and reload the recording paper into the paper cassette.

To clear the jam, Info. Code 007

1

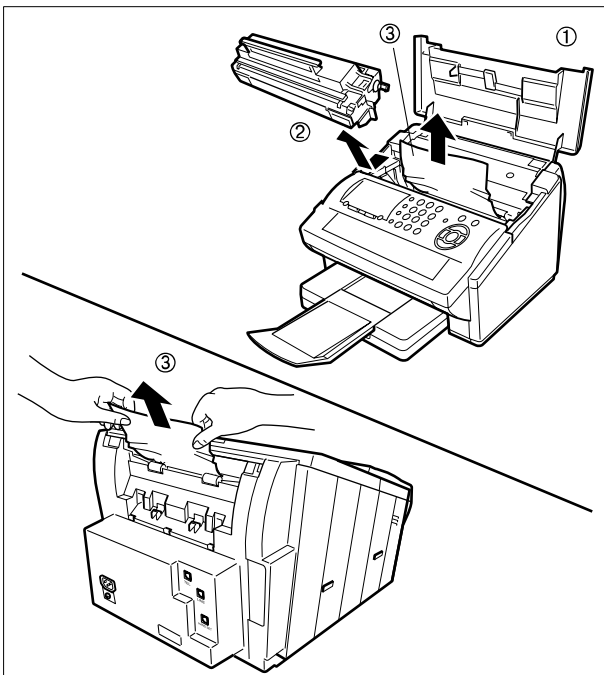

- (1) Open the Printer Cover.
- (2) Remove the Toner Cartridge.
- (3) Remove the jammed paper.

Note: 1 If at all possible, try removing the jammed paper from inside of the unit first (as shown in the upper figure) to prevent toner that has not been fused on the paper from rubbing off, and dirtying the Fuser Roller.

- 2 To remove the jammed paper from the rear of the unit (as shown in the lower figure), remove the Recording Paper Tray Assembly first, and gently pull the jammed paper straight out; taking care not to tear it.

NOTE

1. The Recording Paper Jam message display is reset only by opening, and closing of the Printer Cover.


Troubleshooting

Clearing a Document Jam

If a document becomes jammed in the machine, the display will show the Information Code 030, or 031.

To clear the Document Jam

1

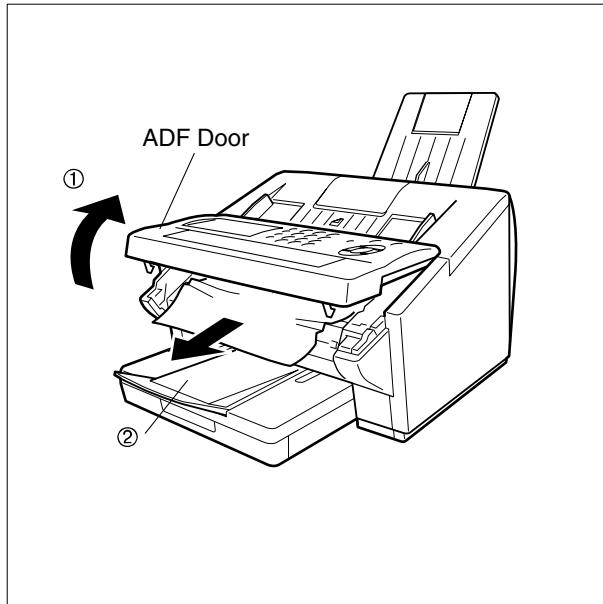

(1) Open the ADF Door.


(2) Remove the jammed document.

Cleaning the Document Scanning Area

If the receiving party reports that the received documents were black, or contained black lines, try making a copy on your unit to verify. If the copy is black or has black lines, the document Scanning Area is probably dirty, and must be cleaned.


To clean the Scanning Area

1

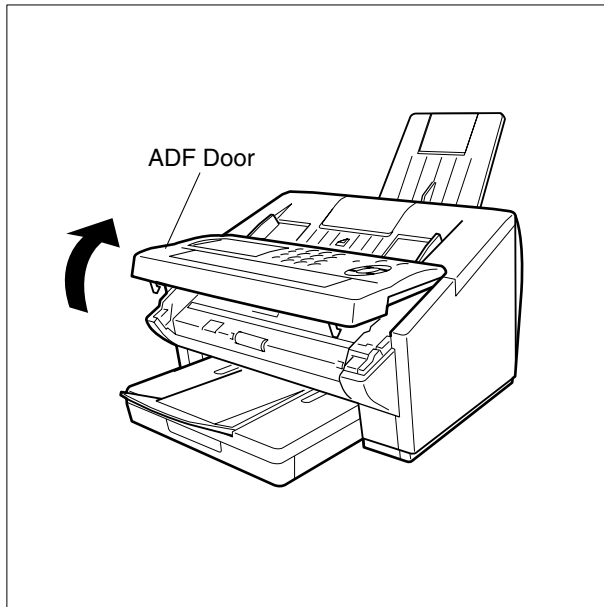

Open the ADF Door.

2

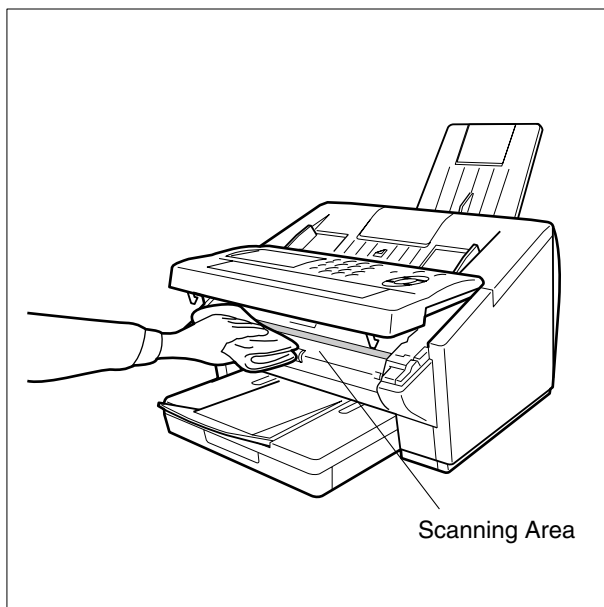

Wipe the Scanning Area gently with a soft cloth saturated with ethyl alcohol. Be sure to use a clean cloth, the scanning area can be easily scratched.


Troubleshooting

Cleaning the Printer Roller

If you find toner on the back of the recording paper, the printer roller in the fuser unit is probably dirty.


To clean the Printer Rollers

1

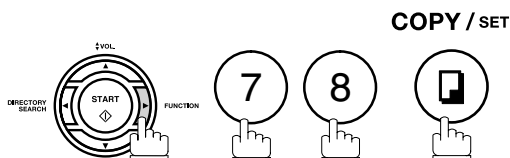


1:CLEAN ROLLER?
2:PRINT ORDER FORM?

 2



* PRINTING *
CLEANING CHARTS


The machine will print out 3 Cleaning Charts.
Then, return to standby.

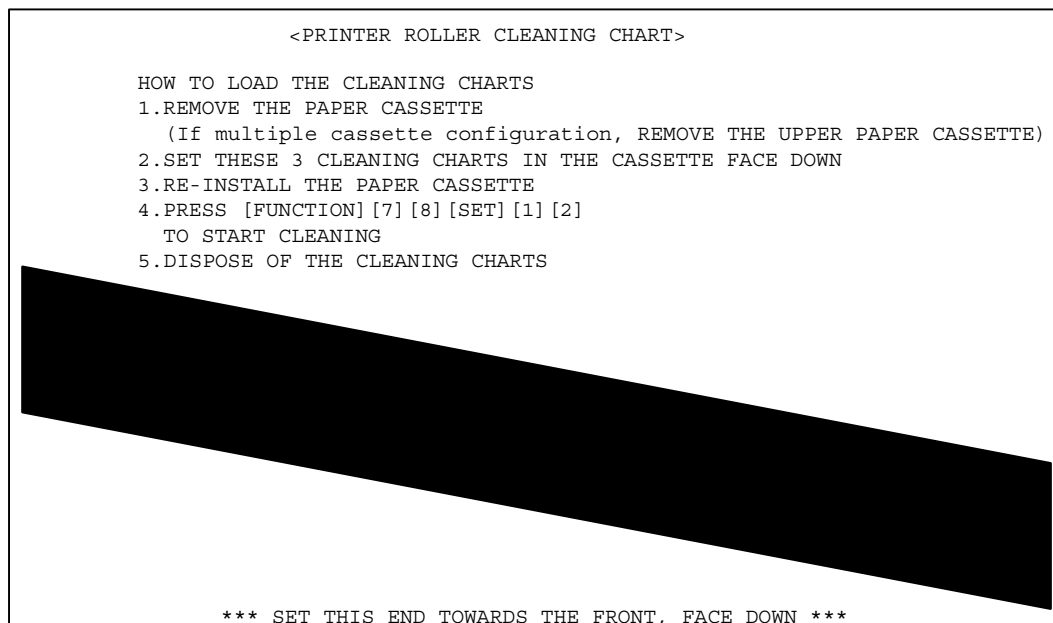

3


Load the Cleaning Charts into the cassette face down.
(See Note 1)

4

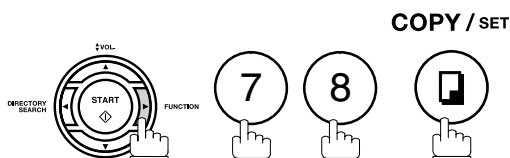

1:CLEAN ROLLER?
2:PRINT ORDER FORM?

 5



* CLEANING *
PRINTER ROLLER

The Machine will feed out the charts, and clean the printer roller.

NOTE


1. If you configure multiple cassette, remove the upper paper cassette.

Adjusting the Automatic Document Feeder (ADF)

If document misfeeding occurs frequently, we suggest you adjust the ADF.

To adjust the ADF

1

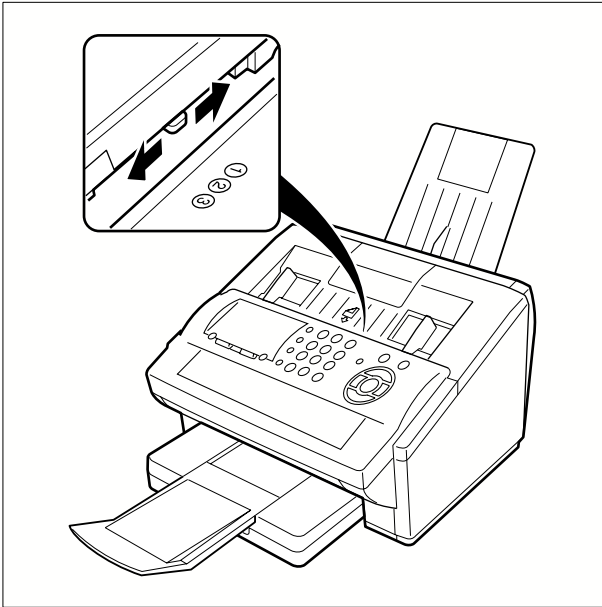

Slide the Pressure Adjusting Lever to the desired position depending on the condition.

Position	Condition
①	To prevent no feed trouble
②	Standard position
③	To prevent multiple feed trouble


Troubleshooting

Verification Stamp

The Verification Stamp contains ink. When the stamp mark appears faded, or hard to see, the stamp should be replaced or refilled with ink.


To remove the stamp

1

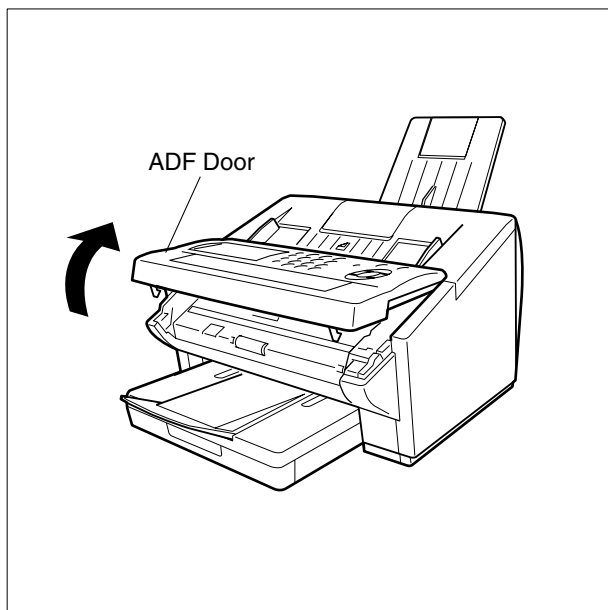

Open the ADF Door.

2

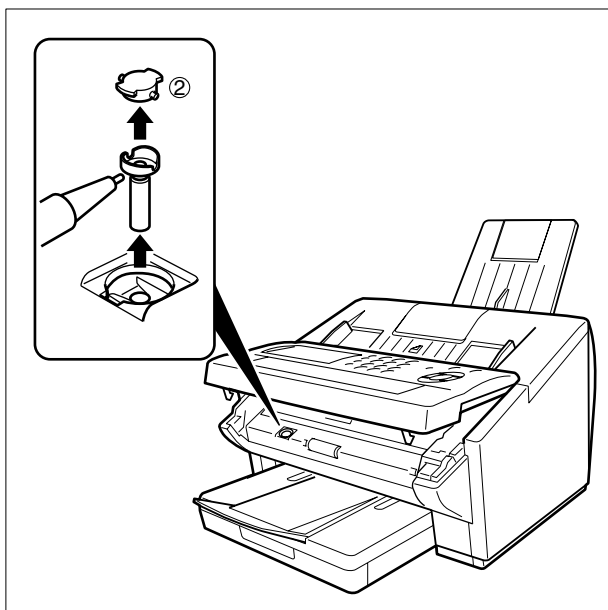

- (1) Remove by pulling the Stamp Assembly upward.
- (2) Remove the Stamp. Replace the stamp with a new one.


NOTE

1. Please contact your local Panasonic dealer to purchase a new stamp. See page 146 Verification Stamp for order number.

Checking the Telephone Line


When you do not hear a dial tone through the telephone connected to the machine, or when the telephone does not ring (No automatic receive).

1

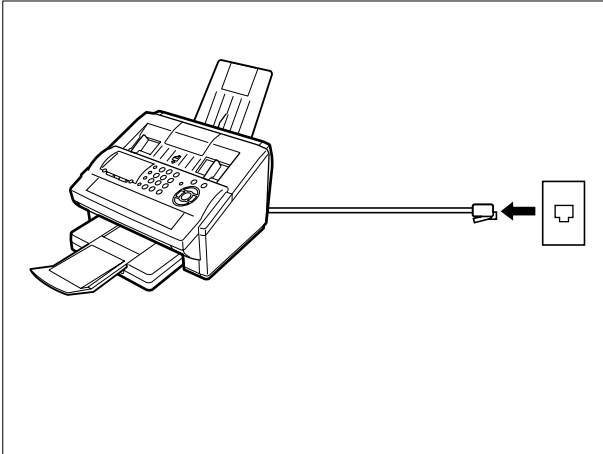


Unplug the Telephone Line Cable from the telephone jack that was supplied by the telephone company.

2

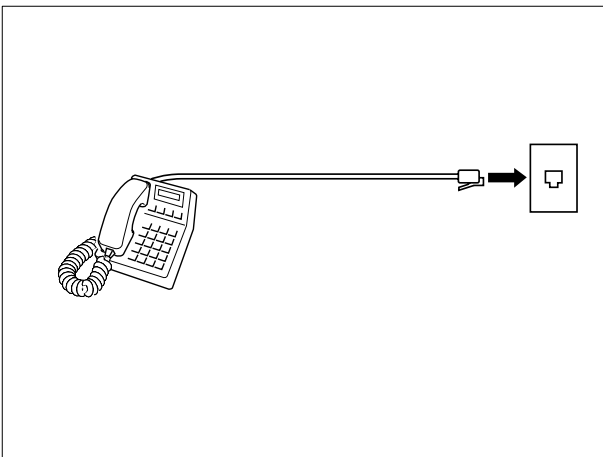

Plug a different regular telephone into the same telephone jack.

3

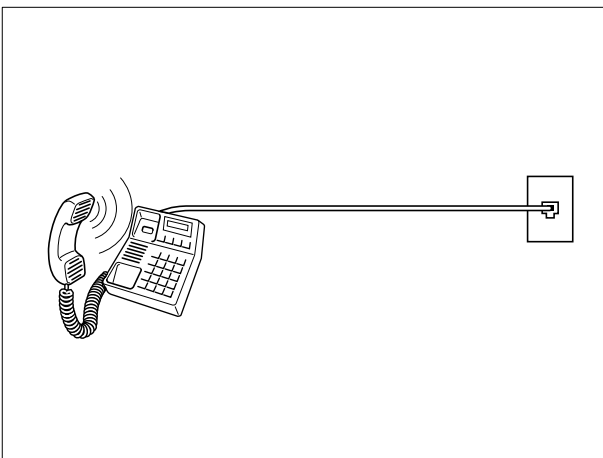

Check for dial tone through the handset. If there is still no dial tone, report it to your local telephone company.


or

Call from another telephone to this number. If the telephone does not ring, report it to your local telephone company.

Specifications

Compatibility	ITU-T Group 3																		
Coding Scheme	MH, MR, MMR (Conforms to ITU-T Recommendations)																		
Modem Type	ITU-T V.34, V.17, V.29, V.27ter and V.21																		
Modem Speed	33600 - 2400 bps																		
Document Size	Max. : 10.1 x 78.7 in (257 x 2000 mm) (with operator's assistance) Min. : 5.8 x 5.0 in (148 x 128 mm)																		
Document Thickness	Single page : 0.0024 - 0.0060 in (0.06 - 0.15 mm) Multiple pages : 0.0024 - 0.0039 in (0.06 - 0.10 mm)																		
ADF Capacity (Automatic Document Feeder)	Built-in, up to 50 Sheets Note : The document limitation to send multiple pages is as follows <table border="0" style="margin-left: 40px;"> <thead> <tr> <th></th> <th style="text-align: center;">Document Size</th> <th style="text-align: center;">Document Thickness</th> </tr> </thead> <tbody> <tr> <td>Up to 20 pages</td> <td style="text-align: center;">Up to 10.1 × 14.3 in (257 x 364 mm)</td> <td style="text-align: center;">0.0024 - 0.0048 in</td> </tr> <tr> <td>Up to 50 pages</td> <td style="text-align: center;">A4 or Letter size</td> <td style="text-align: center;">0.0024 - 0.0039 in</td> </tr> </tbody> </table> <p><i>* Please note that although the size and thickness meets the specifications, you might not be able to set 50 pages with some types of papers.</i></p>				Document Size	Document Thickness	Up to 20 pages	Up to 10.1 × 14.3 in (257 x 364 mm)	0.0024 - 0.0048 in	Up to 50 pages	A4 or Letter size	0.0024 - 0.0039 in							
	Document Size	Document Thickness																	
Up to 20 pages	Up to 10.1 × 14.3 in (257 x 364 mm)	0.0024 - 0.0048 in																	
Up to 50 pages	A4 or Letter size	0.0024 - 0.0039 in																	
Scanning Method	Sheet Feeding with CCD type image sensor																		
Effective Scanning Width	8.3 in (212 mm)																		
Scanner Resolution	<table border="0" style="width: 100%;"> <thead> <tr> <th></th> <th style="text-align: center;"><u>Horizontal</u></th> <th style="text-align: center;">*</th> <th style="text-align: center;"><u>Vertical</u></th> </tr> </thead> <tbody> <tr> <td>Standard</td> <td style="text-align: center;">203 pels/inch (8 pels/mm)</td> <td style="text-align: center;">*</td> <td style="text-align: center;">98 lines/inch (3.85 lines/mm)</td> </tr> <tr> <td>Fine</td> <td style="text-align: center;">203 pels/inch (8 pels/mm)</td> <td style="text-align: center;">*</td> <td style="text-align: center;">196 lines/inch (7.7 lines/mm)</td> </tr> <tr> <td>Super Fine</td> <td style="text-align: center;">406 pels/inch (16 pels/mm) (Interpolated)</td> <td style="text-align: center;">*</td> <td style="text-align: center;">391 lines/inch (15.4 lines/mm)</td> </tr> </tbody> </table>				<u>Horizontal</u>	*	<u>Vertical</u>	Standard	203 pels/inch (8 pels/mm)	*	98 lines/inch (3.85 lines/mm)	Fine	203 pels/inch (8 pels/mm)	*	196 lines/inch (7.7 lines/mm)	Super Fine	406 pels/inch (16 pels/mm) (Interpolated)	*	391 lines/inch (15.4 lines/mm)
	<u>Horizontal</u>	*	<u>Vertical</u>																
Standard	203 pels/inch (8 pels/mm)	*	98 lines/inch (3.85 lines/mm)																
Fine	203 pels/inch (8 pels/mm)	*	196 lines/inch (7.7 lines/mm)																
Super Fine	406 pels/inch (16 pels/mm) (Interpolated)	*	391 lines/inch (15.4 lines/mm)																
Recording Method	Laser Printer																		
Recording Paper	Plain Paper																		
Recording Paper Size	Letter, A4, or Legal																		
Printer Resolution	406 x 391 dpi																		
Effective Recording Size	Letter : 8.2 x 10.7 in (208 x 271 mm) A4 : 8.0 x 11.4 in (202 x 289 mm) Legal : 8.2 x 13.7 in (208 x 348 mm)																		

Print Margin (See Note 1)

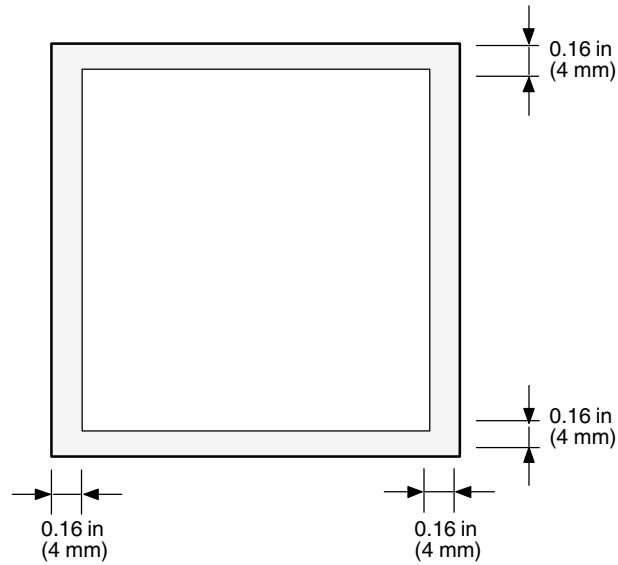

Recording Paper Capacity

Approx. 250 sheets (using 20 lbs paper)

One-Touch/Abbreviated Dialing
Memory Capacity

132 stations
(including 28 One-Touch keys, and 4 Program keys)
Each station can register up to 36 digits for each telephone number (including
pauses and spaces), and up to 15 characters for each station name

Image Memory Capacity

480 pages
(Based on ITU-T Image No. 1 using Standard Resolution)

Specifications

Power Supply	120VAC, 60Hz, Single Phase	
Power Consumption	Standby (Sleep Mode : On)	Less than 1.2 Wh
	Standby (Energy-Saver : On)	Approx. 6.0 Wh
	Standby (Energy-Saver : Off)	Approx. 21.0 Wh
	[Room temperature : 77°F (25°C)]	
	Transmission	Approx. 17.0 W
	Reception	Approx. 460 W
	Copy	Approx. 470 W
	Max	Approx. 470 W
	Dimensions	14.6 x 18.0 x 9.8 in (W x D x H) (370 x 457 x 250 mm) (excluding Projections, and optional Paper Cassette)
Weight	Approx. 20 lbs (Approx. 9.0 kg) (excluding consumable supplies, and options)	
Operating Environment	Temperature : 50 to 95°F (10 to 35°C) Relative Humidity : 15 to 70%	
FCC Registration Number	US:ACJFA33BUF-6000	
Ringer Equivalence	3.3B	

Recording Paper Specifications

In general, most photocopy papers will also work very well. There are many "name", and "generic" brands of paper available. We recommend that you test various papers until you obtain the results you are looking for.

The following table summarizes the major specifications to consider when selecting white, or colored paper.

Basic Weight	16 to 24 lb (60 to 90 g/m ²)
Cut Edge Conditions	Cut with sharp blades, no visible frayed edges
Grain	Long grain
Moisture Content	3.7% to 5.3% by weight
Opacity	88% minimum
Packing	Polylaminated moisture-proof ream wrap
Sizes	Letter : 8.5 x 11 in (216 x 279 mm) A4 : 8.3 x 11.7 in (210 x 297 mm) Legal : 8.5 x 14 in (216 x 356 mm)
Type	Cut sheet


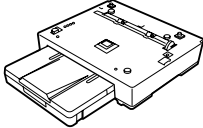
NOTE

1. *It is possible that the paper could meet all of the specifications listed above, and still not print well because of the variations in paper manufacturing. Therefore, we recommend that you test the paper thoroughly before purchasing.*


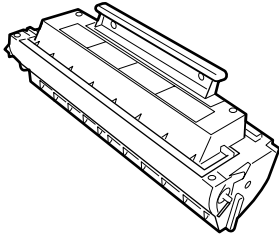
Options and Supplies

Please contact your local Panasonic dealer for availability.

A. Options:

Order No.	Illustration	Description
UE-403176		Handset Kit
UE-409070		250-Sheet Letter / Legal / A4 Size Paper Cassette with the Feeder Unit

B. Supplies:

Order No.	Illustration	Description
DZHT000027		Verification Stamp
UF-5515-AUC		Toner Cartridge

FCC Notice for Users in USA

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.
2. Relocate the fax machine with respect to receiver or other equipment.
3. Connect the fax machine into outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party: Panasonic Corporation of North America
One Panasonic Way, Secaucus, NJ 07094

FCC Inquiries Only: Panasonic Digital Document Company/Technical Support Department
Three Panasonic Way, Secaucus, NJ 07094
1-800-225-5329 (see **Note** below)
Email: consumerproducts@panasonic.com

Note: For Technical Support, please contact your Authorized Panasonic dealer.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the rear panel of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

Ask your telephone company or installer to install the jack suitable for your device if such is not available.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3).

If your telephone equipment causes harm to the telephone network, the Telephone Company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with FCC.

FCC Notice for Users in USA

Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, please contact the manufacturer's authorized service agency for information on obtaining service or repairs. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

The optional Handset Kit is hearing aid compatible.

For protection against the risk of electric shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service provided by the telephone company nor connected to party lines.

Connection to party line service is subject to state tariffs. (Contact the state public utility commission, public service commission or corporation commission for information.)

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your company or a qualified installer.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via telephone facsimile machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of transmission the following information:

1. Date and Time of transmission.
2. Identification of either business, business entity or individual sending the message.
3. Telephone number of either the sending machine, business entity or individual.

In order to program this information into your facsimile machine, you should refer to page 26 in this Operating Instructions to complete the steps.

Example of Header Format (DATE and TIME, LOGO, ID Number setting)

MMM-dd-yyyy 09:00	PANASONIC	201 348 7000	P.01/05
↑	↑	↑	
1) Date and Time	2) LOGO	3) ID Number	

Notice to Users in Canada

NOTICE

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to this equipment should be made by an authorized Canadian maintenance facility designated by supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada Technical Specifications were met. It does not imply that Industry Canada approved the equipment.

On the rear panel of this equipment is a label that contains, among other information, the Registration Number and Ringer Equivalence Number (REN) for this equipment.

The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all devices does not exceed five.

Notice to Users in Canada

Avis

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations.

Les réparations de ce matériel doivent être effectuées par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

Avertissement

L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

Avis

Le présent matériel est conforme aux spécifications techniques d'Industrie Canada applicables au matériel terminal. Cette conformité est confirmée par le numéro d'enregistrement. Le sigle IC, placé devant le numéro d'enregistrement, signifie que l'enregistrement s'est effectué conformément à une déclaration de conformité et indique que les spécifications techniques d'Industrie Canada ont été respectées. Il n'implique pas qu'Industrie Canada a approuvé le matériel.

Sur le panneau arrière de cet appareil se trouve une étiquette, sur laquelle sont indiqués, entre autres, le numéro d'enregistrement et le numéro d'équivalence de sonnerie (IES) pour cet appareil.

L'IES assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

Glossary

ABBR. No. (Abbreviated Number)	The ability to store full phone numbers into the dialer and then utilizing a short series of keystrokes to speed dial that number in the future.
Access Code	A 4-digit programmable access code that prevents unauthorized operation of your Fax.
ADF (Automatic Document Feeder)	The mechanism that delivers a stack of document pages to the scanner one page at a time.
Automatic Reception	The mode that allows you to receive fax documents without user intervention.
Auto Print Reduction	The method of automatically reducing a received document so that it can be printed onto a standard size piece of plain paper. For example, your machine will reduce an incoming legal size page to 75% of its original size so it could fit on a letter size page.
BPS (Bits per Second)	The amount of data that is transmitted over the phone line. Your machine can start at each Max. Modem speed and automatically steps down to suitable speed depending on the phone line condition and the receiving machines capabilities.
C.C.I.T.T.	Consultative Committee on International Telegraph and Telephone. This organization has presently developed four groups of industry standards that insure facsimile compatibility.
Character ID	A programmed proprietary code name that allows up to 16 alphanumeric characters identifying your facsimile machine.
Character Keys	The keys that are used to enter letters and symbols for various programming functions.
Coding Scheme	The data compression method used by facsimile machines. Your machine utilizes Modified Huffman (MH), Modified Read (MR) and Modified Modified Read (MMR) coding schemes.
Comm. Journal	Refers to either the Communication Journal, Relay Transmission Report, or the Confidential XMT Report.
Contrast	Signifies the scanning sensitivity in terms of lightness and darkness of your original transmitting pages.
Cover Sheet	A Fax Cover Sheet can be attached to your transmit document(s) that shows the recipient's name, originator's name and number of pages attached.
DDD (Direct Distance Dialing)	A telephone service that allows unassisted dialing, no operator assistance is required.
Deferred Polling	The ability to retrieve documents from other stations at a later time.
Deferred Transmission	The ability to send documents to other stations at a later time.
Direct Dialing	The method of dialing where you enter the entire telephone number through the keypad.
Directory Search Dialing	Allows you to dial a full telephone number by searching the station's name entered in the One-Touch keys or Abbreviated dialing numbers.
Directory Sheet	The list that contains the station names that are programmed into your unit.
DTMF (Dual Tone Multi-Frequency)	Dialing method that sends a different set of frequencies for each digit of the telephone keypad. Commonly refers to touch tone dialing.
ECM (Error Correction Mode)	The ability to correct transmission errors as detected during the transmitting phone call.
Energy-Saver Mode	Saves energy by consuming less power than when in standby mode by turning off the fuser unit after the specified time.
End Receiving Station	In a relay network, the final station designated to receive the document.
FAX Forward	The ability to forward all incoming faxes to the registered station in the specified ABBR No.
FAX Parameter List	The list that contains the home FAX parameters settings that you have programmed into your machine.
FAX/TEL Auto Switching	The ability to share a single telephone line for both fax and voice usage.

Glossary

F.C.C.	Federal Communications Commission. The U.S. Government organization that regulates communications originating or terminating in the United States.
File	A task that has been stored into the memory of your unit. Examples are deferred transactions.
Fixed Print Reduction	The method that allows you to determine one reduction rate, such as 75%, for all incoming documents.
Function	The control panel key that will be utilized to begin an operation or configuration of a feature.
G3 mode (Group 3)	Refers to the standards and transmission capabilities of the current generation of facsimile machines.
Group Dialing	The ability to program many telephone numbers into a single station so that many locations can be dialed in sequence utilizing a single keystroke.
Halftone	A scanning technique to distinguish levels of gray from black and white. Your machine can detect up to 64 levels of gray in halftone mode.
Handshaking	The exchange of a group of control signals that communicate between the transmitter and receiver. These signals determine the condition at which communication can occur.
Header	A row of information that is transmitted by the sending machine and printed on the top of each page by the receiving unit. This identifies the transmitting unit and information about the transmission, such as time and date.
ITU-T	International Telecommunication Union - Telecommunication, formerly known as C.C.I.T.T.
ITU-T Image No. 1	An industry standard document that allows comparisons of the transmission speeds and capabilities of facsimile machines.
ID	A programmable address of up to 20 digits identifying your machine.
Image Memory Capacity	This signifies the amount of memory available in your unit capable of storing pages of documents. All page units of measure are based on the ITU-T Image No.1.
Individual Transmission Journal	A report that is printed by the transmitting unit stating information regarding the last document transaction.
Industry Canada (D.O.C)	Department of Communications. The Canadian Government organization that regulates communications originating or terminating in Canada.
Information Code	A code that is internally generated by your Fax stating a specific operational error or machine failure.
Initial Sending Station	In a relay network, the station that is originating the document transmission.
Journal	A report that is printed by your unit listing the last 32 transactions.
Keypad	A group of numeric keys located on your control panel.
LCD	Liquid Crystal Display. The display area of your machine.
Logo	Your programmed company name or identification up to 25 alphanumeric characters.
Multiple Logo	The user can select one of 25 preset LOGOs before a transmission.
Manual Reception	A mode that requires operator intervention to receive an incoming document.
Memory Transmission	The documents are scanned into memory before actual connection to the phone line for transmission.
Modem	A device that converts signals from your fax machine into signals that can be transmitted over telephone lines.
Multi-Station Transmission	The ability to broadcast the same set of documents to a programmed number of locations.
Network Address	An individual 4-digit addressing number assigned to a One-Touch/ Abbreviated number that identifies a particular station in a relay network.
Network Password	A 4-digit password assigned to a network address to prevent unauthorized stations from accessing a relay station.
Off-Hook Dialing	The direct dialing of a telephone number with the handset out of the cradle or "off the hook."

On-Hook Dialing	The direct dialing of a telephone number with the handset in the cradle or "on the hook."
One-Touch Dialing	The ability to dial an entire telephone number by pressing one key.
Overlap Printing	Documents too long to be reduced are automatically printed on two pages with approximately 10 mm overlap.
Panasonic Super Smoothing	An electronic image enhancement (Panasonic Super Smoothing) that will create a particular pattern for the improvement of copy quality.
Polling	The ability to retrieve a document from another facsimile machine.
Polling Password	A 4-digit programmed code that enables the security of a document being polled.
Power Saver Mode	To reduce the power consumption of the machine in standby, select the time period to turn OFF the high temperature fuser unit when the printer is idle.
Print Collation	The ability to stack received documents in the correct order.
Print Reduction Modes	The methods used to determine how an incoming document will be reduced to print onto the paper loaded in your machine.
Program Keys	Keys that are defined for storing a sequence of stations to be dialed or polled.
Protocol	A protocol is the special set of rules for communicating that the end points in a telecommunication connection use when they send signals back and forth. Both end points must recognize and observe the protocol.
PSTN	Public Switched Telephone Network. Network of interconnected switching equipment and transmission facilities.
Receiving Password	A 4-digit password that is checked before a document is received.
Resolution	Relates to the number of dots scanned or printed per certain square. The quality of the image increases as the number of dots per certain square increases.
Selective Reception	A function that can be set so that your unit will receive from only those machines programmed into your dialer.
Sleep Mode	The lowest power state that the machine enters after the specified time without actually turning off.
Station Name	Alphanumeric ID which can be programmed for each One-Touch dialing and Abbreviated dialing number.
Stored Documents	Documents that have been scanned and now are stored in your machine's memory.
Sub-Address	ITU-T recommendation for further routing, forwarding or relaying of incoming faxes.
Sub-Address Password	ITU-T recommendation for additional security that corresponds to the Sub-address.
Substitute Memory Reception	Your machine's ability to store an incoming document into its memory, when it runs out of recording paper or toner.
Transmission Reservation	The ability to preset a telephone number so that you may reserve a transmission while your unit is performing another function.
TAM Interface	A capability of your unit to be connected and operate with a Telephone Answering Machine (TAM).
Transmission Password	A 4-digit password that is checked when a document is transmitted.
User Parameter	Programmed parameters that provide information to other stations. Examples are logo, character ID, date and time.
Verification Stamp	A user selectable transmission verification stamp can be placed on scanned documents that are successfully transmitted or stored in memory.
View Mode - File List	Allows you to view the brief contents of the memory files through the LCD display without having to print the Memory File List.
View Mode - Journal	Allows you to view the brief contents of the journal through the LCD display without having to print the journal.

ITU-T Image No. 1

All specifications are based on the ITU-T Image No. 1 (The sample shown below is not to scale).



THE SLEREXE COMPANY LIMITED

SAPORS LANE . BOOLE . DORSET . BH25 8 ER

TELEPHONE BOOLE (945 13) 51617 - TELEX 123456

Our Ref. 350/PJC/EAC

18th January, 1972.

Dr. P.N. Cundall,
Mining Surveys Ltd.,
Holroyd Road,
Reading,
Berks.

Dear Pete,

Permit me to introduce you to the facility of facsimile transmission.

In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

P.J. CROSS
Group Leader - Facsimile Research

A		G	
ABBR. Number List	123	Group Dialing	76
Abbreviated Dialing	49, 54	H	
Abbreviated Dialing Number	31	Header Format	36
Access Code	90	Header Print.....	36
ADF Capacity	142	I	
Adjusting the Automatic Document Feeder (ADF)	139	ID Number	29
Automatic Document Feeder	41	Image Memory Capacity	143
Automatic Reduction	67	Incomplete File Save.....	37
C		IND. XMT JOURNAL.....	117
Character ID	28	Information Codes	132
Cleaning the Document Scanning Area.....	137	ITU-T Image No. 1	154
Cleaning the Printer Roller	138	J	
Communication Journal (COMM. JOURNAL)	44, 120	Journal	116
Confidential Mailbox	106	K	
Contrast	42	Key/Buzzer Volume	36
Control Panel	12	L	
Copy	70	Loading Documents	40
Cover Sheet.....	95	LOGO	27
D		M	
Date and Time	26	Manual Number Dialing	48, 52
Deferred Polling	72	Memory Transmission	46
Deferred Transmission	71	Memory Transmission Reservation	58
Diagnostic Password	39	Monitor Volume.....	25
Dialing Method (Tone or Pulse).....	24, 36	Multi-Station Transmission (Broadcasting).....	51
Dimensions	144	O	
Direct Transmission	52	Off-Hook Dialing.....	56
Direct Transmission Reservation	59	One-Touch Dialing.....	49, 53
Directory Search Dialing	50, 55	One-Touch key	30
Directory Search List.....	124	One-Touch List.....	123
Directory Sheet.....	34	On-Hook Dialing.....	57
Distinctive Ring Detector (DRD)	94	Operating Environment.....	144
Document Jam	136	Overlap Printing	68
Document Size	142	E	
Document Thickness	142	Edit File Mode	82
E		F	
F		Fax / Tel Auto Switching Mode.....	64
Fax Forward.....	99	Fax Forward.....	99
Fax Mode	65	Fax Mode	65
FAX Parameter List	126	FAX Parameter List	126
Fax Parameter Table	36	Fax Parameter Table	36
FCC Registration Number	144	FCC Registration Number	144
File List	82	File List	82
Fixed Reduction	67	Fixed Reduction	67
Function Key List	10	Function Key List	10

Index

P

Paper Specifications	145
Password Reception	103, 105
Password Transmission.....	102, 104, 105
Pause	12
PIN Code	97
Polling	73
Polling Password	73
Power Consumption	144
Print Collation.....	69
Print Margin	143
Print Reduction.....	67
Print Reduction Ratio	67
Priority Transmission Reservation.....	59
Program Keys	76
Program List	125

R

Receive To Memory.....	92
Received Time Print	36
Receiving Password	103
Reception Modes	62
Recording Paper Jam	135
Redialing	60
Reduction Ratio	37
Resolution	42
Retry an Incomplete File	89
Ringer Equivalence	144
Ringer Volume.....	25

S

Scanner Resolution	142
Selective Reception	100
Sub-Address Password	39
Sub-Addressing	114
Substitute Memory Reception	69

T

TAM Interface Mode	65
Telephone Mode.....	63
Toner Cartridge	16
Toner Cartridge Order Forms.....	127
Transaction Journal	116
Transmission Password.....	102
Transmission Reservation.....	58 - 60

U

User Parameters.....	26
----------------------	----

V

Verification Stamp	43, 140
Viewing the Contents of a File List	83

W

Weight	144
--------------	-----

memo

The serial number is located on the label on the rear of the machine. For your convenience, record the number below and keep this documentation along with your proof of purchase, in the event of a theft or for future reference.

MODEL NO. _____

NAME OF RESELLER _____

SERIAL NO. _____

DATE OF PURCHASE _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>