

Please read your oneRoam™ Service User Guide first,
and then refer to this insert as required.

Special Instructions for your NOKIA 6630



Roadpost

General Instructions

Powering On Your Phone

Press and hold <①> to turn your phone on and off. This key is located on the top, right side of your phone.

Answering Calls

To answer an incoming call, press <Call>.

The <+> Sign

The <+> sign is obtained on the NOKIA 6630 by pressing <*> twice, in succession. This symbol is required when dialing internationally, and in a few other instances referred to in your **oneRoam Service User Guide**.

Voicemail Access

Press and hold <1> to access your voicemail.

Changing Band Frequency

The NOKIA 6630 searches for the correct band automatically.

As you travel between Japan, South Korea, Europe, North America and other destinations, your phone will automatically detect the band or mode that provides service in that area.

Locking Your Phone's Keypad

To prevent accidental use of your phone, press <↵> followed by <*>. Repeat to unlock the phone's keypad for use. (While your phone is locked, you can still answer incoming calls by pressing <Call>.)

Text Messaging Instructions

You can send and receive text messages on your NOKIA 6630 phone. Please review your **oneRoam Service User Guide** for general instructions, detailed examples and information on your Text Messaging address.

Retrieving Text Messages

1. Press **<☰>** for **Menu**.
2. Select **Messaging**, press **<↵>**.
3. Select **Open**, press **<↵>**.
4. Scroll to **Inbox** and press **<↵>**.
5. Select **Open**, press **<↵>**.

Scroll to read through your messages. Use arrows and/or follow prompts to view, delete, and save messages.

Sending Text Messages to another cellular phone

1. Select **Messaging**, press **<↵>**.
2. Select **New Message**, press **<↵>**.
3. Select **Create Message**, press **<↵>**.
4. Select **Text Message**, press **<↵>**.
5. Enter the phone number you are sending your message to. Type your message using the keypad, press **<Options>** when finished.
6. Select **Send** and press **<Select>**.

Example: See *oneRoam Service User Guide*.







Troubleshooting Details

Use this section in combination with the **oneRoam Service User Guide** provided, if you are having trouble using your phone.







To change your Mode or Network Selection outside of Japan and South Korea:

Currently, only one cellular Network and Mode is available for service in Japan.

To manually change the Mode on your phone when travelling outside of Japan and South Korea:

1. Press  for **Menu** and scroll to **Tools**, press .
2. Select **Open** and scroll to **Settings**, press .
3. Select **Open** and scroll to **Network**, press .
4. Select **Open, Network Mode**, press  and **Change**.
5. Scroll to **GSM** and press  twice.

To manually select a Cellular Network for use:

1. Press  for **Menu** and scroll to **Tools**, press .
2. Select **Open** and scroll to **Settings**, press .
3. Select **Open** and scroll to **Network**, press .
4. Select **Open, Operator Selection**, press  and **Change**.
5. Scroll to **Manual**, press .

Tip: When placing a test call, call Roadpost and avoid airtime charges. Dial +1.905.272.5665 – always a free call from your Roadpost phone.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>