

Operating Instructions Part 1 Digital Cellular Phone A 100 A 101



EB-A100 EB-A101 Mobile Phone



Before operating this equipment please read these instructions (parts 1 and 2) completely.

Download from Www.Somanuals.com. All Manuals Search And Download.

Contents

Getting Started	1
Fitting and removing the batte	ery 1
Fitting and removing the SIM	
Charging the battery	3
Battery level indicator	
Low battery power warning	
Your phone — A100	5
Your phone — A101	
Key functions	
Displays	
Basic Operations	
Switching the phone on/off	12
Making a call	
Ending a call	
Answering a call	
In-call operations	
Incoming call while on a call	
DTMF	
Text entry	
Menu Display	
Menu Structure	22
My Phone Menu	24
My Phone Menu Sounds	24 25
My Phone Menu Sounds Display	24 25 26
My Phone Menu Sounds Display Language	24 25 26 27
My Phone Menu Sounds Display Language Alerts	24 25 26 27 28
My Phone Menu Sounds Display Language Alerts Profiles	24 25 26 27 28 28
My Phone Menu Sounds Display Language Alerts Profiles Auto answer	24 25 26 27 28 28 30
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer	24 25 26 27 28 28 28 30 30
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults	24 25 26 27 28 28 30 30 30
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu	24 25 26 27 28 28 30 30 30 31
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games	24 25 26 27 28 28 30 30 30 30 31 31
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu	24 25 26 27 28 28 30 30 30 31 31 31
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu Browse	24 25 26 27 28 28 30 30 30 30 31 31 31 31 35
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu Browse Create	24 25 26 27 28 28 30 30 30 30 31 31 31 35 35
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu Browse Create Groups	24 25 26 27 28 30 30 30 31 31 34 35 35 38
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu Browse Create Groups Memory status	24 25 26 27 28 30 30 30 31 31 31 35 35 38 39
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu Browse Create Groups Memory status My Numbers	24 25 26 27 28 30 30 30 31 31 31 35 35 38 39 39
My Phone Menu Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults Games Menu Selecting games Contacts Menu Browse Create Groups Memory status	24 25 26 27 28 30 30 30 31 31 34 35 35 38 39 39 40

Calendar	41
New event	. 41
View event	. 42
Key Guard	43
Messages Menu	44
Create	. 45
Inbox	. 48
Outbox	. 49
Archive	
User Messages	. 51
Memory status	. 51
Settings	
Cell Broadcast	
Phone Menu	
Call Service	
Call Diverts	
Security	
Network	
Application Menu	
Clock	
Calculator	
Currency	
Melody composer	
Phone menu	
Records Menu	70
Last dialled/Answered/	
Unanswered number	
Delete all	
Accessories	71
How to Identify a Genuine	
Panasonic Accessory	
Troubleshooting	
Important Error Messages.	
Glossary of Terms	75
Index	76

 
ii **Contents** Inload from Www.Somanuals.com. All Manuals Search And Download.

Getting Started

Fitting and removing the battery


Before removing the battery, ensure that the phone is switched off and the charger is disconnected from the phone.

Fitting the battery — A100




Remove the battery compartment cover. Insert the battery ensuring the 3 gold contacts align with the 3 gold pins in the phone. When replacing the cover, ensure to slide upward to the top of the phone.

Removing the battery — A100

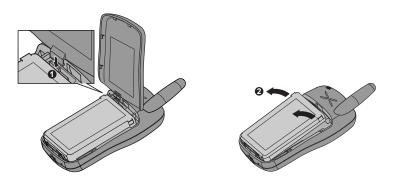


Push and hold the release latch $\mathbf{0}$ towards the top of the phone using the cover clip, then lift the battery out $\mathbf{2}$.

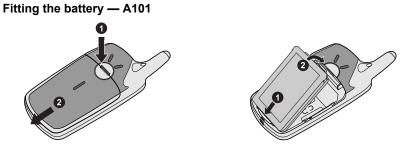

Remove the battery compartment cover. Insert the battery ensuring the 3 gold contacts align with the 3 gold pins in the phone. When replacing the cover, ensure to slide upward to the top of the phone.

Removing the battery - A101

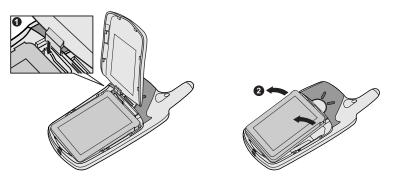


Push and hold the release latch $\mathbf{0}$ towards the top of the phone using the cover clip, then lift the battery out $\mathbf{2}$.

Fitting and removing the SIM


The SIM is located under the battery.

Fitting the SIM — A100

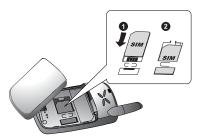

Ensure the gold contacts are facing downwards before sliding the SIM into the SIM holder.


Fitting the SIM — A101

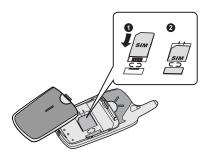

Ensure the gold contacts are facing downwards before sliding the SIM into the SIM holder.


Charging the battery

Removing the SIM — A100

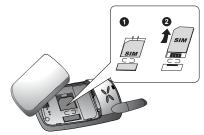

While holding the tab down, slide the SIM out.

Removing the SIM — A101

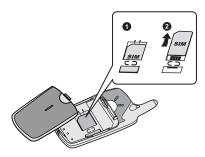

While holding the tab down, slide the SIM out.

Connecting and disconnecting the Travel Charger

The battery must be fitted in the phone before the charger is connected. Insert the Charging Connector into the socket at the base of the phone before connecting the

charger to the mains outlet. Once connected, the Battery level indicator will start scrolling (see "Battery level indicator" on page 4). It is recommended to charge the battery for a minimum of 4 hours before first use.

NOTE: DO NOT force the connector as this may damage the phone and/or the charger. If the battery has been deeply discharged, it may take several minutes before the Battery level indicator is displayed.





When charging is complete, disconnect the charger from the outlet before removing the plug from the phone.


Battery level indicator

	While charging	Charging complete
Phone on	H	E 2 > E
Phone off	Ð	Ð


Low battery power warning

When the battery power is low, a "Battery is Low" message will be displayed. If this occurs during conversation, finish your call immediately. The power will automatically switch off after the warning tone. Fully recharge the battery. See "Charging the battery" on page 3. (Calls can be made and received while the phone is charging.)

Your phone — A100

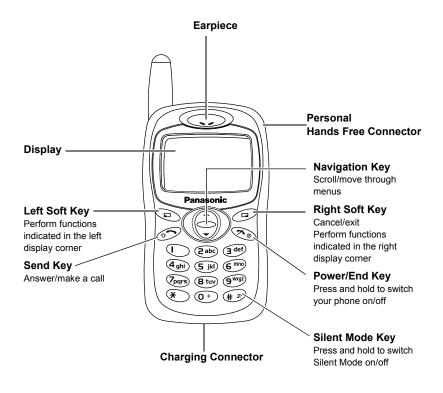

Your phone — A101

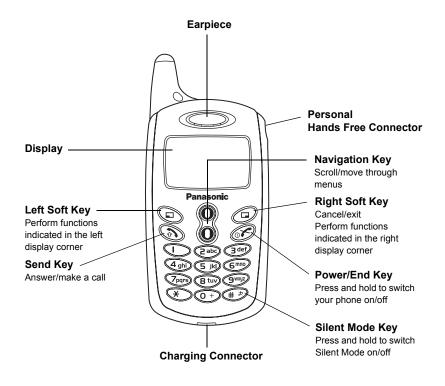

Key functions

A100 Key	A101 Key	Function	
9	0	Navigation Key: Scroll or move through menus, text and phone numbers. In idle mode, press to display the "Contacts" menu.	
Θ	Ð	Left Soft Key: Perform the functions displayed in the lower left corner. In idle mode, press to activate the "Menu" display, or press and hold to activate the "Profiles" menu.	
Ð	Þ	Right Soft Key/Cancel or Exit Key: Perform the functions displayed in the lower right corner. Mainly used to cancel and return to the previous menu level. In text entry mode, press to delete text. In idle mode, press and hold to activate the "Messages" menu. When receiving a call, press to mute the ringtone.	
(0+~(9)mp) (*)	0+~90000 *	Numeric Keys: Enter numbers. Press and hold one of the keys from 1 to 9 for Hotkey dialling.Press and hold 0 + to enter a "+" (international access code) or "P" (extension number code).To dial an extension number, dial the phone number first, press and hold 0 + to add a "P", then enter the extension number.In text entry mode, enter text, numbers and characters.	
Ð	Ì	Send Key: Make a call or answer a call. In idle mode, press to check the last dialled list. In text entry mode, press to switch between input methods.	
Ro	F	Power/End Key: End/reject a call. During key operation, press to return to the previous display. Press and hold to return to idle mode. In idle mode, press and hold to switch phone on/off.	
(# ^x)	(# <i>\$</i> 2)	Silent Mode Key: In idle mode, press and hold to switch the Silent Mode (Vibrator on/Ring off) on and off. In text entry mode, press to switch T9 smart English input mode on/off, or press and hold to enter symbols.	

7


During a call

Minimal menu options are available during a call by pressing the following key options.

A100 Key	A101 Key	Function	
	Ð	Activate Hands free, Conference call, Call transfer, Contacts list, Messages menu, Call status.	
▣	Ð	Swap between two calls. Put the call on hold.	
Θ	8	Increase the volume while on a call.	
Θ	0	Decrease the volume while on a call.	
Ð	Ì	Display the last dialled records list. Answer another call. If a phone number is entered, hold the active call and call the number.	
()+~()**********************************	0+~9WY	Send DTMF. Press and hold (#) to switch the Hands free speaker on/off	

Displays

Idle display

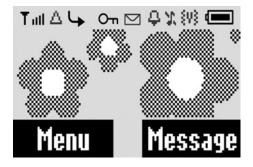

10:02

The clock appears on the display one minute after you press the last key.

The clock position changes every minute.

NOTE: All screen images in this manual are simulated.

NOTE: Some services described in this manual are network dependent or may only be available on a subscription basis. Some functions are SIM dependent.

For more information, contact your service provider.

Status icons

The status icons are displayed or animated according to the currently activated functions. The Antenna, Signal and Battery icons are displayed when the handset is switched on and connected to a network. If there is no connection with the network, the Signal icon will not be displayed.

lcon	Meaning
Tatl	Antenna and signal strength
Δ	Registered to a non-home network – roaming
L a	Call Diverts is on
Оп	Key Guard is enabled
	Message area is full
⊠ (Flashing)	Unread message is stored
ÌZÓ	Voice mail indicator (voice mail has been received)
4	Alarm is set
x	All tones or ring volume is off
{V}	Vibrator is on
	Battery charge level
4	Low battery

Symbols in the Manual

A100 Symbols	A101 Symbols	Meaning
999	888	Press the Navigation Key in the direction indicated by the arrow
Ð		Press Left Soft Key
		Press Right Soft Key
	0+~9 ^{wxyz}	Press numeric Keys
Ŷ	Ì	Press Send Key
Ro	Ŧ	Press Power/End Key
×	۲	Press Asterisk Key
(# *)	(#)	Press Silent Mode Key

Symbols used throughout the manual are based on the A100.

Basic Operations

Switching the phone on/off

- 1. Press and hold 🔊 for 2 to 3 seconds
- 2. The phone starts in idle mode
- 3. Press and hold 🔊 again to switch the power off



Making a call

Ensure that the signal strength meter shows network coverage is available in the current area. > To make a call, start in idle mode.

Standard dialling

- Enter the area code and phone number Image of the second se
- > The dialled number is displayed
- 2. When the other party answers, talk into the Microphone

Earpiece Volume:

During a call, \ominus to adjust the earpiece volume

Using the contacts list

- 1. 🖨 to enter Contacts
- 2. \bigcirc required name or phone number \bigcirc

Last number dialling

- 1. 🔊
- 2. \bigcirc required name or phone number \bigcirc

International dialling

The international access code (+) and the destination country/region code should be entered, followed by the area code and phone number.

- Press and hold ()+ until "+" is displayed, then enter the country / region code
- 2. Enter the area code and phone number 🔊

NOTE: Many countries/regions include an initial "0" in the area code. This should, in most cases, be omitted when dialling international numbers. If you have difficulties making international calls, contact your service provider.

Emergency call

To make an emergency call, the antenna (T) must be present

When SIM is inserted:

Enter the emergency number 112 🔊

When SIM is not inserted:

Enter the emergency number 112 5

OR

(SOS) > "Emergency call" (Yes)

NOTE: Most countries support the international emergency number 112. If you find the number does not work on your phone, please call your service provider. Emergency calls without a SIM is country or network operator dependent.

Ending a call

To hang up, 🔊

- > The duration of the call will be displayed.
- When the "Max cost" is on, the remaining units will be displayed.

For setting the "Max cost", see "Maximum cost:" on page 58.

Answering a call

Ð

OR

If "**Any key answer**" is on, From idle mode press any key except 🔊. (See "Any key answer" on page 30.)

Volume:

From My Phone

- 1. 😑 Sounds >Volume 🕞 (Select)
- 2. GAjust the volume level (OK)

Quick touch silent mode:

To quickly set the ringtone off (\mathfrak{X}) and the vibrator on (\mathfrak{W}), press and hold \mathfrak{W} .

To resume, press and hold (\oplus s) again.

One click mute on incoming call:

To set the ring tone off,

(Mute)

- •If you want to reply to the call, (Reply)
- •If you want to reject the call, (Reject).

Reject incoming call:

₹₀)

In-call operations

During a call, the following options are available by pressing (Menu) or (I)(Hold)

Hands free/Hand held

You can switch the phone between hands free and hand held.

During a call:

Hands free Conference Call transfer

Back

Select

- 1. 🕞 (Menu)
- 2. 🖨 Hands free / Hand held 🕞 (Select)

Contacts

You can access your Contacts list that is stored in SIM in your phone.

During a call:

- 1. (Menu)
- 2. Ocntacts (Select)

Conference Call transfer Contacts Select Back

Messages

You can create, check, or send a message while on a call. See "Messages Menu" on page 44.

During a call:

 
- 1. 🕞 (Menu)
- 2. \ominus Messages 🕞 (Select)

Call transfer Contacts Messages Select Back

Hold

You can put a call on hold.

During a call:



Making a second call

During a call:

- Enter the second phone number or select a phone number from the Contacts list (see "Contacts" on page 15).
- 2. (1) The first call is put on hold

NOTE: This function is network dependent.

Incoming call while on a call

NOTE: Call waiting must be on – see "Call waiting" on page 56 This function is network dependent.

During a call, you may receive another call.

To disconnect another call, (Reject)

 During a conversation with a second caller, (Swap) or (Menu) and select one of the following options:

Conference

You can make a conference call with up to 5 parties

During a call:

- 1. 🕞 (Menu)
- 2. 😑 Conference 🕞 (Select)

NOTE: This function is network dependent.

Call transfer

 
Call transfer connects the active calling party to the other party on hold, then disconnects your line, leaving the two callers in the conversation.

During a call:

- 1. 🕞 (Menu)
- 2. 😑 Call transfer 🕞 (Select)

NOTE: This function is network dependent.

Call status



Call status allows you to disconnect the line or put a call on hold with the active party.

During a call:

- 1. 🕞 (Menu)
- 2. 😑 Call status 🕞 (Select)

Swap

Call held 7036626262 Menu Swap When you are connected to two calls, you can switch to the other calls.

During a call: ((Swap) to change to the other call.

DTMF

DTMF can be sent during a conversation. These are often used to access voice mail, paging and computerised home banking. For example, you may need to enter a number to remotely access voice mail messages. A phone number may be stored in the Contacts together with a DTMF sequence, allowing the number to be dialled upon recall and the DTMF number to be sent automatically.

Send DTMF during a call: Enter digits (@+~ ��, ⊯⇒ or ☀).

Pause dial

Using pauses allows you to send DTMF automatically.

- 1. Enter the phone number
- Press and hold () until a "P" is displayed at the end of the phone number entered
- 3. Enter DTMF digits after the pause, e.g. enter the number to access voice mail messages
- 4. 🔊
- When the call is connected the DTMF sequence will be sent after 3 seconds.

Text entry

You can use alphanumeric characters to enter details into the Contacts list, to create text, etc.

	Text mode			Numeric	
Key	T9 [®] (T9Abc, T9abc, T9ABC) (Input language: English) Multi tap (Input mode indicator: Abc, abc or ABC)		(0 ~ 9)		
0+	Space 0. , ?! +	-=:¿i"';_			0
\bigcirc	1 / () < > [] { }	%~€& (1/()<>	>[]{}%~€&)		1
(2 abc	A B C 2 —	(a b c 2 —)	A B C 2 Ä	(a b c 2 ä à ç)	2
3 def	D E F 3 —	(d e f 3 —)	D E F 3 É	(d e f 3 é è)	3
(4 _{ghi})	G H I 4 —	(ghi4—)	GHI4	(g h i 4 ì)	4
(5°jkl	J K L 5 —	(j k l 5 —)	JKL5	(j k l 5)	5
6 mno	M N O 6 –	(m n o 6 —)	M N O 6 Ö Ñ	(m n o 6 ö ñ ò)	6
Zpqrs	P Q R S 7 –	(pqrs7—)	PQRS7	(p q r s 7 ß)	7
8 tuv	T U V 8 —	(t u v 8 —)	ΤUV8Ü	(t u v 8 ü ù)	8
9 ^{wxyz}	W X Y Z 9 –	(w x y z 9 –)	WXYZ9ÆØÅ	(wxyz 9æøå)	9
Ì	Shift mode				
(\mathbf{X})	* $\Gamma \Delta \Theta \Lambda \equiv \Pi \Sigma \Phi \Psi \Omega$			*	
(# <i>x</i>)	(Hold) Space # £ \$ ¥ ¤ @ \§ ^ ↓			#	
▣	Delete text / (Hold) Delete all characters				

NOTE: Displayed characters in the T9[®] mode vary depending on the selected input language. Use (# ≫) to toggle T9[®] On/Off. If the combination of letters typed has produced a word which is not the one you require, press (repeatedly until the correct word is displayed. Then continue to the next word. When "–" is reached, press (to spell the word you require.

Shift mode change

In text entry mode, you can change mode by pressing and holding $\textcircled{\basis}$.

Multi tap	Tegic
Abc -> abc -> ABC -> 123	T9Abc -> T9abc -> T9ABC -> 123

Text Input mode change

In text entry mode, to switch T9[®] mode On/Off, press (# 2).

Auto capital change

Auto capital affects Abc and T9Abc.

When Input mode is changed to Abc or T9_{Abc}, the first character is input as upper case and subsequent letters as lower case.

When one of the following characters [. (Period) or ! or ?] is input before a space, the next character is input as upper case.

T9[®] Text Input

Using this mode of text input dramatically reduces the required number of key presses.

Press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached, then check that the word has been typed correctly before continuing on to the next word. If the combination of letters typed has produced a word which is not the one you require, press repeatedly until the correct word is displayed. Then continue to the next word.

Example of Text Input in T9[®] Mode

To type a new message, follow these steps:

- At the beginning of a new message press and hold
 (Clear) to delete previous text, if necessary
- 2. Press 🔊 to change letter case, if necessary
- 3. Press (2abc) (50k) (50k) "Call" is displayed

Note that the displayed words change as you type. Always type to the end of the word before editing.

T9[®] Languages can be selected from T9 Input – see "T9 Input" on page 27.

If the word you require is not in the internal dictionary, then it should be entered using the Multi tap (ABC) mode.

Other text modes

Multi tap mode (Abc, abc or ABC):

Each time a key is pressed in quick succession, the next character available on that key is displayed. Releasing the key or pressing another key enters the character displayed. The cursor moves to the next position.

In T9 (Abc) or Multi tap (Abc) mode, the first entered letter in a sentence is in upper case.

Menu Display



NOTE: Menu display contents are dependent on your SIM.

The menu system provides the means for accessing the functions which do not have their own dedicated buttons on the keypad.

From idle mode

1. (Menu)

The main menu display has 9 menu options (See "Menu Structure" on page 23.)

2.
equired menu
(Select)

OR

press a number next to a menu icon to access a menu option directly.

To go back to the Menu display,

The second secon

Menu Structure

The 9 main menus are as follows:



My Phone Sounds Display Language Alerts Profiles Auto answer Any key answer Defaults



Games Hit Mouse Memory



Contacts Browse Create Groups Memory status My Numbers Hotkey dial My Contacts



Calendar



Key Guard



Messages Create Inbox Outbox Archive User Messages Memory status Settings Cell Broadcast



Phone Menu (or STK)* Call Service Call Diverts Security Network



Application Clock Calculator Currency Melody composer (Phone Menu)*




Records Last dialled Answered Unanswered Delete all

*STK(SIM Tool Kit) is SIM dependent.

My Phone Menu

My Phone

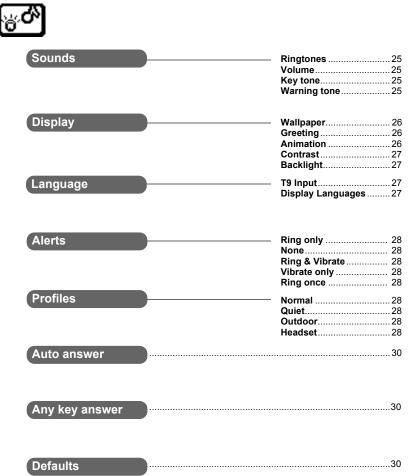

Sounds

Ringtones

You can change the ringtones for specific events such as incoming calls, messages, or alarms. To customise the ringtone, select the event first, then modify the ringtone.

From My Phone

e (
Back

- 1. \ominus Sounds \bigcirc (Select)
- 2. \ominus Ringtones 🕞 (Select)

Volume

From My Phone

- 1.
 Sounds (Select)
- 2.
 Select)
- 3. ⊜ Adjust the volume level ⊃(OK)



Key tone

From My Phone

- 1.
 Sounds (Select)
- 2. 😑 Key tone 🕞 (On/Off)

Warning tone

The warning tone informs you of low battery.

From My Phone

- 1. Sounds (Select)
- 2. \ominus Warning tone 🕞 (On/Off)



Display

Wallpaper

You can change the wallpaper on the idle display. Idle mode can also change to the clock.

From My Phone

- 1.
 Display (Select)
- 2.
 Wallpaper (Select)
- 3. \bigcirc required wallpaper \bigcirc (Select)



You can create a greeting message that is displayed each time the phone is switched on.

From Mv Phone

- & Abc 1. 😑 Display 🕞 (Select)
 - 2. Greeting (Edit)
 - 3. Enter the greeting \bigcirc (OK)



Greeting

4. (On/Off)

Animation

You can change the animation on the display when the phone is powered up.

From My Phone

- 1.
 Display (Select)
- 2.
 Animation (Select)
- 3. \bigcirc required animation \bigcirc (Select)



Contrast

You can adjust the contrast of the display.

From My Phone

- 1. 😑 Display 🕞 (Select)
- 2. 😑 Contrast 🕞 (Select)
- 3. ⊖ Adjust the contrast ⊃(OK)

Backlight

You can select the backlight On/Off.

From My Phone

- 1. 😑 Display 🕞 (Select)
- 2. 😑 Backlight 🕞 (On/Off)

Language

T9 Input

When you create a text this function helps to dramatically reduce the number of key presses.

From My Phone

- 1. 😑 Language 🕞 (Select)
- 2. 😑 **T9 Input** 🕞 (Select)
- 3. ⊜ required input type ⊃(On/Off)

Display languages

It is possible to change the display language on your phone. From **My Phone**

- 1. 😑 Language 💿 (Select)
- 2.
 Display languages (Select)
- 3.

 required language (Select)



🛛 T9 Prefer

Input language

Back

On/Off

You can set your phone to ring and/or vibrate when you receive a call or messages.

From My Phone





The following options are available when a call is received:

- Ring only
- None
- Ring & Vibrate
- Vibrate only
- Ring once

Profiles

) Headset

🖲 Normal

)Quiet

Menu

Activating a profile

You can switch between four profiles in your phone, each with a distinct combination of alert method, ringtone, etc. Profiles are set up for use in different environments.


From My Phone

- 1.
 Profiles (Select)
- 2.
 eige required profile (Menu)
- 3.
 Activate (Select)

Activate The following options are available:



Normal	Suitable for everyday settings
Quiet	With a ringtone, appropriate for formal occasions
Outdoor	Suitable when in noisy environments
Headset	Appropriate with vibrator when it is difficult to hear the ringtone

 

Setting a profile

You can customise a profile by changing the ring volume, key tone, warning tone, vibrator, and/or backlight.

Ring volume:

From My Phone

1. 🤅	🖯 Profil	es 回	(Select)
------	----------	------	----------

- Prequired profile (Menu)
- 3.
 Change settings (Select)
- 4. \ominus Ring volume 🕞 (Select)
- 5. \bigcirc Adjust the volume level \bigcirc (OK)

Key tone:

From My Phone

- Ring volume Key tone Warning tone On/off Back
- 1.
 Profiles (Select)
- 2. 🤤 required profile 📼 (Menu)
- 3.
 Change settings (Select)
- 4. \ominus Key tone 🕞 (On/Off)

Warning tone:

From My Phone

	Key to	ne		
/	Warni	ng	tone	
🖾 Vibrator 👘 🎽				
On/off			Back	

🛛 Warning tone

Back

🖉 Vibrator

🖾 Backlight

On/off

- 1.
 Profiles (Select)
- 2. 😑 required profile 🕞 (Menu)
- 3.
 Change settings (Select)
- 4. 🤤 Warning tone 🕞 (On/Off)

Vibrator:

From My Phone

- 1.
 Profiles (Select)
- 2. \ominus required profile 🕞 (Menu)
- 3.
 Change settings (Select)
- 4. \ominus Vibrator 🕞 (On/Off)

Backlight:

From My Phone

🗇 Vibrator	1. \ominus Profiles 🕞 (Select)
🖉 Backlight	2. 😑 required profile 🕞 (Menu)
Ring volume	3. 😑 Change settings 🕞 (Select)
On/off Back	4. 🤤 Backlight 📼 (On/Off)

🖾 Backlight	t
Ring volu	Ime
🖾 Key tone	
Select	Back

Auto answer

Auto answer can be set. To use this function, the personal hands free earpiece needs to be connected to the phone.

Profiles
Auto answer
Any key answer
On/Off Back

From My Phone

Auto answer (On/Off)

Any key answer

	Auto ansi	<i>v</i> er		
\checkmark	Any key a	nswer		
Defaults				
0	n/Off	Back		

Calls can be answered by pressing any key (except \gg). From **My Phone** \bigcirc **Any key answer** \bigcirc (On/Off)

Defaults

All personal settings are returned to their factory default settings.

From My Phone

- 1.
 Defaults (Select)
- 2. "Restore factory settings?" (Yes) or (No)

Games Menu

Games

Hit Mouse

Memory

33

Selecting games

From Games menu

Hit Mouse or Memory (Select).

NOTE: Once the power is switched off, High scores or Best scores may be lost.

Hit Mouse



When you see the mouse, press any button from1 to 9 as quickly as possible to hit it. Keep in mind that the cat is not your target.

Example: If you press 5, you will hit the object hidden in the 5th hole. This game will end automatically and you will be given a score. This score might be the highest one! Good luck!

Key operation:

Press () ~ (9^{WVJ2}).

Starting games:

Select New by pressing \bigcirc (New).

To change settings:

- 1. 🕞 (Menu)
- 2. 🤤 Change settings 🕞 (Select)
- 3. \ominus required setting 🕞 (On/Off)

To start the game on a level of your choice:

- 1. 🕞 (Menu)
- 2. 😑 Level 💿 (Select)
- 3. \ominus required level 回 (Select)

To see the top score:

- 1. (Menu)
- 2. \ominus Top score 🕞 (Select)

To see the instructions:

- 1. 🕞 (Menu)
- 2. 😑 Instructions 🕞 (Select)

Memory



Match cards to find pairs with as few tries as you can, and make all cards visible. You can press keys 2, 4, 6, and 8 to move the cursor as you wish, and key 5 to select cards. When all cards are visible, you can get a score or maybe top score. Good luck!

Key operation:

 $\label{eq:press_abc} \text{Press} \ \textcircled{\textbf{2}abc}, \ \textcircled{\textbf{4}ghi}, \ \textcircled{\textbf{5}ikl}, \ \textcircled{\textbf{6}^{mn0}}, \ \textcircled{\textbf{8}tuv}.$

Starting Games:

Select New by pressing \bigcirc (New).

To change settings:

- 1. 🗩 (Menu)
- 2. 🤤 Change settings 🕞 (Select)
- 3. (a) required setting (On/Off)

To start the game on a level of your choice:

- 1. 🗩 (Menu)
- 2. 😑 Level 📼 (Select)
- 3. 🖨 required level 🕞 (Select)

To see the top score:

- 1. 🕞 (Menu)
- 2. 😑 Top score 🕞 (Select)

To see the instructions:

- 1. 🗩 (Menu)
- 2. 😑 Instructions 🕞 (Select)

Contacts Menu

Contacts



Browse	SIM35 Phone35
Create	SIM
Groups	Friends
Memory status	
My Numbers	
Hotkey dial	
My Contacts	SIM 40

Browse

Viewing the Contacts list in your SIM/Phone

You can search a number in the Contacts list.

From Contacts

- 1.
 Browse > SIM or Phone (Select)
- 2.

 required contact entry (Menu)
- 3.
 View (Select)
- If you press a letter key in step 2, you can jump to the first entry starting with the letter.

Create

SIM

Phone

Select

Creating a Contacts list in SIM

Phone numbers can be stored in your SIM. You can store names, phone numbers, location and record numbers in the SIM.

From Contacts

- 1.
 Create (Select)
- 2. \ominus SIM 🕞 (Select)
- 3. Enter the name 😔
- 4. Enter the phone number \ominus
- 5. 🗩 (Save)
- 6. "Saved in SIM" is displayed

New entry	🖉 Abc
Name	
I	
0	

Back

NOTE: The length and amount of data are SIM dependent.

Save

Creating a Contacts list in Phone

You can store name, phone numbers, groups and melodies in your phone.

From Contacts

- 1.
 Create (Select)
- 2.
 Phone (Select)
- 3. Enter the name \ominus > Phone
- 4. Enter the phone number \bigcirc > Groups
- 5. (Set) (Select) (Select)
- 6. \bigcirc (Set) \bigcirc required melody \bigcirc (Select)
- 7. When entries are completed, \bigcirc (Save)
- 8. "Saved in Phone" is displayed.
- The entries are grouped together and are retained even if you damage your SIM.

Storing a fixed dial number in FDN

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN, which is located in your SIM. When this function is on, only the Fixed dial numbers can be dialled, and any attempt to call any other numbers will fail.

To activate this function, you need to set Fixed Dial on. See page 62.

From Contacts

- 1.
 Create (Select)
- 2. 😑 SIM 🕞 (Select)
- 3. Enter the name 😔
- 4. Enter the phone number ⊖
- 5. (Set) 😔 FDN 🕞 (Select)
- 6. 🕞 (Save)
- 7. Enter PIN2 code > (OK)
- 8. "Saved in SIM" is displayed.
- To store a Fixed dial number, you need to enter your PIN2 code.



Options

Edit:

You can edit the selected Contacts entry.

From Contacts

- 1.
 Browse > SIM or Phone (Select)
- 2. \bigcirc required phone number or name \bigcirc (Menu)
- 3. \ominus Edit 🕞 (Select)
- 4. 🗩 (Save)

Delete:

You can delete the selected Contacts entry.

From Contacts

- 1.
 Browse > SIM or Phone (Select)
- 2. \ominus required phone number or name \bigcirc (Menu)
- 3. \bigcirc **Delete** \bigcirc (Select)
- 4. "Delete this contact entry ?" (Yes) or (No)

Delete all:

You can delete all the Contacts entries.

From Contacts

- 1.
 Browse > SIM or Phone (Select)
- 2. \bigcirc required phone number or name \bigcirc (Menu)
- 3. 😑 Delete all 🕞 (Select)
- 4. "Delete all entries ?" (Yes) or (No)

Copy to Phone/SIM:

You can copy the selected Contacts entry to the phone or your SIM.

From Contacts

- 1.
 Browse > SIM or Phone (Select)
- 2. \bigcirc required phone number or name \bigcirc (Menu)
- 3.
 Copy to Phone/SIM (Select)
- 4. "Copy entry to Phone/SIM ?" (Yes) or (No)

Delete	ן ו
Delete all	
Select Back	4

Back

Edit

Delete

Select

Delete all	
Copy to SIM	1
Select	Back

Copy to SIM Copy all to SIM Select Back

Copy all to Phone/SIM:

You can copy all the Contacts entries to the phone or SIM. From **Contacts**

- 1.
 Browse > SIM or Phone (Select)
- 2. \bigcirc required phone number or name \bigcirc (Menu)
- 3.
 Copy all to Phone/SIM (Select)
- "Copy all entries to Phone/SIM ?" (Yes) or
 (No)

Search:

You can search for a name in the Contacts list. From **Contacts**

- 1.
 Browse > SIM or Phone (Select)
 Select)
- 2. 🗩 (Menu)
- 3. \ominus Search 🕞 (Select)
- 4. Enter the first letter of the required name (Select)

Groups

🖭 000/ VIP

Menu

You can categorise the items stored in your phone into 5 groups: Friends, Colleagues, Family, Others and VIP. You can select a particular ringtone for each group to identify the incoming call.

From Contacts



Back

- 1. 😑 Groups 🕞 (Select)
- Prequired Group (Menu)

The following options are available :

View	View the Contacts entries in the selected group
Set ringtone	Set the required ringtone
Remove entries	Delete all the Contacts entries in the selected group

If there is no entry stored in the selected group, "List empty" is displayed.



The following options are available by pressing (Menu) after you select an entry from the selected group:

View	View the selected Contacts entry
Edit	Edit the selected Contacts entry
Delete	Delete the selected Contacts entry
Search	Search for a desired item in the selected group by entering the name.

Memory status

SIM 005 / 010 Phone 001 / 250 0X Memory status shows how many locations are available in the Contacts list.

Maximum memory capacity:

- Phone 250 locations
- SIM (SIM dependent)

From Contacts

Memory status (Select)

My Numbers

7036626262

My Numbers is a handy phonebook where names and phone numbers can be stored and viewed.

From Contacts

- 1.
 My Numbers (Select)
- 2. 😑 required entry 🕞 (Menu)
- No.001# 3 Edit 4

Menu

- No.001# 3. \ominus Edit \bigcirc (Select)
 - 4. Enter your phone number \bigcirc
 - 5. Enter your name \bigcirc (Save)

The following options are available by pressing \bigcirc (Menu) when you select the required entry:

View	View the selected My Numbers entry
Edit	Edit the selected My Numbers entry
Delete	Delete the selected My Numbers entry

Hotkey dial

Setting Hotkey dial



You can quickly dial phone numbers stored at locations 001 - 009 in the Contacts list.

From Contacts Hotkey dial (On/Off)

NOTE: This function is SIM dependent.

Making a call by using Hotkey dial

From idle mode

- 1. Press and hold a numeric key ($\bigcirc \sim \textcircled{I}$)
- 2. Press 🔊

My Contacts

You can select SIM or Phone so that the Contacts list directly accessed from idle mode is set to the SIM or Phone Contacts list.

From Contacts

- 1.
 My Contacts (Select)
- 2. 😑 SIM or Phone 🕞 (Select)





Calendar



New event

You can organise your Calendar to remind you of a personal event, such as a holiday period or birthday. You need to set the clock, day and time before entering anything in the Calendar.

From Calendar

- To select a day, press numeric keys 2, 8, 4 and 6 to move the cursor ↑, ↓, ← and → respectively, to set the desired day. (Agenda)
- 3. <New entry> (Select)
- 4. (Set) to select a type of event from **Memo** and **Meeting** (Select)
- 5. \ominus to enter Description
- 6. 😑 to enter Start date
- The second seco
- 8. \ominus to enter End date

Ensure that Calendar settings will not contravene any regulations by switching on automatically when in an aircraft, medical facility, etc. – (see "Operating Instructions Part 2".)



View event




From Calendar

- 2. When Month format is selected:
 - Select a day by using the numeric keys (\bigcirc , \bigcirc , 2, 4, 6 and 8) \bigcirc (Agenda) When Week format is selected: Schedule icon(s) will be shown corresponding to a period of time selected by pressing \bigcirc . (Period of time : 4=0:00-3:59, 8=4:00-7:59, 12=8:00-11:59, 16=12:00-15:59, 20=16:00-19:59, 24=20:00-23:59) Select a day by using the numeric keys (2,4,6 and 8)
 - (Agenda)
- 3. \bigcirc required schedule \bigcirc (View)
- To return to the previous display, (OK) To edit (Edit), edit the required information (Save).

<Example>

Agenda:2004/02/10 Start 0:00~End 3:00

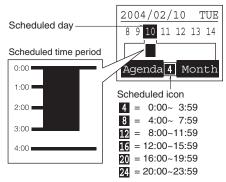

 * Press ⊕ to change the schedule icon into different periods of time.

Key Guard

Key Guard



The Key Guard function is used to prevent any keys from being accidentally pressed, e.g. when the phone is being carried.

From Key Guard


- 1. (Yes) or (No)
- > When Key Guard is enabled, On appears on the display.
- > Emergency calls are still possible.
- When a call is received, Key Guard will be disabled temporarily, and you can answer the call

NOTE: When making emergency calls with the "Key Guard" enabled, there will be no visual indication that the number is being dialled.

When O_{T} appears on the display, \bigcirc (Free) > "**Press ok to** free keypad" \bigcirc (OK).

Guard keypad Yes No

Messages Menu

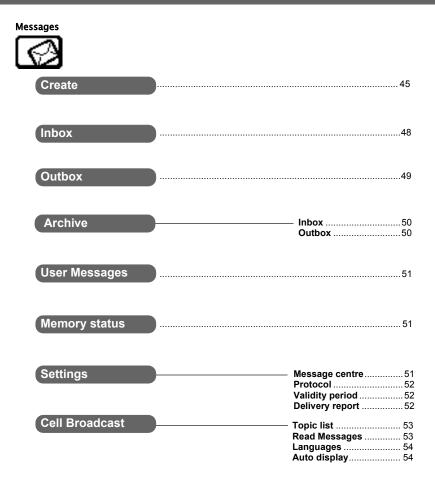

Create

Message centre

It is possible to receive, display, edit and/or send text messages of up to 1520 characters in 10 messages (depending on the language), to the network that has a roaming agreement (depending on the recipient's phone options). Before sending a message, you need to enter the Message centre number into Settings.

From Messages

- 1.
 Settings > Message centre (Select)
- Enter the message centre number in the international dial format (see "International dialling" on page 13) (OK)

NOTE: Your network operator may have pre-programmed this number. Do not change this number as it may cause the failure of SMS Messaging.

Edit entry Service centre: +1122334455 OK Clear

Creating a message

From Messages

SMS 1520 🖉 Abc

Menu

- 1. \ominus Create 🕞 (Select)
- Create your text message max. 1520 characters (see "Text entry" on page 19) (Menu)
- 3. \ominus Send 🕞 (Select)
- Enter the destination phone number (OK) OR

Recall a number from **Contacts** (Names) >

 \bigcirc required name \bigcirc (Select) > \bigcirc (OK)

When you create a text, these options are available by pressing (m)(Menu):

Send	Send text as a Short Text message
Save	Save text in the Outbox in your SIM
Save and send	Save text in the Outbox in your SIM and send it
Picture & sound	Add a picture and/or sound to the text. See page 47.
User Messages	Use a short message stored in the phone For editing the User Message, see "User Messages" on page 51.

 
> You can change T9[®] mode On/Off pressing (

EMS (Enhanced Message Service)

You can add a picture and sound to an SMS.

Picture:

From Messages



- 1. \ominus Create 🕞 (Select)
- 2. Create your text message (Menu)
- 3.
 Picture & sound (Select)
- 4.
 e required picture (Select)

Sound

From Messages

- Claps 7 1
- 7 1. 🤤 Create 🕞 (Select)
 - 2. Create your text message (Menu)
 - 3. 🤤 Picture & sound 🕞 (Select)
 - Picture 4. 🗩 (Sound)
 - 5.
 eigenvectors in the second (Select) is the second seco

Inbox

Viewing a received message

When a Short Text Message is received, the message indicator will flash on the display and a user preset audible alert will sound. If you are on a call you will be alerted by the vibrator.

 $\ensuremath{\boxtimes}$ flashes when an unread message is received in the Inbox. When the Inbox is full, $\ensuremath{\boxtimes}$ will remain until old messages are deleted.

From Messages

- 1. 😑 Inbox 🕞 (Select)
- 2. 😑 required message 🕞 (Menu)
- 3. \ominus View 🕞 (Select)

NOTE: If the message indicator is displayed constantly (does not flash), this means that the message area is full, and you need to delete old messages in order to receive new messages.

When reading messages, the following options are available by (D)(Menu):

Delete	Delete a message
Reply	Create an SMS reply
Forward	Forward a message to another phone
Edit	Edit a message and save and/or send it to somebody else
Delete all	Delete all messages in Inbox
Extract Number	Extract numbers in messages and save in Contacts
Move to Archive	Move a message to Archive Inbox



Outbox

Viewing a sent message

A list of sent message is stored in your SIM. You can select a message from the list and view it.

From Messages

- 1. \ominus Outbox 🕞 (Select)
- 2. 😑 required message 🕞 (Menu)
- 3. \ominus View 🕞 (Select)

While you are reading a message, the following options are available by pressing \bigcirc (Menu):

Delete	Delete a message
Edit	Edit a message and save and/or send it to somebody else
Send	Send an SMS message after entering a recipient number
Delete all	Delete all messages in Outbox
Extract Number	Extract numbers in messages and save in Contacts
Move to Archive	Move a message to Archive Outbox

Jaques 2004.02.26 11:25 62627036638631 Menu Back

Archive

Viewing a stored message

To view the list of messages which are stored in Archive.

- Inbox: When a message saved in the Inbox is moved into Archive, the message will be saved in the Archive Inbox.
- > Outbox: When a message saved in the Outbox is moved into Archive, the message will be saved in the Archive Outbox.

From Messages

- 1. Or Archive (Select)
- 2. 🖨 Inbox or Outbox 🕞 (Select)
- 3. 😑 required message 🕞 (Menu)
- 4. \ominus View 🕞 (Select)

When reading a message, the following options are available by ()(Menu):

Send (Outbox)	Send a message to another phone
Edit	Edit a message and save and/or send it to somebody else
Delete	Delete a message
Forward (Inbox)	Forward a message to another phone
Delete all	Delete all messages in Archive Inbox/ Outbox

Outbox Archive User Messages Select Back

User Messages

You can edit the preset User Messages, then save them for later use

From Messages

P	lease call me!
I	will call you later!
I	will be late!
	Select Back

- 1. \ominus User Messages 🕞 (Select)
- 2. 🤤 required message 🕞 (Select)
- Edit the message (Menu)
- 4. Save and send or Save (Select)

NOTE: If the text is wider than the screen display, the text will scroll.

Memory status

Memory status shows how many locations are left to store messages in the Inbox.

From Messages

SIM 000 / 008 Phone 000 / 050 Archive 000 / 050

Memory status (Select)

The maximum memory capacity:

- SIM (SIM dependent max. 100 locations)
- Phone 50 locations
- Archive 50 locations

Settings

Message centre

Before sending any messages, you need to enter your Message centre number. This number is provided by your service provider.

From Messages

- 1. Settings (Select)
- 2. \ominus Message centre 🕞 (Select)
- 3. Enter your Message centre number



Protocol

The Message centre is able to convert your message to the format specified by the selected protocol.

From Messages

- 1. \ominus Settings 🕞 (Select)
- 2. \bigcirc **Protocol** \bigcirc (Set)
- Select required setting from Standard text, Fax, X.400, Paging, E-mail, ERMES, or Voicemail (Select)

Validity period

You can set the duration that your message is stored at the Message centre.

From Messages

- 1. \ominus Settings 🕞 (Select)
- 2. 😑 Validity period 🕞 (Set)
- Select required setting from Maximum, 1 Hour, 12
 - Hours, 1 Day, or 1 Week (Select)

Delivery report

You can request a delivery report regarding the status of a sent message.

From Messages

- 1. Settings (Select)
- 2. 😑 Delivery report 🕞 (On/Off)





O 12 Hours	1
🖲 1 Day 🔰	2
◯ 1 Week	3
Select Back	


🔿 Voicemail Standard text ि Fax Select Back

Cell Broadcast

Topic list

You can receive your favourite information regularly from your service provider.

You need to specify the "topic(s)" of information and the language in which you wish to receive this information. To receive the broadcasts, "Cell Broadcast" must be on.

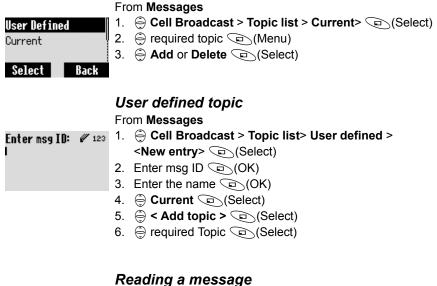

From Messages

- 1.
 Cell Broadcast (Select)
- 2.
 Read Messages (Select)
- 3. (Next) to select the required topic

NOTE: This function will depend on your network service operator.

Newsfla:	shes
	XXXXXXXXX XXXXXXX
Next	Back

Language

You can set the language of the message you receive.

From Messages

- 1. 🤤 Cell Broadcast 🕞 (Select)
- 2.
 Display Languages (Select)
- 4. \ominus Insert 🕞 (Select)
- 5.
 eigenvector for the second second
- The added language is displayed above the language you selected in step 3.
- If you wish to add a new language to the end of the list, select "Add to end" in step 4.
- > To resume a language, select "Delete" in step 4.

Auto display

In idle mode, the latest Info Message is displayed on your phone automatically.

From Messages


- 1. 🤤 Cell Broadcast 🕞 (Select)
- 2. 😑 Auto display 🕞 (On/Off)



English German French Select Back

Phone Menu

Phone Menu (or STK)*

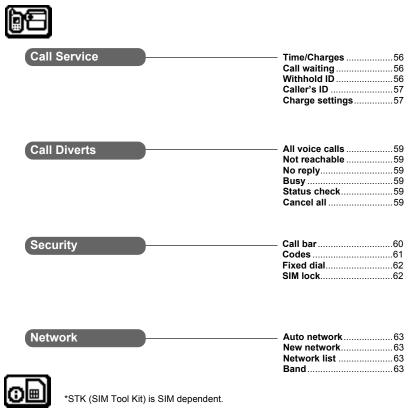

NOTE: If SIM card provides SIM Tool Kit services (STK), this menu will become the STK Menu. You can still access Phone Menu from Application.

Call Service

Viewing time/charges

From Phone Menu

- 1.
 Call Service > Time/Charges (Select)
- 2. O Last call, All voice calls or Cost left (Select)

0:00	Minutes	

Reset

Back

Last call	Display the duration of last call	
All voice calls	Display the total duration for all voice calls	
Cost left	If Max cost is on, display the remaining units. For setting the Max cost, see page 58.	

Call waiting

If Call waiting is switched on, a second call can be received. Turn this function on before making a multiparty (conference) call.

From Phone Menu

- 1.
 Call Service > Call waiting (Select)
- 2. 😑 Set, Clear or Check status 🕞 (Select)



Withhold ID allows you to prevent showing your name and/or number to the calling party.

From Phone Menu

- 1.
 Call Service (Select)
- 2. \ominus Withhold ID 🕞 (Select)

NOTE: When checking the status, the phone must be registered to a network.



Call waiting Withhold ID Caller's ID Select Back

Caller's ID

Caller's ID allows you to display the Caller's name and/or number on your display.

From Phone Menu

- 1. \ominus Call Service 🕞 (Select)
- 2. \ominus Caller's ID 🕞 (Select)

NOTE: When checking the status, the phone must be registered to a network.

Charge settings

NOTE: The duration of one unit may vary between peak and offpeak times. Call charges can be calculated accordingly. However, the actual tariffs charged by your service provider may not be reflected in the calculation.

 
Currency:

Firstly, Personal rate must be entered. This is the cost that the service provider charges for one unit of call time. See "Personal rate:" on page 58.


From Phone Menu

- 1. Call Service > Charge settings (Select)
- 2. ⊖ Currency ⊡ (Select)
 Current setting is displayed
- 3. (Set) > Enter PIN2 code (OK)
- 4. Enter currency units (max. 3 characters) (OK)

NOTE: This function is SIM dependent



Currency: OK Set

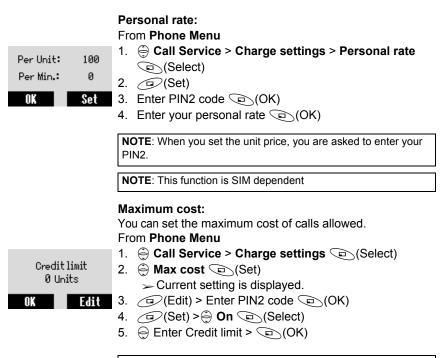

NOTE: This function is SIM dependent

Auto display:

In idle mode, the cost of the latest Incoming call is displayed on your phone automatically.

From Phone Menu

- 1.
 Call Service > Charge settings (Select)
- 2. 🤤 Auto display 💿 (On/Off)



Call Diverts

Divert Divert to 70366262	# 123
OK	Clear

From Phone Menu

- 1. \ominus Call Diverts 🕞 (Select)
- Select the circumstances to initiate the divert
 (Select)
- 3. 😑 Set, Clear, or Check status 🕞 (Select)
- 4. Enter the phone number to divert to \bigcirc
- > Enter the voice mail centre number if you wish incoming voice calls to be diverted to the voice mail centre.
- > When a divert situation is enabled, the divert icon (\() is displayed.
- > When updating or checking the status of Call Divert, the phone must be registered to a network. ($~\intercal~$)

All voice calls	Divert all incoming voice calls
Not reachable	When you are not in a coverage area, divert incoming voice calls
No reply	If you do not answer the phone, divert incoming voice calls
Busy	When a call is in progress, divert incoming voice calls
Status check	Check the current Call Diverts status
Cancel all	Cancel all Call Diverts settings

Voice calls can be diverted to voicemail box or to a number that you specify.

Security


Call bar

Call barring restricts certain outgoing and/or incoming calls using a password supplied by your service provider. When updating/checking the status of Call bar, the phone must be registered to a network.

From Phone Menu

- 1. 🤤 Security > Call bar 🕞 (Select)
- 2. \bigcirc required setting from the table shown below
 - (Set) or (Select)
- 4. Enter required password (Select)

All outgoing	All outgoing calls are barred
All outgoing	
Outgo int'l.	International outgoing calls are barred
Out. int'l. x home	International outgoing calls except to your home country are barred
All incoming	All incoming calls are barred
When roaming	All international incoming calls when roaming outside the home PLMN are barred
Status check	Call bar status is displayed
Cancel all	Cancel all Call bar settings
Password	Change Call bar password

 

Codes

Change phonecode:

The Phonecode is used for the SIM lock, which protects the phone from being used with a SIM other than yours.

From Phone Menu

- 1. 😑 Security > Codes 🕞 (Select)
- 2. 😑 Change phonecode 🕞 (Select)
- 3. Enter a new phonecode (OK)
- 4. Enter the new phonecode to verify (OK)

PIN control:

The PIN protects your SIM against unauthorised use. If you enable the PIN, every time the phone is switched on you will be prompted to enter the PIN.

From Phone Menu

- 1. Security > Codes (Select)
- 2. 🤤 PIN Control
- 3. Enter PIN number (OK)
- Get to either enable or disable the PIN □ (Set).
- 5. 🗩 (OK)

Changing PIN/PIN2:

From Phone Menu

- 1. 🤤 Security > Codes 💿 (Select)
- 2. \ominus Change PIN or Change PIN2 🕞 (Select)
- 3. Enter the current code (OK)
- 4. Enter the new code (OK)
- 5. Enter the new code to verify \bigcirc (OK)

NOTE: To enter the PUK code for your PIN, enter ****05#**. You will then be prompted to enter the PUK code. Follow the on-screen instructions. To enter the PUK2 code for PIN2, enter ****052#**. You will then be prompted to enter the PUK2 code. Follow the on-screen instructions. If the PUK/PUK2 code is entered incorrectly 10 times, the phone will cease to operate permanently. All information stored in the SIM will be lost and the SIM will need to be replaced. Contact the service provider for more details.





Please enter your PIN:

Please enter vour PIN:

Fixed dial:

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN, which is located in your SIM. When this function is on, only the Fixed dial numbers can be dialled, and any attempt to call any other number will fail.

From Phone Menu

- 1. 😑 Security 🕞 (Select)
- 2. 🖨 Fixed dial 🕞 (Select)
- 3. Enter PIN2 code (OK)
- When Fixed dial is on, any manually dialled phone numbers must be the same as the numbers in the Fixed Dial Store, otherwise the call cannot be made.
- A phone number may be stored, edited or deleted. You will be prompted for your PIN2 code.

SIM lock:

 
Once you enable the SIM lock, you will be prompted to enter your phonecode when you switch on the phone with a different SIM inserted.

From Phone Menu

- 1. 😑 Security 🕞 (Select)
- 2. 😑 SIM lock 🕞 (Select)
- 3. Enter phonecode (OK)
- 4. (Set) to set the SIM lock on/off
- 5. 🗩 (OK)

NOTE: Your phonecode must be 4 to 8 digits. You are advised to write down your phonecode. If the phonecode is entered incorrectly 3 times, the phone will cease to operate permanently.





Network

Setting:


From Phone Menu

You can select a network that is available in your current location.

- 1. \ominus Network 🕞 (Select)
- 2. Gelect one of the settings below (On/Off) or (Select)

Auto network	Set Auto network on or off.
New network	When Auto Network is on, search an available network automatically. When Auto network is off, you must select a network manually.
Network list	Create and edit a network list according to your preferences.
Band	Choose a network band: 900/1800, 900/ 1900, 900, 1800, 1900 MHz.

 NOTE: This function is SIM dependent



Application Menu

Application

Clock	Settings Alarm Power off time	66
Calculator)	67
Currency)	67
Melody composer)	68
(Phone Menu)*)	69

Clock

Settings

Time zone:

From Application

- 1. Clock > Settings > Time zone (Select)
- \bigcirc required region \bigcirc (Select)
- 3. "Daylight saving?" (Yes) or (No)
- 4. "Set this zone to local" (OK)
- 5. "Success!" (OK)

Time & date:

From Application

- 1. \bigcirc Clock > Settings > Time & date \bigcirc (Select)
- 2. \bigcirc (Set) to enter the date and the time \bigcirc (OK)

2004.02.26 10:12 Set ΩK

Date format:

You can select the desired display format for the time and date.

From Application

- 1.
 Clock > Settings > Date format (Set)
- 2. \bigcirc required format \bigcirc (Select)



Time format:

From Application

- 1.
 Clock > Settings > Time format (Set)
- 2. \bigcirc required format \bigcirc (Select)





Display time:

You can show the time and date on the display in idle mode. From **Application**

- 1.
 Clock > Settings (Select)
- 2. 😑 Display time 🕞 (On/Off)

Alarm:

From Application

- 1. \ominus Clock > Alarm 🕞 (Set)
- 2. (Set) > Enter the time (24 hour clock) (OK)
- 3. \ominus Repeat daily, Once or Disabled 🕞 (Select)
- 4. "Alarm time has been updated!" (OK)
- > The alarm set indicator a appears on the idle display.
- > When the set time is reached, the alarm will sound.
 - If you are on a call, the phone will vibrate without sound.

To stop the alarm:

Press any key or (Off)

OR

(Pause) to pause the alarm and start again after 5 minutes

NOTE: Even if the phone is switched off, when the Alarm is set on, the phone will switch on automatically and start the alarm.

Power off time

The phone can be set to turn itself off automatically at a specified time using the Power off feature.

From Application

- 1. \bigcirc Clock > Power off time \bigcirc (Set)
- 2. Enter the time (24 hour clock) (OK)
- 3. Green Repeat daily, Once or Disabled (Select)
- 4. "Power off time setting updated!" (OK)

Power off time ØØ:00

66

Alarm 2. 10:00 3.

Back

Set

Calculator

You can use the 4 function calculator (addition, subtraction, multiplication and division) to make simple arithmetic calculations.

From Application

- 1. \ominus Calculator 🕞 (Select)
- Enter a number (max. 9 digits). It will be displayed on the upper right of the display. If a decimal point is required, press (₱ ₱), when a minus sign is needed press (♥).
- 3. \bigcirc to select the arithmetic operation
- 4. Enter a number (max. 9 digits). It will be displayed next to the operation symbol.

If \bigoplus is used to select another arithmetical operation to perform, an intermediate calculation will be performed and the result will be displayed.

5. (=) to calculate

Currency

 
Rate setting

The currency convertor enables you to convert from/to a home currency using a conversion rate that you enter. Before beginning conversions, choose a base currency and enter the conversion rate. The base currency rate is set to 1.

From Application

- 1.
 Currency (Select)
- 2. 😑 Rate setting 🕞 (Select)
- Enter the conversion rate next to the pencil icon
 (OK)
- 4. (Save)
- > You can change the base currency by pressing \bigcirc .
- ➤ If a decimal point is required, press (#)





Rate computing

From Application

1. 😑 Currency 🕞 (Select)

- 2. A Rate computing (Select)
- B. Enter the amount of your currency to convert into the other currency (c) (Convert)
 - > You can change the base currency by pressing \ominus .
 - > If a decimal point is required, press (#*)

Melody composer

Clear


Composing a melody

From Application

- 1. \ominus Melody composer 🕞 (Select)
- 2. 🤤 required My Music 🕞 (Select)
- 3. \ominus Melody edit 🕞 (Select)
- 4. 🤤 required track 🕞 (Select)
- Compose your melody See the notes chart below
 (Menu)
- 6. \ominus Save 🕞 (Select)

Using the following table as a reference, enter notes (from the choice of low, middle and high), rests, and duration of each, to generate your composition. Main Track and Sub Tracks are played together when you play the composed music.

Key	\bigcirc	(Zabc)	3 def	(4 ghi	S jkl	6 mno
Func	С	D	E	F	G	Α
Key	Tpqrs	8 tuv	9 ^{wxyz}	0+)	۲	(#x)
Func	В	Rep.	Dotted note	Rest	Duration	Low, Low #, Middle, Middle #, High, High #

 

Home:Other Ø

Й

Convert

Play

To play the composed melody before saving: $(Menu) > \bigoplus Play \bigoplus (Select)$

Tempo

Before you save the composed melody, you can change the tempo, and/or the instrument to play the melody. To arrange the tempo of the composed melody:

- 1. (Menu) > (Select) Tempo
- 2. 🖨 required tempo 🕞 (Select)


Select instrument

You can select the instrument to play the composed melody: $(Menu) > \bigoplus$ Select instrument (D) (Select)

Phone menu

This menu is available under the Application Menu if your SIM card provides STK services. To use this menu, see "Phone Menu" on page 55.

Records Menu

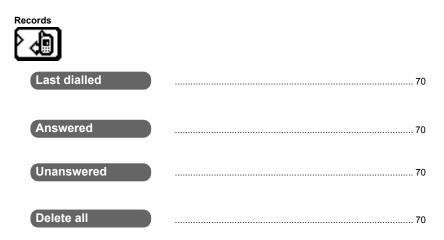

Last dialled/Answered/Unanswered number

Recently dialled phone numbers will be stored in Last dialled. (max. 50)

If an incoming call with Caller's ID is answered, the number will be stored in Answered (max. 50).

If an incoming call with Caller's ID is not answered, the number will be stored in Unanswered (max 20).

From Records

1. \ominus Choose one menu from Last dialled, Answered or

```
Unanswered (Select)
```

OR

In idle mode, 🔊 to view the last dialled numbers directly

Delete all

From Records

- Unanswered Delete all Last dialled Select Back
- 1. 😑 Delete all 🕞 (Select)
- 2. "Delete all calls?" (No) or (Yes)



Accessories

Li-Ion Battery (EB-BSA10)

Double your talk time by having a spare battery.

Rapid Charger (EB-CAD55UK)



Carry a lightweight portable charger wherever you go to ensure you always have power to talk.

Rapid Charger (EB-CAD55EU)



Carry a lightweight portable charger wherever you go to ensure you always have power to talk.

Personal handsfree (EB-EMG70)



Talk and move while keeping your hands free, by using a personal handsfree. Put the ear piece in your ear and the adaptor in the side of the handset, and talk.

How to Identify a Genuine Panasonic Accessory

Panasonic produces some of the most advanced mobile phones available. So, as you'd expect from this class leader, the range of accessories are second to none. Most genuine Panasonic accessories will have a label showing an "EB-XXX00" model number.

NOTE: Accessories are subject to change without notice.

Should any problem persist, contact your dealer.

Problem	Cause	Remedy
Phone will not switch on.		Check that the battery is fully charged and correctly connected to the phone.
Extremely short battery life for a new battery.	The network you are using and the condition of the battery can affect battery life.	
Short battery life for an old battery.	The battery has worn out.	Replace with a new fully charged battery.
The charging indicator does not light, the battery level indicator does not appear and the phone cannot be switched on when charging.	The battery is not attached to the phone, or when the battery has been deeply discharged, the phone will take a short time until the indicator lights.	Leave the phone charging the battery for a few minutes before the indicator lights and your attempt to switch the phone on.
Battery fails to charge. The battery is not attached to the phone.		Ensure the battery is fitted to the phone prior to commencing charging.
	Battery was connected to the phone after the Fast Travel Charger was switched on.	
	 indicates abnormal charging. Battery is defective or of the wrong type. 	Replace with a new battery.
Calls cannot be made.	The phone is locked.	Unlock the phone.
	Outgoing calls are barred.	Disable outgoing call barring or barred dialling.
	The phone is not registered to a network.	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be made from Fixed Dial Store.		Check whether your SIM supports Fixed dial. Check if Fixed dial is switched on. Check whether the phone number is stored in Fixed Dial.

Problem	Cause	Remedy
Calls cannot be received.	The phone is not switched on.	Switch the phone on.
	Incoming calls are barred.	Disable incoming call barring.
	The phone is not registered to a network.	Move to a coverage area and operate your phone after it has registered with a network.
Emergency calls cannot be made.	You are not in a GSM coverage area.	Check that the antenna symbol (T) is displayed – move to a coverage area and operate your phone when the antenna symbol is displayed.
Phone numbers	The phone is locked.	Unlock the phone.
cannot be recalled from Contacts list.	Phone number has been restricted.	Switch off restriction.

Important Error Messages

These are some of the most important error messages which may be displayed:

New codes not same	When you change your password, you must enter the new password twice to confirm. The two codes you entered are not the same. Enter the same code twice.
Password invalid	The password that you entered is not valid. Enter the correct password.
New PIN not accepted	Your new PIN code was not accepted. Please try again.
New PIN2 not accepted	Your new PIN2 code was not accepted. Please try again.
Incorrect entry!	You entered your PIN or PIN2 code incorrectly. Enter the correctly.
Entries do not match!	When you change your password, you must enter the new password twice to confirm. The two codes you entered are not the same. Enter the same code twice.
Invalid password	The reply message from network when you activate call barring with the incorrect password. Enter the correct password.
SIM service not support	The function you selected is not supported by your service provider. Please contact your service provider.
Insufficient space! Continue?	The SIM storage area is full. If you continue, data may be lost. Please delete old records.
Not enough space! Continue?	The message storage area is full. If you continue, data may be lost. Please delete old records.
Authentication failure	Your SIM card is not registered with your service provider. Please contact your service provider.
Blocked	Your SIM card is blocked. Please contact your service provider.

Glossary of Terms

DTMF	Dual Tone Multi-Frequency tones allow you to communicate with computerised phone systems, voice mailboxes, etc.
FDN	Fixed Dial Number. Used to restrict outgoing calls to a certain set of numbers.
GSM	Global System for Mobile communications. The name given to the advanced digital technology that your phone uses.
Network Operator	The organisation responsible for operating a GSM network.
Password	Used for the control of Call Bar.
PIN	Personal Identification Number used for SIM security. Supplied by your service provider. If the PIN is entered incorrectly 3 times, the PIN will be blocked.
PIN2	Personal Identification Number used for the control of Fixed Dial Store and Call Charge metering. Supplied by your service provider. If the PIN2 is entered incorrectly 3 times, the PIN2 will be blocked.
PLMN	Public Land Mobile Network. A network that provides land mobile telecommunications services.
PUK/PUK2	PIN/PIN2 Unblocking Key. Used to unblock the PIN/PIN2 code. Supplied by your service provider. If the PUK/PUK2 is entered incorrectly 10 times, the PUK/PUK2 will be blocked.
Registration	The act of logging on to a GSM/GPRS network. This is usually performed automatically by your phone.
Roaming	The ability to use your phone on networks other than your home network.
Service Provider	The organisation responsible for providing access to the GSM/GPRS network.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Contacts entries and short messages. Supplied by your service provider.
SMS	Short Message Service. A basic mail system used for cellular phones. This service allows sending/receiving of short text messages.

Index

Α

Accessories 7 Li-lon Battery 7 Personal handsfree 7 Rapid Charger 7 Alarm 6 Alerts 2 Animation 2 Answer 3 Auto answer 3 Auto answer 6 Archive 5 Auto capital change 2	71 71 28 26 30 30 30 30 30 30 30 30 30 30 30 30 30
Auto capital change 2	20
В	
Backlight 2	27

Battery	1
Charging	
Fitting and removing	1

С

Calculator	67
Calendar	41
Create	41
View	42
Call	
Answering a call	14

Answering a call	14
During a call	8
Ending	13
Incoming call while on a call	17
Making	
Making a second call	
Mute	14
Reject	14
Call bar	60
Call Diverts	59
Call Service	56
Call status	
Call transfer	
	. /

Call waiting	. 56
Caller's ID	. 57
Cell Broadcast	. 53
Charge settings	
Auto display	. 58
Viewing time/charges	
Clock	
Date format	. 65
Display time	. 66
Power off time	. 66
Time & date	
Time format	
Time zone	
Conference call	
Contacts list	. 35
Сору	. 37
Creating in Phone	. 36
Creating in SIM	. 35
Delete	
Edit	
Search	
Viewing	
Contacts Menu	
Contrast	
Currency	
Rate computing	
Rate setting	. 67
D	
Defaults	. 30
Dialling	. 12
Last number dialling	
Display	
Displays	
DTMF ¹	
E	
Emergency call	13
EMS	
	. – (

F	
FDN	36
Fixed dial	
G	
Games Menu	31
Glossary of Terms	75
Greeting	26
Groups	38
Н	
Hit Mouse	31
Hotkey dial	
1	
Idle display	9
Inbox	
In-call operations	15
Hand held	15
Hands free	15
K	
Key functions	7
Key Guard	43
Key tone	
L	
Language	27
Display Languages	
Μ	
Maximum cost	58
Melody composer	68
Memory	33
Memory status 39,	51
Menu Display	22
Menu Structure	
Message centre	
Messages	
Creating	
Settings	
Messages Menu	
Multi tap mode	21

My Contacts	40
My Numbers	39
My Phone Menu	
Ń	
Network	63
0	
Outbox	49
Ρ	
- Phone	12
Switching on/off	
Phone Menu55,	69
PIN control	61
PIN/PIN2	
Profiles	
R	
Records Menu	70
Ringtones	
S	20
-	~~
Security	
Shift mode change	
SIM	
Fitting and removing	3
SIM lock	02
SMS	
Status icons	
Symbols	11
Т	
T9 [®] Input	27
T9 [®] Text Input	20
Text entry	. 19
Text Input mode change	20
Troubleshooting	72
U	
User Messages	51
V	
Volume	25

W

Wallpaper	26
Warning tone	25
Withhold ID	56

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com