

Panasonic

Operating Instructions
Digital Cellular Phone

SC3



EB-SC3
Mobile Phone

GSM

Before operating this handset, please read these instructions completely.

Charge battery before operation.

Download from www.Somanuals.com. All Manuals Search And Download.

sc3 Operating Instructions

Contents

Important Information	1	Messages	37
Safety considerations.....	1	Messages menu structure	37
SAR.....	7	MMS (Multimedia Message Service).....	37
Care and maintenance.....	9	SMS (Short Message Service).....	44
About this manual	11	SMS Illumination Messages	49
About Your Phone.....	13	Voicemail	53
Phone overview.....	13	Cell Broadcast	54
Key functions.....	14	Memory status	56
Display	16	Contacts	57
Indicator light.....	18	Contacts menu structure.....	57
Getting Started	19	Browsing the Contacts list	58
Installing the SIM card and the battery	19	Adding contacts	59
Charging the battery.....	21	Call log.....	62
Switching the phone on/off...	22	Speed Dial list.....	63
Basic Operations.....	23	Groups	64
Making calls	23	Advanced.....	65
Answering calls	25	Settings	68
Silent mode	26	Settings menu structure	68
Voicemail.....	26	Sounds.....	69
In-call operations.....	27	Alerts.....	71
Multiple calls operations.....	29	Display	71
Text Entry.....	32	Language.....	74
Menu Navigation.....	35	Data connections	75
Main menu structure	35	GSM network	76
Displaying the menu.....	36	Calls.....	78
		Security.....	83
		Auto answer.....	86
		Any key answer	86

Contents

Auto key lock	87	My Media	106
Time and date	87	My Media menu structure...	106
Menu view	88	Pictures	106
Defaults	88	Sounds	106
Profiles	89	User defined folders	107
Games & Apps	90	Shortcuts	107
Games & Apps menu		Memory status	107
structure	90	Calendar	108
Opening an application	90	Camera	110
Settings	91	Taking pictures	110
View Certificate	92	Camera settings	112
Information	92	Accessories	113
Downloading applications	92	PC Software	113
Browser	93	Optional Accessories	114
Browser menu structure	93	Troubleshooting	115
Settings	93	Important Error	
Starting the Browser	95	Messages	117
Bookmarks	96	Glossary of Terms	119
Applications	97	Specifications	121
Applications menu		EU Warranty	122
structure	97	Licensing	129
Alarm	97	Index	133
Calculator	98		
Melody composer	99		
Calendar	99		
Scheduler	100		
Notes	101		
Currency converter	102		
Infrared	103		
PC Tool	105		

Important Information

Thank you for purchasing this Panasonic digital cellular phone. This phone is designed to operate on GSM networks – GSM900 and GSM1800. It also supports GPRS for packet data connections. Please ensure the battery is fully charged before use.

We, Panasonic Mobile Communications Development of Europe Ltd., declare that the EB-SC3 conforms with the essential and other relevant requirements of the directive 1999/5/EC. A declaration of conformity to this effect can be found at

<http://panasonic.co.jp/pmc/products/en/support/index.html>

Safety considerations

The following information should be read and understood as it provides details, which will enable you to operate your phone in a manner which is both safe to you and your environment, and conforms to legal requirements regarding the use of cellular phones.

Power



This equipment should only be charged with approved charging equipment to ensure optimum performance and avoid damage to your phone. Other usage will invalidate any approval given to this apparatus and may be dangerous. Ensure the voltage rating of the Travel Charger is compatible with the area of use when travelling abroad. A Travel Charger (EB-CAA210xx*) is supplied with the Main Kit.

Note* xx identifies the charger region, e.g. CN, EU, UK, AU, US.

Battery



Use of another battery pack than that recommended by the manufacturer may result in a safety hazard.

If you use a feature which keeps the key backlight on continuously for a long time, such as a game or browser, battery life will become extremely short. To maintain longer battery life, set the Key backlight to off. See "Key backlight" on page 73.

Do not use this phone without the battery cover attached.

Important Information

Disposing of the Battery



Do not incinerate or dispose of the battery as ordinary rubbish. The battery must be disposed of in accordance with local regulations and may be recycled.

Aircraft



Switch off your cellular phone when in an aircraft. Ensure that the setting of the Alarm or Power on time function will not contravene regulations whereby it may automatically power on when in an aircraft or medical facility etc. The use of cellular phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular phone services to the offender, or legal action or both.

Do Not Use



It is advised not to use the equipment at a refuelling point. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Never expose the battery to extreme temperatures (in excess of 60°C).

Driving



It is imperative that the driver exercises proper control of the vehicle at all times. Do not hold a phone while you are driving; find a safe place to stop first. Do not speak into a handsfree microphone if it will take your mind off the road. Always acquaint yourself thoroughly with restrictions concerning the use of cellular phones within the area where you are driving and observe them at all times.

Electronic Devices



Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Heating Equipment



When your handset, the accompanying battery or charging accessories are wet, do not put those in any type of heating equipment, such as a microwave oven, a high pressure container, or a drier or similar. It may cause the battery, handset and/or charging equipment to leak, heat up, expand, explode and/or catch fire. Moreover, the product or accessories may emit smoke and their electrical circuits may become damaged and cause the products to malfunction. Panasonic is not responsible for any and all damages, whether direct or indirect, howsoever caused by any misuse.

Backup Copies & Security



It is recommended that you create a copy or backup, as appropriate, of any important information and data which you store in your phone's memory. In order to avoid accidental loss of data, please follow all instructions relating to the care and maintenance of your phone and its battery.

Your phone has the capability of storing and communicating personal information. It is recommended that you take care to ensure that any personal or financial information is stored separately from your phone. You should use security features, such as the SIM lock to protect information held in your phone. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data, including but not limited to direct and indirect losses (to include, but not limited to consequential loss, anticipated savings, loss of revenue).

Important Information

Downloading




Your phone has the capability of downloading and storing information and data from external sources. It is your responsibility to ensure that in doing this you are not infringing any copyright laws or other applicable legislation. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data or any such infringement of copyright or intellectual property rights, including but not limited to direct and indirect losses (to include, but not limited to consequential loss, anticipated savings, loss or revenues).

Efficient Use



For most efficient use, hold the phone as you would any normal phone. To avoid deterioration of signal quality or antenna performance, do not touch or “cup” the antenna area while the phone is switched on. Unauthorised modifications or attachments may damage the phone and violate applicable regulations. The use of an unapproved modification or attachment may result in the invalidation of your guarantee – this does not affect your statutory rights.

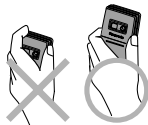

Camera



You are advised to take appropriate care over the use of the internal camera. It is your responsibility to ensure that you have permission to take photographs of people and objects and that you do not infringe any personal or third party rights when using the camera. You must comply with any applicable international or national law or other special restrictions governing camera use in specific applications and environments. This includes not using the camera in places where the use of photographic and video equipment may be prohibited. Panasonic accepts no liability for any and all losses howsoever arising from any infringement of copyright or intellectual property rights, including but not limited to direct and indirect losses. Do not leave the camera facing direct sunlight, as this may impair its performance.

Other important information

The colour liquid crystal display (LCD) uses high-precision production technology, and in certain circumstances pixels may appear brighter or darker. This is due to characteristics of the LCD and is not a manufacturing defect.

This phone is designed, manufactured and tested to ensure that it complies with the specifications covering RF exposure guidelines applicable at the time of manufacture, in accordance with EU, USA FCC and Australian ACA regulations.

This phone should only be used with Panasonic approved accessories to ensure optimum performance and avoid damage to your phone. Panasonic is not responsible for damage caused by using non-Panasonic approved accessories.

This phone must be used in compliance with any applicable international or national law or any special restrictions governing its use in specified applications and environments. This includes but is not limited to use in hospitals, aircraft, whilst driving and any other restricted uses.

Some of the contents described in this manual are subject to change without notice.

Please refer to our website for latest information/standards and compliance in your country/region of use.

<http://panasonic.co.jp/pmc/products/en/support/index.html>

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries

Important Information

you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

SAR

European Union – RTTE

THIS PANASONIC PHONE (MODEL EB-SC3) MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy recommended by The Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg*. Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output of the phone.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

The highest SAR value for this model phone, when tested for use at the ear, for compliance against the standard was **0.650W/kg**.

Important Information

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 1.5 cm away from the body.

When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the product at least 1.5 cm away from your body.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

Care and maintenance



Pressing any of the keys may produce a loud tone. Avoid holding the phone close to the ear while pressing the keys.



Extreme temperatures may have a temporary effect on the operation of your phone. This is normal and does not indicate a fault. The display quality may deteriorate if the phone is used in environments over 40°C for a long time.



Do not modify or disassemble the equipment. There are no user serviceable parts inside.



Do not subject the equipment to excessive vibration or shocks. Do not drop the battery.



Avoid contact with liquids or moisture. If the equipment becomes wet, immediately remove the battery and charger. Keep the phone dry.



Do not leave the equipment in direct sunlight or a humid, dusty or hot area. Never throw a battery into a fire. It may explode.



Keep metallic items that may accidentally touch the terminals away from the equipment/battery.

Batteries can cause property damage, injury, or burns if terminals are touched with a conductive material (i.e. metal jewellery, keys, etc.).

Important Information



Always charge the battery in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery if it is outside this temperature range.



When connecting the phone to an external source, read the operating instructions of the equipment for the correct connection and safety precautions. Ensure the phone is compatible with the product it is being connected to.



When disposing of any packing materials or old equipment, check with your local authorities for information on recycling.

About this manual

Symbols used in this manual

The following symbols are used in this manual to represent the limited availability of the function or service.



= Depending on your SIM.



= Depending on network availability.



= Depending on your network operator.

Graphics

The graphic elements in this manual are for illustrative purposes and may differ from the actual phone and/or graphic elements displayed on the phone. Panasonic reserves the right to change the information in this manual without prior notice.


Keys

Keys in this manual may differ from the actual keys on your phone. Refer to page 14 for the icons that represent the keys in this manual.

How to read this manual

<Example> GSM network in Settings menu on page 76

This function is SIM dependent. For other symbols, refer to page 11.

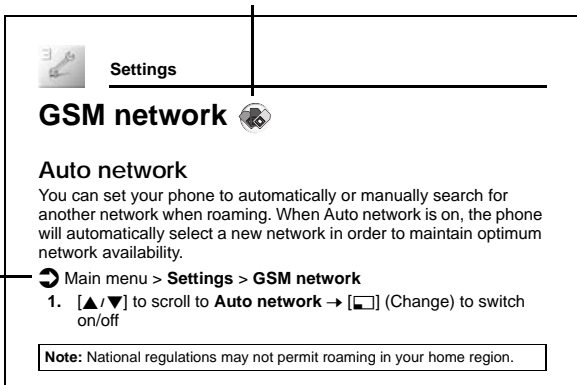

➤ Menu navigation

Before following the steps, you need to enter the Main menu, then move through the submenus, as described next to the ➤ icon.

“>” means “scroll through the menu and select”.

In the example given above:

From Main menu, press Navigation key to scroll to **Settings** and press Left soft key (Select)*, then press Navigation key to scroll to **GSM network** and press Left soft key (Select)*.



Now you can continue onto the step 1:

1. Press Navigation key to scroll to **Auto network**, then press Left soft key (Change)* to switch **Auto network** on or off.






* The word is shown in the lower left-hand corner of the display, indicating a command that the key gives to the phone when you press it.

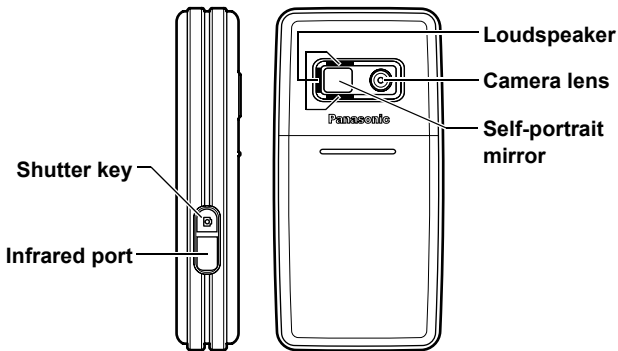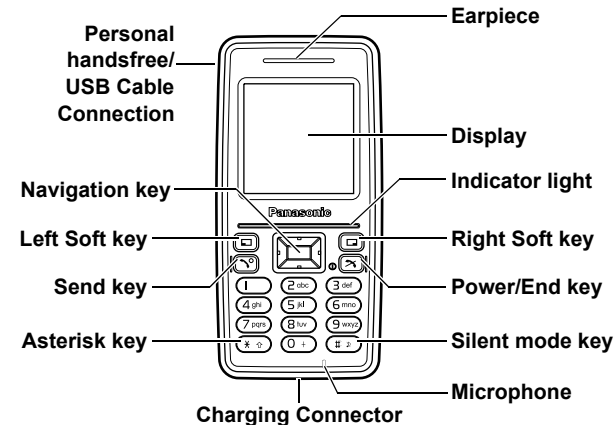About Your Phone

Phone overview
















Key functions

Key name	Function	Key icon
Navigation key	Press top [▲], bottom [▼], left [◀] or right [▶] edge to move the screen cursor, or adjust the earpiece volume while on a call.	[▲] [▼] [◀] [▶]
Left Soft key	Perform the functions indicated in the lower left-hand corner of the display.	
Right Soft key	Perform the functions indicated in the lower right-hand corner of the display.	
Send key	Make or answer a call.	
Power/End key	Press and hold to switch the phone on/off. End or reject a call. During key operations, return to the previous display or press and hold to return to Idle mode.	
Numeric keys	Enter numbers and characters. Press and hold [2] - [9] for Speed dialling. Press and hold [1] to call your voice mailbox to retrieve voice messages. Press and hold [0] to enter the international prefix (+) or a pause (P) while entering a phone number.	[0] to [9]
Asterisk key	Enter "✱". In text entry mode, press to change the letter case, or press and hold to change the input mode.	[✱]
Silent mode key	Enter "#". In Idle mode, press and hold to switch the Silent mode on/off.	[#]
Shutter key	Take a picture in Camera mode.	

Quick keys

You can easily access features instead of navigating through the menus.

	Key	Function
In Idle mode		
Short press		Open Main menu
		Open Messages menu
		Open Shortcuts menu
		Open Contacts list
		Open Calendar
		Open My Media
		Open Call log
Long press		Switch the selected Shortcuts menu on/off
		Start Browser
		Key lock on
	[1]	Dial your voice mailbox
	[2] - [9]	Speed Dial
	[#]	Silent mode on/off
	Activate the Camera in Landscape style	
During a call		
Short press		Increase the volume
		Decrease the volume
Long press	[#]	Hands free speaker on/off

Display

Idle display



















Idle clock

The clock appears on the display about a minute after you press the last key.

Status icons

The status icons are displayed or animated according to the currently activated functions.

Icon	Meaning
	Signal strength; the more bars visible, the stronger the signal.
	Home network that you subscribe to is within range*.
	Registered to a non-home network – roaming.
	All incoming voice calls are diverted if All voice calls is set.
	SMS Message area is full.
	Unread message is stored.
	Voicemail has been received.
	Alarm is set.
	All tones are off.
	Vibration alert is on.
	(Grey) GPRS connection is active. (Blue) Data is transmitting via GPRS.
	Battery charged.
	Battery is charging.
	Low battery
	Abnormal charging
	Infrared port is activated.

*



Indicator light

The indicator light flashes or beams when you receive calls/ messages, the battery is charging, the alarm sounds or you press the keypad.

To specify the default illumination colour for incoming calls, messages and the alarm, or to switch the illumination on or off for battery charge and keypad press, see "Illumination" on page 72.

To set a different illumination colour for respective contacts, see "Storing a contact in your phone" on page 59, and select the required Call Illumination or Msg Illumination.

Function	Colour	Description
Incoming calls	Off Colour 1-8	Flash or beam in the selected colour when you receive calls.
Incoming messages		Flash or beam in the selected colour when you receive messages.
Illumination Messages		Flash or beam in the selected colour when you receive or view Illumination messages. The Indicator light is illuminated in response to the emoticons or animations embedded in the Illumination message. See "SMS Illumination Messages" on page 49 for comprehensive instruction. To set, view or preview the Illumination, see page 44-47.
Alarm		Flash or beam in the selected colour when the alarm sounds.
Battery charge	Off Colour 3	Beam in Colour 3 when the battery is charging.
Keypad press	Off Random	Beam in random colours when you press keys [0] - [9], [*] and [#].

Getting Started

Installing the SIM card and the battery




The SIM (Subscriber Identity Module) card and the battery must be installed before using your phone.

Before handling the SIM card and the battery, ensure that the phone is switched off and the charger is disconnected from the phone.

Inserting/removing the SIM card

See “Inserting/removing the battery” on page 20 to remove or attach the battery cover and the battery.



1. Slide the SIM card holder in the direction of the OPEN arrow ① until it clicks, and lift it up ②.
2. Insert the SIM card into the SIM card holder as shown, with gold contacts facing toward the phone body.
To remove the SIM card, slide it out of the holder.
3. Lay down the SIM card holder ① and slide it in the direction of the LOCK arrow ② until it clicks.

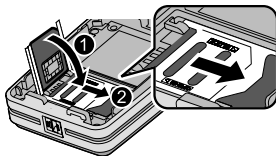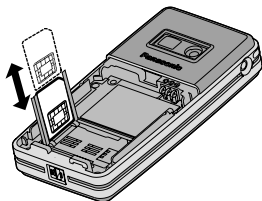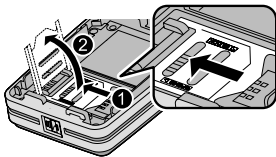

Inserting/removing the battery



Inserting the battery

1. Insert the battery into the battery compartment, ensuring the 3 gold contacts align with the 3 gold pins at the top of the compartment.
2. Replace the cover on the phone. Make sure the cover clicks into place.

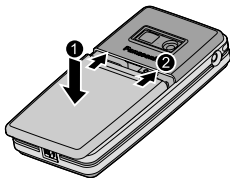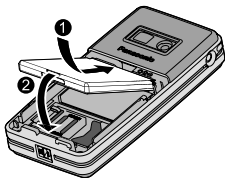

Removing the battery

1. Place your finger on the small clip on the upper part of the cover. Slide the cover slightly toward the bottom of the phone, then lift the cover off the phone.
2. Place your finger on the clip at the base of the battery. Lift the battery off the compartment.

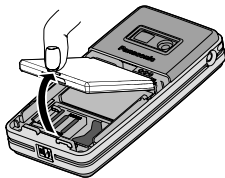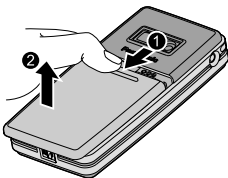

Charging the battery


Your phone can be charged either when it is switched on or off. You can use your phone switched on even while charging.

Ensure that the battery is attached in the phone before charging.

1. Connect the charger to the Charging Connector, then connect the charger to the mains power supply.
The charging indicator will light and a scrolling icon will appear in Idle display.



2. When charging is complete, disconnect the charger from the outlet before removing the plug from the phone. You should push the plug gently downward to disconnect the charger from the phone.

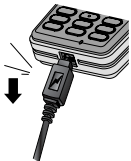



Note: DO NOT force the connector as this may damage the phone and/or the charger.

If the battery has been deeply discharged, it may take several minutes before the Battery level indicator is displayed.

It is recommended to charge the battery for a maximum of 150 minutes before use.

The charging indicator will light if the Illumination setting for battery charge is on. See "Illumination" on page 72.

Battery charge level indicator

While charging	Charging complete
	

Low battery warning

When the battery power is low, a “**Battery is low**” message will be displayed and a warning tone will sound. The phone will display the message several times, then switch off automatically. If you receive the low battery warning while using the phone, charge the battery to continue the operation.

Switching the phone on/off

1. Press and hold [🔌] for 2 to 3 seconds to switch the phone on
A greeting may be displayed and the phone enters Idle mode.
2. Press and hold [🔌] for 2 to 3 seconds to switch the phone off while in Idle mode

Basic Operations

Making calls

To make a call, your phone must be within range of a network with adequate signal strength.

Standard dialling

In Idle mode:

1. Enter the area code and phone number → [↵]
2. When the other party answers, talk into the microphone
3. [✕] to hang up

The duration of the call will be displayed when the call is ended.

*If **Max cost** is on, the remaining units will be displayed. See **Max cost** setting on page 81.*

Note: While on a call, [▲ / ▼] to adjust the earpiece volume.

Contacts dialling

You can make calls using the numbers in Contacts.

In Idle mode:

1. [▼]
2. [▲ / ▼] to scroll to the required contact → [↵]

You can choose either SIM or Phone Contacts to be shown. See “My Contacts” on page 66.

Last number dialling

You can make calls using the numbers in the Call log. See “Call log” on page 62.

In Idle mode:

1. [↵]
2. [▲ / ▼] to scroll to **Dialled numbers, Answered calls or Missed calls** → [☐] (Select)
3. [▲ / ▼] to scroll to the required entry → [↵]

International dialling

The international prefix (+) should be entered, followed by the country/region code, area code and phone number.

In Idle mode:

1. Press and hold [0] until “+” is displayed
2. Enter the country/region code
3. Enter the area code and phone number → [↵]

Note: Many countries/regions include an initial “0” in the area code. This should, in most cases, be omitted when dialling international numbers. For further help, contact your network operator.

Speed dialling

You can quickly dial phone numbers stored at locations 2-9 in the Speed Dial list. See “Speed Dial list” on page 63.

In Idle mode:

Press and hold a speed dialling key ([2] - [9])

Emergency call

To make an emergency call, the antenna (📶) must be present.

When SIM card is inserted:

1. Enter the local emergency number (such as [112]) → [↵]

When SIM card is not inserted:



1. Enter the local emergency number (such as [112]) → [↵]

OR

[☐] (SOS) → “Emergency call” → [☐] (Yes)

Note: Most countries support the international emergency number 112. If you find the number does not work on your phone, call your network operator. Emergency calls without a SIM is country or network operator dependent.

Answering calls

When there is an incoming call, the phone rings, illuminates and/or vibrates along with the caller's name and/or number (depending on your phone setting). See "Settings" on page 68.

While the phone is ringing and/or vibrating:

1. [] or [] (Reply)

OR

If Any key answer is on:

1. Press any key except [], [] and [] (Mute)

See "Any key answer" on page 86.

Rejecting calls

While the phone is ringing and/or vibrating:

1. []

Alert mute

You can turn the ring tone and vibration off before answering a call.

While the phone is ringing and vibrating:

1. [] (Mute)
2. To answer the call: [] or [] (Reply)

If Any key answer is on:

Press any key except [], [] and [] (Reject)

OR

To reject the call: [] or [] (Reject)

Auto answer

When you use an optional Personal handsfree earpiece and activate the Auto answer feature, you can answer a call automatically. See "Auto answer" on page 86.

Answering a second call

While on an active call, you may receive another call.

To enable this service, **Call waiting** must be active. See “Call waiting” on page 79.


If you hear an alert tone during a call:

1. [

The first call is placed on hold.

2. [] (Swap) to switch between the two calls if required

To reject another call:

1. [] (Reject)


Silent mode

To use your phone in a quiet situation, you can activate the Silent mode (ringtone off / vibration on).

In Idle mode:


1. Press and hold [**#**] to activate/deactivate the Silent mode

Voicemail

Voicemail is a network service which allows callers, who could not reach you, to leave voice messages. When a new voice message is stored, an alert sounds and () appears on the Idle screen. To use this service, you may need to subscribe to the Voicemail service through your network operator. See “Voicemail” on page 53 for details.

To retrieve stored voice messages:

In Idle mode:

1. Press and hold [**1**] to call your voice mailbox
2. Follow the recorded instructions
3. [] when finished

In-call operations

In-call menu (while connected to an active call)

While on a call, you can access the in-call menu.

1. [☐] (Menu)
2. [▲ / ▼] to scroll to the required menu → [☐] (Select)

Hands free / Hand held	Switch to Hands free or Hand held.
End	End the call.
Contacts list	Access the Contacts list.
Messages*	Access the Messages menu.
Call status	Check or manage the call status. See “Call status” on page 31.
Send DTMF	Send DTMF to access voicemail, paging or computerised home banking. See “DTMF” on page 28.

* MMS messages cannot be sent during a call.

Hold

You can put a call on hold.

During a call:

1. [☐] (Hold) to put a call on hold
2. [☐] (Retrieve) to resume

DTMF

DTMF (Dual Tone Multi Frequency) can be sent during a conversation. These are often used to access voicemail, paging and computerised home banking. For example, you may need to enter a number to remotely access voicemail messages. A phone number may be stored in the Contacts together with a DTMF sequence, allowing the number to be dialled upon recall and the DTMF sequence to be sent automatically.

To send DTMF during a call:

1. Enter digits ([0] - [9], [✳] or [#])

Pause dial

Using pauses allows you to send DTMF automatically.

1. Enter the phone number
2. Press and hold [0] until a "P" is displayed
3. Enter the DTMF digits after the pause, e.g. enter the number to access voicemail messages
4. [↘]

When the call is connected, the DTMF sequence will be sent after 3 seconds.

Making a second call

You can make another call while on a call.

During a call:

1. Enter the second phone number or select a phone number from the Contacts list
To access Contacts list, see "In-call menu" on page 27.
2. [↘]
The first call is put on hold.
3. [☐] (Swap) to switch between the two calls if required



Multiple calls operations

In-call menu (while on multiple calls)

While on more than one call, you can access the in-call menu.

1. [☐] (Menu)
2. [▲ / ▼] to select the required menu → [☐] (Select)

Hands free / Hand held	Switch to Hands free or Hand held.
Conference*¹	Allow you to have a conversation with up to five parties. See "Conference" on page 30.
Call transfer*¹	Connect an active call and held call, then disconnect yourself from both calls, leaving the two callers to talk to each other. See "Call transfer" on page 30.
End	End the selected call.
Split*¹	Separate an individual from the conference call. See "Split" on page 30.
Contacts list	Access the Contacts list.
Messages*²	Access the Messages menu.
Call status	Check or manage the call status. See "Call status" on page 31.
Send DTMF	Send DTMF to access voicemail, paging or computerised home banking. See "DTMF" on page 28.



*2 MMS messages cannot be sent during a call.

Note: To answer a second call, **Call waiting** must be active. See "Call waiting" on page 79.

Conference

You can have a conversation with up to five different parties at the same time.

During a call (one active call and one call on hold):

1. [] (Menu)
2. [▲ / ▼] to scroll to **Conference** → [] (Select)
The two calls are joined into a Conference call.

To add new participants:

3. Call the next person or answer an incoming call
4. Repeat the procedure (Step 1-2)

Call transfer

You can transfer an active call to a call on hold. You can connect the two parties into a conversation and disconnect yourself from them.

During a call (one active call and one call on hold):

1. [] (Menu)
2. [▲ / ▼] to scroll to **Call transfer** → [] (Select)

Split

You can separate an individual from the Conference call, then you can have a private conversation with the person.

During a Conference call:

1. [] (Menu)
2. [▲ / ▼] to scroll to **Split** → [] (Select)
3. [▲ / ▼] to scroll to the required caller you wish to talk to → [] (Select)

The Conference call is placed on hold.

Call status

When you have multiple calls (including calls on hold), you can check or manage the status of the calls.

During a multiple calls:


1. [☐] (Menu)
2. [▲/▼] to scroll to **Call status** → [☐]
(Select)

The list of the calls is displayed.

3. To end a call: [▲/▼] to scroll to the required call → [☐] (End)

OR

To join a call on hold: [▲/▼] to scroll to the required call on hold → [☐] (Join)

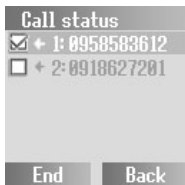

Text Entry

Your phone provides three text entry modes to enter characters.

T9®	A predictive text entry system. You can enter a word with fewer key presses.
Multi-tap	A traditional way to type in a letter. Press a key several times until the required letter appears.
Numeric	You can enter numbers (0-9), * and #.

Selecting a text mode

Press and hold [*] to cycle through the text input modes as follows.
Multi-tap (Abc) → Numeric (123) → T9 (T9Abc)

T9® Text input mode

The T9® Text input method enables you to enter text faster and easier. You only need to press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached. The program searches its built-in dictionary to predict the word that most closely matches your key presses. If the combination of letters typed has produced a word which is not the one you require, press [] repeatedly until the correct word is displayed. In case the required word is not in the internal dictionary, press [] (Spell) to spell the required word if “- - -” appears while pressing [] to search for the word, or use Multi-tap mode instead.

For example, to enter “Hello!” in T9® mode, press keys as follows.

Key	[4]	[3]	[5]	[5]	[6]	[1]	[] x 4
Display	l	He	Gel	Hell	Hello	Hello.	Hello!

Note: Before entering text, you must customise the T9 language on your phone. See “T9 input” on page 74.

Displayed characters in the T9® mode vary depending on the **T9 language** setting.

Changing the letter case

Press [✖] to change the letter case mode as follows.

Abc/T9Abc → ABC/T9ABC → abc/T9abc

Auto capital change

When the letter case mode is changed to Abc/T9Abc, the first character is input as upper case. The mode is then automatically changed to abc/T9abc and subsequent letters are input as lower case.

Editing text

Move the cursor by pressing [▲/▼/◀/▶] to the position you want to insert or delete a letter. Press [□] (Clear) to delete a character.

Pop-up character table

Press and hold [0] - [9] for the character table. To select the required character, press [▲/▼/◀/▶] to move the cursor, then press [□] (Select) to enter the targeted character.

Key	T9® or Multi-tap
[0] - [9]	.@!; ✖ # + - " , ! j ? ¿ _ () [] { } ' & % \ ^ ~ < > = € ç £ \$ ¥ ¤ § Space ← (Linefeed)
	A B C Γ Ä Å Æ Ç D E F Δ É G H I Θ J K L Λ M N O Æ Ñ Ò Ø P Q R S Π Σ T U V Φ Û W X Y Z Ψ Ω
	a b c ä å æ à ç d e f é è g h i j k l m n o ñ ò ø p q r s b t u v ü ù w x y z
	0123456789

Text Entry

The following table shows characters available on your phone.

To use the function in the bottom cell assigned to a key, press and hold the key. In the T9® or Multi-tap mode, press and hold numeric keys to show a set of all characters. See “Pop-up character table” on page 33.

Key	Text Mode		
	T9® (Input language: English) (T9abc, T9Abc or T9ABC)	Multi-tap (abc, Abc or ABC)	Numeric (123)
[0]		. @ / - _ + 0	0
[1]	., - ? ! " ' @ : ; / 1 - ., ? 1 " - ; : @ / * () # + _ = [] { } ' i ÷ & % \ ^ ~ < > € ¢ £ \$ ¥ ¢ § ← (Linefeed)	., ? 1 " - ; : @ / * () # + _ = [] { } ' i ÷ & % \ ^ ~ < > € ¢ £ \$ ¥ ¢ § ← (Linefeed)	1
[2]	A B C 2 - (a b c 2 -)	A B C 2 Γ Ä Å Æ Ç (a b c 2 ä å æ à ç)	2
[3]	D E F 3 - (d e f 3 -)	D E F 3 Δ É (d e f 3 é è)	3
[4]	G H I 4 - (g h i 4 -)	G H I 4 Θ (g h i 4 i)	4
[5]	J K L 5 - (j k l 5 -)	J K L 5 Λ (j k l 5)	5
[6]	M N O 6 - (m n o 6 -)	M N O 6 Ξ Ñ Ò Ø (m n o 6 ñ ò ø ò)	6
[7]	P Q R S 7 - (p q r s 7 -)	P Q R S 7 Π Σ (p q r s 7 β)	7
[8]	T U V 8 - (t u v 8 -)	T U V 8 Φ Ù (t u v 8 ù ù)	8
[9]	W X Y Z 9 - (w x y z 9 -)	W X Y Z 9 Ψ Ω (w x y z 9)	9
[*]	Letter case change		*
	Input mode change		
[#]	Space	Space * #	#
	Linefeed		
[☐]	Options / word search	Options	

- [1] key (T9 mode): Press [1] repeatedly to display the set of characters in the bottom cell.

Menu Navigation

Main menu structure

The 9 menus are as follows:



Messages

Inbox	39, 45
Archive	41, 46
Create new	42, 47
Voice mail	53
Cell Broadcast	54
User Emoticon	48
Text templates	48
Settings	38, 44
Memory status	56



Games & Apps

Games & Apps	90
Settings	91
View Certificate	92
Information	92



My Media

Pictures	106
Sounds	106
User 1	107
User 2	107
User 3	107
User 4	107
Shortcuts	107
Memory status	107



Contacts

Contacts list	58
Add Contact	59
Call log	62
Speed Dial list	63
Groups	64
Advanced	65



Browser

Start Browser	95
Bookmarks	96
Settings	93



Calendar



Camera



*STK (SIM Tool Kit)

If your SIM card includes STK, Calendar menu appears under Applications menu.



Settings

Sounds	69
Alerts	71
Display	71
Language	74
Data connections	75
GSM network	76
Calls	78
Security	83
Auto answer	86
Any key answer	86
Auto key lock	87
Time and date	87
Menu view	88
Defaults	88
Profiles	89



Applications

Alarm	97
Calculator	98
Melody composer	99
(Calendar)	99
Scheduler	100
Notes	101
Currency	102
Infrared	103
PC Tool	105

Displaying the menu

The menu system allows you to access functions which do not have their own dedicated buttons on the keypad. The menu view can be switched between 9 launcher and Scroll launcher.

In Idle mode:

1. [] ([] or [])

*The Main menu appears with 9 menu options.
See "Main menu structure" on page 35.*

2. [▲/▼/◀/▶] to scroll to the required menu → [] (Select)

OR

To directly jump to the required menu:

Press [1] - [9]

[1]: Messages

[2]: Contacts

[3]: Settings

[4]: Games & Apps

[5]: Browser

[6]: Applications

[7]: My Media

[8]: Calendar (or STK)

[9]: Camera



To go back to the Main menu:

1. [X] or [] (Back) repeatedly until the Main menu display appears

To change the Menu view:

☛ Main menu > **Settings** > **Menu view**

1. [▲/▼] to scroll to **9 launcher** or **Scroll launcher** → [] (Select)



Messages menu structure

Inbox	39, 45
MMS	39
SMS	45

Archive	41, 46
MMS	41
SMS	46

Create new	42, 47
MMS	42
SMS	47

Voicemail	53
Call Mailbox	53
Set Mailbox number	53

Cell Broadcast	54
Auto display	54
Read messages	54
Message list	54
Topic list	55
Languages	56

User Emoticon	48
----------------------------	-----------

Text templates	48
-----------------------------	-----------

Settings	38, 44
MMS	38
SMS	44

Memory status	56
----------------------------	-----------

MMS (Multimedia Message Service)

MMS allows you to send or receive messages containing images, sound clips and text. The recipient can play the message as a slide show.



Setting the MMS server

MMS message server settings must be configured before using the service. Your multimedia configuration settings may already be set by your service provider. If settings are not available, contact your service provider.

➤ Main menu > **Messages** > **Settings** > **MMS** > **Server list**

1. [▲/▼] to scroll to the required server → [□] (Edit)
2. [▲/▼] to edit the required item → [□] (Save)
3. [□] (Launch)

The following information is available for each server setting: **Server name**, **IP address**, **IP port**, **MMSC address**, **Linger time**, **Connection (CSD or GPRS)**, **CSD** and **GPRS**.

Note: You need to configure CSD or GPRS before configuring the server settings. See "Data connections" on page 75.

Send options

You can set the following options for outgoing MMS messages.

➤ Main menu > **Messages** > **Settings** > **MMS** > **Send options**

1. [▲/▼] to scroll to the required setting → [□] (Select)

Delivery report	Choose whether or not to receive a confirmation that your message has been delivered. [▲/▼] to scroll to On or Off → [□] (Select)
Own address	Choose whether or not to show your address to the recipient. [▲/▼] to scroll to Hide or Show → [□] (Select)
Validity period	Set the period that messages are stored at the Message centre. [▲/▼] to scroll to 1 hour , 12 hours , 1 day , 1 week or Maximum → [□] (Select)
Priority	Set the priority level for your outgoing messages. [▲/▼] to scroll to High , Normal or Low → [□] (Select)



Receive options

You can limit incoming MMS messages according to their type.

☰ Main menu > **Messages** > **Settings** > **MMS** > **Receive options**

1. [▲/▼] to scroll to the required setting → [☐] (Select)

Normal	[▲/▼] to scroll to Auto retrieve , Auto reject or Auto defer → [☐] (Select)
Anonymous sender	[▲/▼] to scroll to Auto retrieve or Auto reject → [☐] (Select)
Advertisements	
Delivery report	[▲/▼] to scroll to Permit or Reject → [☐] (Select)

Receiving MMS messages

When you receive a message, the phone informs you by a preset-tone and/or vibration.

Waiting

MMS messages waiting to be downloaded are shown in the Waiting folder.

☰ Main menu > **Messages** > **Inbox** > **MMS** > **Waiting**

1. [▲/▼] to scroll to the required message → [☐] (Download)

Options

When viewing the list of messages, the following options are available by pressing [☐] (Options).

Download	Download the selected message.
Delete	Delete the selected message.
Delete all	Delete all the messages.
Properties	View detailed information of the selected message.

Note: Your phone can send/receive MMS messages of up to 100 KB.



Messages

Received

Downloaded MMS messages are stored in the Received folder.

➤ Main menu > **Messages** > **Inbox** > **MMS** > **Received**

1. [▲/▼] to scroll to the required message → [□] (View)

Options

When viewing the list of messages or the selected message, the following options are available by pressing [□] (Options).

View ^{*1}	View the selected message.
Reply	Reply to the selected message.
Reply to all	Reply to all the recipients of the selected message.
Forward	Forward the selected message.
Call ^{*2}	Call the sender.
View again ^{*2}	View the message again.
Extract media ^{*2}	Store multimedia files embedded in the message.
Extract number ^{*2}	Store phone numbers embedded in the message to your Contacts list.
Hyperlink ^{*2}	Bookmark or jump to URL embedded in the message.
To Contact ^{*1}	Store phone numbers embedded in the message to your Contacts list.
Delete	Delete the selected message.
Delete all ^{*1}	Delete all the messages.
Properties	View detailed information of the selected message.

*1 Available only in the list of messages.

*2 Available only when viewing the selected message.



Viewing MMS messages in the Archive

You can view MMS messages sent and/or waiting to be sent in the Archive.

➤ Main menu > **Messages** > **Archive** > **MMS**

1. [▲/▼] to scroll to **Unsent messages** or **Sent messages** → [☐] (Select)
2. [▲/▼] to scroll to the required message → [☐] (View)

For Unsent messages: You can edit the message. See “Creating an MMS message” on page 42.

OR

For Sent messages: When viewing the message, the following options are available by pressing [☐] (Options): **Forward**, **Delete**, **Properties** and **View again**.

Options

When viewing the list of messages, the following options are available by pressing [☐] (Options).

View	View the selected message.
Forward*	Forward the selected message.
Delete	Delete the selected message.
Delete all	Delete all the messages.
Properties	View detailed information of the selected message.

* Available only for Sent messages



Creating an MMS message

You can send pictures and sound files with text messages. The attached files are shown as a slide show.

➤ Main menu > **Messages** > **Create new** > **MMS**

1. [📎] (Insert)
2. [▲/▼] to scroll to the required option → [📎] (Select)

Insert picture	Add a picture stored in My Media to the message.
Insert text	Enter your text (up to 200 alphabetical characters a page). To enter text, see “Text Entry” on page 32.
Insert sound	Add a sound clip stored in My Media to the message.
Insert page	Add a new page. An MMS message can contain up to nine pages. Each page can contain a picture and a sound clip as well as text. Press [1] - [9] to jump between pages.

Options

When creating a new MMS message, the following options are available by pressing [📎] (Options).

Send	Send the message. See “Sending an MMS message” on page 43.
Save	Save the message in the Archive.
Delete items	Delete the text, picture or sound file added to the page.
Delete page	Delete the selected page.
Preview page	Preview the selected page.
Preview MMS	Preview the whole message before sending.
Page timing	Set the duration of each page in the message.
Properties	View the detailed settings of the message.



Sending an MMS message

MMS messages can be sent to a mobile phone or to an e-mail address.

When a message is completed:

1. [☐] (Options)
2. [▲/▼] to scroll to **Send** → [☐] (Select)
3. **To:** Enter the recipient's phone number or e-mail address → [▼]
4. **Subject:** Enter the message title
5. [☐] (Send) to send the message
OR
[▼] to go on to the following steps
6. **Cc:** To send a carbon copy, enter the recipient's phone number or e-mail address → [▼]
7. **Bcc:** To send a blind carbon copy, enter the recipient's phone number or e-mail address
8. [☐] (Options)
9. [▲/▼] to scroll to **Send** → [☐] (Select)

Options

In steps 3, 6 or 7, the following options are available by pressing [☐] (Options).

Send	Send the message.
Contacts list	Retrieve the recipient's phone number from the Contacts list.
E-mail	Retrieve the recipient's e-mail address from the Contacts list.

Note: Your phone can send/receive MMS messages of up to 100 KB.



SMS (Short Message Service)

SMS allows you to send and receive short text messages to/from mobile phones. Small pictures, sounds and/or animations can be inserted in the message.

Setting the SMS Message centre number

Your connection settings must be configured before using the service. The Message centre number may be preprogrammed. Changing this number may cause failure of a text message.

➤ Main menu > **Messages** > **Settings** > **SMS** > **Message centre**

1. Enter your Message centre number in the international dialling format (See “International dialling” on page 24.) → [] (OK)

Other SMS settings


➤ Main menu > **Messages** > **Settings** > **SMS**

1. [▲/▼] to scroll to the required setting → [] (Select)



Protocol	Select the protocol type. [▲/▼] to scroll to Standard text, Fax, X.400, Paging, ERMES or E-mail → [] (Select)
Illumination	Turn the Indicator light on or off when receiving or viewing an Illumination message. [▲/▼] to scroll to Receiving or Viewing → [] (Change) to switch on/off
Validity period	Set the period that messages are stored at the Message centre. [▲/▼] to scroll to 1 hour, 12 hours, 1 day, 1 week or Maximum → [] (Select)
Delivery report	Choose whether or not to receive a confirmation that your message has been delivered. [] (Select) to switch on/off
SMS via GPRS	Decide whether or not to send messages via GPRS. [] (Select) to switch on/off




Receiving SMS messages


 



When you receive a message, the message icon () is displayed along with a ringtone, illumination and/or vibration.

☰ Main menu > **Messages** > **Inbox** > **SMS**

1. [▲/▼] to scroll to the required message → [] (Options)
2. [▲/▼] to scroll to **View** → [] (Select)

Options

When viewing the list of messages or the selected message, the following options are available by pressing [] (Options).

View *1	View the selected message.
Reply	Reply to the selected message.
Edit *1	Edit or add text, pictures, animations and/or sounds.
Forward	Forward the selected message.
View Illumination *2	Check how the Indicator light is illuminated. Available only for Illumination messages.
Extract number	Save the phone number in the message. [▲/▼] to scroll to the required number → [] (Select) → [] (Save) → [▲/▼] to scroll to SIM or Phone → [] (Select)
Hyperlink *2	Bookmark the URL in the message. [▲/▼] to scroll to the required URL → [] (Select) → Enter the title → [] (Save)
Delete	Delete the selected message.
Delete all *1	Delete all the messages.

*1 Available only in the list of messages.

*2 Available only when viewing the selected message.

Note: Your phone can send/receive SMS messages of up to 1520 alphabetical characters or 10 concatenated SMS messages.



Viewing SMS messages in the Archive

You can view messages sent and/or waiting to be sent in the Archive.

➤ Main menu > **Messages** > **Archive** > **SMS**

1. [▲/▼] to scroll to the required message → [□] (Options)
2. [▲/▼] to scroll to **View** → [□] (Select)

Options

When viewing the list of messages or the selected message, the following options are available by pressing [□] (Options).

View *1	View the selected message.
Send	Send the selected message. See "Sending an SMS message" on page 48.
Edit	Edit or add text, pictures, animations and/or sounds.
View Illumination *2	Check how the Indicator light is illuminated. Available only for Illumination messages.
Extract number	Save the phone number in the message. See Extract number setting on page 45.
Hyperlink *2	Bookmark the URL in the message. See Hyperlink setting on page 45.
Delete	Delete the selected message.
Delete all *1	Delete all the messages.

*1 Available only in the list of messages.

*2 Available only when viewing the selected message.



Creating an SMS message

You can create messages with pictures, sounds, etc.

☛ Main menu > **Messages** > **Create new** > **SMS**

1. Enter your text (see “Text Entry” on page 32) → [☐] (Options)
2. [▲/▼] to scroll to the required option → [☐] (Select)

Save & send	Save and send the message. See “Sending an SMS message” on page 48.
Send	Send the message. See “Sending an SMS message” on page 48.
Save	Save the message in the Archive.
Emoticon	Add “Illumination” or user defined Emoticon to the message. [▲/▼] to scroll to Illumination or User defined → [☐] (Select) For Illumination : See “SMS Illumination Messages” on page 49 For User defined : [▲/▼] to scroll to the required Emoticon → [☐] (Select)
Picture & sound	Insert sounds, pictures and/or animations to the message. [▲/▼] to scroll to Fix sounds , Fix animations , Own animations or Own pictures → [☐] (Select)
Format	Edit the message by changing the format. [▲/▼] to scroll to Insert new line , Font face or Font colour → [☐] (Select)
Text templates	Add the text template to the message.
View Illumination	Check how the Indicator light is illuminated. Available only for Illumination messages.

Note: Your phone can send/receive SMS messages of up to 1520 alphabetical characters or 10 concatenated SMS messages.



Sending an SMS message

When a message is completed:

1. [] (Options)
2. [▲/▼] to scroll to **Send** or **Save & send** → [] (Select)
3. Enter the phone number → [] (OK)

Options

You can recall a number from Contacts or Groups list by pressing [] (Options).

Contacts list	[▲/▼] to scroll to the required contact → [] (Select) → [] (OK)
Groups	[▲/▼] to scroll to the required group → [] (Select) → [] (Send) to add the required member → [] (Continue)

User Emoticon

You can create your own Emoticons to use in your SMS messages.

☛ Main menu > **Messages** > **User Emoticon**

1. [▲/▼] to scroll to **<Empty>** → [] (Select)
2. Create your Emoticon → [] (Options)
3. [▲/▼] to scroll to **Save & send** or **Save** → [] (Select)

Text templates

You can edit message templates and insert them into your SMS messages. You can edit the messages except for the first 5 messages.

☛ Main menu > **Messages** > **Text templates**

1. [▲/▼] to scroll to the required message → [] (Select)
2. Edit the message → [] (Options)
3. [▲/▼] to scroll to **Save & send** or **Save** → [] (Select)



SMS Illumination Messages

With the Illumination feature, you can express special feelings in an SMS message. The Indicator light will respond to the pictographs in an Illumination message and light in combinations of colours and light patterns when you receive or view an Illumination message. Switch on **Illumination** so that the Indicator light on the phone will be illuminated when receiving or viewing the Illumination message. See **Illumination** setting on page 44.

Note: The Indicator light will not be illuminated if Illumination setting is switched off. See **Illumination** setting on page 44.

Your phone illuminates in response to up to 15 pictographs. All the pictographs should be embedded within the first 160 alphabetical characters of a message.

Creating an SMS Illumination Message with Emoticon

↪ Main menu > **Messages** > **Create new** > **SMS**

1. Enter your text
2. [☐] (Options)
3. [▲ / ▼] to scroll to **Emoticon** → [☐] (Select)
4. [▲ / ▼] to scroll to **Illumination** → [☐] (Select)
5. [▲ / ▼] to scroll to the required emoticon → [☐] (Select)

See the table of emoticons on page 50.

To check the Illumination of the received messages:

See **View Illumination** setting on page 45.

To check the Illumination of the messages you create:

See **View Illumination** setting on page 46 and 47.



Messages

Select the required emoticons from the list below.

Emoticon	Indicator Colour	Light Pattern
:~)	Colour 3	A
:~D		B
>:~<		
:~	Colour 6	A
:~*		C
0:~)		
:~P	Colour 1	B
:~(A
:~/		Colour 5
:~S	C	
:~[
:~>	Colour 2	A
8~)		B
=:~)		
:~O	Colour 4	C
:~()		A
:~I		
I~(Colour 7	A
;~)		C

Emoticon	Indicator Colour	Light Pattern
\^o^/	Colour 3	A
(^.^)		B
\(>o<)/		
(>~<#)	Colour 6	A
^3^		A
(o^.^o)		
(*~o~*)	Colour 1	B
(;_;		A
(T_T)		
(?_?)	Colour 5	B
(>_<)		C
(~_~;		
(^w^)	Colour 2	A
^&^		B
(@_@)		
(*o*)	Colour 4	A
p(^.^)p		C
(~_~)		
(~_~)Zzz	Colour 7	A
(^_~)"		C

- Pattern A: [Firefly] flickers slowly for about 2 seconds.
- Pattern B: [Flash] flickers fast for about 1 second.
- Pattern C: [Beam] lights for about 1 second (2 seconds in Colour 8).



Creating an SMS Illumination Message with animations

➔ Main menu > **Messages** > **Create new** > **SMS**

1. Enter your text
2. [☐] (Options)
3. [▲ / ▼] to scroll to **Picture & sound** → [☐] (Select)
4. [▲ / ▼] to scroll to **Fix animations** → [☐] (Select)
5. [▲ / ▼] to scroll to the required animation → [☐] (Select)



See the table of animations on page 52.

The number displayed in the menu bar indicates the number of pages used in the message (up to a maximum of 10 pages).

To check the Illumination of the received messages:

See **View Illumination** setting on page 45.

To check the Illumination of the messages you create:

See **View Illumination** setting on page 46 and 47.

<Example>

In the text:

“Good morning *☺* It's fine today (^-^)”, the Indicator light beams in Colour 8 and then flickers in Colour 3 slowly for about 2 seconds each.



Messages

Select the required animation from the list below.

Name	Animation	Indicator Colour	Light Pattern
I am ironic		Colour 6	A
I am glad		Colour 3	
I am sceptical		Colour 5	
I am sad		Colour 1	
Wow!		Colour 4	B
I am crying		Colour 1	
I am winking		Colour 8	C
I am laughing		Colour 4	A
I am indifferent		Colour 7	C
In love/kissing		Colour 6	B
I am confused		Colour 5	
Tongue hanging		Colour 2	A
I am angry		Colour 3	B
Wearing glasses		Colour 2	
Devil		Colour 3	

- Pattern A: [Firefly] flickers slowly for about 2 seconds.
- Pattern B: [Flash] flickers fast for about 1 second.
- Pattern C: [Beam] lights for about 1 second (2 seconds in Colour 8).




Voicemail


The Voicemail service lets you access your voice mailbox. To listen to your voice messages, you may need to subscribe to the Voicemail service through your network operator.


Listening to Voice messages

From Idle mode:

1. Press and hold [1] to call your voice mailbox
2. Follow the recorded instructions
3. [] when finished


From Message menu:

 Main menu > **Messages** > **Voicemail** > **Call Mailbox**

1. Stored mailbox number is dialed
2. Follow the recorded instructions
3. [] when finished

Setting the mailbox number

 Main menu > **Messages** > **Voicemail** > **Set Mailbox number**

1. Enter the mailbox number → [] (OK)

Note: For further details, contact your network operator.



Cell Broadcast

You can receive messages on specified topics, such as weather information and traffic news, regularly from your service provider. You need to specify the “topic(s)” of information and the language in which you wish to receive the information.

To receive the broadcasts, **Read messages** must be on.

Auto display

You can set your phone to display the latest information messages automatically in Idle mode.

➔ Main menu > **Messages** > **Cell Broadcast**

1. [▲/▼] to scroll to **Auto display** → [□] (Change) to switch on/off

Receiving messages

To receive messages, you must turn the **Read messages** on.

➔ Main menu > **Messages** > **Cell Broadcast**

1. [▲/▼] to scroll to **Read messages** → [□] (Change) to switch on/off

Reading a Cell Broadcast message

You can browse through messages and select.

➔ Main menu > **Messages** > **Cell Broadcast** > **Message list**

1. [□] (Next) to select the required message



User defined topic

You can add your favourite topics to the user-defined topic list.

➤ Main menu > **Messages** > **Cell Broadcast** > **Topic list** > **User defined**

1. [▲/▼] to scroll to <**New entry**> → [□] (Options)
2. Enter the message ID → [□] (OK)
3. Enter the name → [□] (OK)

Options

While viewing the list, the following options are available by pressing [□] (Options): **Add**, **Edit** and **Delete**.

The highlight must be on a stored topic.

Topic list

You can specify topics to be received from your network service operator.

➤ Main menu > **Messages** > **Cell Broadcast** > **Topic list** > **Current**

1. [▲/▼] to scroll to <**Add topics**> → [□] (Select)
2. [▲/▼] to scroll to the required topic → [□] (Select)

Options

While viewing the list, the following options are available by pressing [□] (Options): **Add** and **Delete**.

The highlight must be on a stored topic.



Languages

You can set the language of the message you receive.

➤ Main menu > **Messages** > **Cell Broadcast** > **Languages**

1. If there are no entries: [▲/▼] to scroll to **Insert** or **Add to end** → [□] (Select)

OR

If there are any entries: [□] (Options) → [▲/▼] to scroll to **Insert** or **Add to end** → [□] (Select)

“Insert” adds a required language below the language you highlight whereas “Add to end” adds the language to the end of the list.

2. [▲/▼] to scroll to the required language → [□] (Select)

To remove a language:

1. [▲/▼] to scroll to the required language → [□] (Options)
2. [▲/▼] to scroll to **Delete** → [□] (Select)

Memory status

Memory status shows the used memory space and the maximum memory capacity of MMS or SMS.

➤ Main menu > **Messages** > **Memory status**

1. [▲/▼] to scroll to **MMS** or **SMS** → [□] (Select)

Icons for the SMS memory status:

 = Phone

 = SIM card



Contacts menu structure

Contacts list..... 58

Add Contact 59

Phone 59

SIM 60

Call log 62

Dialled numbers 62

Answered calls..... 62

Missed calls 62

Speed Dial list..... 63

Groups..... 64

Advanced 65

My Numbers 65

Memory status 66

My Contacts..... 66

SDN 67

(Information number)* 67





Browsing the Contacts list

You can search for a number in the Contacts list.

Browsing the list for a contact

➤ Main menu > **Contacts** > **Contacts list**

1. [▲/▼] to scroll to **Phone** or **SIM** → [□] (Select)
2. [▲/▼] to scroll to the required contact entry → [□] (View)

To search for a contact by entering letters:

When browsing the Contacts list

1. Enter letters to find a contact beginning with the specific letters

Options

When selecting the required contact entry, the following options are available by pressing [□] (Options).

View	View the selected contact.
Edit	Edit the selected contact.
Send MMS	Send an MMS message to the selected contact.
Send SMS	Send an SMS message to the selected contact.
Copy to Phone/SIM	Copy the selected contact to the phone or the SIM.
Copy all to Phone/SIM	Copy all the contacts to the phone or the SIM.
Delete	Delete the selected contact.
Delete all	Delete all the contacts stored in the currently shown Contacts list.
Send via Infrared	Send the selected contact via Infrared.



Adding contacts

Storing a contact in your phone

In the phone, you can store detailed information for each contact. The entries are grouped together and are retained even if you damage your SIM card.

☛ Main menu > **Contacts** > **Add Contact** > **Phone**

1. **Name:** Enter the name → [▼]
2. **Phone:** Enter the phone number → [▼]
You can select the country/region code by pressing [□] (+List) before entering the number in steps 2 to 4.
3. **Tel./office:** Enter the office phone number → [▼]
4. **Tel./mobile:** Enter the mobile phone number → [▼]
5. **E-mail:** Enter the E-mail address → [▼]
6. **Notes:** Enter notes → [▼]
7. **Groups:** [□] (Change) or [◀/▶] to select the required group → [▼]
8. **Picture:** [□] (Options) → [▲/▼] to scroll to **Change** → [□] (Select) → [▲/▼] to scroll to the required folder → [□] (Select) → [▲/▼] to select the required picture → [□] (Select) → [▼]
9. **Call Illumination:** [□] (Change) or [◀/▶] to select the required Call Illumination → [▼]
10. **Msg Illumination:** [□] (Change) or [◀/▶] to select the required Msg Illumination → [▼]
11. **Melodies:** [□] (Options) → [▲/▼] to scroll to **Change** → [□] (Select) → [▲/▼] to scroll to the required option → [□] (Select) → [▲/▼] to select the required melody → [□] (Select)
12. When entries are completed, [□] (Options)
13. [▲/▼] to scroll to **Save** → [□] (Select)



Storing a contact in your SIM card

You can store some information for each contact in your SIM card.

➔ Main menu > **Contacts** > **Add Contact** > **SIM**

1. **Name:** Enter the name → [▼]
2. **Phone:** Enter the phone number → [▼]
You can select the country/region code by pressing [☐] (+List) before entering the number.
3. **Location:** [☐] (Change) or [◀/▶] to select **SIM** → [▼]
To store a contact in FDN, see “Storing a contact in FDN” on page 61.
4. **Record no.:** [☐] (Change) or [◀/▶] to select the required record number → [☐] (Save)

Note: The length of name and number, and the total amount of data are SIM dependent.



Storing a contact in FDN

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN (Fixed Dial Number), which is located in your SIM card. When this function is on, only the Fixed dial numbers or numbers that begin with the same sequence as the Fixed dial numbers can be dialled.

To activate the Fixed dial function, see “Fixed dial” on page 85.

To store a fixed dial number, you need to enter your PIN2 code.

➡ Main menu > **Contacts** > **Add Contact** > **SIM**

1. **Name:** Enter the name → [▼]
2. **Phone:** Enter the phone number → [▼]
You can select the country/region code by pressing [□] (+List) before entering the number.
3. **Location:** [□] (Change) or [◀/▶] to select **FDN** → [▼]
4. **Record no.:** [□] (Change) or [◀/▶] to select the required record number → [□] (Save)
5. Enter your PIN2 → [□] (OK)

Note: When the Fixed dial function is enabled, only the Contacts entries stored in FDN can be edited.



Call log

Recently dialled phone numbers, answered calls and missed calls are stored in the Call log. The numbers in the Call log list can be used to call or add to Contacts.

Viewing/Dialling from Call log

↻ Main menu > **Contacts** > **Call log**

1. [▲/▼] to scroll to **Dialled numbers, Answered calls** or **Missed calls** → [□] (Select)
2. [▲/▼] to scroll to the required log
3. [↵] to dial the selected number if required

Options

When selecting the required log, the following options are available by pressing [□] (Options): **Add to Contacts**, **Delete** and **Delete all**.

Note: You can also access the Call log from Idle mode by pressing [↵]. See "Last number dialling" on page 23.



Speed Dial list

Setting speed dialling keys

You can quickly dial phone numbers stored at locations 2-9 in the Speed Dial list.

You must assign a required contact to a speed dialling key before switching the Speed Dial on/off.

➡ Main menu > **Contacts** > **Speed Dial list**

1. [▲ / ▼] to scroll to the required key → [□] (Edit)
2. [▲ / ▼] to scroll to the required Contact → [□] (Select)
3. **“Switch on Speed Dial setting”** → [□] (Yes) or [□] (No)

To switch on/off the Speed Dial setting:

In the Speed Dial list:

1. [▲ / ▼] to scroll to the required key → [□] (On/Off)

Using the speed dialling keys

In Idle mode:

1. Press and hold a speed dialling key ([2] - [9])



Groups

You can categorise the Contacts list stored in your phone into 10 groups. You can edit each group by renaming, or selecting a particular ringtone or icon, so that you can identify the incoming caller.

Viewing groups

☰ Main menu > **Contacts** > **Groups**

1. [▲/▼] to scroll to the required group → [☐] (View)

To add a new entry:

2. [▲/▼] to scroll to <New entry>
3. To add from Contacts list: [☐] (☰ →) → [▲/▼] to scroll to the required contact → [☐] (Select)

OR

To add a new contact: [☐] (Select) → See “Storing a contact in your phone” on page 59

Options

When highlighting a group member, the following options are available by pressing [☐] (Options): **Insert**, **View**, **Edit**, **Send MMS**, **Send SMS**, **Send via Infrared** and **Remove entry**.



Editing the group

☛ Main menu > **Contacts** > **Groups**

1. [▲/▼] to scroll to the required group → [□] (Options)
2. [▲/▼] to scroll to the required option → [□] (Select)

View	View the Contacts in the selected group.
Set ringtone	[▲/▼] to scroll to Preinstalled , My Media , Composed melody or Downloaded → [□] (Select) → [▲/▼] to scroll to the required ringtone → [□] (Select)
Set image	[▲/▼/◀/▶] to scroll to the required icon → [□] (Select)
Rename	Rename the group → [□] (OK)
Remove entries	“Remove all entries?” → [□] (Yes) or [□] (No)

Note: **Downloaded** in **Set ringtone** is country/region dependent. To compose your own melody, see “Melody composer” on page 99.

Advanced

My Numbers

My Numbers is a handy phone book where names and phone numbers can be stored and viewed.

☛ Main menu > **Contacts** > **Advanced** > **My Numbers**

1. [▲/▼] to scroll to **<Empty>** → [□] (Options)
2. [▲/▼] to scroll to **Edit** → [□] (Select)
3. Enter the phone number → [▼]

You can select the country/region code by pressing [□] (+List) before entering the number.
4. Enter the name → [□] (Save)



Viewing My Numbers

➤ Main menu > **Contacts** > **Advanced** > **My Numbers**

1. [▲/▼] to scroll to the required entry → [□] (View)

Options

When highlighting the stored entry, the following options are available by pressing [□] (Options): **View**, **Edit** and **Delete**.


Memory status

Memory status shows how many locations are available in the Contacts list.

➤ Main menu > **Contacts** > **Advanced** > **Memory status**

Icons in the status display:

 = SIM card

 = FDN

 = Phone



Note: The amount of memory for SIM/FDN storage depends on your SIM card.

My Contacts

You can choose either the SIM or the Phone Contacts list to be shown when you press [▼] in Idle mode. See “Contacts dialling” on page 23.

➤ Main menu > **Contacts** > **Advanced** > **My Contacts**

1. [▲/▼] to scroll to **Phone** or **SIM** → [□] (Select)



SDN

If your SIM card includes SDN (Service Dialling Number), you can call a service number by selecting from the list.

SDN enables you to access special services provided by your network operator, such as customer support, emergency services, etc.

➤ Main menu > **Contacts** > **Advanced** > **SDN**

1. [▲/▼] to scroll to the required SDN
2. To call the number: [☐] (Select)

OR

To view the details: [☐] (View)

Information number

The Information number may be included in a SIM card which supports CPHS and Information Dialling Number.

➤ Main menu > **Contacts** > **Advanced** > **Information number**

1. [▲/▼] to scroll to the required information number → [☐] (Select)



Settings

Settings menu structure

Sounds 69

Volume.....	69
Ringtones.....	69
Warning tone.....	70
Shutter sound	70

Alerts 71

Display..... 71

Wallpaper.....	71
Colour Theme	71
Illumination.....	72
Backlight time	72
Greeting	72
Brightness.....	73
(Hide network name)*	73
Key backlight	73

Language 74

T9 input.....	74
Display Languages	74

Data connections 75

CSD	75
GPRS.....	75
GPRS info*	75

GSM network 76

Auto network.....	76
New network	76
Network list	77
Band select	77

Calls..... 78

Call Diverts	78
Call Service	79
(Send my number)*	82

Security 83

Call bar	83
Codes	84
Fixed dial	85
SIM lock.....	86

Auto answer..... 86

Any key answer 86

Auto key lock 87

Time and date 87

Settings.....	87
Power on time.....	88
Power off time.....	88

Menu view 88

Defaults 88

Profiles 89





Sounds

Volume

You can change the volume of different ringtones used for the following: **Calls, Contacts calls, Alarm, Messages, Cell Broadcast, Key volume** and **Group 1-10**.

➤ Main menu > **Settings** > **Sounds** > **Volume**

1. [▲/▼] to scroll to the required ringtone → [] (Select)
2. [▲/▼] to adjust the volume level → [] (OK)

Ringtones

You can change the ringtone for different events and situations.

➤ Main menu > **Settings** > **Sounds** > **Ringtones**

1. [▲/▼] to scroll to the required event → [] (Select)

Calls	
Contacts calls	
Alarm	[▲/▼] to scroll to Preinstalled, My Media ^{*1} ,
Messages	Composed melody ^{*2} or Downloaded ^{*3} → []
Cell Broadcast	(Select) → [▲/▼] to select the required item → []
Group 1-10	(Select)
Key tone	[▲/▼] to scroll to Off, Tone 1, Tone 2 or Tone 3 → []
	(Select)

*1 Ringtones downloaded from the Internet are stored here.

*2 To compose your own melody, see "Melody composer" on page 99.

*3 Ringtones downloaded via the SMS service are stored here.




Note: You can change ringtones for SMS messages. An alert tone for MMS messages is preset in your phone and cannot be changed.





Downloading ringtones via the SMS service

Your requested ringtones can be downloaded to your phone via the SMS service. When a message is received containing a ringtone, notification appears on the Idle screen.

When a ringtone message appears on the Idle display:

1.  (View) to check the downloaded ringtone
2.  (Save)
3.  (OK)

OR

 to scroll to the required slot →  (Select)

The first 10 downloaded ringtones are stored in the empty slots. After all the slots are occupied, you can select an existing ringtone to be overwritten with a new one.

To reject downloaded ringtones:


 (Reject) in step 2.

Note: Contact your network operator or service provider about the service in details.

Warning tone

The Warning tone informs you of low battery (including when the Silent mode is on).



➤ Main menu > **Settings** > **Sounds** > **Warning tone**

1.  (Select) to switch on/off

Shutter sound

The phone makes a shutter sound when you take a picture.

➤ Main menu > **Settings** > **Sounds** > **Shutter sound**

1.  to scroll to **Shutter sound 1**, **Shutter sound 2** or **Shutter sound 3** →  (Select)



Alerts

You can set your phone to ring and/or vibrate when you receive a call or message, or the set time is reached.

The following alert types are available: **Ring only**, **None**, **Ring & Vibrate**, **Vibrate only** or **Ring once**.

➤ Main menu > **Settings** > **Alerts**

1. [▲/▼] to scroll to the required alert → [☐] (Select)

Display

Wallpaper

You can change the wallpaper on the Idle display.

➤ Main menu > **Settings** > **Display** > **Wallpaper**

1. [▲/▼] to scroll to **Preinstalled**, **My Media** or **Off** → [☐] (Select)
2. [▲/▼] to scroll to the required wallpaper → [☐] (Options)
3. To set: [▲/▼] to scroll to **Select** → [☐] (Select)

OR

To view and set: [▲/▼] to scroll to **View** → [☐] (Select) twice

Colour Theme

You can change the colour theme of the display.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Colour Theme** → [☐] (Change)
2. [▲/▼] to scroll to the required colour theme → [☐] (Select)



Illumination

The phone alerts you with illumination when specific events occur.

➤ Main menu > **Settings** > **Display** > **Illumination**

1. [▲/▼] to scroll to the required event → [☐] (Select)

Calls	
Contacts calls	[▲/▼] to select Off or Colour 1-8 → [☐] (Select)
Messages	
Alarm	
Battery charge	[☐] (Select) to switch on/off
Keypad	

Backlight time

You can set the length of time the display is illuminated by the backlight.

➤ Main menu > **Settings** > **Display** > **Backlight time**

1. [▲/▼] to scroll to **10 secs**, **30 secs** or **60 secs** → [☐] (Select)

Greeting

You can create a greeting message that is displayed each time the phone is switched on.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Greeting** → [☐] (Edit)
2. Enter the greeting → [☐] (OK)
3. [☐] (On/Off)



Brightness

You can adjust the brightness of the display.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Brightness** → [□] (Change)
2. [▲/▼] to scroll to **Maximum, High, Medium, or Low** → [□] (Select)

Hide network name

You can hide the network name which is shown in Idle mode.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Hide network name** → [□] (Select) to switch on/off

Key backlight

You can switch the key backlight on or off.

➤ Main menu > **Settings** > **Display**

1. [▲/▼] to scroll to **Key backlight** → [□] (Select) to switch on/off

Note: Activating some of the display features, such as Illumination, display backlight and key backlight consumes battery power more rapidly.



Language

T9 input

When you create text, T9® dramatically reduces the number of key presses. The following T9® input modes are available:

T9 preferred	Decide your preferred input mode to start with.
T9 language	Depending on the customisation of your phone, other language version(s) of T9 are available (or this function itself may not be available).

➤ Main menu > **Settings** > **Language** > **T9 input**

1. [▲ / ▼] to scroll to **T9 preferred** or **T9 language** → [□]
(Change or Select)
(If **T9 language** is selected, go to the next step.)
2. [▲ / ▼] to scroll to the required language or input mode → [□]
(Change or Select)

See “Text Entry” on page 32 for details.

Display Languages

It is possible to change the display language on your phone.

➤ Main menu > **Settings** > **Language** > **Display Languages**

1. [▲ / ▼] to scroll to **Automatic** or the required language → [□]
(Select)

Note: **Automatic** uses the language dictated by the country code of the SIM card.



Data connections

Data connection settings

You must configure the Data connections (GPRS and CSD) before configuring the server settings.

➤ Main menu > **Settings** > **Data connections**

1. [▲/▼] to scroll to **CSD** or **GPRS** → [□] (Select)
2. [▲/▼] to scroll to the required server → [□] (Select)
3. [▲/▼] to edit the required information → [□] (Save)

CSD	Used to transmit and receive data over telephone connections. Information to edit: Server name, Call type (ISDN/Analogue), Dial number, Login name, Password
GPRS	Used to transmit and receive data in packets rather than setting up a continuous channel. Information to edit: Server name, GPRS APN, Login name, Password, Authentication (Activate/Deactivate)

Note: Modifying the preinstalled settings without accurate knowledge may cause a failure in connection.

Contact your network operator if you can not connect to the Internet even though you have already subscribed to the service and not modified the preinstalled settings.

GPRS info

GPRS info displays the size of transferred data and the duration of the data connection session.

➤ Main menu > **Settings** > **Data connections** > **GPRS info**



GSM network

Auto network

You can set your phone to automatically or manually search for another network when roaming. When Auto network is on, the phone will automatically select a new network in order to maintain optimum network availability.

➤ Main menu > **Settings** > **GSM network**

1. [**▲** / **▼**] to scroll to **Auto network** → [**□**] (Change) to switch on/off

Note: National regulations may not permit roaming in your home region.

New network

You can manually select a network that is available in your current location.

➤ Main menu > **Settings** > **GSM network** > **New network**

1. “**Change network?**” → [**□**] (Yes) or [**□**] (No)
(If yes, go to the next step.)
2. If Auto network is off: [**▲** / **▼**] to scroll to the required network → [**□**] (Select)
OR
If Auto network is on: “**Done**” → [**□**] (OK)



Network list

The Network list is used when the Auto network is set to on. The order in the list indicates the search priority. You can edit the list as required.

➤ Main menu > **Settings** > **GSM network** > **Network list**

1. [] (List)

Options

In the Network list, the following options are available:

Insert	<p>Store a new network above the highlighted location.</p> <ol style="list-style-type: none"> 1. [▲/▼] to scroll to the required network as an insertion point → [] (Options) 2. [▲/▼] to scroll to Insert → [] (Options) 3. [▲/▼] to scroll to the required network to add to the list → [] (Options) → [] (OK)
Add to end	<p>Store a new network at the end of the list.</p> <ol style="list-style-type: none"> 1. [] (Options) 2. [▲/▼] to scroll to Add to end → [] (Options) 3. [▲/▼] to scroll to the required network to add to the list → [] (Options) → [] (OK)
Delete	<p>Delete the selected network.</p> <ol style="list-style-type: none"> 1. [▲/▼] to scroll to the required network → [] (Options) 2. [▲/▼] to scroll to Delete → [] (Options) → [] (OK)

Band select

You can select a network band.

➤ Main menu > **Settings** > **GSM network** > **Band select**

1. [▲/▼] to scroll to **900 MHz**, **1800 MHz** or **900/1800 MHz** → [] (Select)



Calls

Call Diverts

Voice calls can be diverted to different numbers in different situations. For example, you can divert calls to your voice mailbox when you are out of reach.

Calls can be diverted in the following situations:

All voice calls	Divert all incoming voice calls.
Not reachable	Divert incoming voice calls when phone is not in a coverage area.
No reply	Divert incoming voice calls if call is not answered.
Busy	Divert incoming voice calls when a call is in progress.

➤ Main menu > **Settings** > **Calls** > **Call Diverts**

1. [▲ / ▼] to scroll to the divert situation → [] (Select)
2. [▲ / ▼] to scroll to **Set**, **Clear** or **Check status** → [] (Select)
(When you select **Set**, go to the next step)
3. Enter the phone number to divert to → [] (OK)

OR

To select from Contacts: [] () → [▲ / ▼] to scroll to the required contact → [] (Select)

OR

To divert calls to the voice mailbox: [] (Mailbox) to launch the voice mailbox number

When All voice calls setting is enabled, the divert icon () is displayed on the Idle display.

To check the status or cancel all the settings:

On step 1, [▲ / ▼] to scroll to **Status check** or **Cancel all** → [] (Select)



Call Service

Time/Charge

Check the duration and the remaining units of calls.

Last call	Display the date, time and duration of the last call.
All voice calls	Display the total duration, number, and call units of all the outgoing or incoming voice calls.
Cost left	Display the remaining call units available.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Time/Charge**

1. [▲/▼] to scroll to **Last call**, **All voice calls** or **Cost left** → [□] (Select)

(When you select **All voice calls**, go to the next step)

2. To check the number of calls made and the duration: [▲/▼] to scroll to **Outgoing** or **Incoming** → [□] (Select)

OR

To check the units of call charge: [▲/▼] to scroll to **Call meter** → [□] (Select)

Call waiting

If Call waiting is switched on, another call can be received while on a call and multiple calls can be made. See “Answering a second call” on page 26.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Call waiting**

1. [▲/▼] to scroll to **Set**, **Clear** or **Status check** → [□] (Select)



Settings

Withhold ID



Withhold ID may already be set to prevent showing your name and/or number to another phone by the network operator. You can check the status here.

➔ Main menu > **Settings** > **Calls** > **Call Service** > **Withhold ID**

The current status is displayed.

Note: Contact your network operator about the service in details.

Caller's ID



Caller's ID allows you to display the caller's name and/or number on your display. You can check the status here.

➔ Main menu > **Settings** > **Calls** > **Call Service** > **Caller's ID**

The current status is displayed.

Note: Contact your network operator about the service in details.



Charge settings

You can check the service charge settings or reset the settings.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Charge settings**

1. [▲/▼] to scroll to the required setting → [□] (Select or Change)
(If one of the settings except for **Auto display** is selected, go to the next step.)
2. [□] (Edit) → Enter the PIN2 code → [□] (OK)
3. Follow the operation shown below:

Currency	You can set the currency unit in which your service rate is determined. Firstly, Personal rate must be entered. Enter the currency unit (max. 3 characters) → [□] (Save)
Personal rate	You can set your personal rate. This is the cost that the service provider charges for one unit of call time. [▲/▼] to scroll to Per unit: or Per min.: → Enter the value → [□] (Save)
Max cost	You can set the maximum cost of calls allowed. To set the Display credit: [▲/▼] to scroll to Display credit → [□] (Change) to switch on/off → [□] (Save) To set the Max cost: [▲/▼] to scroll to Max cost → Enter the credit limit → [□] (Save)
Auto display	In Idle mode, the cost of the last dialled call is displayed automatically.

Note: The duration of one unit may vary between peak and off-peak times. Call charges can be calculated accordingly. However, the actual tariffs charged by your network operator may not be reflected in the calculation.



Settings

Line



Your phone may have two phone lines if your SIM card supports CPHS and Alternate Line Service.

➤ Main menu > **Settings** > **Calls** > **Call Service** > **Line**

1. [▲/▼] to scroll to **Line 1** or **Line 2** → [□] (Select)

Note: Contact your network operator about service in details.

Send my number



You can choose whether or not to show your name and/or number to another phone. You can comply with your network's own setting (see "Withhold ID" on page 80) if you select **Network set**.

➤ Main menu > **Settings** > **Calls** > **Send my number**

1. [▲/▼] to scroll to **Network set, On** or **Off** → [□] (Select)

Note: The status of **Withhold ID** which is set only by your network operator does not affect **Send my number** setting.

Contact your network operator about the service in details.



Security

Call bar

Call barring restricts certain calls using a password supplied by your service provider. You can check or change the status of Call bar.

The following Call bar settings are available:

All outgoing	All outgoing calls are barred.
Outgo int'l	International outgoing calls are barred.
Out. int'l x home	International outgoing calls except to your home country/region are barred.
All incoming	All incoming calls are barred.
When roaming	All international incoming calls when roaming outside the home PLMN are barred.

☞ Main menu > **Settings** > **Security** > **Call bar**

1. [▲/▼] to scroll to the required setting → [] (Select)
2. [▲/▼] to scroll to **Set**, **Clear** or **Check status** → [] (Select)
(If **Set** or **Clear** is selected, go to the next step.)
3. Enter the required password → [] (OK)

To check the status:

On step 1, [▲/▼] to scroll to **Status check** → [] (Select)

To cancel all the settings:

On step 1, [▲/▼] to scroll to **Cancel all** → [] (Select) → Enter the required password → [] (OK)

To change the password:

On step 1, [▲/▼] to scroll to **Password** → [] (Select) → Enter the current password → [] (OK) → Enter a new password → [] (OK) → Enter the new password to verify → [] (OK)

Note: Contact your network operator for the password.



Codes

Changing the phonecode

You can change the phonecode for enhancing security. See “SIM lock” on page 86.

➤ Main menu > **Settings** > **Security** > **Codes** > **Change phonecode**

1. Enter a new phonecode → [] (OK)
2. Enter the new code to verify → [] (OK)

To change the phonecode, enter the current phonecode, then repeat the step 1-2.

Note: Your phonecode must be 6 to 16 digits. You are advised to write down your phonecode. If the phonecode is entered incorrectly 10 times, the phone will cease to operate. Contact your local Panasonic service centre.

PIN control

The PIN protects your phone against unauthorised use. If you enable the PIN, you will be prompted to enter the PIN every time the phone is switched on.

➤ Main menu > **Settings** > **Security** > **Codes** > **PIN control**

1. Enter the PIN code → [] (OK)
2. [] (Change) to switch on/off → [] (OK)

Note: If the PIN code is entered incorrectly several times (depends on your SIM card), the PIN will be blocked. Contact your service provider for PUK code. If the PUK code is entered incorrectly 10 times, your SIM card will be blocked permanently.



Changing PIN/PIN2

You must enable the PIN before changing the code. See “PIN control” on page 84.

➤ Main menu > **Settings** > **Security** > **Codes**

1. [▲/▼] to scroll to **Change PIN** or **Change PIN2** → [] (Select)
2. Enter the current code → [] (OK)
3. Enter a new code → [] (OK)
4. Enter the new code to verify → [] (OK)

Note: If either PIN or PIN2 is entered incorrectly several times (depends on your SIM card), the phone will be locked. Contact your service provider for PUK or PUK2 code. If the PUK or PUK2 code is entered incorrectly 10 times, your SIM card will be blocked permanently.

Fixed dial

The Fixed dial feature allows you to limit your outgoing calls to a certain set of numbers saved in FDN (Fixed Dial Number), which is located in your SIM card. When this function is on, only the Fixed dial numbers or numbers that begin with the same sequence as the Fixed dial numbers can be dialed. To enter Fixed dial numbers, see “Storing a contact in FDN” on page 61. When the Fixed dial is on, any manually dialled phone numbers must be the same as the numbers in the FDN, otherwise the call cannot be made.

➤ Main menu > **Settings** > **Security** > **Fixed dial**

1. Enter the PIN2 code → [] (OK)
2. [] (Change) to switch on/off → [] (OK)

Note: If the PIN2 code is entered incorrectly 3 times, the PIN2 will be blocked. Contact your service provider for PUK2 code. If the PUK2 code is entered incorrectly 10 times, your SIM card will be blocked permanently.



SIM lock

Once you enable the SIM lock, you will be prompted to enter your phonecode when you switch on the phone with a different SIM card inserted.

➤ Main menu > **Settings** > **Security** > **SIM lock**

1. Enter the phonecode → [OK] (OK)
2. [OK] (Change) to switch on/off → [OK] (OK)

Note: Your phonecode must be 6 to 16 digits. You are advised to write down your phonecode. If the phonecode is entered incorrectly 10 times, the phone will cease to operate. Contact your local Panasonic service centre.

Auto answer

When you use the optional Personal handsfree earpiece, you can answer a call automatically.

➤ Main menu > **Settings**

1. [▲/▼] to scroll to **Auto answer** → [OK] (Change) to switch on/off

Any key answer

Calls can be answered by pressing any key except [Mute], [X] and [OK] (Reject or Mute) if you switch on Any key answer.

➤ Main menu > **Settings**

1. [▲/▼] to scroll to **Any key answer** → [OK] (Change) to switch on/off



Auto key lock

The Auto key lock is used to prevent any keys from being pressed accidentally e.g. when the phone is being carried. This function automatically turns on shortly after the phone returns to Idle mode.

➤ Main menu > **Settings**

1. [▲/▼] to scroll to **Auto key lock** → [□] (Change) to switch on/off

To deactivate Auto key lock when the keypad is locked:

1. [□] → “Unlock keypad?” → [□] (OK)

Time and date

Settings

You can set the current time and date on your phone.

➤ Main menu > **Settings** > **Time and date** > **Settings**

1. [▲/▼] to select the required setting → [□] (Change or Select)
2. Follow the operation shown below:

Display time	Choose to display the time in Idle mode.
Time zone	Before setting the time and date, set the time zone of your region. [▲/▼] to select the required region → [□] (Select) → “Daylight saving?” → [□] (Yes) or [□] (No) → “Set this city to local” → [□] (OK)
Time & date	Set the time and date. [□] (Edit) → Enter the date → [▼] → Enter the time → [□] (Save)
Date format	Select the required display format for the date. [▲/▼] to scroll to the required format → [□] (Select)
Time format	Select the required display format for the time. [▲/▼] to scroll to 12 hours or 24 hours → [□] (Select)



Power on/off time

The phone can be set to turn itself on/off automatically at a specified time.

➤ Main menu > **Settings** > **Time and date**

1. [**▲** / **▼**] to scroll to **Power on time** or **Power off time** → [**□**] (Change)
2. [**□**] (Change) or [**◀** / **▶**] to switch on/off
3. If you select **On**: [**▼**] → Enter the time (24 hour clock) → [**□**] (Save)
OR
If you select **Off**: [**□**] (Save)

Note: Ensure that Power on time settings will not contravene any regulations by switching on automatically when in an aircraft, medical facility, etc.

Menu view

The menu view can be switched between 9 launcher and Scroll launcher. See “Displaying the menu” on page 36.

➤ Main menu > **Settings** > **Menu view**

1. [**▲** / **▼**] to scroll to **9 launcher** or **Scroll launcher** → [**□**] (Select)

Defaults

All personal settings are returned to their factory default settings.

➤ Main menu > **Settings** > **Defaults**

1. “**Restore default settings?**” → [**□**] (Yes) or [**□**] (No)



Profiles

Activating a profile

You can switch among different profiles in your phone, each with a distinct combination of alert method, ringtone, etc. Profiles are set up for use in the following environments:

Normal	For everyday settings.
Quiet	For formal occasions.
Meeting	For meetings.
Outdoor	For noisy environments.
Headset	Ringing with vibration when it is difficult to hear the ringtone.

➤ Main menu > **Settings** > **Profiles**

1. [▲/▼] to scroll to the required profile → [☐] (Options)
2. [▲/▼] to scroll to **Activate** → [☐] (Select)

Setting a profile

You can customise a profile by changing the alerts, ring volume, warning tone, and/or brightness.

➤ Main menu > **Settings** > **Profiles**

1. [▲/▼] to scroll to the required profile → [☐] (Options)
2. [▲/▼] to scroll to **Edit** → [☐] (Select)
3. [▲/▼] to scroll to **Alerts, Volume, Warning tone or Brightness** → [☐] (Select)

Alerts	See "Alerts" on page 71.
Volume	See "Volume" on page 69.
Warning tone	Switch on/off the warning tone.
Brightness	See "Brightness" on page 73.



Games & Apps

Games & Apps menu structure

Games & Apps 90	View Certificate..... 92
Settings 91	Information..... 92

Opening an application

Your phone comes with pre-installed Java™ applications. The downloaded Java™ applications are also listed here (up to 20 applications).

☛ Main menu > **Games & Apps** > **Games & Apps**

1. [▲/▼] to scroll to the required application → [□] (Launch)

Options

When selecting the required application, the following options are available by pressing [□] (Options).

Launch	Open the application.
Details	Show properties of the application. If the data originates from a trusted source, [□] (More) to see digital certificates of the application.
Permission	Control the application's access to external resources. [▲/▼] to scroll to Net access or Messaging → [□] (Select) → [▲/▼] to scroll to the required setting → [□] (Select) To restore default settings: [▲/▼] to scroll to Default → [□] (Select) → [□] (Yes)
Delete*	Delete the application.

* Preinstalled applications cannot be deleted.



Settings

The following settings are available for your Java™ applications.

☰ Main menu > **Games & Apps** > **Settings**

1. [▲/▼] to scroll to the required option → [☐] (Select)

Volume	Choose whether or not you want to activate the feature while using an application.
Vibration	[☐] (Select) to switch on/off
Access Point	<p>Manage access point settings.</p> <p>To activate an access point: [▲/▼] to scroll to the required access point → [☐] (Activate)</p> <p>To edit an access point setting: [▲/▼] to scroll to the required access point → [☐] (Edit) → [▲/▼] to edit the required item → [☐] (Save)</p> <p>Information to edit: Profile name, IP address, IP port, Linger time, DNS, Connection (Auto, CSD or GPRS), CSD and GPRS.</p>

Note: Keeping backlight or vibrator on for long periods of time consumes battery power more rapidly.

The phone can contain five access point settings. Contact your network operator for further information.

You need to configure CSD or GPRS before configuring the server settings. See "Data connections" on page 75.



View Certificate

A certified Java™ application is digitally signed confirming that the data originates from a trusted source and has not been changed by a third person.

➔ Main menu > **Games & Apps** > **View Certificate**

1. [▲/▼] to scroll to the required certificate → [□] (Select)

Note: Your phone is guaranteed to work only with certified applications obtained legally. Downloaded third party applications that are not certified may work improperly, may cause features on your phone to work improperly, and could possibly render your phone unusable. Panasonic accepts no liability for the usage of uncertified applications.

Information

View copyright information about your Java™ virtual machine. The Java™ virtual machine is used to run various Java™ applications on your phone.

➔ Main menu > **Games & Apps** > **Information**

Downloading applications

You can download Java™ applications to your phone, or upgrade an existing application to a newer version. For customer support of downloaded contents, visit the respective supplier's website.

Note: Your phone supports MIDP2.0 Java applications. Other types of Java applications may not be installed.

Panasonic is not responsible for the performance of downloaded contents or possible corruption of phone software.



Browser menu structure

Start Browser 95

Bookmarks 96

Settings 93

 Push setting 94

 Server list 94

Settings

Setting up to access the Internet

Your phone supports WAP (Wireless Application Protocol) and has a WAP browser. Connect wirelessly to Mobile Internet and access information you need such as news, weather reports, stock quotes, banking, travel information and sport results, etc.

Before Internet services can be accessed, you need to subscribe to your network operator to enable the relevant configuration information. (Your network operator may have already completed the connection settings.)

Note: Modifying the preinstalled settings without accurate knowledge may cause a failure in connection.

Contact your network operator if you can not connect to the Internet even though you have already subscribed to the service and not modified the preinstalled settings.



➤ Main menu > **Browser** > **Settings** > **Server list**

1. [▲/▼] to scroll to the required server → [□] (Edit)
2. [▲/▼] to edit the required item → [□] (Save)
3. [□] (Launch)

The following information is available for each server setting: **Server name, IP address, IP port, Homepage, Linger time, Java Download, Connection (Auto, CSD or GPRS), CSD and GPRS.**

The phone can contain five server settings. Contact your network operator for further information.

Note: You need to configure CSD or GPRS before configuring the server settings. See "Data connections" on page 75.

Push setting

WAP Push messages inform you of updated news, sometimes containing a link to a webpage.

You can set the Push setting to decide how you want to receive WAP push messages from your network operator.

➤ Main menu > **Browser** > **Settings** > **Push setting**

1. [▲/▼] to scroll to **Always all, Always none** or **Limited SMS centre** → [□] (Select)

(If **Limited SMS centre** is selected, go to the next step.)

2. Enter the SMS centre number → [□] (Save)

You can select the country/region code by pressing [□] (+List) before entering the number.



Starting the Browser

The first time the Browser is activated, the Home page will be displayed. During an Internet connection, you can add bookmarks, reload pages, view active session details, etc.

☰ Main menu > **Browser** > **Start Browser**

To browse webpages:

1. [⏏] to go to the next webpage

OR

[↶] to return to the previous webpage

Options

While viewing the Browser, the following options are available by pressing [↵].

Home	Jump to the home page which is pre-defined in Settings.
Bookmarks	Select one of your bookmarks and jump to the page, or bookmark the currently displayed page.
Save Items	Save items in the currently displayed page.
Reload	Reload and update the currently displayed page.
Go To URL	Enter a URL and jump to the page.
Show URL	Show the URL of the currently displayed page.
SnapShots	Capture the screen image of the currently displayed page.
Advanced	The following advanced options are available: Inbox , Restart Browser and About...
Settings	The following settings are available: Scroll Mode , Downloads , View Title Region , Security and Send Referrer .



Bookmarks

Once you bookmark your favourite webpage, you can quickly jump to the page. There are two types of bookmarks; one is in browser (see **Bookmarks** setting on page 95) and the other is an off-line bookmark described below.

Bookmarking a page

You can save web addresses to your list of bookmarks.

☞ Main menu > **Browser** > **Bookmarks**

1. [▲/▼] to scroll to **<Empty>** → [□] (Options)
2. [▲/▼] to scroll to **Edit** → [□] (Select)
3. Enter the title and URL → [□] (Save)



Viewing a bookmarked page

☞ Main menu > **Browser** > **Bookmarks**

1. [▲/▼] to scroll to the required bookmark
2. [□] (Launch)
OR
[□] (Options) → [▲/▼] to scroll to **Launch** → [□] (Select)

To delete a bookmark:

On step 2, [□] (Options) → [▲/▼] to scroll to **Delete** → [□] (Select) → [□] (OK)



Applications menu structure

Alarm	97	Currency	102
Calculator	98	Rate setting	102
Melody composer	99	Rate compute	102
(Calendar)*	99	Infrared	103
Scheduler	100	PC Tool	105
Notes	101	Data cable	105
		Infrared	105




Alarm

You can set the alarm so that the phone will sound, vibrate and/or light when the set time is reached.

☞ Main menu > **Applications** > **Alarm**

1. [▲/▼] to scroll to the required setting → [□] (Options)
2. [▲/▼] to scroll to **Edit** → [□] (Select)
3. **Time**: Enter the time (24 hour clock) → [▼]
4. **Day**: [◀/▶] to scroll to a day of the week → [□] (Change) → [▼]
5. **Status**: [□] (Change) or [◀/▶] to select **Activate** or **Deactivate** → [▼]
6. **Description**: Enter the description → [□] (Save)

The alarm set indicator () appears on the Idle display.

To set the Indicator light to illuminate when the set time is reached, see "Illumination" on page 72.



Options

When the required setting is highlighted, the following options are available by pressing [] (Options): **Activate/Deactivate**, **Edit**, **Delete** and **Delete all**.

Note: If you are on a call when the set time is reached, the alarm will sound. Ensure that Alarm settings will not contravene any regulations by switching on automatically when in an aircraft, medical facility, etc.

Stopping the alarm

1. Press any key or [] (Off) to stop the alarm
OR
[] (Pause) to silence the alarm for 5 minutes

Calculator

You can use the 4-function calculator (addition, subtraction, multiplication and division) to make simple arithmetic operations.

☛ Main menu > **Applications** > **Calculator**

1. Enter a number
To enter a decimal point: [#]
To enter a minus sign: [✖]
2. [▲/▼/◀/▶] to select the arithmetic operation
3. Enter a number
4. [] (=) to calculate





Melody composer

You can compose your own polyphonic melody and use it as a ringtone. See “Ringtones” on page 69.

➤ Main menu > **Applications** > **Melody composer**

1. [▲/▼] to scroll to the required melody → [□] (Options)
2. [▲/▼] to scroll to **Edit** → [□] (Select)
3. [▲/▼] to scroll to the track you wish to compose; **Main track**, **Sub track 1**, **Sub track 2**, or **Sub track 3** → [□] (Select)

Use the following keys to enter musical notes.

Key	[1]	[2]	[3]	[4]	[5]	[6]	[7]
Note	C	D	E	F	G	A	B

Key	[8]	[9]	[0]	[*]	[#]	[□]
Note	Enter the same note again	Dotted note	Rest	Note length	Sharp	Delete a note

Options

While composing, the following options are available by pressing [□] (Options): **Play**, **Tempo**, **Instrument** sound, and **Save**.

Calendar

Calendar menu is available under Applications menu if your SIM card provides STK services. See “Calendar” on page 108 for details.



Scheduler

You can set and manage your schedules.

Setting a schedule

➤ Main menu > **Applications** > **Scheduler**

1. [**▲** / **▼**] to scroll to **<New entry>** → [**□**] (Select)
2. **Type:** [**□**] (Change) or [**◀** / **▶**] to select **Memo**, **Call** or **Meeting** → [**▼**]
3. **Description:** Enter description → [**▼**]
4. **Status:** [**□**] (Change) or [**◀** / **▶**] to select **Activate** or **Deactivate** → [**▼**]
5. **Frequency:** [**□**] (Change) or [**◀** / **▶**] to select **Once**, **Daily**, **Weekly**, **Monthly** or **Annually** → [**▼**]
6. **Start date:** Enter the start date → [**▼**]
7. **Start time:** Enter the start time → [**▼**]
8. **End date:** Enter the end date → [**▼**]
9. **End time:** Enter the end time → [**□**] (Save)

To check the schedule:

On step 1, [**▲** / **▼**] to scroll to the required event → [**□**] (Options) → [**▲** / **▼**] to scroll to **View** → [**□**] (Select)

Options

When highlighting a scheduled event in the list, the following options are available by pressing [**□**] (Options): **View**, **Activate/Deactivate***, **Edit**, **New entry**, **Delete**, **Delete all** and **Capacity**.

* Not available if the start date of the event is earlier than the current date.

Note: Scheduler menu and Calendar menu are synchronized. You can also set and manage your schedules in Calendar menu. See "Creating Calendar events" on page 109.



Notes

You can make a brief memo and send it via SMS.

☞ Main menu > **Applications** > **Notes**

1. [▲ / ▼] to scroll to **<New entry>** → [☐] (Select)
2. Enter your text (see “Text Entry” on page 32)
3. [☐] (Options) when finished
4. [▲ / ▼] to scroll to **Save** → [☐] (Select)

On step 4, the following options are also available: **Insert new line**, **Clear text** and **Send**.

Options

When highlighting a note stored in the list, the following options are available by pressing [☐] (Options): **View**, **Edit**, **New entry**, **Delete**, **Delete all**, **Send** and **Capacity**.



Currency converter

Conversion rate setting

The currency converter enables you to convert from/to a home currency using a conversion rate that you enter.

Before beginning conversions, choose a base currency and enter the conversion rate. The base currency rate is set to 1.

☛ Main menu > **Applications** > **Currency** > **Rate setting**

1. Enter the conversion rate next to the red arrow → [□]
(Compute)

To enter a decimal point: [#]

You can change the base currency by pressing [▲/▼].

2. [□] (Save)

Converting one currency to another

After setting the conversion rate, you can start converting an amount of money in one currency into another.

☛ Main menu > **Applications** > **Currency** > **Rate compute**

1. Enter the amount in your home currency to convert into the amount in the foreign currency → [□] (Convert)

To enter a decimal point: [#]

You can also enter the amount in the foreign currency to convert into the amount in your home currency if you change the base currency by pressing [▲/▼].



Infrared

You can send and receive Contacts cards, pictures and sound clips between your phone and other infrared enabled devices.

Note: The phone may not allow you to transfer some copyrighted images, ringtones or other contents.

Though invisible to the eye, do not point the infrared beam at anyone's eye.

Preparing for infrared connection

Place your phone and the other device within the effective range of the infrared connection, about 20 cm. Make sure that:

- There are no obstructions between the two devices. Nearby activated infrared devices may cause interference.
- The infrared ports of the devices point at each other.
- On the receiving device, activate the infrared port.
- If the other device is a computer, you need to set up an infrared connection on the computer. For example, in Windows, select Start > Settings > Control Panel > Options tab > Enable Infrared Communication. For specific infrared set up instructions for your computer's operating system, refer to the computer's online help.

Note: The infrared connection is compliant with Microsoft Windows™ ME, 2000 and XP. Availability of the infrared connection depends on the operating system or specification of the other device.

Sending data via infrared

From Contacts or My Media menu:

1. Open the item you wish to send → [☐] (Options)
2. [▲/▼] to scroll to **Send via Infrared** → [☐] (Select)
3. Your phone automatically begins infrared connection

Note: For further details, see "Browsing the Contacts list" on page 58, "Pictures" on page 106 or "Sounds" on page 106.



Receiving data via infrared

You must activate the infrared port and stay in the Idle or Main menu display to receive data via infrared.

Activating the infrared port

➤ Main menu > **Applications** > **Infrared**

1. [] (Change) to turn the infrared port on
2. [X] or [] (Back) repeatedly to go back to the Idle or Main menu display

Receiving data

In Idle or Main menu display:

1. When the icon () is displayed, sender can transfer data
2. A confirmation message appears when transfer is complete
3. [] (Save)

Received Contacts cards are always stored in the Phone Contacts list.

If a received picture or sound file already exists, your phone prompts you to rename or overwrite it.

Note: You may answer an incoming call during data transfer, but it is advisable to connect the Personal handsfree accessory so as not to move the phone away from the infrared beam.

The filename should include only alphanumeric letters (i.e. A-Z, a-z, or 0-9). If the received Contacts card contains letters other than alphanumeric letters, they may be displayed incorrectly.

To save battery power, deactivate the infrared port when not in use. The infrared port automatically turns off in 10 minutes and the icon disappears unless you manually deactivate it.



PC Tool

Your phone comes with PC software tools on a CD-ROM. The PC software tools can be used to manage data connection between your phone and a personal computer. See “PC Software” on page 113.

You can use the infrared function or a separately sold USB data cable to connect your phone to a PC.

You must first install the PC Software tool supplied on the CD-ROM and start the program BEFORE you insert the USB Data cable as this will install the USB drivers required for the correct operation.

Note: The phone may not allow you to transfer some copyrighted images, ringtones or other contents.

The filename should include only alphanumeric letters (i.e. A-Z, a-z, or 0-9). If the received Contacts card contains letters other than alphanumeric letters, they may be displayed incorrectly.

Connecting via USB Data cable

➤ Main menu > **Applications** > **PC Tool** > **Data cable**

1. Connect the USB Data cable to your phone and to a PC.

Personal handsfree function is disabled while PC tool connection is in progress.

Connecting via Infrared

➤ Main menu > **Applications** > **PC Tool** > **Infrared**

1. Place your phone and a PC for infrared connection. See “Preparing for infrared connection” on page 103 for details.

Infrared connection with other devices than the currently connected PC is not available while PC tool connection is in progress.

Note: To save battery power, deactivate the Infrared port when not in use. The Infrared port automatically turns off in 10 minutes and the infrared icon disappears unless you manually deactivate it.



My Media

My Media menu structure

Pictures 106

Shortcuts..... 107

Sounds 106

Memory status 107

User 1 - 4 107

Pictures

You can store, view, and manage picture files.

➤ Main menu > **My Media** > **Pictures**

1. [▲/▼] to scroll to the required picture → [☐] (Options)
2. [▲/▼] to scroll to the required option → [☐] (Select)

The following options are available: **View**, **Send via MMS**, **Send via Infrared**, **Set as wallpaper**, **Rename**, **Copy**, **Cut**, **Paste**, **Delete**, **Delete all** and **Properties**.

Sounds

You can store, play, and manage sound files.

➤ Main menu > **My Media** > **Sounds**

1. [▲/▼] to scroll to the required sound → [☐] (Options)
2. [▲/▼] to scroll to the required option → [☐] (Select)

The following options are available: **Send via MMS**, **Send via Infrared**, **Set as ringtone**, **Rename**, **Copy**, **Cut**, **Paste**, **Delete**, **Delete all** and **Properties**.

Note: See “Specifications” on page 121 for supported picture or sound file formats.



User defined folders

You can also store your pictures and sounds in the user defined folders.

➤ Main menu > **My Media** > **Pictures** or **Sounds**

1. [▲/▼] to scroll to the required file → [☐] (Options)
2. [▲/▼] to scroll to **Copy** → [☐] (Select)
3. [☐] (Back)
4. [▲/▼] to scroll to **User 1**, **User 2**, **User 3**, or **User 4** → [☐] (Select)
5. [☐] (Options) to scroll to **Paste** → [☐] (Select)

Shortcuts

It is possible to make a shortcut to a specific menu. You can open the menu directly from Idle mode by pressing [▲].

The following menus are available: **Alarm**, **Bookmarks**, **Create new**, **Inbox**, **Archive**, **Sounds**, **Illumination**, **Camera**, **Games & Apps**, **My Media**, **Profiles**, **Alerts**, **Calendar**, **Currency** and **Calculator**.

To make shortcuts:

➤ Main menu > **My Media** > **Shortcuts**

1. [▲/▼] to scroll to the required menu → [☐] (Change) to switch on/off

Memory status

The available memory space and used memory space for storing multimedia data or downloading Java™ applications are displayed.

➤ Main menu > **My Media** > **Memory status**



Calendar

You need to set the date before viewing the calendar. See “Time and date” on page 87.



Note: The menu is subject to change. If your SIM card includes STK, STK replaces Calendar menu, and Calendar menu appears under Applications menu.

Changing the Calendar view

You can switch the calendar display between Month view and Week view.

➤ Main menu > **Calendar**

1. [□] (Options)
2. [▲/▼] to scroll to **Month** or **Week** → [□] (Select)

Moving around the Calendar

Press the following keys to scroll to the required date, week, month or year/time.

In Month view:

- Date: [◀/▶], [4] or [6]
 Week: [▲/▼], [2] or [8]
 Month: [✳] or [#]
 Year: [1] or [3]

Calendar							W47	
Nov							TUE	2004
	1	2	3	4	5	6		
7	8	9	10	11	12	13		
14	15	16	17	18	19	20		
21	22	23	24	25	26	27		
28	29	30						
Options							Back	

In Week view:

- Date: [◀/▶], [4] or [6]
 Week: [2], [8], [✳] or [#]
 Month: [1] or [3]
 Time: [▲/▼]

Nov 2004							W47
11.15		<--->			11.22		
Mo	Tu	We	Th	Fr	Sa	Su	
14							
16							
18							
20							
22							
Options							Back



Creating Calendar events

You can set and manage your schedule.

☞ Main menu > **Calendar**

1. Move the cursor to the required day → [] (Options)
2. [▲/▼] to scroll to **Agenda** → [] (Select)
3. [▲/▼] to scroll to **<New entry>** → [] (Select)
4. **Type:** [] (Change) or [◀/▶] to select **Memo, Call or Meeting** → [▼]
5. **Description:** Enter description → [▼]
6. **Status:** [] (Change) or [◀/▶] to select **Activate or Deactivate** → [▼]
7. **Frequency:** [] (Change) or [◀/▶] to select **Once, Daily, Weekly, Monthly or Annually** → [▼]
8. **Start date:** Enter the start date → [▼]
9. **Start time:** Enter the start time → [▼]
10. **End date:** Enter the end date → [▼]
11. **End time:** Enter the end time → [] (Save)

The scheduled event is highlighted in the calendar.

To check the schedule:

On step 3, [▲/▼] to scroll to the required event → [] (Options) → [▲/▼] to scroll to **View** → [] (Select)

Options

When highlighting a scheduled event in the list, the following options are available by pressing [] (Options): **View, Activate/Deactivate***, **Edit, New entry, Delete, Delete all** and **Capacity**.

* Not available if the start date of the event is earlier than the current date.

Note: Calendar menu and Scheduler menu are synchronized. You can also set and manage your schedules in Scheduler menu. See "Scheduler" on page 100.



Camera

Taking pictures

You can take pictures with the built-in camera. The picture can be sent in an MMS, set as Wallpaper, or attached to a contact in your Contacts list.

☛ Main menu > **Camera**

1. The main display acts as a viewfinder.
Move the phone around to frame your subject

OR

To take a self-portrait: Look at yourself in the self-portrait mirror

2. [⏻] or [📷] (📷) to snap the picture

Your phone automatically saves the picture to Pictures folder in My Media.



Quick key operations:

In Idle mode:

1. [⏻] to activate the Camera in Portrait style

OR

Press and hold [⏻] to Activate the Camera in Landscape style

Note: When taking a picture, flickers may appear in certain environments.

If a call comes in just after you snap the picture, it may not be saved.

Operations after taking a picture

After you take a picture, the image appears on the display.

To return to the viewfinder mode: [⏻]

To delete the picture: [📷] (✕) → "Delete" → [📷] (OK)

The taken picture may appear slightly different from the image in the viewfinder due to the screen size of the phone.



Options

The following options are also available by pressing [] ().

Viewfinder	Return to the viewfinder to take another picture.
Send via MMS	Attach the picture to an MMS message to send. See "Creating an MMS message" on page 42.
Set as wallpaper	Set the picture as wallpaper in Idle mode.
View pictures	Open Pictures folder.

Zoom and brightness

In the viewfinder mode:

- [▲/▼] to zoom in/out ([◀/▶] in Landscape style)
The available zoom factor depends on style and image size settings.
- [◀/▶] to adjust the brightness ([▲/▼] in Landscape style)

Quick key operations

In the viewfinder mode, you can change the camera setting with a single key press.

- [1]: Switch the **Self-timer** on/off
- [2]: Switch the **Twilight mode** on/off
- [3]: Switch the **Close up mode** on/off
- [4]: Change the **Image size**
- [5]: Adjust the **Brightness**
- [6]: Change **Image quality**
- [7]: Add a special **Effect**
- [8]: Add a **Frame**
- [9]: **Change style** to Landscape/Portrait
- [*]: Show/hide camera status icons
- [#]: Open a list of key operations. Press repeatedly to scroll through the list and return to the viewfinder mode.

See "Camera settings" on page 112 for descriptions of the camera settings.



Camera settings

In the viewfinder mode, the following options are available by pressing [] ()

Image size	Set the resolution. The larger the number is, the larger the picture is. [▲/▼] to scroll to 640x480 (VGA, only in Portrait style), 352x288 (CIF), 320x240 (QVGA), 176x144 (QCIF), 160x120 (QQVGA), Wallpaper size (128x128) or 128x96 (Sub-QCIF) → [] (Select)
Image quality	Set the picture quality. [▲/▼] to scroll to Fine , Normal or Economy → [] (Select)
Change style	Switch between vertical/horizontal format. [▲/▼] to scroll to Portrait or Landscape → [] (Select)
Twilight mode	Adjust the camera for dim lighting. In this mode, camera previewing speed becomes slow for enhancing camera sensitivity. [▲/▼] to scroll to On or Off → [] (Select)
Close up mode	Focus on a subject at a close range. [▲/▼] to scroll to On or Off → [] (Select)
Effect	Add a special effect to your picture. [▲/▼] to scroll to Normal , Mono , Sepia or Bluish → [] (Select)
Self-timer	Take a picture 10 seconds after you press the shutter. [▲/▼] to scroll to On or Off → [] (Select)
Brightness	[▲/▼] to adjust the brightness → [] (Select)
Frame	Add a frame to your picture. Available only for pictures of Wallpaper size or 128x96 pixels. [▲/▼] to scroll to Off or Frame1-5 → [] (Select)
Defaults	Reset all the camera settings to the factory default.

To change the shutter sound, see "Shutter sound" on page 70.

Accessories

PC Software

The CD-ROM supplied with your phone contains software applications which allow you to manage information in your phone from a Personal Computer (PC).

Handset Manager

With Handset Manager you can easily manage your phone information on a PC and synchronise it back to the phone. This information includes contacts, messages and picture or sound data stored in your phone. For further information, please refer to the documentation on the CD-ROM.

Note: The phone may not allow you to transfer some copyrighted images, ringtones or other contents.

Installing the Software

The software is compatible with PCs running Microsoft Windows™ 98 or later. On most PCs, the software should auto-install when the CD-ROM is inserted into the CD drive. If not, then autoplay must be manually selected in Windows Explorer. Follow the instructions that appear on the PC screen to install the software.

Note: See “PC Tool” on page 105 to connect your phone to a PC.

Optional Accessories

Many accessories are available for your Panasonic phone.

Travel charger

Carry this wherever you go, so you can always recharge your battery.

(EB-CAA210 EU)



(EB-CAA210 UK)



 
Battery (EB-BSA210)

Double your talk time by having a spare battery.



Personal handsfree (EB-EMG70)

Talk and move while keeping your hands free, by using a personal handsfree. Put the ear piece in your ear and the adaptor in the side of the handset, and talk.



Data cable (EB-US001)

Use this to connect your phone to a PC so you can transfer data between them.




CD-ROM

Transfer data between your phone and a PC, using Infrared or the Data cable.




Troubleshooting

Should any problem persist, contact your dealer.

Problem	Cause	Remedy
Phone will not switch on.		Check that the battery is charged and correctly connected to the phone.
Extremely short battery life for a new battery.	The network you are using and the condition of the battery can affect battery life.	
Short battery life for an old battery.	The battery has worn out.	Replace with a new fully charged battery.
The battery level indicator does not appear and the phone cannot be switched on when charging.	The battery is not attached to the phone or the battery has been deeply discharged.	Leave the phone charging the battery for a few minutes before the battery level indicator appears and you attempt to switch the phone on.
Battery fails to charge.	The battery is not attached to the phone.	Ensure the battery is fitted to the phone prior to commencing charging.
	The battery was connected to the phone after the charger was connected.	
	Abnormal charging. ([] appears on the display) The battery is defective or of the wrong type.	Replace with a new battery.
	The battery temperature exceeds the charging temperature range (too hot or too cold).	Use the battery at room temperature.

Troubleshooting

Problem	Cause	Remedy
Calls cannot be made.	The phone is locked.	Unlock the phone.
	Outgoing calls are barred.	Disable outgoing call barring or barred dialling.
	Fixed dial is switched on so that only the numbers stored in Fixed dial can be dialled.	Switch off the Fixed dial.
	The phone is not registered with a network.	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be received.	The phone is not switched on.	Switch the phone on.
	Incoming calls are barred.	Disable incoming call barring.
	The phone is not registered with a network.	Move to a coverage area and operate your phone after it has registered with a network.
Emergency calls cannot be made.	You are not in a GSM coverage area.	Check that the antenna symbol () is displayed – move to a coverage area and operate your phone when the antenna symbol is displayed.
Phone numbers cannot be recalled from Contacts list.	The phone is locked.	Unlock the phone.
	Phone number has been restricted.	Switch off restriction.

Important Error Messages

These are some of the most important error messages which may be displayed:

Please insert SIM card	SIM card is not inserted, or is not inserted correctly. Insert the SIM card correctly.
New codes not same	When you change your password, you must enter the new password twice to confirm. The two codes you entered are not the same. Enter the same code twice.
Entries do not match!	
Can't access network	The service network you selected manually is inaccessible. Contact your service provider.
Unable to select network	The service network you selected manually refuses your access. Contact your service provider.
No service	There is no network within range or the received signal is weak. Move to an area which has a stronger signal.
PIN blocked! Please enter PUK.	You entered your PIN incorrectly several times in a row. To unblock it, enter PUK.
PIN2 blocked! Please enter PUK2.	You entered your PIN2 incorrectly three times in a row. To unblock it, enter PUK2.
New PIN not accepted	Your new PIN or PIN2 code is not accepted. Try again.
New PIN2 not accepted	
Incorrect entry!	You entered your PIN or PIN2 code incorrectly. Enter the code correctly.
SIM card error	Make sure the SIM card is inserted correctly. Clean the SIM card with a dry cloth or check if it is damaged. Contact your service provider.

Important Error Messages

Function unsupported	The function you selected is not supported by your service provider. Contact your service provider.
Not available	
Service not available	
Invalid password	The password that you entered is not valid. Enter the correct password.
Password invalid!	
Wrong PUK!	You entered the wrong PUK. Enter the correct one.
SIM memory full! Please delete old message!	The SIM storage area for SMS message is full. Delete old messages.
SIM memory full! Continue ?	The SIM storage area is full. If you continue, data may be lost. Delete old records.
Phone memory full! Continue ?	The data storage area is full. If you continue, data may be lost. Delete old records.
SIM service not supported	The SIM function you selected is not supported by the service provider. Contact your service provider.
Unregistered SIM card	Your SIM card is not registered with your service provider. Contact your service provider.
Authentication failure	
Blocked	Your SIM card is blocked. Contact your service provider.

Glossary of Terms

APN	Access Point Name. Directs the user to the gateway or the required service.
CPHS	Common PCN Handset Specification offers additional terminal and SIM functionality to the standard GSM specifications, such as a second subscriber line, Information numbers, mailbox numbers, etc.
CSD	Circuit Switched Data. A communication method used to transmit data over telephone connections.
DTMF	Dual Tone Multi-Frequency allows you to communicate with computerised phone systems, voice mailboxes, etc.
FDN	Fixed Dial Number. Used to restrict outgoing calls to a certain set of numbers.
GPRS	General Packet Radio Service. A GSM transmission technique that transmits and receives data in packets rather than setting up a continuous channel. It makes very efficient use of available radio spectrum and users pay only for volume of data sent and received.
GSM	Global System for Mobile communications. The name given to the advanced digital technology that your phone uses.
Infrared	A type of connection that allows data to be wirelessly transmitted directly to another device.
Java™	A programming language developed by Sun Microsystems. Programs written in Java™ do not rely on an operating system.
MIDlet	An application written in MIDP (Mobile Information Device Profile), which is a new standard format of Java™ for mobile devices.
Network Operator	The organisation responsible for operating a GSM network.
Password	Used for the control of Call bar. Supplied by your service provider.

Glossary of Terms

PIN	Personal Identification Number used for SIM card security. Supplied by your service provider. If the PIN or PIN2 is entered incorrectly several times (three times for PIN2), the PIN or PIN2 will be blocked.
PIN2	
PLMN	Public Land Mobile Network. A network that provides land mobile telecommunications services.
PUK	PIN or PIN2 Unlocking Key. Used to unblock the PIN or PIN2 code. Supplied by your service provider. If the PUK or PUK2 is entered incorrectly 10 times, your SIM card will be blocked permanently. All information stored in the SIM card will be lost and the SIM card will need to be replaced.
PUK2	
Roaming	The ability to use your phone on networks other than your home network.
SDN	Service Dialling Number. This number enables you to access special services provided by your network operator, such as customer support, emergency services, etc.
Service provider	The organisation responsible for providing supplementary services and applications to phones.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Contacts entries and SMS messages. Supplied by your service provider.
STK	SIM Tool Kit. Supplied by your service provider. It is included in the SIM card to offer value-added services.
WAP	Wireless Application Protocol. The communication standard which enables you to download resources from the Internet to your phone.

Specifications

Bands Supported	GSM 900 Class 4 GSM 1800 Class 1
Standby Time	95 - 230 hours
Talk Time	2.5 - 9.0 hours
Charging Time.....	Up to 150 min.
Temperature Range	
Charging	+5°C - +35°C
Storage	-20°C - +60°C
Weight	76 g (including battery)
Dimensions (Dimension excludes protrusions)	
Height	91.5 mm
Width.....	45 mm
Depth	16.8 mm
Volume	77 cc
Battery Standard	730 mAh Li-ion
Supply Voltage	3.7 V
Antenna	Internal
SIM Type	3 V only
Contacts list Memory.....	500 entries + SIM
Games.....	2
Backlight Colour	
Keypad.....	Blue
Display	White
Ringtones	Preset: 10 (Varies depending on Data Folder)
Alarms	4
Graphics Formats Supported	GIF87a/89a, Animated GIF, JPEG, WBMP, BMP, PNG
Sound Formats Supported	Midi, SP-Midi, i-Melody
Graphics/Melodies Storage Capacity	2.75 MB
Camera	VGA
Infrared.....	SIR (slow infrared)
Java™	Java MIDP2.0

Talk time and standby time will be dependent upon network conditions, SIM Card, backlight usage, battery condition/charging management and the use of applications such as games where available.

EU Warranty

EU/EEA - Wide guarantee is applicable in the EU/EEA and Switzerland.

Panasonic GSM European Service Guarantee Conditions

Dear Customer,

Thank you for buying this Panasonic digital cellular telephone. The Panasonic GSM European Service Guarantee only applies while travelling in countries other than where the product was purchased. Your local guarantee is applicable in all other cases. If your Panasonic GSM telephone requires service while abroad, please contact the local service company shown on this document.

The Guarantee

The applicable period of the European wide guarantee for GSM is generally 12 months for the main body and 3 months for the rechargeable battery. With respect to a product used in a country other than a country of purchase, notwithstanding what is stated in the conditions below, the customer will benefit, in that country of use, from these guarantee periods of, respectively, 12 and 3 months, if these conditions are more favourable to him than the local guarantee conditions applicable in such country of use.

Conditions of Guarantee

When requesting guarantee service the purchaser should present the warranty card together with proof of purchase, to an authorised service centre.

The guarantee covers breakdowns due to manufacturing or design faults; it does not apply to other events such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us.

Your sole and exclusive remedy under this guarantee against us is the repair, or at our option the replacement, of the product, or any defective part or parts. No other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.

This is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. This guarantee applies in countries shown on this document at the authorised service centres detailed for that country.

Austria

Fa. Frisch
Lokalbahnweg 12
A-4060 Leonding
Tel. +43 (0)732 676 961

Germany

In Germany, you can also take advantage of our pick-up service if you need to have your Panasonic equipment repaired. You will find details under Service, Repair Services, on our Internet homepage at www.panasonic.de
Hotline: +49 (0)180 501 5142 (12 cents/min.)
Mon. to Fri. 8am - 8pm and Sat. Midday - 5pm

T-Mobile equipment specialists:
Panasonic Service Center
N. Schaaf
Reichenbachstraße 21-23
68309 Mannheim
Tel.: +49 (0) 621 / 727 87-0

Vodafone equipment specialists:
Panasonic Service Center
B&W Service GmbH
Kieler Straße 41
24768 Rendsburg

Tel.: +49 (0) 4331 / 14 11-0

o2 or e-plus equipment specialists:
Panasonic Service Center
COM Elektronik Service GmbH
Vahrenwalder Straße 221a
30165 Hannover
Tel.: +49 (0) 511 / 64 64 16 10

Greece

INTERTECH S.A.
International Technologies
Αφροδίτης 24, 167 77 Ελληνικό
Ταχ. Θυρ.: 738 21, 167 10
ΕΛΛΗΝΙΚΟ
Τηλ. Κέντρο: 210.9692.300

Υποκατάστημα Βόρειας Ελλάδας:
Κ. Καραμανλή 11, 54638
ΘΕΣΣΑΛΟΝΙΚΗ
Τηλ. Κέντρο: 2310.245.840-3

Ireland

Service Centres in Ireland
Tel. +353 1 2898333

United Kingdom

Service Centres in England
Tel. +44 8705 159159

EU Warranty

EU/EEA - Wide Guarantee: Conditions applicable in any country other than the country of original purchase.

When the purchaser finds the appliance to be defective, he should promptly contact the proper sales company or national distributor in the EU/EEA country where this guarantee is claimed, as indicated in the "Product Service Guide" or the nearest authorised dealer together with this guarantee and proof of date of purchase. The purchaser will then be informed whether:

- (i) the sales company or national distributor will handle the repair service; or
- (ii) the sales company or national distributor will arrange for trans-shipment of the appliance to the EU/EEA country where the appliance was originally marketed; or
- (iii) the purchaser may himself send the appliance to the sales company or national distributor in the EU/EEA country where the appliance was originally marketed.

If the appliance is a product model which is normally supplied by the sales company or national distributor in the country where it is used by the purchaser, then the appliance, together with this guarantee card and proof of date of purchase, should be returned at the purchaser's risk and expense to such sales company or distributor, which will handle the repair service. In some countries, the affiliated sales company or national distributor will designate dealers or certain service centres to execute the repairs involved.

If the appliance is a product model which is not normally supplied in the country where used, or if the appliance's internal or external product characteristics are different from those of the equivalent model in the country where used, the sales company or national distributor may be able to have the guarantee repair service executed by obtaining spare parts from the country where the appliance was originally marketed, or it may be necessary to have the guarantee repair service

executed the sales company or national distributor in the country where the appliance was originally marketed.

In either case, the purchaser must furnish this guarantee card and proof of date of purchase. Any necessary transportation, both of the appliance and of any spare parts, will be at the purchaser's risk and expense, and there may be a consequent delay in the repair service.

Where the consumer sends the appliance for repair to the sales company or national distributor in the country of use of the appliance, the service will be provided on the same local terms and conditions (including the period of guarantee coverage) as prevail for the same model appliance in the country of use, and not the country of initial sale in the EU/EEA. Where the consumer sends the appliance for repair to the sales company or national distributor in the EU/EEA country where the appliance was originally marketed, the repair service will be provided on the local terms and conditions prevailing in the country of initial sale in the EU/EEA.

Some product models require adjustment or adaptation for proper performance and safe use in different EU/EEA countries, in accordance with local voltage requirements and safety or other technical standards imposed or recommended by applicable regulations. For certain product models, the cost of such adjustment or adaptation may be substantial and it may be difficult to satisfy local voltage requirements and safety or other technical standards. It is strongly recommended that the purchaser investigates these local technical and safety factors before using the appliance in another EU/EEA country.

This guarantee shall not cover the cost of any adjustments or adaptations to meet local voltage requirements and safety or other technical standards. The sales company or national distributor may be in a position to make the necessary adjustments or adaptations to certain product models at the cost of the purchaser. However, for technical reasons it is not possible to adjust or adapt all product models to comply with local voltage requirements and safety or other technical

EU Warranty

standards. Moreover, where adaptations or adjustments are carried out the performance of the appliance may be affected. If in the opinion of the sales company or national distributor in the country where the appliance is used the purchaser has the necessary adjustments or adaptations to local voltage requirements and technical or safety standards properly made, any subsequent guarantee repair service will be provided as above indicated, provided the purchaser discloses the nature of the adjustment or adaptation if relevant to the repair. (It is recommended that the purchaser should not send adapted or adjusted equipment for repair to the sales company or national distributor in the country where the appliance was originally marketed if the repair relates in any way to the adaptation or adjustment.)

This guarantee shall only be valid in territories subject to the laws of the European Union and the EEA.

Please keep this guarantee with your receipt.

PANASONIC GSM MOBILE TELEPHONE

WARRANTY TERMS

1. This warranty is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. This warranty applies to the United Kingdom, Isle of Man & Channel Islands only, for users in Eire, please contact your retailer or supplier. The warranty period is 12 months from date of purchase and is applicable to the original purchaser only.
2. The product is approved for use on GSM mobile telephone system and should only be used for normal purposes and in accordance with the standard operating instructions.
3. The warranty covers breakdowns due to manufacturing or design faults; it does not apply to damage, however caused, wear and tear, neglect, incorrect adjustment or repair, or to any items of a limited natural life.
4. In the event of failure, please take the following action:
 - Refer to the instruction book in order to identify and possibly correct the problem.
 - If the problem is due to coverage, reception or billing, please contact your air time retailer or service provider whose number can be found from your monthly invoice.
 - If you cannot resolve the problem, contact the Panasonic Helpline on 08705 159159. Before you telephone have the following information to hand:
 - The model and serial number of your telephone, and its phone number
 - Your full address and post code
 - A copy of your original invoice, receipt or bill of sale for the purchase of the telephone.
5. If the problem cannot be resolved over the telephone, arrangements will be made to repair the telephone. Remove the SIM from the telephone and store it in a safe place. Please pack the telephone suitable for transit. Including in the packing:
 - The mobile telephone
 - The rechargeable battery
 - AC Adaptor
 - A copy of your invoice, receipt or bill of sale. (Note; it is the customers responsibility to provide proof of warranty)
6. Panasonic will use reasonable endeavours to ensure your telephone is returned to you within a maximum of 5 working days from reporting the fault to the Helpline. Please note that delays in transit may be encountered for Channel Islands, Northern Ireland, Isle of Man, Scottish Islands and other islands.
7. Your sole and exclusive remedy under this guarantee against us is for the repair, or at our option the replacement, of the product, or any defective part or parts. No other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
8. Rechargeable batteries have a limited natural life, in order to prolong their life they should only be used and charged as shown in the instruction book. Replacement batteries may be purchased either from your retailer or the Helpline number shown overleaf.

IMPORTANT

write your mobile telephone number and lock code here:

Telephone number	Lock code
------------------	-----------

Your Panasonic GSM mobile telephone has a warranty for 12 months from date of purchase. If you feel your phone is faulty and your service provider or air time retailer cannot resolve the problem, please contact the Panasonic Helpline on:

+44 (0) 8705 159159

The Helpline operates
9:00 AM - 5:30 PM Monday - Friday
(excluding Bank Holidays)

If faulty, arrangements will be made to repair the telephone and return it to you. We will use reasonable endeavours to ensure this is within a maximum of 5 working days.

See over for full terms and conditions
KEEP THIS CARD IN A SAFE PLACE

Licensing

CP8 Patent

© Panasonic Mobile Communications Co., Ltd. 2005

Information in this document is subject to change without notice. No part of these instructions may be reproduced or transmitted in any form or by any means without obtaining express permission from Panasonic Mobile Communications Co., Ltd.

CE0168



Java™ and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Jbed (Java™ VM) is the registered trademark of esmertec, Inc.



T9® is a trademark of Tegic Communications Inc. T9® Text input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No.

HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

BROWSER BY



OPENWAVE

OpenWave is a pioneer in the mobile data transfer industry, supplying voice and data revenue to the mobile communications sector.



END-USER SOFTWARE LICENSE AGREEMENT

By use of this Panasonic cellular phone, including any embedded software features or programs ("Embedded Software"), you agree to the terms and conditions of this End-User Software License Agreement ("EULA").

1. **END-USER RIGHTS:** You are granted a limited end-user right to use the Embedded Software only as part of and together with this Panasonic cellular phone. You agree to use the Embedded Software in a manner that complies with all applicable laws, including laws related to copyright and other intellectual property rights. All other uses are prohibited.
2. **LIMITATIONS ON END-USER RIGHTS:**
 - (a) You may not reproduce, copy, or transfer the Embedded Software to any other device;
 - (b) You may not create derivative works of any type based on the Embedded Software (unless and except as expressly permitted as part of a feature application);
 - (c) You may not reverse engineer, reverse compile, disassemble, or otherwise attempt to discover the source code of the Embedded Software;
 - (d) You may not transfer this Panasonic cellular phone other than to a transferee end-user who undertakes to observe the same obligations as those set out in this EULA;
 - (e) You may not remove any proprietary notices, such as copyright, trademark, or otherwise, from the Embedded Software.
3. **INTELLECTUAL PROPERTY RIGHTS:** The Embedded Software is protected by copyright, trademark, patent and/or other intellectual property rights and is owned by Panasonic Mobile Communications Co., Ltd. ("PMC") and/or is under license from PMC's licensors.
4. **TERMINATION:** Your right to use the Embedded Software may be terminated for failure to comply with any of the terms of this EULA.

5. **LIMITATION OF LIABILITY/DISCLAIMER OF WARRANTIES:** TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL PMC, ITS AFFILIATES, AND THEIR LICENSORS BE LIABLE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE EMBEDDED SOFTWARE. EXCEPT AS EXPRESSLY STATED IN THE RELEVANT WARRANTY CARD, PMC, ITS AFFILIATES, AND THEIR LICENSORS DISCLAIM ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE REMEDIES PROVIDED TO THE END-USER IN THE RELEVANT WARRANTY CARD ARE EXCLUSIVE.

6. **ADDITIONAL THIRD PARTY TERMS:** The Embedded Software may contain third party software subject to separate third party license terms and conditions set forth in the user manual or associated product documentation and/or displayed on the LCD of this Panasonic cellular phone. You acknowledge and agree that such third party software is governed by the third party license terms, as applicable, and that such terms are solely between you and the applicable licensor.

7. **EXPORT REGULATIONS/RESTRICTED RIGHTS:** The Embedded Software is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. You agree to comply strictly with all such regulations. You confirm that with respect to the Embedded Software, you will not export or re-export it, directly or indirectly, to any countries that are subject to U.S. export restrictions. Use, duplication or disclosure by the U.S. government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c)(1)(ii) and FAR 52.227-19(c)(2) as applicable.

Declaration of Conformity

The declaration of conformity for product EB-SC3 was not available at the time of printing this manual. It may be obtained from the Panasonic website at

<http://panasonic.co.jp/pmc/products/en/support/index.html>

Index

A

Accessories	113
Alarm	97
Stopping	98
Alert mute	25
Alerts	71
Any key answer	86
Applications	97
Archive	41, 46
Auto answer	86
Auto key lock	87

B

Backlight time	72
Band select	77
Battery	20, 114
Charging	21
Inserting	20
Low battery warning	22
Removing	20
Battery charge level indicator	21
Bookmarks	96
Brightness	73
Browser	93
Settings	93
Starting	95

C

Calculator	98
Calendar	108
Calendar events	109
Call	23
Answering	25
Answering a second call	26
Hold	27
In-call operations	27
Making	23
Making a second call	28
Multiple calls operations	29
Rejecting	25
Call bar	83

Call Diverts	78
Call log	62
Call Service	79
Call status	27, 29, 31
Call transfer	29, 30
Call waiting	79
Caller's ID	80
Calls (Settings)	78
Camera	110
Camera settings	112
Taking pictures	110
Camera lens	13
Care and maintenance	9
CD-ROM	114
Cell Broadcast	54
Charge settings	81
Charging Connector	13
Codes	84
Colour Theme	71
Conference	29, 30
Contacts	57
Contacts dialling	23
Contacts list	58
Adding contacts	59
Browsing	58
Currency converter	102

D

Data cable	114
Data connections	75
Defaults	88
Dialling	23
International dialling	24
Last number dialling	23
Display	13, 16, 71
Idle display	16
DTMF	28

E

Earpiece	13
Emergency call	24

Index

- F**
FDN 61
Fixed dial 85
- G**
Games & Apps 90
 Opening 90
 Settings 91
Glossary of Terms 119
GPRS info 75
Greeting 72
Groups 64
GSM network 76
- H**
Hand held 27, 29
Hands free 27, 29
Hide network name 73
- I**
Illumination 49, 72
Important Error Messages 117
Inbox 39, 45
Indicator light 13, 18
Information number 67
Infrared 103
Infrared port 13
Internet 93
- K**
Key 13
 Quick keys 15
Key backlight 73
Key functions 14
- L**
Language 74
 Display Languages 74
Licensing 129
Line 82
Loudspeaker 13
- M**
Main menu 35
Max cost 81
Melody composer 99
Memory status 56, 66, 107
Menu 35
 Displaying the menu 36
Menu view 36, 88
Messages 37
Microphone 13
MMS 37
 Creating 42
 Receiving 39
 Sending 43
 Setting 38
 Viewing 41
Multi-tap 32
My Contacts 66
My Media 106
My Numbers 65
- N**
Network 76
Network list 77
Notes 101
- P**
PC Software 113
PC Tool 105
Personal handsfree 114
Personal handsfree/USB Cable
 Connection 13
Phone 13
 Switching on/off 22
Phonecode 84
Pictures 106
PIN 84
 Changing PIN/PIN2 85
Power on/off time 88

Profiles		
Activating	89	
Setting	89	
Push setting	94	
R		
Ringtones	69	
Downloading	70	
S		
Safety considerations	1	
SAR	7	
Scheduler	100	
SDN	67	
Security	83	
Self-portrait mirror	13	
Send my number	82	
Settings	68	
Shortcuts	107	
Shutter key	13	
Shutter sound	70	
Silent mode	26	
SIM card	19	
Inserting/removing	19	
SIM lock	86	
SMS	44	
Creating	47	
Receiving	45	
Sending	48	
SMS Message centre	44	
SMS settings	44	
Viewing	46	
SMS Illumination Message ...	49, 51	
Sounds	69, 106	
Specifications	121	
Speed Dial list	63	
Split	29, 30	
Status icons	17	
Symbols	11	
T		
T9	32	
T9 input	74	
T9 Text input mode	32	
Text Entry	32	
Text mode	32	
Text templates	48	
Time and date	87	
Time/Charge	79	
Travel charger	114	
Troubleshooting	115	
U		
User defined folders	107	
User Emoticon	48	
V		
Voicemail	26, 53	
Volume	69	
W		
Wallpaper	16, 71	
Warning tone	70	
Withhold ID	80	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>