Panasonic

Operating Instructions Part 1 Digital Cellular Phone





EB-X200 Mobile Phone



Before operating this equipment please read these instructions (parts 1 and 2) completely. Charge battery before operation.

Contents

Safety considerations	Important Information1	Text Entry (Edit)	39
Input mode	Safety considerations 1		
Getting Started. 5 Inserting and removing the SIM. 5 Attaching and removing the battery. 6 Charging the battery with be battery. 6 Operation of battery level indicator. 6 Low battery power warning. 6 Keys & Displays. 7 Keys. 8 Shortcuts. 9 Illumination light. 9 Display. 10 How to Use This Phone. 11 Selecting a menu option. 11 Symbols used in this manual. 12 Shortcuts. 55 Symbols used in this manual. 12 Symbols used in this manual. 12 Symbols used in this manual. 12 Storing. 56 Call log. 58 Shortcuts. 55 Setting phone ON/OFF. 13 Making calls. 14 Answering calls. 14 Ending/rejecting calls. 14 Vodafone Mall 15 Activating Quiet mode.	•	Input mode	40
Inserting and removing the SIM	Care and Maintenance4	•	
Inserting and removing the SIM	Getting Started 5	Messages Menu Structure	41
Charging the battery. 6 MMS (Multimedia Messaging Service). 42 Operation of battery level indicator. 6 SMS (Short Message Service). 48 Low battery power warning. 6 Livel Studio. 51 Keys. 8 Koydafone Messenger. 52 Keys. 8 Cell Broadcast. 53 Shortcuts. 9 Billumination light. 9 Display. 10 Contacts. 53 How to Use This Phone. 11 Contacts. 55 Selecting a menu option. 11 Speed dial. 55 Symbols used in this manual. 12 Storing. 56 Symbols used in this manual. 12 Storing. 56 Call log. 58 Phone Basics and Managing Calls. 13 Speed dial. 59 Switching phone ON/OFF. 13 Grouping Contacts entries. 60 Answering calls. 14 Group settings. 61 Anishing phone Only of the Contracts. 13 Group settings. 62 <	Inserting and removing the SIM5	-	
Charging the battery. 6 MMS (Multimedia Messaging Service). 42 Operation of battery level indicator. 6 SMS (Short Message Service). 48 Low battery power warning. 6 Livel Studio. 51 Keys. 8 Koydafone Messenger. 52 Keys. 8 Cell Broadcast. 53 Shortcuts. 9 Billumination light. 9 Display. 10 Contacts. 53 How to Use This Phone. 11 Contacts. 55 Selecting a menu option. 11 Speed dial. 55 Symbols used in this manual. 12 Storing. 56 Symbols used in this manual. 12 Storing. 56 Call log. 58 Phone Basics and Managing Calls. 13 Speed dial. 59 Switching phone ON/OFF. 13 Grouping Contacts entries. 60 Answering calls. 14 Group settings. 61 Anishing phone Only of the Contracts. 13 Group settings. 62 <		Messages	42
Operation of battery level indicator			
Livel Studio			
Keys & Displays 7 Vodafone Mail. 52 Keys. 8 Cell Broadcast 53 Shortcuts 9 Memory status 53 Illumination light 9 Memory status 53 Illumination light 9 Display 10 Contacts Menu Structure 54 How to Use This Phone 11 Contacts Menu Structure 54 How to Use This Phone 11 Contacts 55 Selecting a menu option 11 Contacts 55 Showliching a menu option 11 Contacts 55 Phone Basics and Managing Calls 13 Speed dial. 59 Switching phone ON/OFF 13 Grouping Contacts entries 60 Displaying menu 13 Grouping Contacts entries 60 Making calls 13 Group settings 62 Answering calls 14 Memory status 62 Ending/rejecting calls 14 Memory status 62 Ending/rejecting calls 14 C			
Reys	,,	Vodafone Mail	52
Shortcuts	Keys & Displays7	Vodafone Messenger	52
Illumination light	•		
Display		Memory status	53
Display		•	
Selecting a menu option	<u> </u>	Contacts Menu Structure	54
Symbols used in this manual	How to Use This Phone11	Contacts	55
Call log	Selecting a menu option11	Browsing Contacts	55
Phone Basics and Managing Calls 13 Speed dial. 59 Switching phone ON/OFF 13 Grouping Contacts entries 60 Displaying menu 13 My numbers 61 Making calls 13 Group settings 62 Answering calls 14 Memory status 62 Ending/rejecting calls 14 Copy from SIM 62 Vodafone Mail 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 63 Explore the Menus 21 Viewing Vodafone live! 64 Explore the Menus Structure 22 Browser options (Bookmarks) 66 Settings Menu Structure 23 Browser options (Bookmarks) 66 Settings Menu Structure 23 Browser options (Seokmarks) 66 Settings 23 Browser options (Seokmarks) 67 Settings profile 23 Browser options (Seokmarks)	Symbols used in this manual12	Storing	56
Switching phone ON/OFF 13 Grouping Contacts entries 60 Displaying menu 13 My numbers 61 Making calls 13 Group settings 62 Answering calls 14 Memory status 62 Ending/rejecting calls 14 Copy from SIM 62 Vodafone Mail 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Explore the Menus 21 Viewing Vodafone live! 64 Browser options (Sevice Insplay the setting 23 Browser options (Bookmarks) 66 Browser options (Seve image		Call log	58
Switching phone ON/OFF 13 Grouping Contacts entries 60 Displaying menu 13 My numbers 61 Making calls 13 Group settings 62 Answering calls 14 Memory status 62 Ending/rejecting calls 14 Copy from SIM 62 Vodafone Mail 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Explore the Menus 21 Viewing Vodafone live! 64 Browser options (Sevice Insplay the setting 23 Browser options (Bookmarks) 66 Browser options (Seve image	Phone Basics and Managing Calls 13	Speed dial	59
Making calls 13 Group settings 62 Answering calls 14 Memory status 62 Ending/rejecting calls 14 Copy from SIM 62 Vodafone Mail 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Browser options (Bookmarks) 66 Explore the Menus 21 Viewing Vodafone live! 64 Browser options (Bookmarks) 66 Settings Menu Structure 22 Browser options (Bookmarks) 66 66 Settings 23 Browser options (Bookmarks) 67 67 Settings 23 Browser options (Save image) 67 67 Profile setting 23 Browser options (Set as bookmark) 67 67 Tone setting 25 Browser options (Reload page) 68 Display setting 26 Browser options (Advanced) 68 Display setting <t< td=""><td></td><td>Grouping Contacts entries</td><td> 60</td></t<>		Grouping Contacts entries	60
Answering calls 14 Memory status 62 Ending/rejecting calls 14 Copy from SIM 62 Vodafone Mail. 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Explore the Menus 21 Viewing Vodafone live! 64 Explore the Menus 22 Browser options (Bookmarks) 66 Browser options (Bookmarks) 66 Browser options (Bookmarks) 66 Browser options (Bookmarks) 67 Browser options (Save image) 67 Settings 23 Browser options (Sev constre	Displaying menu13	My numbers	61
Answering calls 14 Memory status 62 Ending/rejecting calls 14 Copy from SIM 62 Vodafone Mail. 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Explore the Menus 21 Viewing Vodafone live! 64 Explore the Menus 22 Browser options (Bookmarks) 66 Browser options (Bookmarks) 66 Browser options (Bookmarks) 66 Browser options (Bookmarks) 67 Browser options (Save image) 67 Settings 23 Browser options (Sev constre	Making calls13		
Vodafone Mail 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Explore the Menus 21 Viewing Vodafone live! Menu Structure 64 Settings Menu Structure 22 Browser options (Bookmarks) 66 Settings 23 Browser options (Enter address) 67 Profile setting 23 Browser options (Save image) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 23 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network settings 33 Games & more 71 Security settings 33			
Vodafone Mail 15 Service numbers 62 Activating Quiet mode 15 In-call options 16 Vodafone live! Menu Structure 63 Call log 19 Vodafone live! Menu Structure 64 Explore the Menus 21 Viewing Vodafone live! Menu Structure 64 Settings Menu Structure 22 Browser options (Bookmarks) 66 Settings 23 Browser options (Enter address) 67 Profile setting 23 Browser options (Save image) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 23 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network settings 33 Games & more 71 Security settings 33	Ending/rejecting calls14	Copy from SIM	62
In-call options	Vodafone Mail15		
Call log 19 Explore the Menus 21 Viewing Vodafone live! 64 Browser options 66 Settings Menu Structure 22 Browser options (Bookmarks) 66 Settings 23 Browser options (Enter address) 67 Profile setting 23 Browser options (Save image) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 23 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Network setting 28 Fun & Games Menu Structure 70 Network settings 33 Games & more 71 Security settings 33 Games & more 71 Any key answer setting 35 Settings 71	Activating Quiet mode15		
Vodafone live!	In-call options16	Vodafone live! Menu Structure	63
Explore the Menus 21 Viewing Vodafone live! 64 Browser options 66 Settings Menu Structure 22 Browser options (Bookmarks) 66 Browser options (Enter address) 67 Settings 23 Browser options (Save image) 67 Profile setting 23 Browser options (Set as bookmark) 67 Editing profile 23 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Reload page) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network setting 35 Games & more 71 Security settings 33 Games & more 71 Time and date setting 35 Settings 71 Any key answer setting 35 Settings 7	Call log19		
Settings Menu Structure 22 Browser options (Bookmarks) 66 Settings 23 Browser options (Enter address) 67 Profile setting 23 Browser options (Save image) 67 Editing profile 23 Browser options (Set as bookmark) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Reload page) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network setting 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Applications Menu Structure 72 Applications Menu Structure <th< td=""><td></td><td></td><td></td></th<>			
Settings Menu Structure 22 Browser options (Bookmarks) 66 Settings 23 Browser options (Save image) 67 Profile setting 23 Browser options (Save image) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 25 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Network setting 28 Fun & Games Menu Structure 70 Network settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72	Explore the Menus21		
Settings 23 Browser options (Enter address) 67 Profile setting 23 Browser options (Save image) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 25 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network settings 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72			
Settings 23 Browser options (Save image) 67 Profile setting 23 Browser options (Set as bookmark) 67 Editing profile 23 Browser options (Set as bookmark) 67 Tone setting 25 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network setting 28 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72	Settings Menu Structure22		
Profile setting 23 Browser options (Set as bookmark). 67 Editing profile 23 Browser options (Service Inbox). 67 Tone setting 25 Browser options (Reload page). 68 Vibration alert setting 26 Browser options (Advanced). 68 Display setting 27 Browser options (Settings). 69 Language setting 28 Browser options (Settings). 69 Data connections setting 28 Fun & Games Menu Structure. 70 Network setting 28 Fun & Games 71 Security settings 33 Games & more. 71 Time and date setting 35 Download more. 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72			
Editing profile 23 Browser options (Service Inbox) 67 Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Browser options (Settings) 69 Data connections setting 28 Fun & Games Menu Structure 70 Network settings 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72		Browser options (Save image)	67
Tone setting 25 Browser options (Reload page) 68 Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network setting 28 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72		·	
Vibration alert setting 26 Browser options (Advanced) 68 Display setting 27 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network setting 28 Fun & Games 71 Call settings 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72			
Display setting 27 Browser options (Settings) 69 Language setting 28 Fun & Games Menu Structure 70 Network setting 28 Fun & Games 71 Call settings 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72			
Language setting 28 Data connections setting 28 Network setting 28 Call settings 30 Security settings 33 Time and date setting 35 Any key answer setting 35 Keyguard setting 36 Applications Menu Structure 72		• • • • • • • • • • • • • • • • • • • •	
Data connections setting 28 Network setting 28 Call settings 30 Security settings 33 Time and date setting 35 Any key answer setting 35 Keyguard setting 36 Applications Menu Structure 72		Browser options (Settings)	69
Network setting 28 Call settings 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72			
Call settings 30 Fun & Games 71 Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72		Fun & Games Menu Structure	70
Security settings 33 Games & more 71 Time and date setting 35 Download more 71 Any key answer setting 35 Settings 71 Keyguard setting 36 Applications Menu Structure 72			
Time and date setting			
Any key answer setting			
Keyguard setting		Download more	71
Applications Menu Structure72		Settings	71
···	Keyguard setting36		
	Campra 27	Applications Menu Structure	72

Contents

Applications	/ 3
STK (SIM Tool Kit)	73
Alarm	73
Sound recorder	
Calculator	
Infrared	
Calendar	77
My Stuff Menu Structure	78
My Stuff	79
Pictures (My Stuff > Pictures)	
Sounds (My Stuff > Sounds)	
Shortcuts	
Text templates	
Memory status	
Personal WAP/MMS Settings	83
Troubleshooting	85
Important error messages	
Glossary of Terms	87
Specifications	88
Licensing	89
End-user Software License Agreement	
ŭ	
Index	91

Important Information

Thank you for purchasing this Panasonic digital cellular phone. This phone is designed to operate on GSM networks – GSM900 and GSM1800. It also supports GPRS for packet data connections. Please ensure the battery is fully charged before use.

Safety considerations

The following information should be read and understood as it provides details which will enable you to operate your phone in a manner which is both safe to you and your environment, and conforms to legal requirements regarding the use of cellular phones.



This equipment should only be charged with approved charging equipment to ensure optimum performance and avoid damage to your phone. Other usage will invalidate any approval given to this apparatus and may be dangerous. Ensure the voltage rating of the Fast Travel Charger is compatible with the area of use when travelling abroad. A Fast Travel Charger (EB-CAX70xx*) is supplied with the Main Kit. Other recommended equipment for charging – Car Charger (EB-CDX70).

Note* xx identifies the Charger region, e.g. CN, EU, UK, AU, US.



Use of another battery pack than that recommended by the manufacturer may result in a safety hazard.



Switch off your cellular phone when in an aircraft. Ensure that the setting of the Alarm function will not contravene regulations whereby it may automatically power on when in an aircraft or medical facility etc. The use of cellular phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular phone services to the offender, or legal action or both.



Do not incinerate or dispose of the battery as ordinary rubbish. The battery must be disposed of in accordance with local regulations and may be recycled.



It is advised not to use the equipment at a refuelling point. Users are reminded to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Never expose the battery to extreme temperatures (in excess of 60°C).



It is imperative that the driver exercises proper control of the vehicle at all times. Do not hold a phone while you are driving; find a safe place to stop first. Do not speak into a handsfree microphone if it will take your mind off the road. Always acquaint yourself thoroughly with restrictions concerning the use of cellular phones within the area where you are driving and observe them at all times.

Important Information



Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



For most efficient use, hold the phone as you would any normal phone. To avoid deterioration of signal quality or antenna performance, do not touch or "cup" the antenna area while the phone is switched on. Unauthorised modifications or attachments may damage the phone and violate applicable regulations. The use of an unapproved modification or attachment may result in the invalidation of your guarantee – this does not affect your statutory rights.

If you use a feature which keeps the key backlight on continuously for a long time, such as the camera, a game or the browser, battery life will become extremely short. To maintain longer battery life, set the Key backlight to off. See "Setting Key backlight" on page 27 and "Settings" on page 71.

Do not leave the camera facing direct sunlight to avoid impairing camera performance.



Equipment

When your handset, the accompanying battery or charging accessories are wet, do not put those in any type of heating equipment, such as a microwave oven, a high pressure container, or a drier or similar. It may cause the battery, handset and/or charging equipment to leak, heat up, expand, explode and/or catch fire. Moreover, the product or accessories may emit smoke and their electrical circuits may become damaged and cause the products to malfunction. Panasonic is not responsible for any and all damages, whether direct or indirect, howsoever caused by any misuse.



Security

It is recommended that you create a copy or backup, as appropriate, of any important information and data which you store in your phone's memory. In order to avoid accidental loss of data, please follow all instructions relating to the care and maintenance of your phone and its battery. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data, including but not limited to direct and indirect losses (to include, but not limited to consequential loss, anticipated savings, loss of revenue).

Your phone has the capability of storing and communicating personal information. It is recommended that you take care to ensure that any personal or financial information is stored separately from your phone. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data, including but not limited to direct and indirect losses (to include, but not limited to consequential loss, anticipated savings, loss of revenue).



Your phone has the capability of downloading and storing information and data from external sources. It is your responsibility to ensure that in doing this you are not infringing any copyright laws or other applicable legislation. Panasonic accepts no liability for any and all losses howsoever arising from any loss of data or any such infringement of copyright or intellectual property rights, including but not limited to direct and indirect losses (to include, but not limited to consequential loss, anticipated savings, loss or revenues).



You are advised to take appropriate care over the use of the internal camera. It is your responsibility to ensure that you have permission to take photographs of people and objects and that you do not infringe any personal or third party rights when using the camera. You must comply with any applicable international or national law or other special restrictions governing camera use in specific applications and environments. This includes not using the camera in places where the use of photographic and video equipment may be prohibited. Panasonic accepts no liability for any and all losses howsoever arising from any infringement of copyright or intellectual property rights, including but not limited to direct and indirect losses.

Do not use this phone without the battery cover attached.

The colour liquid crystal display (LCD) uses high-precision production technology, and in certain circumstances pixels may appear brighter or darker. This is due to characteristics of the LCD and is not a manufacturing defect.

The display layouts and screenshots within this document are for illustrative purposes and may differ from the actual displays on your phone. Panasonic reserves the right to change the information in this document without prior notice.

This Panasonic mobile phone is designed, manufactured and tested to ensure that it complies with the specifications covering RF exposure guidelines applicable at the time of manufacture, in accordance with EU, USA FCC and Australian ACA regulations; or as specifically stated in the separate declaration leaflet enclosed with this product.

This phone should only be used with Panasonic approved accessories to ensure optimum performance and avoid damage to your phone. Panasonic is not responsible for damage caused by using non-Panasonic approved accessories.

This phone must be used in compliance with any applicable international or national law or any special restrictions governing its use in specified applications and environments. This includes but is not limited to use in hospitals, aircraft, whilst driving and any other restricted uses.

Please refer to our website for latest information/standards and compliance in your country/region of use.

http://www.panasonicmobile.com

Care and Maintenance



Pressing any of the keys may produce a loud tone. Avoid holding the phone close to the ear while pressing the keys.



Extreme temperatures may have a temporary effect on the operation of your phone. This is normal and does not indicate a fault.

The display quality may deteriorate if the phone is used in environments over 40°C for a long time.



Do not modify or disassemble the equipment. There are no user serviceable parts inside.



Do not subject the equipment to excessive vibration or shocks.

Do not drop the battery.



Avoid contact with liquids. If the equipment becomes wet, immediately remove the battery and contact your dealer.



Do not leave the equipment in direct sunlight or a humid, dusty or hot area.

Never throw a battery into a fire. It may explode.



Keep metallic items that may accidentally touch the terminals away from the equipment/battery.

Batteries can cause property damage, injury or burns if terminals are touched with a conductive material (i.e. metal jewellery, keys, etc.).



Always charge the battery in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery if it is outside this temperature range.





When disposing of any packing materials or old equipment, check with your local authorities for information on recycling.

Some services described in this manual are network dependent or may only be available on a subscription basis. Some functions are SIM dependent. For more information contact Vodafone.

Inserting and removing the SIM

The SIM is inserted into the back of the phone. (See "Attaching and removing the battery" below to remove or attach the battery.)

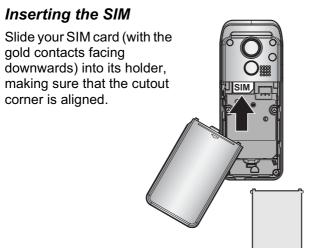

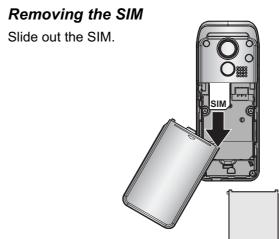


NOTE If you are upgrading your phone and your previous phone did not support new services, such as MMS (Multi Media Messaging), you may need to insert a new SIM. Contact Vodafone.

Attaching and removing the battery


Before removing the battery, ensure that the phone is switched off and the charger is disconnected from the phone.

Attaching the battery

 1 Insert the battery, ensuring the 3 gold contacts align with the 3 gold pins in the phone.



 2 Replace cover on the phone and slide upwards to the top of the phone.




Removing the battery

1 Press top part of the cover and remove.



 2 Place a finger in the hollow. Push the battery slightly backwards and pull out.



Do not remove the tape covering the lower part of the back of the battery cover. Maximum performance may not be achieved.


Charging the battery

Connecting and disconnecting the Fast Travel Charger


The battery must be attached in the phone before the charger is connected.

Do not force the connector as this may damage the phone and/or the charger.

Connect the charger to the mains power supply. When the phone is charging, the charging indicator will light and a scrolling icon will appear in the main display.

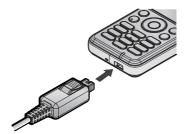

When charging is complete switch off the mains power supply and disconnect the charger by pressing the button on the connector ① and remove from the base of the phone ②.

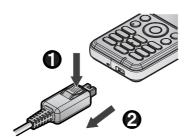

Operation of battery level indicator

While charging	Charging complete
999	


Charging Indicator will go out when charging is completed.

Low battery power warning

When the battery power is low, a warning tone will sound and a **Battery low!** message will be displayed. Charge the battery, or the phone will be switched off in 2 minutes. (See "Charging the battery" above.) Calls can be made and received while the phone is charging.

Some settings may be lost if the battery is removed or remains discharged for more than 1.5 hours.

Keys & Displays

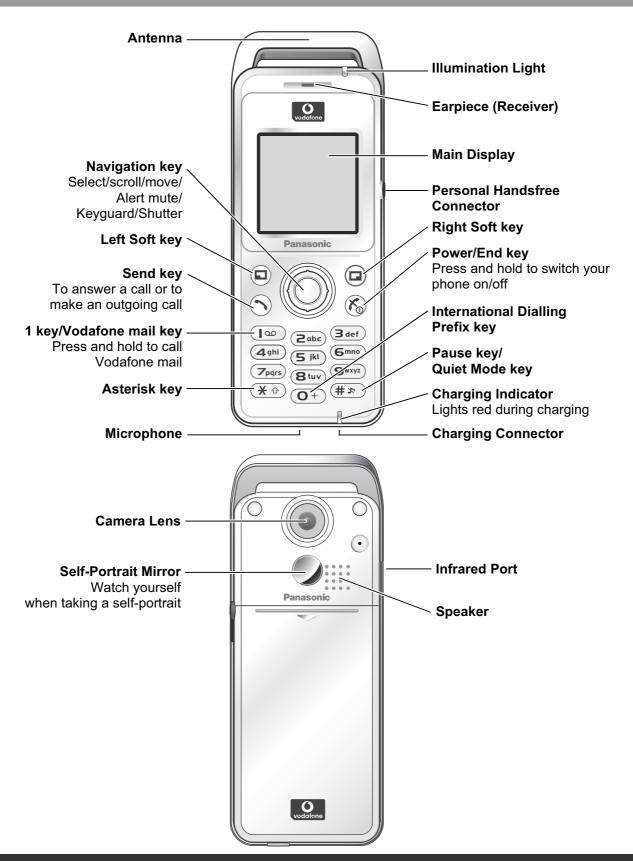

Do not attach any metallic objects to the antenna. It may cause transmission interference.

Keys

Key	Function		
	Navigation key: Select and save settings, and scroll/move through menus, text and Contacts. Also control movements while playing games.		
		Select key: Press centre to select option or to save.	
		Shutter key: Press centre to take a picture.	
	•	Keyguard key: From Idle mode, press and hold to lock the keypad, or press to unlock the keypad.	
		Alert Mute key: Turns ring tone off and stops vibration when receiving a call (Alert mute).	
	(Scroll key: Press top or bottom edge to move screen cursor up or down.	
	•	Move key: Press left or right edge to move screen cursor left or right.	
		key: Perform function displayed in lower left corner of the display. From Idle ss to open Messages menu.	
	Right Soft key: Perform function displayed in lower right corner of the display. Mainly used to cancel and return to previous menu level or to delete text/number entries. Press and hold to delete all characters in text entry mode. From Idle mode, press to open Vodafone live!		
9	Send key: Make a call, recall recently dialled phone numbers or answer a call.		
%	Power/End key: Press and hold to switch phone on/off. When the phone is on, press briefly to end a call. During key operation, press to return to Idle mode.		
[œ	1 key/Vodafone mail key: Press and hold 📭 to retrieve Vodafone mail messages.		
to 1-9 Number keys: Enter numbers. Press and hold a single key (2-9) for Speed dial. In text entry mode, enter text, numbers and characters.			
Number key: Enter number. In text entry mode, enter number and characters.			
(O+)	International Dialling Prefix key: Press and hold O+ to enter + (the international dialling prefix) while entering a phone number.		
* 🖈	Asterisk key: During text entry mode, press to switch between upper case and lower case letters. Changes Input mode (Hold).		
(* #)	Pause key: Press and hold to enter a pause (P) while entering a phone number. In text entry mode, press to enter a space. Press and hold to enter a line feed.		
	Quiet Mode key: From Idle mode, press and hold to turn Quiet profile on/off.		

Shortcuts

When you are familiar with the menu system, you can use the keypad to access features instead of navigating through the display menus.

Short press (from Idle mode)

Key	Function
	Messages
	Vodafone live!
•	Menu/Alert mute/ Keyguard off
(Shortcuts
(Q	Contacts

Key	Function
•	Inbox (MMS)
O	Calendar
(4 #) (1 %	Call dial field
\odot	Dialled numbers

Long press (from Idle mode)

Key	Function
•	Keyguard on
(Ioo)	Vodafone mail
2abc - 9wxyz	Speed dial
(* #)	Quiet mode on/off

Illumination light

Function	Luminous colour	Light goes out
Incoming call	Blue	if call is missed (Red) or switched over to voice call (Blue)
Call in progress	Blue	if call ended
Missed call notification	Red	if any key is pressed
Message notification (SMS or MMS or WAP Push)	Green	if any key is pressed
Alarm notification	Purple	after alarm is ended (30 seconds) or any key is pressed

Display



With some operations, the display automatically clears after 2.5 seconds or after pressing any key.

Status icons

Different icons are shown, depending on the features you are using and the options you have selected. Icons appear on the main display as shown in the following table.

Icon	Meaning
Yal	Signal strength The more bars visible, the stronger the signal.
Œ	Battery charge level
+	Battery is charging
¥	GPRS is active
""	Quiet profile is active
1	Meeting profile is active
À	Outdoor profile is active


Icon	Meaning
6	Car profile is active
	SMS message storage area is full
1 20	MMS message storage area is full
(Java™ (Suspended)
	Unread SMS message
<u> </u>	Unread MMS message
2	Unread WAP push message
4	Call diverts is on
b 0	Infrared is active
മ	New Vodafone mail message received
শ্	Incoming volume 0
(8)	Vibration alert is on
Ħ	Alarm is set
¥	On-line browsing during CSD (Non-Secure)
Tê	On-line browsing during CSD (Secure)
y	On-line browsing during GPRS (Non-Secure)
逍	On-line browsing during GPRS (Secure)
:10	Keyguard is on


How to Use This Phone

Selecting a menu option

From Idle mode, press the centre of the Navigation key

to open the main menu display. The main menu display has 9 options.

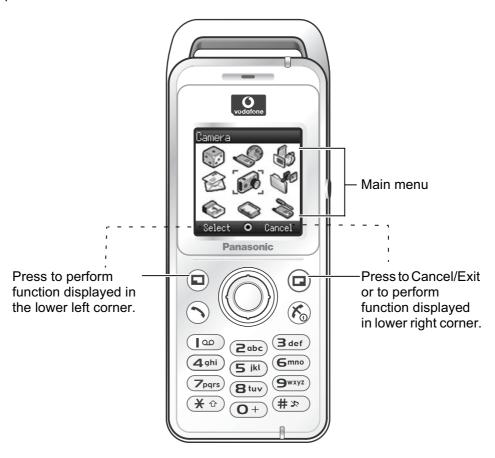

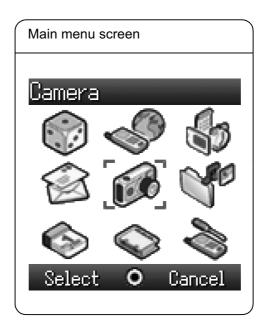

Symbols used in this manual

The table below shows the symbols used throughout these instructions and the corresponding meanings in the column on the right.

Symbol	Meaning
•	Press centre of the Navigation key to select option or to save
$\bigcirc \bigcirc \bigcirc \bigcirc \bigcirc$	Direction in which you can move on the display screen with the Navigation key
�	Shows possibility of moving in any direction (up, down, left and right) on the display screen with the Navigation key
•	Shows possibility of moving up and down on the display screen with the Navigation key
•	Shows possibility of moving left and right on the display screen with the Navigation key
	Press Left Soft key
	Press Right Soft key
• •	Press centre of Navigation key or Left Soft key
[m - O+	Press Number keys
* ①	Press Asterisk key
(x #)	Press Pause key / Quiet Mode key
9	Press Send key
&	Press Power / End key
	Indicates that a function is SIM dependent
Ä	Indicates that a function is network dependent

Phone Basics and Managing Calls



Switching phone ON/OFF

Press and hold (6) for 3 seconds to switch phone on

• When the phone is switched on, a greeting may be displayed and the phone enters Idle mode.

Press and hold (6) again to switch phone off



When switching the phone off, use only (6) to avoid damaging the phone.

Displaying menu

- 1 To access the menu, press
 in Idle mode
- 2 The menu will be displayed
 (The menu may vary depending on your SIM.)



Making calls

- To make a call, start in Idle mode.
- Ensure network name and Till appear on the display.

Standard dialling

- 1 Enter phone number (**O** +) **(9**wxyz), **(★** ♠), **(#** ♣)
- 2 🕥 / 💿

Contacts dialling

- 2 required contact

Recent number dialling (Calls made or received)

- 1 🕤
- 2 O Dialled numbers, Answered calls or Missed calls
- 3 (required contact (

Phone Basics and Managing Calls



International dialling

The international code for the destination country/region should be entered, followed by the area code and phone number.

- 1 Press and hold (O+)
- 2 Enter country/region code
- 3 Enter area code and phone number 🕥 / 💿

NOTE Many countries/regions include an initial "0" in the area code. This should, in most cases, be omitted when dialling international numbers. If you have difficulties making international calls, contact Vodafone.

Emergency call

To make an emergency call the antenna (T) must be present.

If SIM is inserted enter emergency number \bigcirc / \bigcirc If SIM is not inserted,

- 1 🗊
- 2 **(a)** sos
- 3 () (

Making emergency calls without a SIM is country or network operator dependent.

Answering calls

Press any key except 🌎 / 💿 / 📵 (Any key answer)

NOTE Any key answer can be disabled. (See "Any key answer setting" on page 35.) In this case, calls can only be answered by pressing \bigcirc or \bigcirc .

Ending/rejecting calls

(6) / (a) during an incoming call to reject the call or end a call in progress.



Vodafone Mail

You need to subscribe to the voice mail service through Vodafone before you can retrieve voice mail messages. To check if voice mail access has been configured, press and hold $\[\]$ See "Vodafone Mail" on page 52 on how to programme.

- 1 When a new voice mail message is received, an alert sounds and papears in lower part of the display or you receive an SMS notification (depending on the local service)
 - 🕮 remains on the display until you have listened to all your voice messages.
- 2 Press and hold (100) to automatically dial your Vodafone mail number
 - If the number is not valid, contact Vodafone.
- 3 Follow the recorded instructions for your voice mail
- 4 (%) when finished

Activating Quiet mode

- 1 To quickly set the phone to your preset Quiet mode settings, press and hold (# *>)
 - To change Quiet mode settings, see "Editing profile" on page 23.
- 2 To disable, press and hold (# *) again



In-call options

During a call: for options required option /

Option	Explanation
Hold Call	Put a call on hold. To resume, 📵, 🗘 Resume 💿 / 📵
From contacts	Access the Contacts list
Create SMS	Access Create SMS
Inbox(SMS)	Access Inbox(SMS)
Calendar	Access Calendar
Handsfree / Handheld	Switch to Desktop Handsfree or Handheld

Earpiece volume

During a call: (to adjust earpiece volume

Desktop Handsfree

Desktop Handsfree allows you to have a conversation without holding the phone to your ear.

Swapping between Handsfree and Handheld calls:

During a Handheld call:

(a), (b) Handsfree (e) / (a)

During a Handsfree call:

(a), (b) Handheld (c) / (c)

Do not hold the phone to your ear in Handsfree mode.

DTMF tones

DTMF tones can be sent during a conversation. These are often used to access voice mail, paging and computerised home banking. For example, you may need to input a number to remotely access voice mail messages. A phone number may be stored in Contacts together with a DTMF tone sequence, allowing the number to be dialled upon recall and the DTMF tone sequence to be sent automatically.

Send DTMF tones during a call:

Press digits (**O** + - **9**wxyz), **#** ★ (**X** 1)

Pause dial:

Using pauses allows you to send DTMF tones automatically.

- 1 Enter phone number
- 2 Press and hold (#x) until a P is displayed at the end of the phone number entered
- 3 Enter the DTMF digits after the pause, e.g. enter the number to access Vodafone mail messages
- 4 🕥 / 💿

When the call is connected the DTMF tone sequence will be sent after 3 seconds.



Incoming call while on a call

During a call, you may receive another call. To enable this, Call waiting must be on. (See "Call waiting" on page 31.)

Accept a second call:

(The second call is active, the current call is put on hold)

When two calls are connected, the following options are available by pressing (\Box) .

required option • / •

Option	Explanation
Swap	Switch between two connected calls
Merge	Enable multi-party conversation when two calls are connected (one active, one on hold). All three parties can then talk to each other
From contacts	Access the Contacts list
Create SMS	Access Create SMS
Inbox(SMS)	Access Inbox(SMS)
Calendar	Access Calendar
Handsfree / Handheld	Switch to Desktop Handsfree or Handheld

Reject a second call:

(a) to reject the incoming call and to resume the call in progress.

End current call and receive second call:

 $\fivebox{\fivebox{0.5}{$n$}}$ to end the call in progress, then press any key except $\fivebox{\fivebox{0.5}{$n$}}$ / $\fivebox{\fivebox{0.5}{$n$}}$ to answer the incoming call.

Making a second call

During a call:

Enter second phone number and \bigcirc / \bigcirc or

for options and select required contact from the Contacts list and

• The first call is put on hold.

Phone Basics and Managing Calls



Multi-party call

A multi-party call has 3 or more people in conversation at the same time. ()

- 1 Establish a multi-party call by merging two calls
- 2 Continue to add people to the multi-party call (up to 5 connections in total) by calling others or by accepting incoming calls

When making a call or accepting an incoming call, the multi-party call is placed on hold. The callers already in the multi-party call can continue to talk with each other while on hold. Each additional connection can then be merged into the multi-party call by \bigcirc , \bigcirc Merge \bigcirc / \bigcirc .

Multi-party call options

You can select an individual from the multi-party call and split the conversation, allowing you to talk privately without the participation of the rest of the parties in the multi-party call.

- 1 During a multi-party call,
- 2 **(a)** Option **(b)** / **(c)**
- 3 desired caller in the multi-party list
- 4 desired option ()
- 5 🗘 required option 💿 / 🖘

Option	Explanation
Split	Split the selected caller from the multi-party call so you can talk privately. The remaining multi-party callers are placed on hold and can still talk with each other. To rejoin the call, , Merge /
Ok	Close the options list

To end the call's connection, (End)

6 (6) to end the multi-party call and all connections



Call log

Recently dialled phone numbers, answered calls and missed calls are stored in the Call log. The numbers in the Call log list can be used to call, send messages or add to Contacts. You can also delete the numbers from the list.

Viewing Call log

- 1 (5)
- 2 O Dialled numbers, Answered calls or Missed calls
- 3 (required phone number)

Dialling from Call log

- 1 (
- 2 O Dialled numbers, Answered calls or Missed calls
- 3 (required phone number
- 4 🗊
- 5 (Call () / ()

Sending messages

- 1 (5)
- 2 O Dialled numbers, Answered calls or Missed calls
- 3 (required phone number •
- 4 🗊
- 5 🛇 Send message 💿 / 🖘
- 6 **(a)** MMS or SMS **(b)** / **(c)**
- 7 Enter a message

For details on creating a message, see "Creating a new MMS" on page 42 or "Creating a text message" on page 48.

Phone Basics and Managing Calls



Saving a phone number from Call log into the Contacts list

- 1
- 2 Dialled numbers, Answered calls or Missed calls
- 3 (required phone number ()
- 4 📵
- 5 \bigcirc Add to contacts \bigcirc / \bigcirc
- 6 **Phone** or **SIM** / •
- 7 (required icon (
- 8 Enter as appropriate

 (If required, repeat steps 7 and 8)
- 9 🗊


Options in Call log

In each Call log list, the following options are available by pressing .

required option • / •


Option	Explanation
Call	Call selected number
Send message	Send MMS/SMS message to selected number
Add to contacts	Store number to Contacts
Delete	Delete selected log
Delete all	Delete all logs in the list (This option is available in the Call log list.)

Explore the Menus

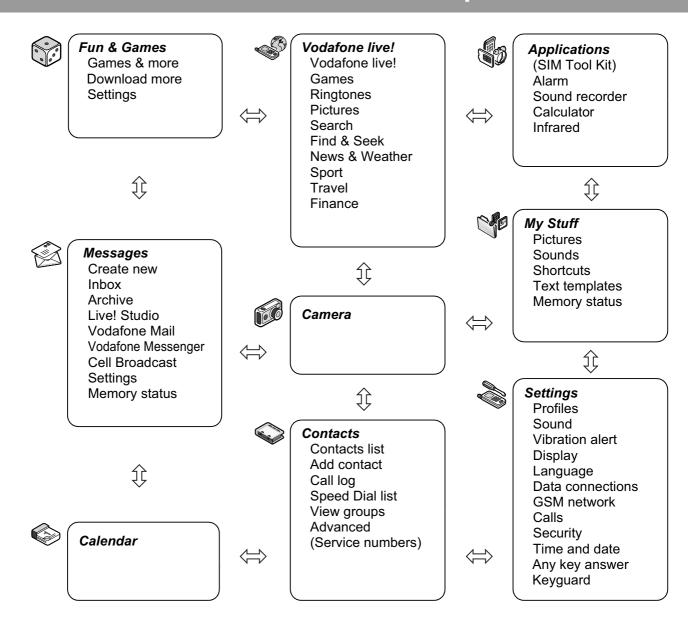

SIM Tool Kit and Service numbers are SIM dependent ().

Settings Menu Structure

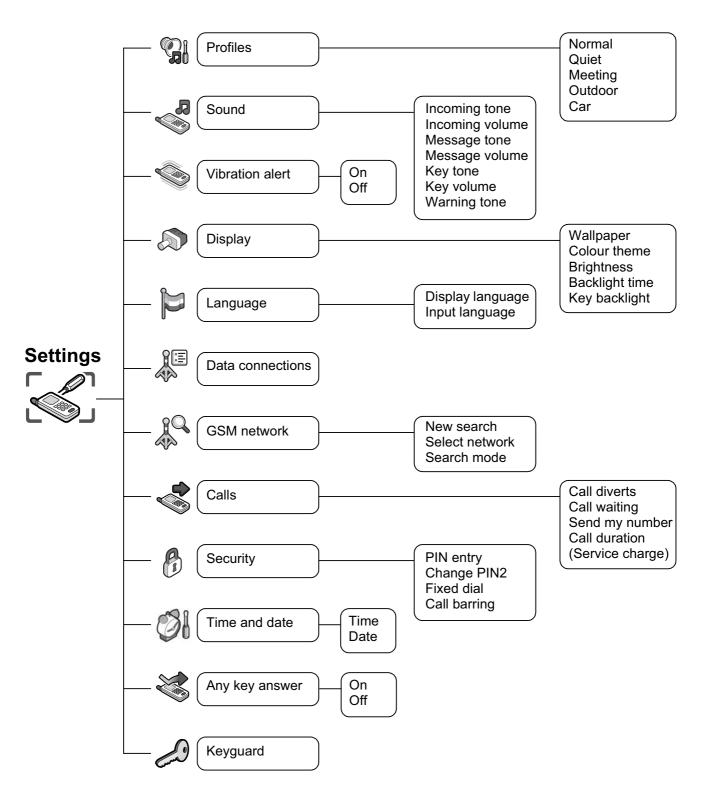

Service charge is SIM dependent ().



Profiles



Profile setting

You can switch among five profiles in your phone, each with a distinct combination of ring tone, ring volume, etc.

Profiles are set up for use in different environments – for instance you might want to create a Quiet profile, a Meeting profile with a ring tone appropriate for formal occasions and an Outdoor profile for noisy environments.

Within each profile, distinct melodies can be set as incoming call and message alerts.

Activating a profile

From **Profiles** menu

- 1 (required profile ()
- 1 prequired profile



Editing profile

Incoming tone

From Profiles menu

- 1 (required profile ()
- 2 **(a)** Edit **(e)** / **(c)**
- 3 🔷 Incoming tone 💿 / 🖃
- 4 Preinstalled, My Stuff or Download more / •
- 5 (required data () / ()



Incoming volume

From Profiles menu

- 1 (required profile
- 2 **(a)** Edit **(e)** / **(c)**
- 3 🗘 Incoming volume 💿 / 🗊
- 4 🔘 / 🏵 adjust the volume level (0 4, Step tone) 💿 / 🗊



Step tone will give an escalating volume.

Message tone

From **Profiles** menu

- 1 (required profile ()
- 2 **(a)** Edit **(e)** / **(c)**
- 3 🐧 Message tone 💿 / 🗊
- 4 Preinstalled, My Stuff or Download more / 🗖
- 5 🗘 required data 💿 / 🖃





Profiles



Message volume

From **Profiles** menu

- 1 (required profile ()
- 2 🗘 Edit 💿 / 🖘
- 4 🔘 / 🕞 adjust the volume level (0 4, Step tone) 💿 / 🖘



Step tone will give an escalating volume.

Key tone

From Profiles menu

- 2 **(a)** Edit **(e)** / **(c)**
- 3 **(a)** Key tone **(a)** / **(a)**



Key volume

From Profiles menu

- 1 (required profile ()
- 2 **(a)** Edit **(e)** / **(c)**
- 3 (Key volume) / (



Warning tone

From Profiles menu

- 1 (required profile ()
- 2 (Edit () / ()
- 3 **Warning tone** / •
- 4 **(a)** On or Off **(e)** / **(c)**



Vibration alert


From Profiles menu

- 1 (required profile
- 2 **(a)** Edit **(e)** / **(a)**
- 3 🗘 Vibration alert 💿 / 🗊
- 4 **On** or **Off (a)** / **(b)**



Tone setting Settings You can set ring tone, ring volume, etc. The ring tone can be changed to one of the tones from Preinstalled, My Stuff or Download more. Incoming tone and Message tone can have different ring tones and volume assigned. Changing Incoming tone From Sound menu Incoming tone 1 (Incoming tone () / () 2 Preinstalled, My Stuff or Download more • / 🖘 Mv Stuff Download more 3 (required data () / () Select O Cancel Setting Incoming volume From Sound menu Incoming volume 1 (Incoming volume () / () Volume3 2 () / (adjust the volume level (0 - 4, Step tone) () / () Select O Cancel Step tone will give an escalating volume. Changing Message tone From Sound menu 1 🐧 Message tone 💿 / 🖘 2 Preinstalled, My Stuff or Download more • / © Download more 3 (required data () / () elect O Cancel Setting Message volume From Sound menu Message volume 1 🐧 Message volume 💿 / 🖘 Volume3 2 () / (adjust the volume level (0 - 4, Step tone) () / () Select O Cancel Step tone will give an escalating volume. Setting Key tone From Sound menu 1 **(a)** Key tone **(a)** / **(a)** 2 (required tone () / () O Tone3

Select O Cancel

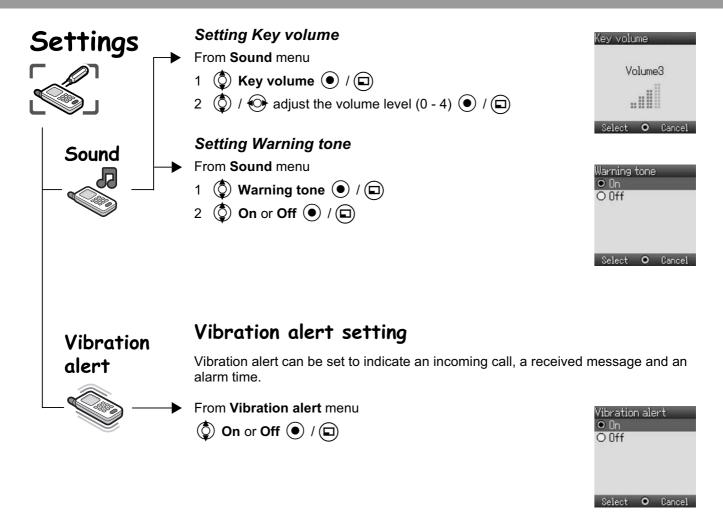



Display



Display colour, Brightness, Wallpaper, Backlight time and Key backlight can be changed.

Display setting

Setting Wallpaper

- From **Display** menu
 - 1 🗘 Wallpaper 💿 / 🖘
 - 2 Preinstalled, My Stuff or Download more / •
 - 3 (a) required data
 - 4 To view and save, press then / to save

To save without viewing, press

Setting Display Colour theme

- From **Display** menu
 - 1 🗘 Colour theme 💿 / 🖘
 - 2 prequired colour project / cap

Setting Display Brightness

- From **Display** menu
 - 1 🗘 Brightness 💿 / 🗊
 - 2 adjust the brightness level (1 5) / •

Setting Backlight time

- From **Display** menu
 - 1 🕲 Backlight time 💿 / 🖘
 - 2 prequired time property / property

The backlight goes out, then display is turned off in 1 minute.

 
Setting Key backlight

- From **Display** menu
 - 1 🔷 Key backlight 💿 / 🖘
 - 2 **On** or **Off O** / **D**











Language setting

You can change the language used for display messages and/or text entry.

From Language menu

- 1 🗘 Display language or Input language 💿 / 🖘
- 2 required language / 2



Data connections

Language

Data connections setting

GPRS settings and CSD settings are stored in the Data connections menu. Data can be sent/received using GPRS or CSD technology.

GSM

network

Network setting

Changing to a new network

The New search function is used to manually select a network that is available in your current location.

From **GSM network** menu

- 1 🗘 New search 💿 / 🗔
- 2 (required network () / ()

National regulations may not permit roaming in your

home region.

Select network

View available networks.

From **GSM network** menu

- 1 🗘 Select network 🖲 / 🗔
- 2 🐧 required network 🖘
- 3 prequired option (see page 29) 1 / 2

NOTE MCC (Mobile Country Code) / MNC (Mobile Network Code) will appear on the display.



GSM network

<mark>New search</mark> Select network

Search mode





GSM network



National regulations may not permit roaming in your home region.

When the Search mode is set to Automatic the phone will automatically reselect a new network in order to maintain optimum network availability. The network list is used when the Search mode is set to Automatic. The location numbers in the preferred network list show the search priority.

You can amend the list as follows:


Option	Explanation
Add	Store a new network at the end of the list
Insert	Store a new network in the currently displayed location and move other networks down
Edit	Overwrite the old network with a new one
Delete	Delete the network you have selected

Search mode

You can set your phone to automatically or manually search for the other networks when roaming.

From **GSM network** menu

 1 🐧 Search mode 💿 / 🗊



When the Search mode is set to Manual the phone will only use a selected network.

If coverage is lost another network should be manually selected.







Call settings

Call diverts

Voice, fax, and data calls can be diverted to different numbers in different situations. For example, you may want to divert voice calls to voice mail when the phone is switched off.

To register a number to divert at first time:

From Calls menu

- 1 🐧 Call diverts 💿 / 🗊
- 2 🐧 Divert voice, Divert fax or Divert data 💿 / 🗊
- 3 () the circumstances to initiate the divert () (Options)
- 4 🐧 On 💿 / 🖘
- 5 Direct input or From contacts / ©
- 6 When you select **Direct input**, enter phone number to divert





or

When you select **From contacts**, **(** required contact from the Contacts list **(**

Request of Call diverts will be sent to network.

Entered phone number will be registered in the network. From next time, incoming calls will be diverted to the registered number.

- To cancel the registered phone number, ② Off ① / ② on step 4.
- To cancel all the registered phone number, ② Cancel all ④ / © on step 2.
- To confirm the status of Call diverts, 5 Status 6 / 6 on step $\overset{-}{4}$.



Calls



To change the registered number to divert:

- From Calls menu
 - 1 🗘 Call diverts 💿 / 🖘
 - 2 Divert voice, Divert fax or Divert data / 🖘
 - 3 the circumstances to initiate the divert ((Options)
 - 4 **(a)** On **(b)** / **(c)**
 - 5 Direct input or From contacts / ©
 - 6 When you select **Direct input**, enter phone number to divert (If you select after entering phone number, (D **Ok** (If you select III))

When you select **From contacts**, r required contact from the Contacts list r

Request of Call diverts will be sent to network.

NOTE When a divert situation is enabled the divert icon () is displayed.

Call diverts settings

Settings	Explanation
All calls	Divert all incoming calls
When busy	Divert incoming calls when a call is in progress
When no reply	Divert incoming calls if call is not answered (This setting is available only when Divert voice is selected.)
When unreachable	Divert incoming calls when phone is disconnected

This function is network dependent ().

Call waiting

If Call waiting is switched on a second call can be received.

- From Calls menu
 - 1 🗘 Call waiting 💿 / 🖃
 - 2 The current status, "Call waiting deactivated" or "Call waiting activated", is displayed

To accept the current status,

(If you select \bigcirc , \bigcirc **Ok** \bigcirc / \bigcirc)

or

To change the setting, Activate or Deactivate /







Calls



Send my number

You can set whether or not to show your phone number to another phone (Caller ID).

- From Calls menu
 - 1 🔷 Send my number 💿 / 🖘
 - 2 Network set, On or Off / 🗇

Send my number Network set On Off Select • Cancel

Call duration

Displays the duration of incoming or outgoing calls.

- From Calls menu
 - 1 🕲 Call duration 💿 / 🗊
 - 2 Incoming or Outgoing / To reset counter, x 2 / x 2




Service charge

You can check the charges for your calls.

- From Calls menu

The following can be set.

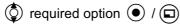

Option	Explanation
Cost left	Show how much cost is left
Call meter	Show the total costs of calls made
Price/unit	Show the cost that the service provider charges for one unit of call time
Max cost	Set the maximum cost of calls made

NOTE The duration of one unit may vary during day, peak and off-peak times. Call charges can be calculated accordingly. However, the call charge information may not give an accurate reflection of the actual tariffs charged by Vodafone.

This function is SIM () and network () dependent.



Security



If PIN is entered incorrectly 3 times the phone will be locked, and you will need to enter the PUK code. If PIN2 is entered incorrectly 3 times SIM will be locked, and you will need to enter PUK2 code. If the PUK code is entered incorrectly 10 times, the phone will cease to operate permanently. All information stored in the SIM will be lost and the SIM will need to be replaced. Contact Vodafone for more information.

Security settings

The PIN protects your SIM against unauthorised use. If you enable the PIN, every time the phone is switched on, you will be prompted to enter the PIN code. The PIN2 controls security for the Fixed dial store.

PIN entry (Enabling/Disabling PIN entry)

- From **Security** menu
 - 1 🔷 PIN entry 💿 / 🖃
 - 2 🗘 Enable/disable 💿 / 🗊
 - 3 (Enable or Disable / ()
 - 4 Enter the PIN code (4 8 digits)

 /

 /



Change PIN

- From **Security** menu
 - 1 **(a)** PIN entry **(b)** / **(c)**
 - 2 🗘 Change PIN 💿 / 🖻
 - 3 Enter the current code

 /

 /
 - 4 Enter the new code

 /

 /
 - 5 To verify the new code () / ()



You can change the PIN when PIN entry is set to Enable.

Change PIN2

- From Security menu
 - 1 🗘 Change PIN2 💿 / 🗊
 - 2 Enter the current code

 /

 /

 - 4 To verify the new code () / ()



This is SIM (), service provider and network () dependent.

Settings



Security



Fixed dial

Fixed dial is a part of Contacts, but with added security. When Fixed dial is enabled:

- Only numbers that are in the Fixed dial store may be dialled.
- Any manually dialled phone numbers must match a number already in the Fixed dial store.

If you store, edit or delete a phone number, you have to enter your PIN2 code.

From Security menu

- 1 🗘 Fixed dial 💿 / 🖘
- 2 🗘 Enable or Disable 💿 / 🖘
- 3 Enter the PIN2 code (4 8 digits)

 /

 /



This is SIM (), service provider and network () dependent.

Call barring

Call barring restricts certain outgoing and/or incoming calls using a password supplied by Vodafone. When updating/checking the status of Call barring, the phone must be registered on a network.

Varying call restrictions can be used for voice calls.

From Security menu

- 1 (Call barring () / ()
- 3 **On, Off** or **Status O** / **D**
- 4 When you select **On** or **Off**, enter password (4 digits) / •



You can skip steps 3 and 4 if you enter your password in step 2.

Call barring settings

Settings	Explanation
Bar outgoing calls	Outgoing calls are barred
Bar foreign calls	International outgoing calls are barred
Bar foreign calls except Home	International outgoing calls except home are barred
Bar incoming calls	Incoming calls are barred
Bar incoming if abroad	Roaming is barred if abroad
Cancel all	Cancel all call bar settings
Status all	Call bar status is displayed
Password	Change call bar password

Settings



Time and date

 


Time and date can be shown on the top of the display when in Idle mode.

Time and date setting

From Time and date menu

- 1 (Time () / ()
- 2 O+ 9wxyz to enter the time using 24 hour clock / •
- 3 **(a)** Date **(b)** / **(c)**
- 4 (O+) (9wxyz) to enter the date (•) / (□)



Some settings may be lost if the battery is removed or remains discharged for more than 1.5 hours.

Any key answer



Any key answer setting

Calls can be answered by pressing any key except (6) / (1). When any key answer is set to off, calls can only be answered by pressing () or ().

From Any key answer menu

On or **Off O** / **D**





Settings





Keyguard setting

Keyguard stops the keys from performing their normal function if accidentally pressed. When Keyguard is enabled, " 🏭 " appears on the display. When a call is received, Keyguard is temporarily disabled and you can answer the call.

Setting Keyguard

From Keyguard menu

From Idle display

- 1 Press and hold (•)



Emergency calls can still be made with the Keyguard enabled but there will be no indication that you are dialling a number.

Disabling Keyguard

When " appears on the display

- 1 •

Camera

You can take

pictures with the built-in camera,

send them in an

 
infrared and use them as Wallpaper.

a picture to a

contact in your Contacts list.

You can also attach

MMS (multimedia message) or by



Taking a picture

The camera range is 35 cm - ∞ . The minimum illumination required is 5 lux.

From Camera menu

• to capture the image

To store the image in My Stuff: (After capturing the image)



The picture will be saved in My Stuff / Pictures / Stored pictures.

To return to camera operation without storing the image:

(After capturing the image)



NOTE If you press (•) after capturing image, the picture can be attached to an MMS message. See "Sending a message" on page 44.

Adjusting the brightness level

While view finder is active, you can adjust the brightness.

to increase the brightness

to decrease the brightness

 
Picture brightness indicators:





Options in view finder

The following options are available by pressing \Box .





Option	Explanation	
Twilight mode	Improve picture taken in low light conditions (On, Off)	
Anti flicker	Reduce flickering in view finder (mode 1: 50 Hz, mode 2: 60 Hz)	
Image size	Change image size (640 x 480 pixels, 352 x 288 pixels, 160 x 120 pixels)	

When taking a picture, flickers may appear in certain environments.

37

Camera



Saving and using pictures

Once a picture has been taken it will be saved in My Stuff. To use a saved picture as your personal wallpaper or for Contacts, see "Setting Wallpaper" on page 27 and "Storing a number in your phone" on page 57.

NOTE When My Stuff is full, pictures can be saved if you make space by deleting files (pictures, sounds and text templates). Press to delete unwanted files.

Incoming calls during camera operation

If an incoming call etc, is received during camera operation, the phone will exit the camera mode and switch to the incoming call etc.

The captured image will not be saved.

Self-portrait

You can take your self-portrait. Look at yourself in Self-Portrait Mirror and press
to take a picture.

Viewing pictures

Pictures taken by the camera are created as JPEG image files. JPEG is standardised image compression format. JPEG image files can be viewed with most general image viewers and editors as well as with an Internet browser.

NOTE Do not leave the phone with the camera facing direct sunlight to avoid impairing camera performance.

If the camera is left in the preview mode or a captured picture is displayed the phone will automatically return to Idle mode or the main menu in 3 minutes. If left in preview mode, but with the options menu displayed, the phone will remain in this state and will not return to Idle mode.

Text Entry (Edit)

You can use alphanumeric characters to enter details into Contacts, to create text, email messages, etc.

	Text mode				
Key	(T9 ↑, T9 (Input la	9 [®]) ∱ or T9) Inguage: Iish)	Multi-tap (Input mode indicator: Abc, ABC or abc)		Numeric (Input mode indicator: 0-9)
O +	Alternatives		. @ / – _+ 0		0/ (Hold)+
<u>[]</u>	. , - ? ! ' @ : ; / (Hold) Cha		.,?1!"-:; @ / * () # + _ = [] £ \$ ¥ ¤ § Space ᠘ / (Hold	{ } ' ¡ ¿ & % \ ^ ~ < > € ¢) Character list	1
2abc)	A B C 2	(a b c 2)	ΑΒC2ΓÁÄÅÆÇ	(a b c 2 α β γ á ä å æ à)	2
3 def	DEF3	(d e f 3)	DEF3ƃ	(d e f 3 δ ε ζ é è)	3
4ghi)	GHI4	(g h i 4)	GHI40Í	(g h i 4 η θ ι ì í)	4
(5 jkl)	JKL5	(j k l 5)	JKL5Λ	(j k l 5 κ λ μ)	5
(6mno)	M N O 6	(m n o 6)	MNO6ΞÑÓ ŐÖØ	(mno6νξό őñöøò)	6
7pqrs	PQRS7	(pqrs7)	PQRS7ΠΣ	(pqrs7πρςσβ)	7
8 tuv	T U V 8	(t u v 8)	Τυνεφύ ΰ ϋ	(tuv8τυφú ű ü ù)	8
Э wxyz	WXYZ9	(w x y z 9)	W X Y Z 9 Ψ Ω	(w x y z 9 χ ψ ω)	9
*	Shift / (Hold) Input mode	Shift / (Hold) Input mode		* / (Hold) Input mode
(x #)	Space / (Ho	ld) Line feed	Space * # / (Hold) Line feed		# / (Hold) Line feed
	Delete text /	(Hold) Delete	e all characters		

Displayed characters in the T9[®] mode vary depending on the selected input language.

Shift mode

Shift mode change

The Shift mode changes by pressing (within 1 sec) (**\frac{1}{2}).

1	Multi-tap	Tegic
	Abc -> ABC -> abc	T9↑->T9↑->T9

If Input mode is changed, Shift mode is initialised.

Auto capital change

Auto capital affects Abc and T9 1.

If Input mode is changed to Abc or T9 \underset, the first character is input as upper case and subsequent letters as lower case. (Input mode indicator changes to abc or T9.)

If these characters [. (Period) or ! or ?] are input, the next character is input as upper case. (Input mode indicator changes to Abc or T9 ↑.)

Input mode

Input mode change

Input mode changes by pressing and holding (over 1 sec) (**).

Input mode

Multi-tap -> Numerals -> T9 (Selected tegic language)
(Abc -> 0-9 -> T9↑)

The phone keeps the selected input mode.

Text input

79®

Using this mode of text input dramatically reduces the number of key presses required:

Press a key once for any letter you require on that key. The desired letter may not be displayed. Continue pressing other keys until the end of a word is reached, then check that the word has been typed correctly before continuing on to the next word. If the combination of letters typed has produced a word which is not the one you require, press \bigcirc +, \bigcirc or \bigcirc repeatedly until the correct word is displayed. Continue to the next word.

Example of text input in T9 mode

To type a new message, follow these steps:

- 1 At the beginning of a new message press and hold ()(Clear) to delete previous text, if necessary.
- 2 Press (★☆)(Shift) to change letter case, if necessary.
- 3 Press (2abc) (2abc) (5 jkl) (5 jkl).

"Call" is displayed.

Note that the displayed words change as you type, always type to the end of the word before editing.

T9[®] languages can be selected from T9 Input, in options $\square \to \diamondsuit$ Input language \bullet / \square

If the word you require is not in the internal dictionary, it should be entered using the Multi-tap (Abc) mode.

T9 user's dictionary

Words that you entered are saved in the user's dictionary so that they are suggested next time.


Other text modes

Select text mode (displayed in top right corner on screen)

Multi-tap mode (Abc, ABC or abc):

Each time a key is pressed in quick succession, the next character available on that key is displayed. Releasing the key or pressing another key enters the character displayed. The cursor moves to the next position. In T9 (T9 ↑) or Multi-tap (Abc) mode, the first entered letter in a sentence is in upper case.

Messages Menu Structure

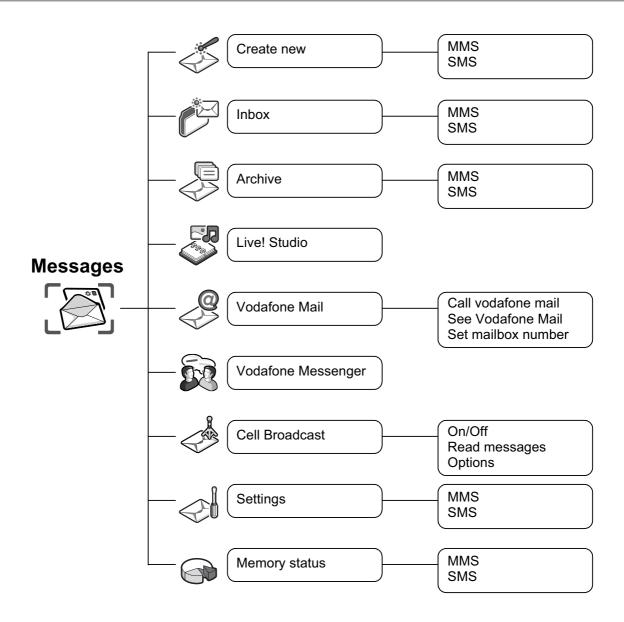



Create new



This phone has various messaging features including SMS and MMS.

MMS (Multimedia Messaging Service)

Your phone is designed to be compatible with certain Multimedia Messaging Services (MMS). You can send pictures and music with text messages. The recipient can play it as a slide show.

MMS messages can be sent to another mobile phone with MMS capability or to an email address.

When you receive an MMS message, a notice will inform you that you have received a message. (See page 45.)

An MMS profile may already have been set when you purchased your phone. To change the settings, see page 47. You can directly access Messages from Idle mode with the Left Soft key (\Box) .

Creating a new MMS

From Create new menu

1 (MMS ()/ ()

When creating a message, the following menu is available.

Menu item	Explanation	
Add picture	Select a picture stored in Stored pictures / Download more / Take new picture and insert it into the MMS message	
Add text	Create text and add to MMS message	
Add sound	Select sound stored in Stored sounds / Download more / Record new sound and add to MMS message	


2 After selecting a picture or sound or entering text, press (□) for the following options



(required option () ()



Option	Explanation	
Edit text	Edit the text when selecting added text	
Listen	Listen to the sound when selecting added sound	
Send	Send MMS after entering the subject and recipient number or address	
Remove picture/ text/sound	Remove from the MMS	
Preview slide	Preview MMS as a slide	

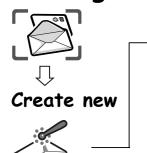

Creating a slide

In order to send an MMS with more than one picture, text or sound, you need to add new slides to the MMS.

From Create new menu

- 1 🐧 MMS 💿 / 🗊
- 2 Add picture, Add text or Add sound (a) / (a), then select a picture or sound, or enter a text
- 3 🔷 Slides 💿

Slide option

While Slides is highlighted, the following options are available by pressing \Box .

required option • / •

Option	Explanation
Add new	Add slide
Send	Send MMS after entering the subject and recipient number or address
Slide duration	Specifies duration of slide
Remove slide	Remove slide from the MMS
Preview slide	Preview MMS as a slide





Sending a message

When a message is completed, press 🗊

- 1 🔷 Send 💿 / 🖃
- 2 🗘 Add subject 💿
- 3 Enter subject
- 4 🗘 Add recipient 💿
- 5 🕏 From contact list, Enter number or Enter address 💿 / 🖘
- 6 When you select **From contact list**, required contact or When you select **Enter number**, enter number / required contact or

Before sending a message, the following options are available by pressing \square . \bigcirc required option \bigcirc / \bigcirc

Option	Explanation	
Add subject / Add recipient	Add subject to MMS message / Add recipient to MMS message	
Edit	Edit the subject or the recipient	
Remove address	Remove address	
Edit slide	Transit to "Slide" screen where you can edit slide	
Send	Send MMS	
Preview MMS	Preview MMS message	
Save	Save MMS message to Drafts box	
Create options	Set send options	

Creating options

Before sending a message, you can set send options.

- ▶ When a message is completed, press □
 - 1 🔷 Send 💿 / 🖘
 - 2 (a) for the options
 - 3 🗘 Create options 💿 / 🖘
 - 4 (required option () / ()

Option	Explanation	
Request read	Ask if the other party read the message	
Request delivery	Check if your message has been delivered to the other party	
Validity period	Duration for which your message is stored at the message centre. Delivery attempts will be repeated until the message has been delivered or Validity period expires.	
Priority	Set the priority to normal, low or high	
Delivery time	Specifies delivery time of a message to be sent	

Inbox

Receiving messages

When you receive an MMS message, the message icon () is displayed along with a tone, illumination, and/or vibration.

From Inbox menu

1 🐧 MMS 💿 / 🖘

2 required notification

The following options are available by pressing .

	required option		\cdot
(O)	required option	$(lue{lue{\bullet}})$	/ (🖃)
\mathbf{V}	roquirou option	\bigcirc	

Option	Explanation	
Receive	Receive new message	
Reject	Delete message from the server and delete notification	
Call	Call sender's number	
Delete all	Delete all MMS messages in Inbox	
Properties	Show message details (such as message size and date)	

Reading a received message

From Inbox menu

1 🐧 MMS 💿 / 🖘

2 prequired message

When viewing the list, the following options are available by pressing .

required option • / •

Option	Explanation	
Reply	Create reply message	
Reply to all	Create reply message to the sender and all recipients of the message	
Forward	Forward MMS message	
Call	Make a call to the sender	
Contact	Store sender's phone number or email address in Contacts	
Delete	Delete MMS message	
Delete all	Delete all MMS messages in Inbox	
Properties	Display message properties	





Viewing message lists

The following messages are stored in Archive.

- > Outbox: When a message has been sent it is stored in the Outbox.
- > Unsent: Undelivered messages are stored in Unsent.
- > Drafts: Use to create a message draft.

MMS Drafts: Messages that are saved in the MMS mode are saved in Drafts. If the transmission of an MMS message fails, the message is stored in Unsent together with other saved messages.

From Archive menu

- **♦** MMS **●** / **□**
- required list / •

In each list, the following options are available by pressing ().


prequired option () / ()

Outbox

Option	Explanation
Edit	Edit MMS messages
Forward	Forward MMS messages
Delete	Delete MMS messages
Delete all	Delete all MMS messages in Outbox
Properties	Display message properties

Unsent, Drafts

Option	Explanation
Edit	Edit MMS messages
Send	Send MMS messages
Delete	Delete MMS messages
Delete all	Delete all MMS messages in Unsent or Drafts
Properties	Display message properties

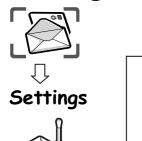

Setting the MMS message server / profile

MMS message server and profile setting must be done before you can send or receive an MMS message. Please check with your operator if additional settings are required. You can select one of five server URLs on the phone.

From Settings menu (Message server)

- (MMS () / ()
- 2 🗘 Advanced 💿 / 🖘
- 3 🐧 Message server 💿 / 🗊
- 4 (required message server ()
- 5 Enter URL () if you need

From Settings menu (Profile)

- 1 **②** MMS **●** / **□**
- 2 🐧 Advanced 💿 / 🗊
- 3 **♦ Profile ●** /
- 4 (select profile () / ()

NOTE Before selecting MMS message server, you may have to set the profile if it is empty. To set server profile, see page 69, Vodafone live! - Options - Settings - WAP profiles.

Modifying previously entered settings can cause failure of the server setting.

Setting options

The following settings are available.

From Settings menu

♠ MMS ● / □

Option	Explanation
Reports	Set Request read (ask if the other party read the message) / Send read (inform the other party that you have read the message when asked) /Request delivery (ask if the other party received the message) /Send delivery (inform the other party that you have received the message when asked)
Priority	Set the priority to Low, Normal or High
Validity period	Duration that your message is stored at the message centre. Delivery attempts will be repeated until the message has been delivered or Validity period (1day, 7days or Maximum) expires
Auto download	After receiving a message notification, the message will be sent to you automatically (Always on). Message set to be delivered automatically in home area (On when home). Message will be sent to you manually (Never).(This option is available only in Idle mode.)
Player mode	Auto mode enables MMS slides to be displayed according to their duration. Manual mode enables MMS slides to be displayed by pressing /
Advanced	Set Message server, Profile, Fetch on server and Anonymous reject, and also view Information of MMS software



SMS (Short Message Service)

You can receive, display, edit and/or send text messages on Vodafone networks or any network that has a roaming agreement. (Dependent on the recipient's phone parameters.)

 
The message centre number should be preprogrammed on the Vodafone SIM, changing this number (see page 51) may cause failure of a text message.

Creating a text message

From Create new menu

- 1 🐧 SMS 💿 / 🗊
- 2 Create text message max. 459 characters, see "Text Entry" on page 39

When creating text, the following options are available by pressing \square .



Option	Explanation
Send	Send text as SMS messages
Send to many	Send text to more than one recipient
Templates	Access to text templates in My Stuff
Save	Save message in Unsent
Сору	Copy text
Cut	Cut text
Paste	Paste text
Input language	Select input language
Exit	Return to Create new menu

Options • Cancel

Sending a message

When you have created your message, press ()


- 1 🔷 Send 💿 / 🖬
- 2 Enter the destination phone number •

If you want to select from Contacts

- 1 Send / 🖘
- 2 (🖲
- 3 prequired contact
- 4

Before sending a message, the following options are available by pressing \square .

Option	Explanation
Send	Send text as SMS messages
From contacts	Select the destination phone number from Contacts
Save	Save message in Unsent
Exit	Return to "Create SMS" screen

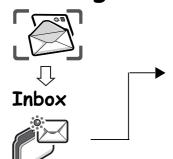

Receiving messages

When you receive an SMS message, the message icon () is displayed along with a tone, illumination, and/or vibration.

Reading a received message

From Inbox menu

1 🔷 SMS 💿 / 🗊

2 prequired message



When viewing messages, the following options are available by pressing \square . \bigcirc required option \bigcirc / \square

Option	Explanation
Reply	Create reply message to sender
Forward	Forward SMS message
Call	Call sender's number
Add to contacts	Store sender's number to Contacts
Use detail	Call or send messages to a phone number/email address, or access URL address in the message (This option is available only when viewing messages.)
Delete	Delete SMS message
Delete all	Delete all SMS messages (This option is available in the message list.)

When viewing a message, detail information of SMS will be shown by pressing ().





Viewing message lists

These message lists are stored in Archive.

- > Outbox: When a message has been sent, it is stored in the Outbox.
- > Unsent: If the transmission of an SMS message fails, the message is stored in Unsent together with other saved messages. Messages that are edited and saved in the SMS mode are saved in Unsent.
- > Draft: Use to create a message draft.

SMS Draft: The last message you edit in the SMS mode is saved in the Draft.

From Archive menu

- 1 (SMS () / ()
- 2 (required list) / ()

In each list, the following options are available by pressing \Box .


required option • / •

Outbox, Unsent

Option	Explanation
Send	Send text as SMS messages
Call	Call receiver's number messages
Use detail	Call or send messages to a phone number/email address, or access URL address in the message (This option is available only when viewing messages.)
Delete	Delete SMS message
Delete all	Delete all SMS messages (This option is available in the message list.)

Draft

Option	Explanation
Send	Send text as SMS messages
Send to many	Send text to more than one recipient
Templates	Access to text templates in My Stuff
Save	Save message in Unsent
Сору	Copy text
Cut	Cut text
Paste	Paste text
Input language	Select input language
Exit	Return to Archive menu

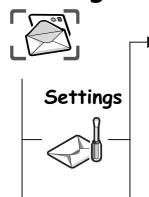

Setting the message centre number

The message centre number should be preprogrammed on the Vodafone SIM, changing this number may cause failure of a text message.

From Settings menu

- I 🗘 SMS / 🖃
- 2
- 3 Enter message centre number in international dial format (see "International dialling" on page 14)



When the message centre number has been pre-installed, please do not change the number.

Setting options

From Settings menu

- 1 🔷 SMS 💿 / 🖘
- 2 © required option / •

Option	Explanation
Message centre	Edit message centre number
Message type	Select required message type
Validity period	Select maximum or choose a time limit for sent messages
Delivery report	Request a delivery report on the status of a sent message
Store sent SMS	Store messages to Sent SMS

Live! Studio

Live! Studio

Live! Studio is a personal folder on Vodafone's server where you can store pictures etc. To upload your pictures etc. to your personal folder, see pages 79 - 80. Pictures can be shown to your friends.

➤ More information on this service may be obtained by contacting Vodafone.



Vodafone Mail



Vodafone Mail

Vodafone Mail is an innovative service that lets you stay up-to-date with all of your messages.

You must subscribe to voice mail through Vodafone before you can retrieve voice mail or email messages.

➤ More information on **Vodafone Mail Messages** and **Internet mail** services may be obtained by contacting Vodafone.

Listening to Vodafone Mail messages



From Vodafone Mail menu



Stored mailbox number is dialled and you can listen to voice messages.

Connecting to internet mail

From Vodafone Mail menu



Your phone is connected to the Internet via a WAP connection to retrieve email messages.

Vodafone Messenger lets you enjoy the fun of instant messaging wherever you are.

➤ More information on this service may be obtained by contacting Vodafone.

Setting the Vodafone mailbox number

From Vodafone Mail menu

- 1 🗘 Set mailbox number 💿 / 🖃
- 2 Enter the Vodafone mailbox number (when necessary)

 / (x 2

Vodafone Messenger

It's the fun way to chat on-line.

Vodafone Messenger



From Vodafone Messenger menu

(Follow the screen contents

Viewing Vodafone Messenger

It allows you to read sent and received messages with another party on one screen.

Cell Broadcast

You can receive messages on specified topics, such as traffic and weather information.

Setting Cell Broadcast On/Off

Cell Broadcast From Cell Broadcast menu

- 1 **(a)** On/Off **(e)** / **(c)**
- 2 **On** or **Off** /

Reading a received message

From Cell Broadcast menu

- 1 🗘 Read messages 💿 / 🖘
- 2 required message

Options

You can add, edit and delete topics and languages.

From Cell Broadcast menu

- 1 **Options** / •
- 2 Dopic or Language / D
- 3 prequired topic or language
- 4 🗘 Add, Edit or Delete 💿 / 🗊

Memory status

Memory status

You can see MMS/SMS memory status.

Viewing MMS/SMS memory status

From Memory status menu


MMS or SMS • / •

The current percentage of MMS saved in Phone are displayed.

or

The current percentage of SMS saved in SIM and in Phone are displayed.

Contacts Menu Structure

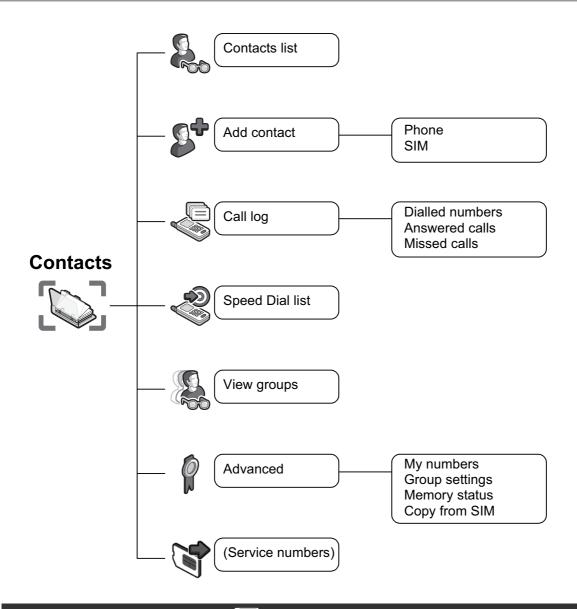

Service numbers is SIM dependent ().

Browsing Contacts

list

You can search Contacts by name.

When browsing by name, pressing a letter key will take you to the first entry starting with that letter.

From Contacts list menu

required contact •



Options in Contacts

From Contacts list menu

1 (a) required contact (a)

2 prequired option / a

Option	Explanation
Call	Call contact
Send message	Send MMS/SMS to the selected contact from Contacts list
Edit	Edit contact
Add contact	Add contact to Contacts list
Copy to SIM/ phone	Copy contact to SIM or Phone
Speed dial	Add to Speed Dial list
Delete	Delete contact
Search	Search contact by entering characters (max. 18 characters)
Send by infrared	Send contact to another device by infrared



Phone numbers can be stored in your SIM or in your phone.





Storing

Storing a number in SIM

In the SIM, you can store: name, phone number.

The length of name and number and the total amount of data are dependent on your SIM.

From Add contact menu

- 1 🔷 SIM 💿 / 🖘
- 2 🗘 name icon (🌬) 💿
- 3 Enter the name
- 4 🗘 mobile icon (🖁) 💿
- 5 Enter the phone number

 /

 /

 /
- 6 🖃



Options in SIM Contacts


When the name is being entered, the following options are available by pressing \square . required option \bigcirc / \square

Option	Explanation
Сору	Copy letters into buffer
Cut	Cut and store letters into buffer
Paste	Paste letters from buffer
Input language	Select input language
Exit	Return to Add contact

Add contact

Ungrouped

Contacts

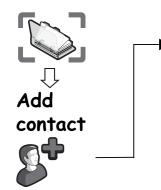

Storing a number in your phone

In the phone, you can store: name, phone no. 1, phone no. 2, email address, picture and group.

From Add contact menu

- 1 🗘 Phone 💿 / 🖬
- 2 🐧 name icon (🐚) 💿
- 3 Enter the name
- 4 🐧 mobile icon (🖁) 💿
- 5 Enter the phone number

 /

 /

 /
- 6 (telephone icon () (
- 7 Enter the phone number () / ()
- 8 (email icon ()
- 9 Enter email address
- 10 🗘 picture icon (📓) 💿
- 11 � required picture from My Stuff () or preinstalled pictures / 🖘
- 12 group icon ()
- 13 (required group () / ()
- 14 🗊

NOTE If a picture image for a contact is selected from My Stuff, the image will appear on the screen when the contact calls you. Preinstalled pictures are not applicable in this function.

Options in Phone Contacts

 
When the name and email address are being entered, the same options as SIM Contacts are available by pressing \square . (See page 56.)

Call log

Recently dialled phone numbers, answered calls and missed calls are stored in the Call log. The numbers in the Call log list can be used to call, send messages or add to Contacts. You can also delete the numbers from the list.

Call log

Viewing Call log



- 2 (required phone number)

Dialling from Call log

- From Call log menu

 - 2 (required phone number)
 - 3 / to call

Sending messages

- From Call log menu
 - 1 Dialled numbers, Answered calls or Missed calls

 - 3 🗊
 - 4 🐧 Send message 💿 / 🖘
 - 5 **MMS** or **SMS** / (**a**)
 - 6 Enter a message

For details on creating a message, see "Creating a new MMS" on page 42 or "Creating a text message" on page 48.

Saving a phone number from Call log into the Contacts list

- From Call log menu

 - 2 prequired phone number
 - 3 🖘
 - 4 🗘 Add to contacts 💿 / 🗊
 - 5 Phone or SIM / •
 - 6 (required icon (
 - 7 Enter as appropriate

(If required, repeat steps 6 and 7)

8 🖻



Call log



Options in Call log

In each Call log list, the following options are available by pressing ().

required option • / •

Option	Explanation
Call	Call selected number
Send message	Send MMS/SMS message to selected number
Add to contacts	Store number to Contacts
Delete	Delete selected log
Delete all	Delete all logs in the list (This option is available in the Call log list.)

Speed dial

Speed Dial list



In Idle mode, press and hold a number key (2 - 9).

Setting Speed dial

From Speed Dial list menu

- 1 (required list •
- 2 Enter phone number

 /

 /

 /

You can also select a phone number from Contacts by pressing
in step 1.

Phone numbers from the Speed dial of Contacts can be dialled quickly.



Viewing stored numbers

In Idle mode, press and hold a number key (2 - 9).

Making a call by using Speed dial

From Idle display

- 1 Press and hold a number key (2 9)



groups



Grouping Contacts entries

The ability to group Contacts entries together is an extra function of Phone Contacts. Groups are used to collect together types of Contacts entries, e.g. business and personal. Each group can be suitably titled for quick access to the entries contained

You can attach a particular sound to the groups to identify them. (See "Group settings" on page 62.)

Viewing groups

From View groups menu

required group • / •

The following options are available by pressing (a).

required option / (a)

Option	Explanation	
Call	Call contact	
Send message	Send MMS/SMS to the selected contact	
Edit	Edit contact	
Add contact	Create contact in Phone Contacts or SIM Contacts	
Copy to SIM	Copy contact to SIM	
Speed dial	Add to Speed Dial list	
Delete	Delete contact	
Search	Search contact by entering characters (max. 18 characters)	
Send by infrared	Send contact to another device by infrared	

My numbers

My numbers is a contact where you can store your own numbers.

Adding numbers

From Advanced menu

- 1 🐧 My numbers 💿 / 🖘
- 3 When My number is empty, press then go to step 5 When My number is already stored in SIM profile, press (
- 4 🗘 Create 💿 / 🖃
- 5 (name icon ()
- 6 Enter the name
- 7 🐧 mobile icon (🖁) 💿
- 8 Enter the phone number

 /

 /

 /

NOTE If you select Mobile profile, you can also select information such as additional number, email address and picture.

Viewing stored numbers

From Advanced menu

- 1 🐧 My numbers 💿 / 🖘

Options in My numbers

When viewing My numbers, the following options are available by pressing (\Box) .

required option / ()

Mobile profile (View Display)

Option	Explanation
Edit	Transit to Edit profile
Delete	Delete profile
Send by infrared	Send profile by infrared

SIM profile (View Display and List Display)

Option	Explanation
Edit	Transit to Edit profile
Create	Transit to Create profile
Delete	Delete profile
Send by infrared	Send profile by infrared

Advanced

Group settings

You can change the group name and attach a sound to the group.



Changing group names



- 1 🐧 Group settings 💿 / 🖘
- 2 required group
- 3 Press and hold () to clear the current name
- 4 Enter new group name

Attaching a sound to a group

- From Advanced menu
 - 1 🐧 Group settings 💿 / 🗊
 - 2 (required group ()
 - 3 Sound type

 /

 /

 /
 - 4 Preinstalled, My Stuff or Download more / •

Selecting **Default>** in step 4, you can also select a default sound.

Memory status

Memory status shows how many locations are available in the Contacts.

- From Advanced menu
 - Memory status

 /

Copy from SIM

You can copy SIM Contacts to Phone Contacts.

From **Advanced** menu

 \bigcirc Copy from SIM \bigcirc x 2 / \bigcirc x 2

Service numbers


Service numbers



When SIM containing SDN (Service Dialling Number) is inserted in your phone, you can call a service number by selecting from the list.

SDN enables you to access special services provided by your network operator, such as customer support, emergency services, etc.

Vodafone live! Menu Structure

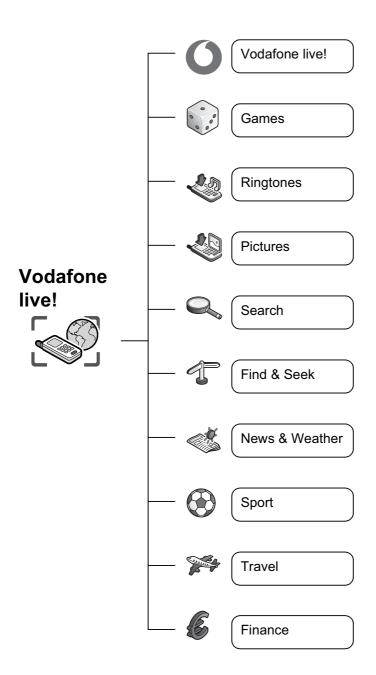

Vodafone live!

Vodafone live!



Vodafone live! is an online service which provides Internet connection and email, and is easily used through the display of the GSM phone (X200).

Viewing Vodafone live!

The following sites and services of interest are in Vodafone live!

More information on these services may be obtained by contacting Vodafone.

You can directly access the Vodafone live! web site from Idle mode with the Right Soft key (\Box) .










From Vodafone live! menu

required list

In each list, options are available by pressing lacking . (See page 66.)

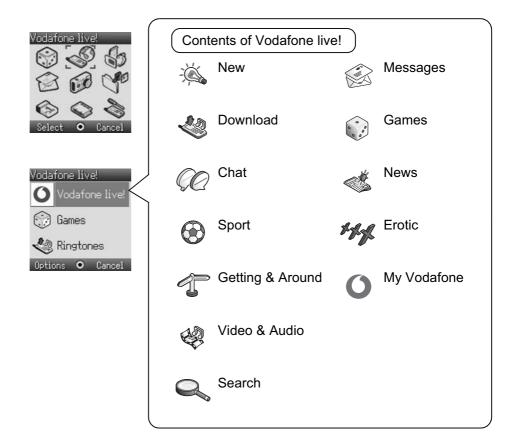

Contents menu may differ from the actual web site menu.

Vodafone live!

Browser options

From Vodafone live! menu

- 1 (Options)
- 2 Select from below options / ©

Option	Explanation	
Select	Select item	Go to page
Bookmarks	Go to bookmark list	Add bookmark Edit
Enter address	Go to URL entry	Delete
Save image	The image in contents is saved in "My Stuff"	
Set as bookmark	The displayed URL will be saved in Bookmarks	Home Clear cache View address WAP information
Service Inbox	Open Service Inbox	
Reload page	Reload this page	
Advanced	Go to homepage, clear the cache, view URL or view WAP information	
Settings	Edit profiles/Push access or view security information	WAP profiles Push access
Exit browser	Terminate the browser	Security

Browser options (Bookmarks)

From Vodafone live! menu or contents

- 1 (Options)
- 2 🐧 Bookmarks 💿 / 🖘
- 3 (required bookmarks
- 4 () to load the URL

or

(to select options

From Vodafone live! menu

Vodafone live!

From contents





Options:

Vodafone live!

Browser options (Enter address)

You can jump to the required content by entering the URL.



- 1 (Options)
- 2 🗘 Enter address 💿 / 🖘
- 3 Enter URL (•)

Browser options (Save image)

Displayed images can be saved in "My Stuff".

From contents

- 1 (Options)
- 2 🔷 Save image 💿 / 🖘
- 3 (to see whole image
- 4 / (a) to save



Browser options (Set as bookmark)

Favourite URLs can be saved in bookmarks.

From contents

- 1 (Options)
- 2 🔷 Set as bookmark 💿 / 🖘
- 3 Enter title

 to save

Vodafone Search Save image Set as bookmark Service Inbox

Browser options (Service Inbox)

View WAP push message and go to URL.

From contents

- 1 (Options)
- 2 Service Inbox / ©
- 3 to load the URL

or


to select options



Options:

When text and URL are delivered from Vodafone, the following options are available.

When only URL is delivered from Vodafone, the following options are available.

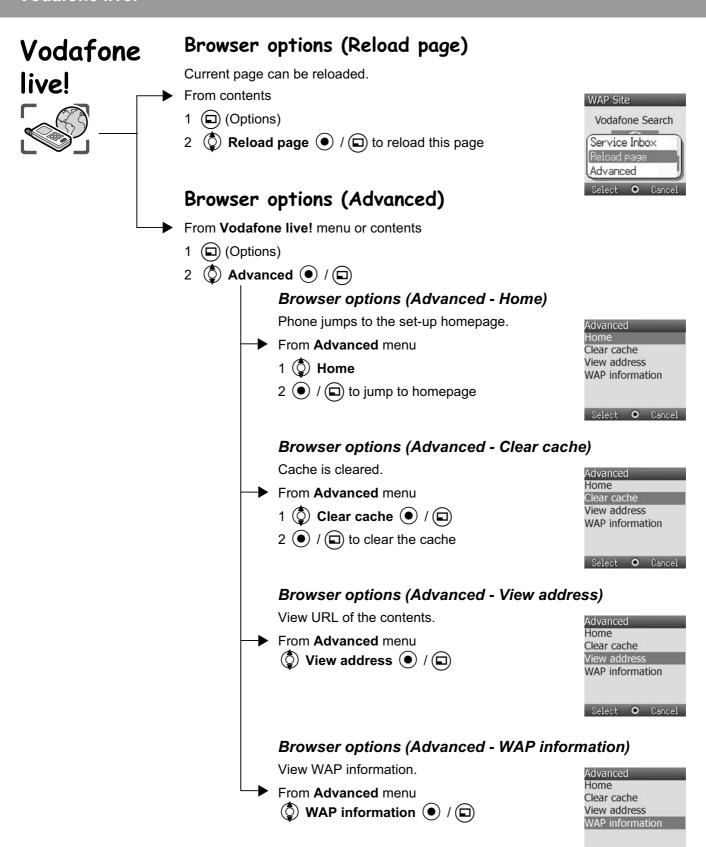

NOTE View address is available only from contents.


Select • Cancel

Browser options (Settings) Vodafone From Vodafone live! menu or contents live! 1 () (Options) 2 🗘 Settings 💿 / 🖘 Browser options (Settings - WAP profiles) Set up WAP browser. From Settings menu 1 🗘 WAP profiles 💿 / 🖘 2 (required profile 3 (to activate (to select options Browser options (Settings - Push access) Set up Push access to receive WAP messages. From Settings menu 1 Dush access 1 / 1 2 Service Indication, Service Loading or Other messages / (3 **On** or **Off O** / **D Browser options (Settings - Security)** View security information. From Settings menu

1 🕲 Security 💿 / 🖘

2 🔷 Certificates, Current certificate or Session info 💿 / 🖘

Fun & Games Menu Structure

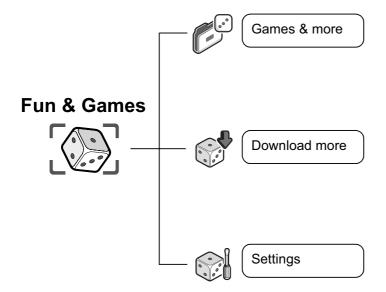

Fun & Games



Games & more



Games & more

Start Java™ applications.

From Games & more menu

The following options are available by pressing ().

required option • / •

Option	Explanation
Properties	Indicate application name, API, version, network, vendor, description and store size
Update	Update Java™ application
Delete	Delete Java™ application

Your phone supports J2ME™ Java™ applications. Other types of Java™ applications cannot be installed.

Download more



Download more

The downloaded Java™ applications will be stored in Games & more.

From **Download more** menu

- 1 (required list (
- 2 For options 🖘

Settings

Settings




Java™ applications settings, such as volume and backlight etc, can be changed.

Settings	Explanation
Sound volume	Volume setting for Java™ applications
Backlight	ON/OFF setting of Backlight in Java™ applications
Vibration	ON/OFF setting of Vibration in Java™ applications
Online service	Settings for online Java™ application connections
Memory status	Display of Memory status
Reset	Deletion of downloaded Java™ file and reset records of preinstalled Java™ application
Information	Display of copyright information

If "Online service" is selected more options are displayed as follows.

Ask When a Java™ application with HTTP access is activated the
phone must ask user's permission to access network.
Yes Always allow online connections.
No Never allow online connections.

Applications Menu Structure

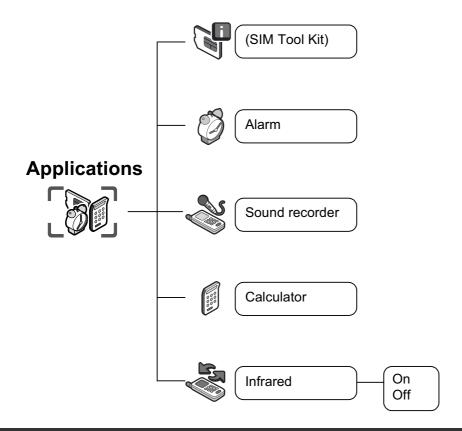

SIM Tool Kit is SIM dependent (). The menu name will be changed.

9 00:00

Dnce 📮 Ibiza party Volume2



Tool Kit

Alarm

When the set time is reached, the alarm will sound and the display will light with an alarm message.

Applications → STK (SIM Tool Kit)

This function is SIM dependent (). This menu name will be changed.

Alarm

Setting the alarm

- From Alarm menu
 - 1 \bigcirc alarm icon (\bigcirc) \bigcirc , \bigcirc On \bigcirc / \bigcirc
 - 2 Oclock icon (), enter the required time (24 hour
 - 3 alarm repetition icon () Once, Everyday, Weekdays or Weekend

 /

 /



- 5 \bigcirc volume icon (\bigcirc) \bigcirc , \bigcirc adjust the volume \bigcirc / \bigcirc
- 6 (a) to save the settings

When the alarm has been set, an alarm icon (m) will be displayed when the phone is in Idle mode.

The alarm is activated based on the current clock.

Muting the alarm

To stop the alarm:

- 1 Press any key or ()
- 2 () / ()

To disable the alarm:

- From Alarm menu
 - 1 (a) alarm icon ((b) (1)
 - 2 **(a)** Off **(e)** / **(a)**
 - 3 (a) to save the setting

Adjusting the alarm time

- From Alarm menu
 - 1 (clock icon (()

 - 3 (a) to save the setting

If you want to change other settings, see "Setting the alarm".

Applications



Alarm





Sound recorder

Snooze Function

To stop Snooze Function:

"End of alarm" is displayed.

stopping the alarm or press (6) to stop the alarm.

You can record sounds or your voice in My Stuff. The recorded sound files can be attached to MMS messages.

Snooze Function lets the alarm repeat 5 times if you do not press () / () after

Press () / () when "Would you like to stop snooze?" appears in the display. If you press (a) / (f), the alarm will repeat 5 more times at 5 minutes intervals until

NOTE The alarm goes off at the time you set even if the phone is off.

Sound recorder



Recording new sound

From Sound recorder menu

- (•) / (□) to start recording
- / (a) to stop recording (The max. recording time is 15) seconds)
- 3 🔳
- 4 🕲 Save 💿 / 🖘

If you select **Send MMS**, you can access the MMS menu.

To play a sound:


after step 2

To adjust the volume,

NOTE When you finish recording and finding that My Stuff is full, the recorded sound can be saved if you make space by deleting files (pictures, sounds and text templates). Press () to delete unwanted files.

Calculator

Calculator

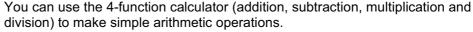



From Calculator menu

- 1 Enter a number (max. 10 digits) and it will be displayed If a decimal point is required, press (
- 2 To select arithmetic operation
 - (to multiply, to add, to divide, to subtract)
- 3 Enter a number (max. 10 digits) and it will be displayed
- 4 (to calculate





Applications



Infrared



If you try to send data that cannot be forwarded or saved, an error message will be displayed.

Infrared

By using the infrared connection with another X200 or with other devices with an infrared port, you can transfer data between the devices.

Preparing for infrared connection

- ➤ Place the X200 and another device with an infrared port within the effective infrared connection range of each other.
- There must be no obstruction between the two communicating devices.
- The infrared ports of both devices must point at each other.
- ➤ If you use a PC, you need to set up an infrared connection on the PC.
 (Example: Start > Settings > Control Panel > Infrared > Options tab > Enable Infrared Communication)

Sending data

The types of data you can send are: Contacts, Pictures and Sounds in My Stuff. Ensure that the infrared ports of your X200 and the second phone or device are pointing at each other with no obstructions in between.

Some downloaded files may be protected under copyright laws. These files should not be sent.

Setting infrared

You need to activate infrared before receiving data.

From Infrared menu



Sending pictures and sounds

From Idle display

- 1 🕑
- 2 **My Stuff 1** / **1**
- 3 Pictures or Sounds / •
- 4 (required item () / ()
- 5 (select data to send ()
- 6 Send by infrared / ©



Applications





Sending Contacts

From Idle display

- 1 (•)
- 2 **Ontacts** 2 / **D**
- 3 🗘 Contacts list 💿 / 🗊
- 4 🔘 select contact to send 🗖
- 5 🐧 Send by infrared 💿 / 🖘



Receiving data via infrared port

You need to activate infrared before receiving data.

Data received message is displayed then sent data is displayed.

/ (to save the data

or



Calendar

Viewing calendar

From Calendar menu



will display recent and future calendars


The following options are available by pressing lacktriangle. required option lacktriangle / lacktriangle

🗘 re



Option	Explanation
Go to date	Jump to the required date
Week starts on	Select which day the week starts on

My Stuff Menu Structure

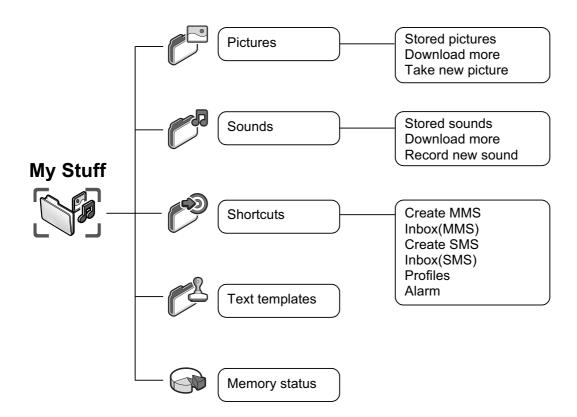

My Stuff



The data saved in the X200 is located in My Stuff. There are four pre-defined folders (Pictures, Sounds, Shortcuts, Text templates). The maximum capacity of the Data Folders is approx. 1 MB.



Pictures



Pictures (My Stuff > Pictures)

Pictures taken by the camera or images downloaded from the Internet can be managed.

Viewing picture / image

- From Pictures menu
 - 1 🕲 Stored pictures 💿 / 🗊

Downloading picture / image file

- From Pictures menu
 - 1 🗘 Download more 💿 / 🖃
 - 2 The picture / image file download site will be displayed

Taking a picture


- From Pictures menu
 - 1 🐧 Take new picture 💿 / 🗊
 - 2 The phone switches to the camera mode (see page 37)

Picture options

When the picture is selected, the following options are available by pressing .

required option	\odot	/ 🗖

Option	Explanation
Send MMS	Attach pictures to MMS messages (see "MMS")
Send by infrared	Send pictures to another device by infrared
As wallpaper	Use pictures as Wallpaper
Add to contacts	Add pictures to contact
Rename	Rename picture files
Delete	Delete picture files
Properties	Show file name, size, date and forward lock status

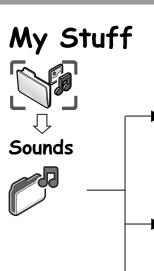

Sounds (My Stuff > Sounds)

Downloaded sounds and Recorded sounds are stored in Stored sounds.

Checking sounds

From Sounds menu

- 1 🐧 Stored sounds 💿 / 🗊
- 2 prequired sound 1

Downloading sounds

From Sounds menu

- 2 The sound file download site is displayed

 
Recording new sound

From Sounds menu

- 1 🐧 Record new sound 💿 / 🗊
- 2 The phone switches to Sound recorder mode (see page 74)

Options in sound file (Stored sounds)

When a sound is selected, the following options are available by pressing (\Box) .





Option	Explanation
Send MMS	Attach sound files to MMS messages (see "MMS")
Send by infrared	Send sound files to another device by infrared
Set alert tone	Set sound files to Incoming tone, Message tone and Group tone (AMR files cannot be set to alert tones.)
Rename	Rename sound files
Delete	Delete sound files
Properties	Show file name, size, date and forward lock status

My Stuff



Shortcuts




Shortcuts

You can create shortcuts you want to use in My Stuff.

Viewing shortcuts

From Shortcuts menu

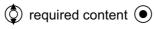

The following options are available by pressing .

required option • / •

Option	Explanation
Edit	Overwrite the present shortcut with a new one
Move	Move shortcut to another place in the list
Add	Store new shortcut
Delete	Delete shortcut

Access to shortcuts:

From Idle display

1 (

2 (required shortcut •

Text templates

Text templates

You can use templates stored in the phone when creating a text message. You can also save frequently used text as templates.

Editing the Text templates

From Text templates menu

required template

 
(The display will turn to editing display)

The following options are available by pressing ().

required option

/

/



Option	Explanation				
New	Add words to new template				
Send message	end template to MMS or SMS				
Edit	Edit template				
Delete	Delete template				
Properties	Show size and date				

My Stuff



Memory status



Memory status

You can see how much data is stored in the individual folders in My Stuff.

The memory in "My Stuff" is separate from the MMS storage and Java™ storage.

Personal WAP/MMS Settings

Use the table below to record your GSM/GPRS WAP/MMS settings.

Itam	Provisioning information setting					
Item	No.1	No.2	No.3	No.4	No.5	
Profile name						
Homepage						
Gateway						
Port (Non secure / Secure)						
Data connections						
CSD						
Profile name						
Account						
Password						
Call type						
Phone number						
Idle timer						
GPRS						
Profile name						
Account						
Password						
Apn name						
Auth type Normal / Secured / None (PAP) (CHAP)						
Message server						

ltem _	Provisioning information setting						
item	No.6	No.7	No.8	No.9	No.10		
Profile name							
Homepage							
Gateway							
Port (Non secure / Secure)							
Data connections							
CSD							
Profile name							
Account							
Password							
Call type							
Phone number							
Idle timer							
GPRS							
Profile name							
Account							
Password							
Apn name							
Auth type Normal / Secured / None (PAP) (CHAP)							
Management							
Message server							

Troubleshooting

Should any problem persist, contact your dealer.

Problem	Cause	Remedy
Phone will not switch on.		Check that the battery is fully charged and correctly connected to the phone.
Extremely short battery life for a new battery.	The network you are using and the condition of the battery can affect battery life.	
Short battery life for an old battery.	The battery has worn out.	Replace with a new fully charged battery.
The charging indicator does not light, the battery level indicator does not appear and the phone cannot be switched on when charging.	The battery is not attached to the phone or, when the battery has been deeply discharged, the phone will take a short time until the indicator lights.	Leave the phone charging the battery for a few minutes before the indicator lights and you attempt to switch the phone on.
Battery fails to charge.	The battery is not attached to the phone.	Ensure the battery is fitted to the phone prior to commencing charging.
	Battery was attached to the phone after the Fast Travel Charger was connected.	
Calls cannot be made.	Keyguard is on.	Disable Keyguard.
	Outgoing calls are barred.	Disable outgoing call barring or barred dialling.
	The phone is not registered on a network.	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be made from Fixed dial store.		Check whether your SIM supports Fixed dial. Check if Fixed dial is switched on. Check whether the phone number is stored in Fixed dial.
Calls cannot be received.	The phone is not switched on.	Switch the phone on.
	Incoming calls are barred.	Disable incoming call barring.
	The phone is not registered on a network.	Move to a coverage area and operate your phone after it has registered with a network.
Emergency calls cannot be made.	You are not in a GSM coverage area.	Check that the antenna symbol (T) is displayed – move to a coverage area and operate your phone when the antenna symbol is displayed.

Important error messages

These are some of the most important error messages which may be displayed:

Failed!	Roaming in the selected area is not allowed.
	Roaming with the selected network is not allowed.
	The network has detected an authentication failure because your SIM is not registered with that network – contact Vodafone.
SIM blocked!	The SIM is blocked because the PIN unblocking key (PUK) has been entered incorrectly ten times – contact Vodafone.
Insert SIM	The phone has detected a problem with the SIM – switch the phone off and then back on; if the message is still displayed contact Vodafone.
Invalid SIM	The SIM has failed one or more of the SIM personalisation checks – contact Vodafone.
Function unavailable!	The selected feature is either not supported by the SIM or is not available with the current subscription – contact Vodafone.
PIN2 invalidated!	The PIN2 is blocked permanently because the wrong PUK2 has been entered ten times, services controlled by PIN2 cannot be used – contact Vodafone.
Storage full Message rejected! or SIM message storage full Message rejected!	A message has been received but the message store is full – to receive messages, delete some of the currently stored messages.
Too many characters!	The edited or newly created contact number is too long for the SIM.
This message may not be stored	The message area is full. Your messages cannot be stored until some of the currently stored messages are deleted.
Verification failure!	On changing the PIN/PIN2, verification of the new code is incorrect – retry changing the PIN/PIN2 with correct verification.
Auto redial list full!	Redial list of unsuccessfully dialled numbers is full – switch the phone off and then on again.

Glossary of Terms

Apn	Access Point Name. Directs the user to the gateway or the required service.
CHAP	Challenge Handshake Authentication Protocol. A security feature in the GPRS network.
Сору	Copies selected text from a short text message without removing it from the original message.
CSD	Circuit Switched Data. A communication method used to transmit data over telephone connections.
Cut	Permanently removes selected text from a short text message.
DTMF Tones	Dual Tone Multi-Frequency tones allow you to communicate with computerised phone systems, voice mailboxes, etc.
GPRS	General Packet Radio Service. A GSM transmission technique that transmits and receives data in packets rather than setting up a continuous channel. It makes very efficient use of available radio spectrum and users pay only for volume of data sent and received.
GSM	Global System for Mobile communications. The name given to the advanced digital technology that your phone uses.
MMS	Multimedia Messaging Service. An advanced mail system used for cellular phones. This service allows sending/receiving text messages and attaching pictures, animation and sound to the same.
Network Operator	The organisation responsible for operating a GSM network.
PAP	Password Authentication Protocol. A security feature in the GPRS network.
Password	Used for the control of GPRS/CSD settings in Data connections and the control of Call barring. Supplied by Vodafone.
PIN	Personal Identification Number used for SIM security. Supplied by Vodafone. If the PIN is entered incorrectly 3 times, the PIN will be blocked.
PIN2	Personal Identification Number used for the control of Fixed dial store and Call charge metering. Supplied by Vodafone. If the PIN2 is entered incorrectly 3 times, the PIN2 will be blocked.
PUK/PUK2	PIN/PIN2 Unblocking Key. Used to unblock the PIN/PIN2 code. Supplied by Vodafone. If the PUK/PUK2 is entered incorrectly 10 times, the PUK/PUK2 will be blocked.
Registration	The act of logging on to a GSM network. This is usually performed automatically by your phone.
Roaming	The ability to use your phone on networks other than your home network.
Service Provider	The organisation responsible for providing access to the GSM network.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user- entered information such as Contacts entries and short messages. Supplied by Vodafone.
SMS	Short Message Service. A basic mail system used for cellular phones. This service allows sending/receiving of short text messages.
URL	Uniform Resource Locator. The URL is an alphanumeric address that points to homepages and other Internet locations.
WAP	Wireless Application Protocol. The communication standard which enables you to download resources from the Internet to your phone.

Specifications

NOTE Talk and Standby times depend on network conditions, SIM usage and battery condition.

Temperature Range

 Charging
 +5 °C - +35 °C

 Storage
 -20 °C - +60 °C

 Volume
 Approx. 60 cc

 Weight
 Approx. 79 g

 Dimensions
 104 mm (Antenna excluded)

 Width
 45 mm

 Depth
 12.9 mm

 Supply Voltage
 3.7 V (600 mAh Li-ion)

 Antenna
 External

 Charge Time
 Up to 120 min.

NOTE Charging time depends on usage and battery condition.

When switching the phone off, use only (6) to avoid damaging the phone.

CP8 Patent

© Panasonic Mobile Communications Co., Ltd. 2004

Information in this document is subject to change without notice. No part of these instructions may be reproduced or transmitted in any form or by any means without obtaining express permission from Panasonic Mobile Communications Co., Ltd.

JavaTM

Java™ and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



€0168

$Jbed^{TM}ME$

Jbed (Java™ VM) is the registered trademark of esmertec, Inc.

esmertec

T9® Text Input

T9® is a trademark of Tegic Communications Inc.T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro. Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Teleca Application

WAP: Browser RA 2.1 MMS: MMS RA 1.3

JAM (under KVM Statement): JAM RA 1.2



V-enablerTM

V-enabler (VSCL) is the trademark of eValley, Inc.



End-user Software License Agreement

By use of this Panasonic cellular phone, including any embedded software features or programs ("Embedded Software"), you agree to the terms and conditions of this End-User Software License Agreement ("EULA").

- 1. END-USER RIGHTS: You are granted a limited end-user right to use the Embedded Software only as part of and together with this Panasonic cellular phone. You agree to use the Embedded Software in a manner that complies with all applicable laws, including laws related to copyright and other intellectual property rights. All other uses are prohibited.
- 2. LIMITATIONS ON END-USER RIGHTS:
- (a) You may not reproduce, copy, or transfer the Embedded Software to any other device;
- (b) You may not create derivative works of any type based on the Embedded Software (unless and except as expressly permitted as part of a feature application);
- (c) You may not reverse engineer, reverse compile, disassemble, or otherwise attempt to discover the source code of the Embedded Software;
- (d) You may not transfer this Panasonic cellular phone other than to a transferee end-user who undertakes to observe the same obligations as those set out in this EULA;
- (e) You may not remove any proprietary notices, such as copyright, trademark, or otherwise, from the Embedded Software.
- 3. INTELLECTUAL PROPERTY RIGHTS: The Embedded Software is protected by copyright, trademark, patent and/or other intellectual property rights and is owned by Panasonic Mobile Communications Co., Ltd. ("PMC") and/or is under license from PMC's licensors.
- 4. TERMINATION: Your right to use the Embedded Software may be terminated for failure to comply with any of the terms of this EULA.
- 5. LIMITATION OF LIABILITY/DISCLAIMER OF WARRANTIES: TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL PMC, ITS AFFILIATES, AND THEIR LICENSORS BE LIABLE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE EMBEDDED SOFTWARE. EXCEPT AS EXPRESSLY STATED IN THE RELEVANT WARRANTY CARD, PMC, ITS AFFILIATES, AND THEIR LICENSORS DISCLAIM ALL WARRANTIES, EXPRESS AND IMPLIED, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE REMEDIES PROVIDED TO THE END-USER IN THE RELEVANT WARRANTY CARD ARE EXCLUSIVE.
- 6. ADDITIONAL THIRD PARTY TERMS: The Embedded Software may contain third party software subject to separate third party license terms and conditions set forth in the user manual or associated product documentation and/or displayed on the LCD of this Panasonic cellular phone. You acknowledge and agree that such third party software is governed by the third party license terms, as applicable, and that such terms are solely between you and the applicable licensor.
- 7. EXPORT REGULATIONS/RESTRICTED RIGHTS: The Embedded Software is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. You agree to comply strictly with all such regulations. You confirm that with respect to the Embedded Software, you will not export or re-export it, directly or indirectly, to any countries that are subject to U.S. export restrictions. Use, duplication or disclosure by the U.S. government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c)(1)(ii) and FAR 52.227-19(c)(2) as applicable.

Index

Α			Contacts	
	Add contact56		Contacts dialling	13
	Advanced61		Contacts list	
	Alarm73		Copy from SIM	
	Alert mute8		Create new	
	Any key answer 14, 35		MMS	42
	Applications		SMS	48
	Archive	D		
	MMS 46		Data connections	28
	SMS50		Desktop Handsfree	
В			Display	
_	Backlight time27		Display (Settings)	27
	Battery		Main display	
	Attaching5		Status icons	
	Battery level indicator 6		Display language	
	Charging6		Download more	
	Low battery power warning6		DTMF tones	
	Removing5	Е	DTWI TOTICS	
	Brightness	_	Earpiece volume	16
	Browser options		Emergency call	
	Advanced - Clear cache 68		Error messages	
	Advanced - Clear cache	F	Lifoi illessages	
	Advanced - Nome	Г	Fast Travel Charger	6
	Advanced - View address		Fixed dial	
	Bookmarks		Fun & Games	
		G	Full & Gailles	/ ۱
	Enter address	G	Camaa 9 mara	74
	Reload page		Games & more	
	Save image67		Group settings	62
	Service Inbox		GSM network	28
	Set as bookmark67	ı		4.0
	Settings - Push access		lcons	
	Settings - Security		Illumination light	5
_	Settings - WAP profiles69		Inbox	
С			MMS	
	Calculator74		SMS	
	Calendar 77		In-call options	
	Call		Incoming call while on a call	
	Answering calls14		Incoming tone	23, 25
	Ending/rejecting calls14		Incoming volume	
	Making a second call17		Infrared	
	Making calls13		Input language	
	Call barring34		Input mode	
	Call diverts30		International dialling	14
	Call duration32	K		
	Call log 19, 58		Key backlight	
	Call waiting 31		Key tone	24, 25
	Calls (Settings)		Key volume	24, 26
	Camera37		Keyguard	
	Cell Broadcast53		Keys	
	Change PIN 33	L	•	•
	Change PIN2 33		Language	28
	Colour theme		Live! Studio	51

Index

M		
	Memory status	
	Contacts	62
	Messages	53
	My Stuff	82
	Menu	
	Displaying menu	
	Main menu	
	Menu option	
	Message tone2	
	Message volume2	
	Messages	
	MMS (Multimedia Messaging Service)	
	Multi-party call	
	My numbers	61
	My Stuff	79
N		
	Network setting	
	New search	28
Р		
	Pause dial	16
	Phone ON/OFF	
	Pictures (My Stuff)	
	PIN entry	
	Profiles	23
Q		
_	Quiet mode	15
R		
_	Recent number dialling	13
S		
	Safety considerations	
	SDN (Service Dialling Number)	
	Search mode	
	Security	33
	SecuritySelect network	33 28
	SecuritySelect networkSelf-portrait	33 28 38
	SecuritySelect networkSelf-portraitSend my number	33 28 38 32
	Security	33 28 38 32
	Security	33 28 38 32 32 62
	Security	33 28 38 32 32 62
	Security	33 28 38 32 32 62 71
	Security	33 28 38 32 32 62 71
	Security	33 28 38 32 32 62 71 47
	Security	33 28 38 32 62 71 47 51 23
	Security	33 28 38 32 62 71 47 51 23
	Security	33 28 38 32 62 71 47 51 23 39
	Security	333832326271512339
	Security	333832326271512339
	Security	3338323262715139399
	Security Select network Self-portrait Send my number Service charge Service numbers Settings (Fun & Games) Settings (Messages) MMS Settings (Others) Shift mode Shortcuts Keypad My Stuff SIM Inserting	332832326271475123399
	Security Select network Self-portrait Send my number Service charge Service numbers Settings (Fun & Games). Settings (Messages). MMS Settings (Others) Shift mode Shortcuts Keypad My Stuff SIM Inserting Removing	33383232627151393931
	Security Select network Self-portrait Send my number Service charge Service numbers Settings (Fun & Games) Settings (Messages) MMS Settings (Others) Shift mode Shortcuts Keypad My Stuff SIM Inserting	333232627147513939971

	SMS (Short Message Service)	48
	Snooze Function	74
	Sound (Settings)	
	Sound recorder	
	Sounds (My Stuff)	
	Speed dial	
	Speed Dial list	
	Standard dialling	
	STK (SIM Tool Kit)	
т	31K (31W 1001 Kit)	13
ı	TO®	40
	T9 [®]	
	Text entry	
	Text input	
	Text templates	
	Time and date	
	Tone setting	25
V		
	Vibration alert	24, 26
	View groups	60
	Vodafone live!	
	Vodafone Mail	
	Vodafone Messenger	
w	voudione mosseriger	
••	Wallpaper	27
	Warning tone	
	waitiling tolic	24, 20

The Serial Number can be found on the outside of the phone under the battery. For your convenience we recommend that you note the following details as a record of your purchase.	
Part Number	
Serial Number	
Dealer Name	
Purchase Date	

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com