# **DMR-EZ47 Firmware Installation Instructions**

## **Table of Contents**

	Table of Contents	1
1	Firmware History	2
	1.1 Applicable Models	2
	1.2 Purpose	2
2	Download Firmware	3
3	Burn Firmware	4
	3.1 Windows® OS CD Writing Program	4
	3.2 Other OS CD Writing Program	5
	3.3 3 <sup>rd</sup> Party CD Burning Software	5
	3.4 Dragging & Dropping	6
4	Install Firmware	7

## DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 1 of 8

## **1** Firmware History

## 1.1 Applicable Models

DMR-EZ47, DMR-EZ475 Includes models with suffix K, S, V, VK, VP, or VS

## 1.2 Purpose

## UJ-225

- Improved playback DVD+R media which was recorded by SONY DVD Recorder.
- Optimization of track jump control for CD-RW.
- Improvement of recording quality for DVD-R DL.

## UJ-217

- Enhances Closed Captioning display.
- Enables the unit to the download the New V-Chip/Regional Rating Table (RRT).

### UJ-205

• Modification to improve VHS Timer Recording.

### UJ-201

- ATSC level meter indication improvement with weak signal.
- Stops disc rotation when the [EJECT] button is pressed.

## UJ-196

- Countermeasure for occurred aging mode by remote control signal.
- Protection against Drive unit fuse blowing due to customer Disc condition.
- Improved HDMI function. (Depends on TV)
- Upgrade program for next generation drive.

## UJ-190

- When recording program of 5.1 channel audio, the center channel audio is not output.
- The title information of the recorded program is not displayed correctly.

#### UJ-184

- Hang-up sometimes occurs using JPEG of RAM disc on "Direct Navigator".
- "Copying has been stopped" message is displayed on the "Status" screen.
- "oooooo" is indicated continuously on power off after malfunction occurs.
- DVD-Video is played back on indication of "oooooo" after power off using EZ-Sync.

## 2 Download Firmware

1) Left click on the **DOWNLOAD** icon for the DMR-EZ47 Firmware.

## - DMR-EZ47, DMR-EZ475 DVD Recorder Firmware

V DOWNLOAD

2) Left click on **SAVE**.

F	ile Download - Security Warning 🛛 🔀 Do you want to run or save this file?	
	Name: Type: From:	The file name displayed she <b>PANA_DVD.FRM</b> .
	Run     Save     Cancel       While files from the Internet can be useful, this file type can potensially harm your computer. If you do not trust the source, do not nun or save this indhread what's the risk?     Item is a source what is the risk?	

3) Left click on **DESKTOP**, and then left click on **SAVE**.

				Contraction of the local distance	120
Save in:	Desktop		2	000	<b>.</b> .
My Recent Documents Desktop	Hy Document Hy Computer Hy Network	és F Places			
My Documents					
My Computer	Deserve			~	Save
	Case complet.				

NOTE: The PANA\_DVD.FRM file will be placed on the DESKTOP.

DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 3 of 8

## 3 Burn Firmware

Use one of the below procedures to burn firmware to a CD-R disc.

## 3.1 Windows® OS CD Writing Program

- 1) Insert a blank CD-R disc into a CD Burner Drive installed in or attached to the computer.
- 2) If the below (or similar) screen appears (Windows XP), left click on CANCEL.



3) Right click on the **PANA\_DVD.FRM** file on the **DESKTOP**, mouse over **SEND TO**, and then left click on the **CD BURNER DRIVE**.



4) If the below screen appears, left click on YES.



#### NOTE: The below screen may appear momentarily.



DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 4 of 8 5) Lift click on the **YOU HAVE FILES WAITING TO BE WRITTEN TO THE CD** icon in the **SYSTEM TRAY**.

You have files waiting to be written to the CD.
To see the files now, click this balloon.

6) Left click on WRITE THESE FILES TO CD.



7) Type a name for the CD, check the **CLOSE THE WIZARD AFTER THE FILES HAVE BEEN WRITTEN** check box, and then left click on **NEXT**.

& CD Writing Wizard	8
A	Welcome to the CD Writing Wizard
	This wizard helps you write, or record, your files to a CD recording drive.
	Type the name you want to give to this CD, or just click Next to use the name below.
	CD name:
	New files being written to the CD will replace any files already on the CD if they have the same name.
	Gose the wizard after the files have been written
	< Back Next > Cancel

NOTE:	The below	/ screen will	appear	during	the	burning process	s.
-------	-----------	---------------	--------	--------	-----	-----------------	----

CD Writing Wizard		ε
Please wait		G
Preparing the files for the writing pr	rocess	
(**		
	Contraction (199	und b Cancel

8) After the **PANA\_DVD.FRM** file has been burned to the CD, the disc should automatically eject from the CD Burner Drive. If it doesn't, manually eject the disc.

#### 3.2 Other OS CD Writing Program

Refer to the computer's owner's manual or **HELP** files for instructions on how to copy the **PANA\_DVD.FRM** to a CD-R using the ISO-9660 format.

### 3.3 3<sup>rd</sup> Party CD Burning Software

Refer to the software application's owner's manual or **HELP** files for instructions on how to copy the **PANA\_DVD.FRM** to a CD-R using the ISO-9660 format.

### DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 5 of 8

## 3.4 Dragging & Dropping

If an icon for the CD Burner Drive has been placed on the **DESKTOP**, left click on the firmware file, hold the left mouse button down, drag the file to the CD Burner Drive icon and release the left mouse button.



If using the Windows XP operating system, use procedure from **STEP 5** of **SECTION 3.1** on **PAGE 5 of 8**.

## DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 6 of 8

## 4 Install Firmware

CAUTION: Do not turn the DVD Recorder OFF or press any buttons on the DVD Recorder while the firmware update is in progress.

- 1) Power the DVD Recorder on.
- 2) Press the [OPEN/CLOSE] button to OPEN the disc tray.
- 3) Place the CD-R with the firmware update into the disc tray with the label side facing up.
- 4) Press the [OPEN/CLOSE] button to CLOSE the disc tray.

NOTE: If the firmware version in the unit is the same or higher than the firmware CD, UNSUPPORT may be displayed on the front panel. In this case, an update is unnecessary. Please remove the disc.



NOTE: If the firmware update will be installed, **BYE** will display on the front panel, the DVD Recorder will power off, and then power back on.



NOTES:

- Several messages will be displayed on the front panel during the firmware update.
- When the firmware update is complete, the disc tray will automatically OPEN.



- 5) Remove the CD-R with the firmware update from the disc tray.
- 6) Without closing the disc tray, press the **[POWER]** button on the DVD Recorder to power the unit off. The disc tray will **CLOSE** automatically, display **BYE**, and then power off.
- 7) Unplug the power cord for at least 30 seconds, and then plug the power cord back in.
- 8) Press the **[POWER]** button on the DVD Recorder to power the unit on. (The unit will display **HELLO** and then begin the **FIRST TIME SETUP**.)

NOTE: If the unit does not begin the FIRST TIME SETUP automatically, it is recommended to initiate the FIRST TIME SETUP.

- Tune the DVD Recorder to a channel.
- Simultaneously press the [CHANNEL UP] and [CHANNEL DOWN] buttons on the front of the DVD Recorder for approximately 10 – 15 seconds (until the unit powers off).

DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 7 of 8

- When the DVD Recorder is powered back on, the **FIRST TIME SETUP** screen should be displayed.
- 9) Follow the on-screen prompts to complete the **FIRST TIME SETUP**.

## DMR-EZ47 DVD Recorder Firmware Installation Instructions Page 8 of 8

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com