


Facsimile

# Quick Reference Guide

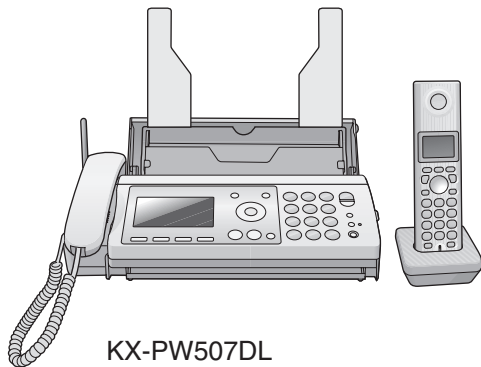

KX-PW507DL

Model No. **KX-PW507DL**  
**KX-PW507DW**

Main unit: KX-PW507  
Portable handset: KX-FKN515

Thank you for purchasing a Panasonic facsimile.

## Table of Contents


Finding the controls .....	2
Installations and connections .....	4
Setting the date and time.....	7
Setting your facsimile telephone number .....	7
Setting your logo .....	8
Character input and command key table .....	9
Voice guide.....	10
Automatic dialing on the main unit .....	11
Automatic dialing on the portable handset (KX-FKN515) .....	13
Intercom .....	14
Sending faxes .....	15
Receiving faxes .....	16
Operating the built-in answering device .....	17
Night mode.....	18
Call block .....	19
Specifications .....	Back cover

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.  
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

**This unit is equipped with the voice guide features. (Japanese only)**  
**For details about voice guide, please see page 10.**

# Finding the controls

## Main unit

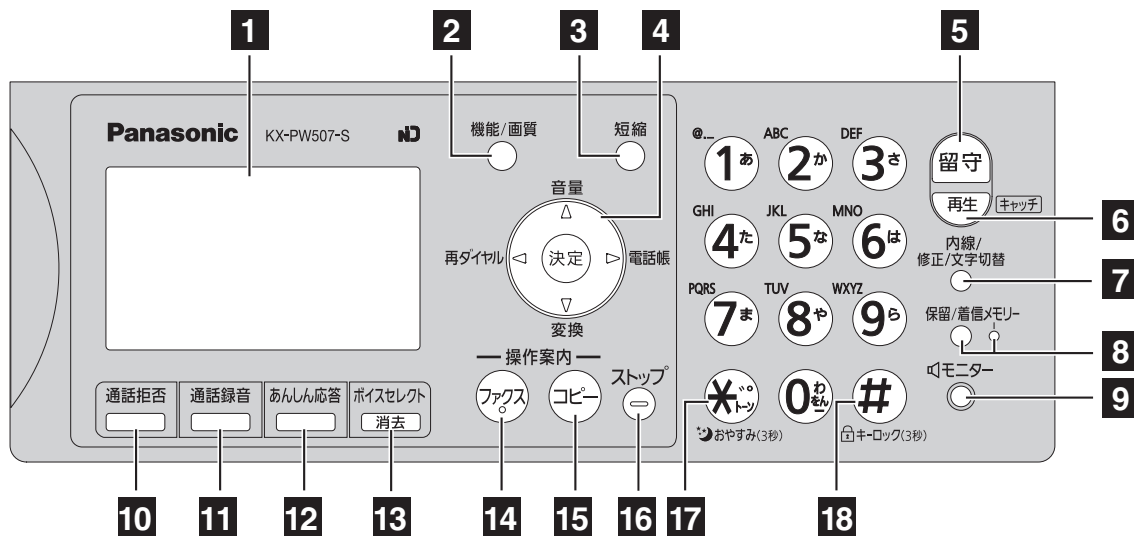

### 1 Liquid crystal display

**2 Function** button initiates programming.  
**Resolution** button selects the resolution when faxing or copying.

### 3 Speed Dialer button

### 4 Volume/Change/Redial/Phonebook key



- To adjust the volume.
- To change Hiragana into Kanji.



To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.



To use the phonebook.



To store a parameter.

### 5 Auto Answer button & indicator

- light on: answering device activated.
- light off: used as a regular telephone.

**6 Playback** button plays back recorded messages.

**Flash** button (For call waiting service users.)

### 7 Intercom button

**Edit/Character Input Mode** button

### 8 Hold button

**Call Memory** button starts a search in the Number Display (Caller ID) log.

**Call Memory** indicator lights when a call was missed.

(For Number Display service users.)

### 9 Monitor button

### 10 Block

 button for the undesired call

**11 Record** button records a telephone conversation.

### 12 Secure

 button

While the unit is ringing, press this button. The unit announces a message to the caller. The message is announced in Japanese and means “This unit is currently set to Caller Verifying mode. Could you please speak out your name?”.

■ To talk to the caller, lift the handset.

■ To hang up, press .

### 13 Voice select

 button

**Erase** button

### 14 Fax

 button starts faxing.

### 15 Copy

 button starts copying.

### 16 Stop

 button

### 17 Tone

 button switches to tone dialing.

**Night mode** button

### 18 Sharp

 button

**Key lock** button can lock the main unit so that no calls or settings can be made. To turn key lock on, press this button for about 3 seconds until a single beep is heard.

● “” is displayed.

● To turn key lock off, press this button for about 3 seconds.

# Finding the controls

## Portable handset (KX-FKN515)

**Earpiece**

**Liquid crystal display**

**How to use key**

- To use the phonebook.
- To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.
- To adjust the volume.
- To change Hiragana into Kanji.

**外線** ● To make/answer calls.

**切** ● To end a call.

● To end or exit from editing or other operations.

**保留** ● To put a call on hold.

**着信メモリー** ● To start a search in the Number Display log. (For Number Display service users.)

**内線** ● To page the main unit and/or portable handset(s).

**Dial buttons**

- Tone button
- To switch to tone dialing.
- Sharp button
- Key lock button
- To lock the portable handset so that no calls or settings can be made. To turn key lock on, press this button for about 3 seconds until a single beep is heard.
- “” is displayed.
- To turn key lock off, press this button for about 3 seconds.

**How to use buttons**

F1 and F2 buttons refer to the function displayed on the bottom of the display. They function differently depending on the mode.

**ボイスチェンジ** ● To change your voice.

● To mute your voice to the other party by pressing this button for about 2 seconds. (To release the mute, press this button again.)

**キヤッチ 消去** ● For call waiting service users.

● To clear letters/numbers.

**スピーカホン** ● To use the speakerphone.

**Microphone**  
(Do not cover the microphone while talking.)

**How to use the LCD**

① ..... Portable handset number (and name)

 

 



② ..... No link to the main unit

③ ..... Function menu that is controlled by or

④ ..... Battery strength

# Installations and connections

## Installing the ink film

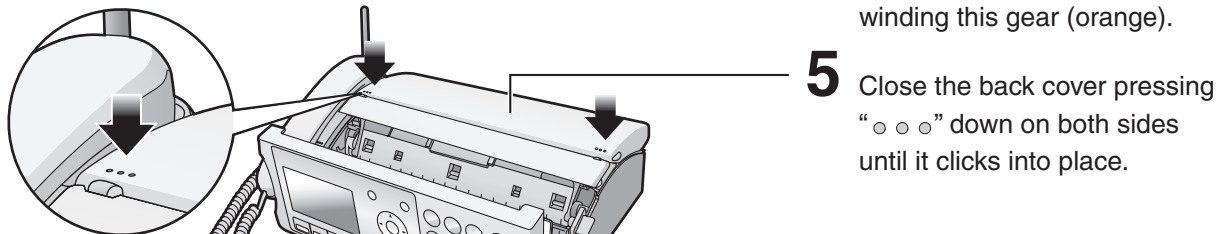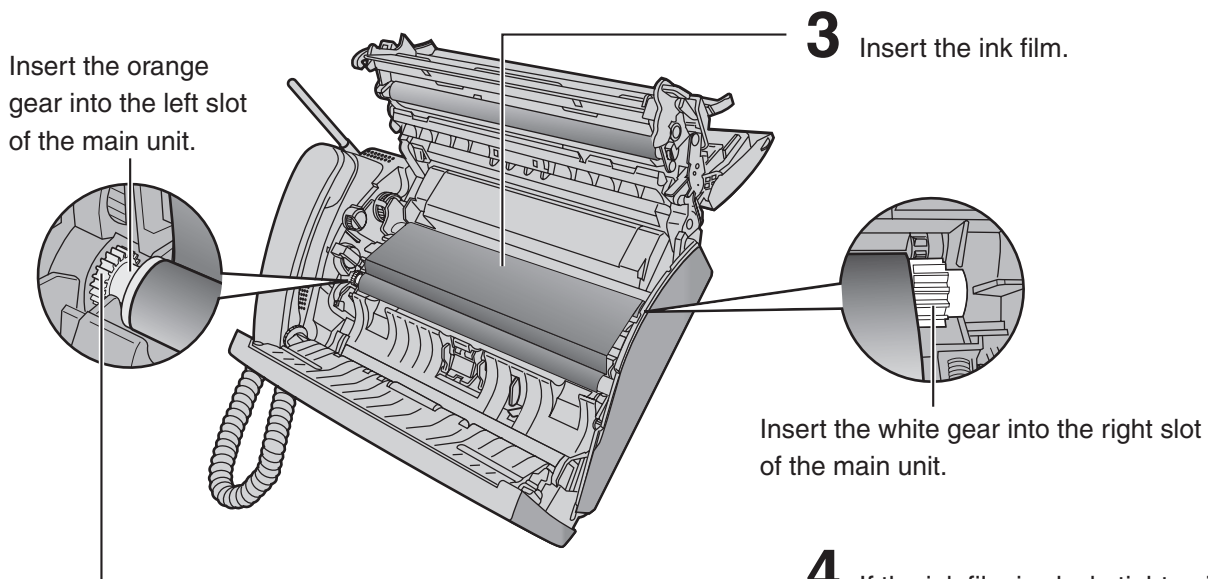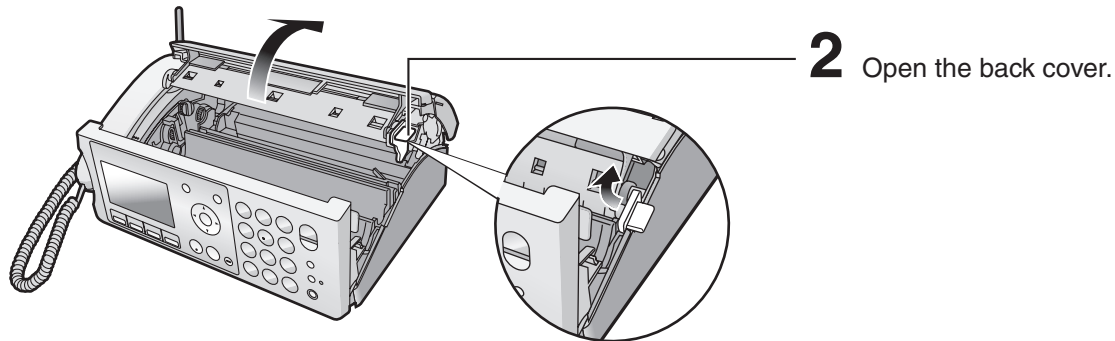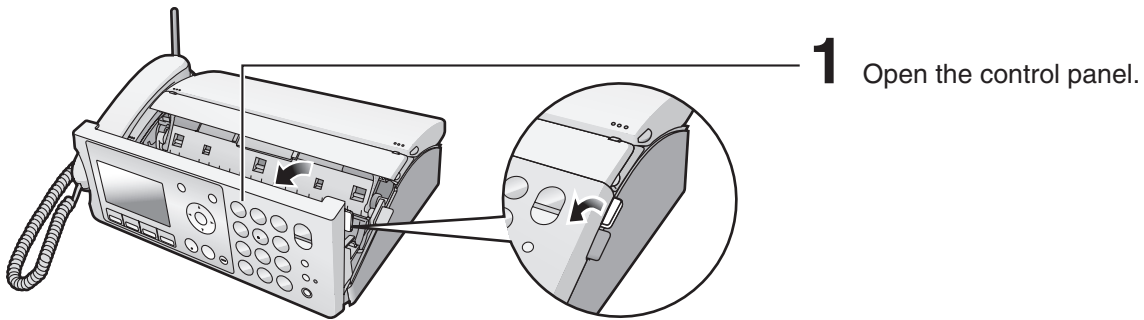

- When the unit runs out of ink film, the following message will be displayed.

フィルムがなくなりましたU23  
交換してください ↔ フィルムがなくなりましたU23  
品番: KX-FAN190


Install a new ink film.

Replacement ink film:	
<b>KX-FAN190</b> (15 m)	¥714
<b>KX-FAN190W</b> (15 m X 2)	¥1,208


· As of September 2007. · Tax included.

# Installations and connections

## Installing recording paper (A4 size)

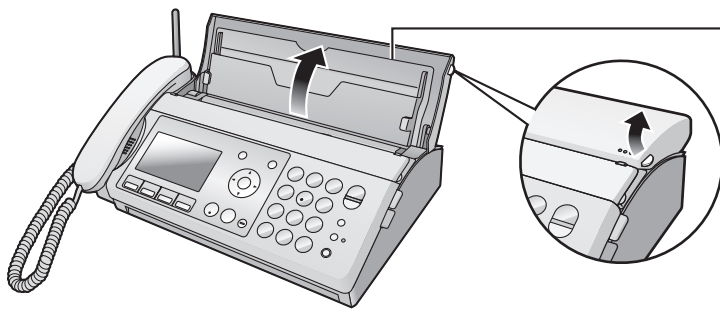


**1** Open the recording paper tray.

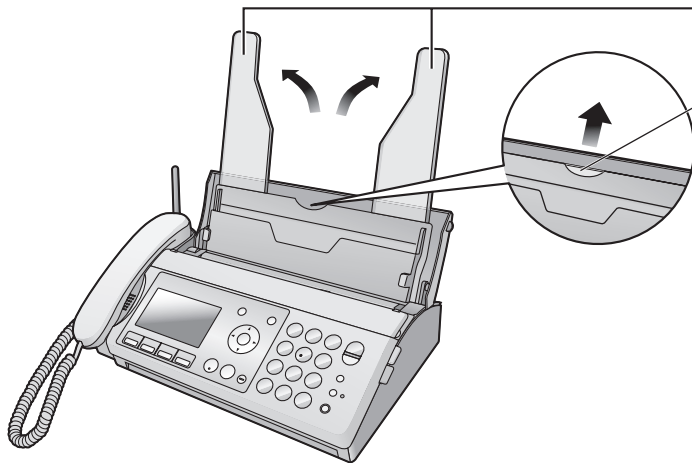


**2** Set up the recording paper stands.

Pull out the front stand first.

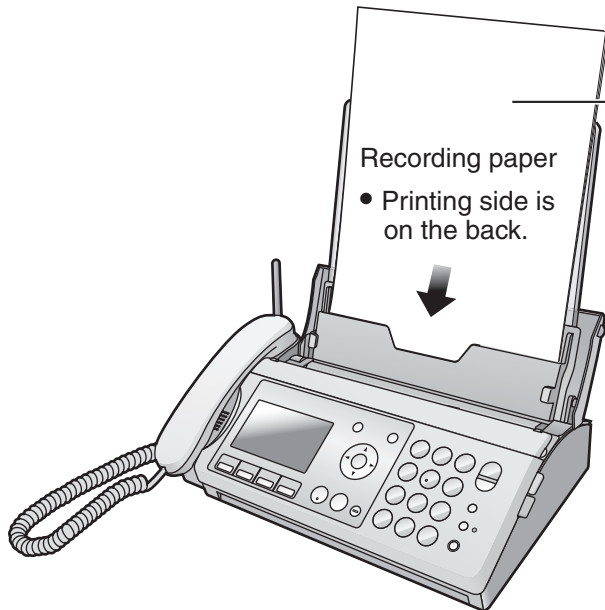

**3** Insert the recording paper into the recording paper tray. (Up to 15 sheets)

- Fan the stack of recording paper.

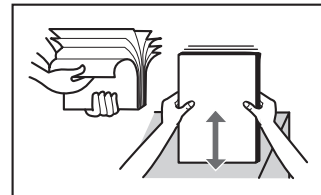

### Folding the recording paper tray

① Remove the recording paper and fold the recording paper stands in.




② Close the recording paper tray.



# Installations and connections

## Connecting the main unit

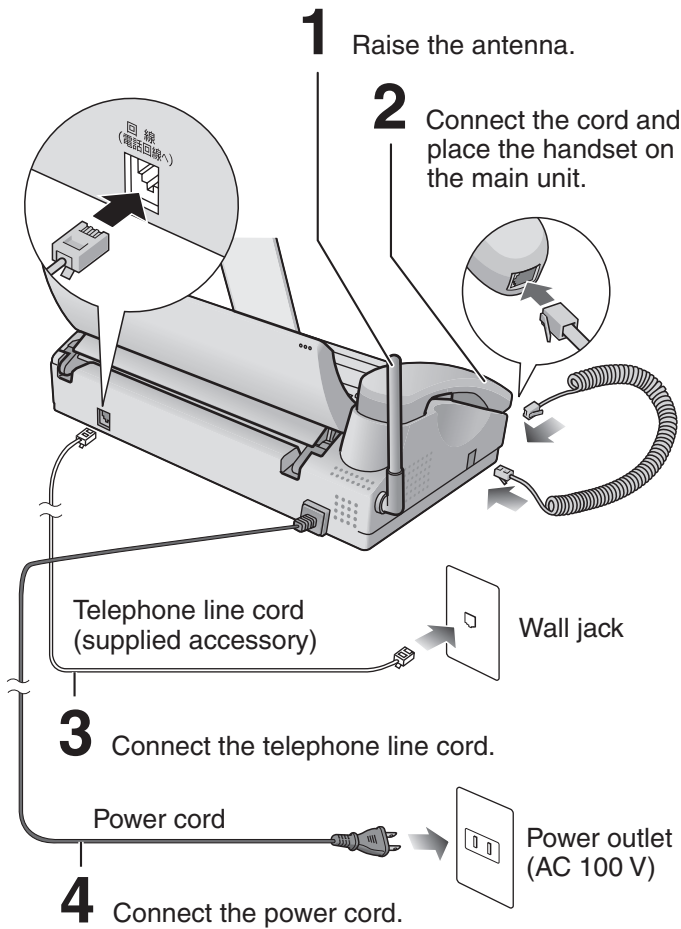

### After the Power On...

- ① This unit will automatically select the dialing mode (Tone/Pulse).
- ② When the following is displayed, press  
ストップ (Stop). ひかり電話利用=なし  
[◀,▶,決定]押す



### If you can not make a call...

Set the dialing mode with the main unit.

1. Press 機能/画質 (Function/Resolution).
2. Press # 0 7 9.
3. Press ◀ ▶ (Search button) repeatedly until the desired setting is selected.


#### Example :

回線種別=自動 [◀,▶,決定]押す	● フッシュ: Tone 20 : Pulse (20 PPS) 10 : Pulse (10 PPS) 自動 : Auto (Default)
-----------------------	---


4. Press 決定 (Set).
5. Press ストップ (Stop).

## Setting up the portable handset (KX-FKN515)


**1**

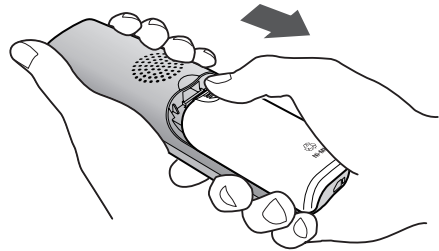

**2**

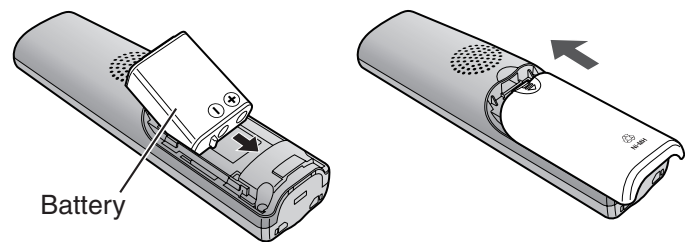


**3**

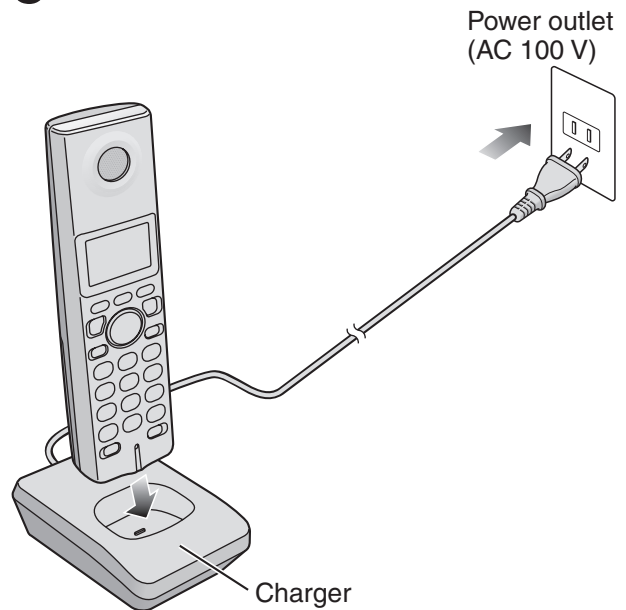

**4** Charge the battery in the charger for 10 hours.

- After your Panasonic battery is fully charged, it will last up to about 5 hours of conversation.

# Setting the date and time

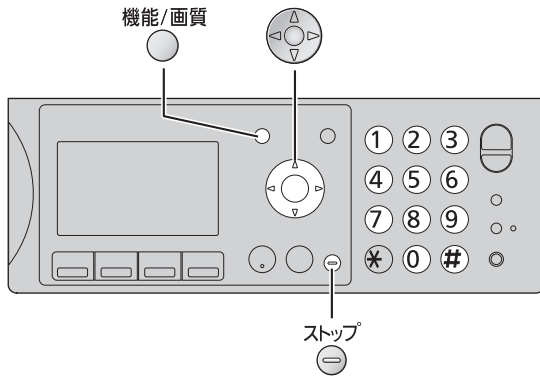

**1** Press **機能/画質** (Function/Resolution).

機能登録モード  
[▼,▲] 押す

**2** Press **# 0 0 1**.

**Example :** 2007年11月30日  
15:00  
Cursor

**3** Enter the correct year/month/day.

**Example: December 1, 2007**

Press **2 0 0 7 1 2 0 1**.

2007年12月01日  
15:00

**4** Enter the correct hour/minute in a 24-hour clock entry.

**Example: 15:45 (3:45 PM)**

Press **1 5 4 5**.

2007年12月01日  
15:45

**5** Press **決定** (Set).


登録しました

↓  
2007年12月01日  
15:45

**6** Press **ストップ** (Stop).

**Example :** 12月1日 15:45  
用件録音 0件

# Setting your facsimile telephone number

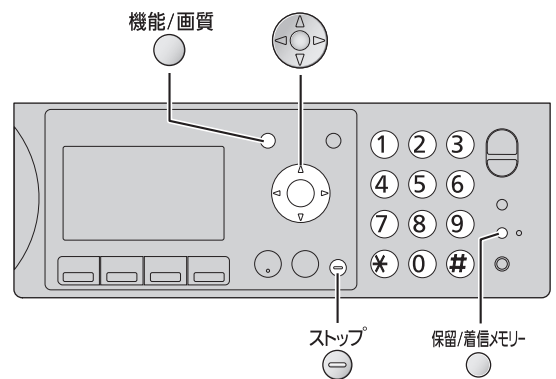

**1** Press **機能/画質** (Function/Resolution).

機能登録モード  
[▼,▲] 押す

**2** Press **# 0 0 4**.

あなたの電話番号?  
.....  
Cursor

**3** Enter your facsimile telephone number, up to 20 digits.

**Example: +098 7654..**

あなたの電話番号?  
+098 7654.....

- The **\* (Tone)** button replaces the digit with "+".
- The **保留/着信メモリー (Hold/Call memory)** button replaces the digit with a space.

**4** Press **決定** (Set).


登録しました

↓  
あなたの電話番号?  
+098 7654.....

**5** Press **ストップ** (Stop).

**Example :** 12月1日 15:45  
用件録音 0件

# Setting your logo

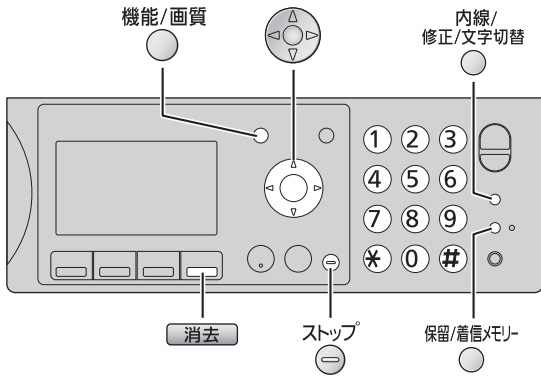

**1** Press (Function/Resolution).

機能登録モード  
[▼,▲] 押す

**2** Press .

名前 (印刷用) ?  
> [かな]

Cursor

**3** Enter your logo, up to 30 characters, using the dial keypad.

- To enter English characters easily, press (Intercom/Edit/Character input mode) repeatedly and select “英” (English and sign input mode).
- For details, see the table on page 9 for instructions.

## Example: Micah

**1.** Press once.

M [英]  
Cursor

**2.** Press six times.

Mi [英]

**3.** Press six times.

Mic [英]

**4.** Press to move the cursor to the next space and press four times.

Mica [英]

**5.** Press five times.

Micah [英]

**4** Press (Set).

登録しました



Micah  
>\_ [かな]

**5** Press (Stop).

Example :

12月 1日 15:45  
用件録音 0 件



# Character input and command key table

Pressing the dial keys will select a character as shown below.

Character		Hiragana	Katakana	English	Numbers
Display of the main unit and the portable handset		[かな]	[カナ]	[英]	[数]
Dial key					
(Main unit) ①	(Portable handset KX-FKN515) ①	あいうえお あいうえお	アイウエオ アイウエオ	@ . _ - & \$ ¥ % + = ~ ^	1
②	②	かきくけこ	カキクケコ	A B C a b c	2
③	③	さしすせそ	サシスセソ	D E F d e f	3
④	④	たちつてとっ	タチツテトツ	G H I g h i	4
⑤	⑤	なにぬねの	ナニヌネノ	J K L j k l	5
⑥	⑥	はひふへほ	ハヒフヘホ	M N O m n o	6
⑦	⑦	まみむめも	マミムメモ	P Q R S p q r s	7
⑧	⑧	やゆよやゆよ	ヤユヨヤユヨ	T U V t u v	8
⑨	⑨	らりるれろ	ラリルレロ	W X Y Z w x y z	9
⑩	⑩	わをんー! ? ( )	ワヲンー! ? ( )	! ? / - * # , ; :   . ' " ( ) [ ] { } < > 「 」	0
✳	✳	” ° 、 °		、 °	
Command keys		内線/ 修正/文字切替 ○ (Main unit), F2 (Portable handset)	Used to change the character input mode.		
		⬅ (Main unit), ⬅ (Portable handset)	Used to move the cursor to the left and right.		
		消去 (Main unit), キャンセル 消去 (Portable handset)	Used to delete a character.		
		保留/着信メモ ○ (Main unit), 保留 (Portable handset)	Used to insert a space.		

- The characters on the display are somewhat different from those shown in the character input and command key table.

# Voice guide

## Operation guide

The unit starts the following voice guidance in Japanese:

Operations	To cancel the operation guide
Send a fax	機能/画質 → # 0 2 1 →  (Select “なし”) →  決定 →  ストップ
Copy	
Add entries to the phonebook	
Store phonebook entries in the speed dialer	機能/画質 → # 1 6 7 →  (Select “なし”) →  決定 →  ストップ
Make a call using the phonebook/redial/ speed dialer/call memory	
Change a ink film	機能/画質 → # 1 7 3 →  (Select “なし”) →  決定 →  ストップ
Print fax documents from the main unit memory	機能/画質 → # 1 7 7 →  (Select “なし”) →  決定 →  ストップ

## Reading-out dial


The unit announces the number dialed in Japanese, when you make a call with the main unit.

### • To cancel the reading-out dial



# Automatic dialing on the main unit

## Storing names and telephone numbers in the phonebook

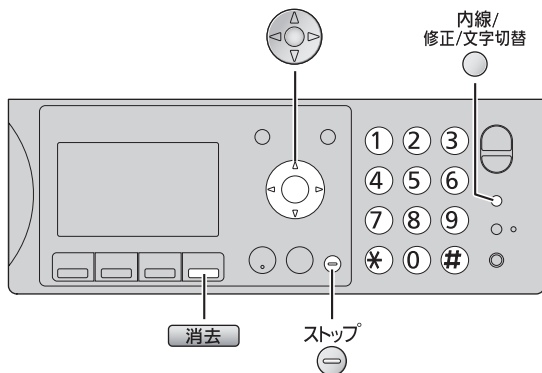

**1** Press 電話帳 (Phonebook).

登録は[決定] 押す  
検索は[▼,▲] 押す

**2** Press 決定 (Set).

- “XXX” shows the remaining station numbers you can store.
- You can program up to 150 stations, including 4 pre-programmed stations.

電話帳空き XXX 件

**3** Enter the name, up to 20 characters (see the table on page 9 for instructions).

**4** Press 決定 (Set) 2 times.

**5** Enter the telephone number, up to 24 digits.  
• To correct a mistake, press 消去 (Erase).

**6** Press 決定 (Set).

**7** Enter the group number (① to ⑨).

**8** Press 決定 (Set).

- To program other items, repeat steps 3 to 8.

**9** Press ストップ (Stop) to exit the program.

## Making a voice call using the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Lift the handset.

## Editing a stored name or number in the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press 内線/修正/文字切替 (Intercom/Edit/Character input mode).

**4** Edit the name (see the table on page 9 for instructions).  
• If you do not need to edit the name, skip to step 5.

**5** Press 決定 (Set).

**6** Edit the kana.  
• If you do not need to edit the kana, skip to step 7.

**7** Press 決定 (Set).

**8** Edit the telephone number.  
• If you do not need to edit the telephone number, skip to step 9.

**9** Press 決定 (Set).

**10** Edit the group number.  
• If you do not need to edit the group number, skip to step 11.


**11** Press 決定 (Set).

**12** Press ストップ (Stop).

# Automatic dialing on the main unit

## Storing names and telephone numbers in the speed dialer

You can store up to 9 names and telephone numbers which are stored in the phonebook. The dialing buttons (① to ⑨) function as memory stations.

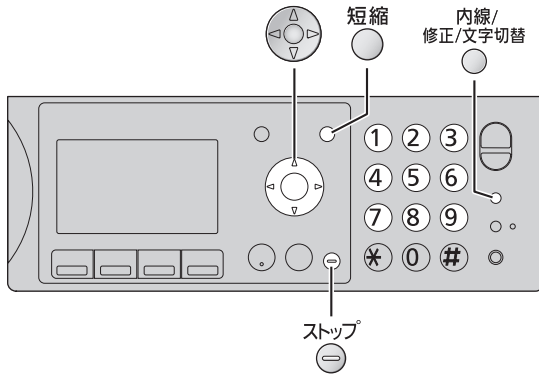

**1** Press (Speed dialer).

**2** Press the memory station number (① to ⑨).

**Example: speed dialer 1**



**3** Press (Intercom/Edit/Character input mode).


**4** Press (Search button) repeatedly until the desired name is displayed.

**5** Press (Set).

• To program other items, repeat steps 2 to 5.

**6** Press (Stop) to exit the program.

## Making a voice call using the speed dialer

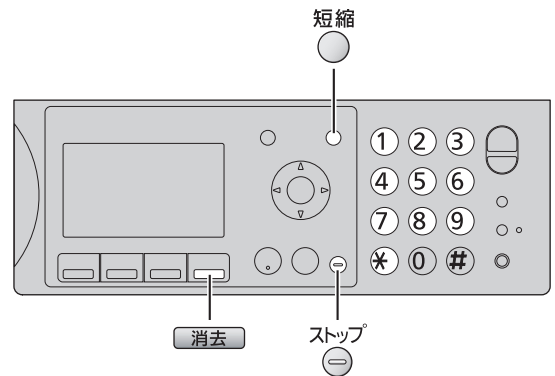

**1** Press (Speed dialer).

**2** Press the memory station number (① to ⑨).

**3** Lift the handset.

## Erasing a stored name and number in the speed dialer

**1** Press (Speed dialer).


**2** Press the memory station number (① to ⑨).

**3** Press (Erase), then press .

**4** Press (Stop) to exit the program.

# Automatic dialing on the portable handset (KX-FKN515)

## Storing names and telephone numbers in the phonebook

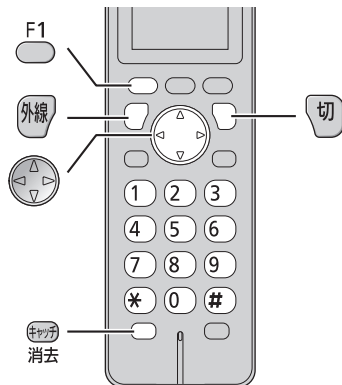

**1** Press 電話帳 (Phonebook).

検索は  
[▼,▲]を押す

**2** Press .

- “XXX” shows the remaining station numbers you can store.
- You can program up to 150 stations, including 4 pre-programmed stations.

名前?  
空き XXX件

**3** Enter the name, up to 20 characters (see the table on page 9 for instructions).

**4** Press 2 times.

**5** Enter the telephone number, up to 24 digits.

- To correct a mistake, press (Flash/Erase).

**6** Press .

**7** Enter the group number (① to ⑨).

**8** Press .

- To program other items, repeat steps 3 to 8.

**9** Press (Off) to exit the program.

## Making a voice call using the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press (Talk).

## Editing a stored name or number in the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press .

**4** Edit the name (see the table on page 9 for instructions).

- If you do not need to edit the name, skip to step 5.

**5** Press .

**6** Edit the kana.

- If you do not need to edit the kana, skip to step 7.

**7** Press .

**8** Enter the correct telephone number.

- If you do not need to edit the telephone number, skip to step 9.

**9** Press .

**10** Edit the group number.

- If you do not need to edit the group number, skip to step 11.


**11** Press .

**12** Press (Off) to exit the program.

# Intercom

An intercom is available between the portable handsets or between the main unit and portable handset(s).

## Using the main unit:

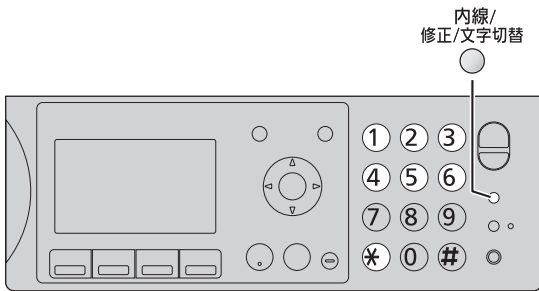

### 1 ■ For single portable handset users

- ① Lift the handset.

 
電話番号?

- ② Press  (Intercom/Edit/Character input mode).


子機1 呼出中

### ■ For multiple portable handset users

- ① Lift the handset.

- ② Press  (Intercom/Edit/Character input mode).

- ③ Call the portable handset(s) in the following ways:


- To call a specific portable handset, press the portable handset number (① to ⑥) which you want to call.
- To call all the portable handsets, press .

### 2 Start talking.

Example : 子機1 内線通話中

### 3 Replace the handset to end the intercom call.

## Using the portable handset (KX-FKN515):

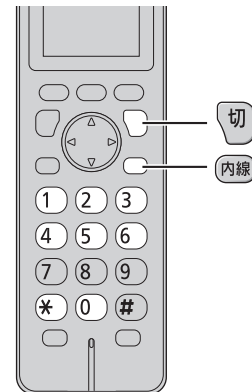



### 1 ■ For single portable handset users

- Press  (Intercom).

### ■ For multiple portable handset users

- ① Press  (Intercom).

- ② Call the main unit and/or portable handset(s) in the following ways:

- To call a specific portable handset, press the portable handset number (① to ⑥) which you want to call.
- To call the main unit, press .
- To call the main unit and all the portable handsets, press .


### 2 Start talking.




内線通話中

### 3 Press (Off) to end the intercom call.


# Sending faxes
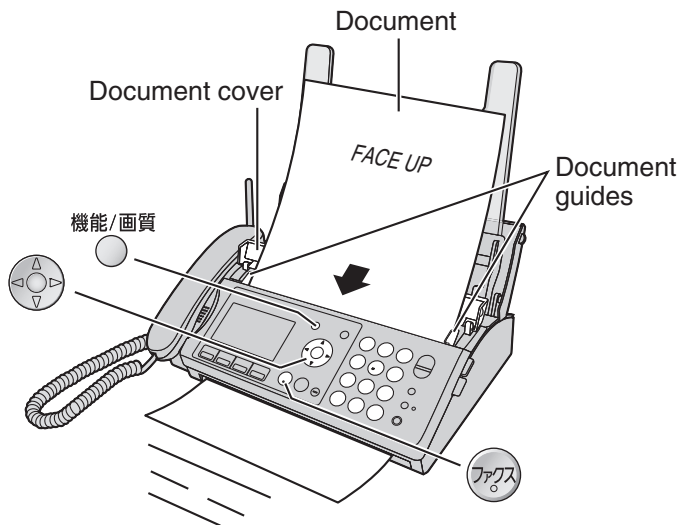
## Sending a fax manually






- 1** Open the document cover, and adjust the width of the document guides to the size of the document.
- 2** Insert the document (up to 5 pages) FACE UP until a single beep is heard.
- 3** If necessary, press  repeatedly to select the desired resolution while “画質=” is displayed (see below).
- 4** Press  (Fax).
- 5** Dial the fax number.
- 6** Press  (Fax).
  - The unit will start fax transmission.

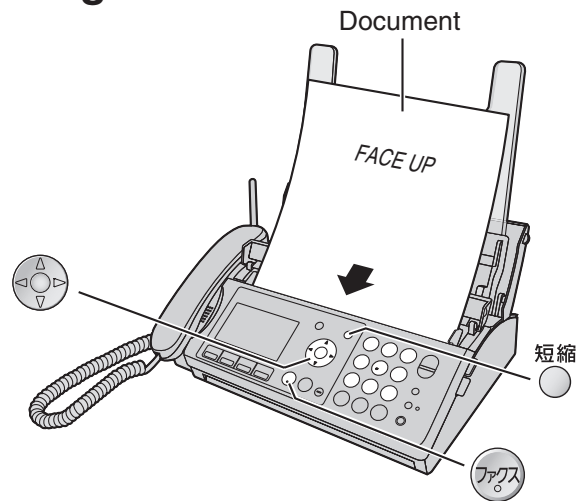

## Sending a fax using automatic dialing




### Using the phonebook


- 1** Insert the document (up to 5 pages) FACE UP until a single beep is heard.
- 2** Press  (Phonebook).
- 3** Press  (Search button) repeatedly until the desired name is displayed.
- 4** Press  (Fax).
  - The unit will start fax transmission.

### Using the speed dialer

- 1** Insert the document (up to 5 pages) FACE UP until a single beep is heard.
- 2** Press  (Speed dialer).
- 3** Press the memory station number (① to ⑨).
- 4** Press  (Fax).
  - The unit will start fax transmission.

### To select the resolution

Select the desired resolution according to the type of document, by pressing  repeatedly while “画質=” is displayed.


To display “画質=”, press  (Function/Resolution) once or twice.

- |               |   |
|---------------|---|
| 画質=ふつ字 [▼,▲]  | (Standard) for printed or typewritten originals with normal-sized characters. |
| 画質=小さい字 [▼,▲] | (Fine) for originals with minute printing.                                    |
| 画質=写真 [▼,▲]   | (Photo) for originals containing photographs.                                 |


# Receiving faxes

## Receiving a fax manually (AUTO ANSWER off)

Using the main unit:

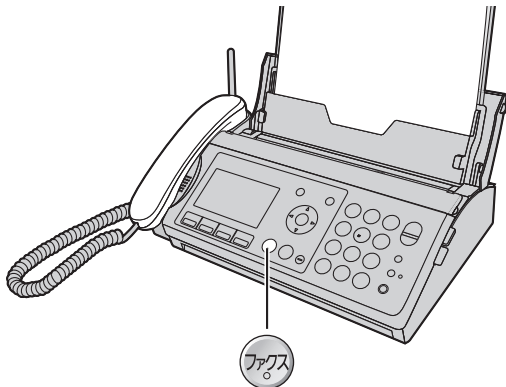


**1** When you hear a ring, lift the handset to answer the call.


**2** When:  
– document reception is required,  
– a fax calling tone (slow beep) is heard, or  
– no sound is heard,  
press  (Fax), then replace the handset.


- The unit will start fax reception.

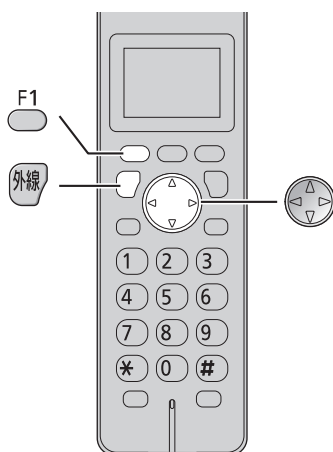

Using the portable handset (KX-FKN515):



**1** When you hear a ring, lift the portable handset from the charger to answer the call.

- If the portable handset is not set on the charger, press  (Talk).

**2** When:  
– document reception is required,  
– a fax calling tone (slow beep) is heard, or  
– no sound is heard,  
press .



**3** Press  (Search button) repeatedly until the “ファクス受信” is displayed, then press .

**4** Press .

- The main unit will start fax reception.

## Receiving a fax automatically (AUTO ANSWER on)




**1** If the  (Auto answer) light is off, turn it on by pressing .

**2** When receiving a call, the unit will receive a fax document or record a voice message automatically depending on the caller's request.



# Operating the built-in answering device

## Recording your own greeting message

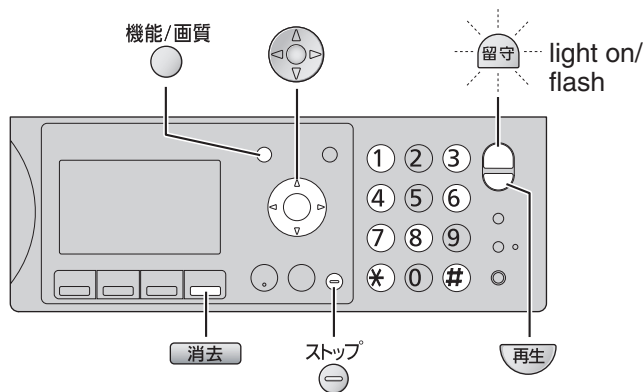

You can record your own greeting message. When receiving a call, it will be played to callers instead of the pre-recorded Japanese greeting message.

- 1 Press **機能/画質** (Function/Resolution).
- 2 Press **# 1 4 7**.  

自作応答録音  
[決定]押す
- 3 Press **決定** (Set).
- 4 Lift the handset.
- 5 Press **決定** (Set) and speak your greeting message after a beep, up to 16 seconds, to the handset.
- 6 Press **ストップ** (Stop) and replace the handset.
  - Your greeting message will be played back automatically.

## Erasing your own greeting message

- 1 Press **機能/画質** (Function/Resolution).
- 2 Press **# 1 4 8**.  

自作応答消去  
[決定]押す
- 3 Press **決定** (Set).
- 4 Press **\***.
  - The pre-recorded Japanese greeting message will be played when you receive a call.

## Activating the answering device

- 1 Turn the **留守** (Auto answer) light on by pressing **留守**.
- 2 When receiving a call, a greeting message will be played and the unit will record a voice message.
  - To record your own greeting message, see left.

## Listening to recorded messages

When new messages are recorded, the **留守** (Auto answer) light will flash.

Press **留守** to listen to recorded messages.

After the messages are played back, the following will be displayed.

- To erase the messages, press **\***.
- To save the messages, press **#**.

再生した用件を消去  
する=\* しない=#

## Listening to all of the recorded messages

Press **再生** (Playback) when new messages are not recorded.

- When new messages are recorded, only the new messages will be played back.

After the messages are played back, the following will be displayed.

- To erase the messages, press **\***.
- To save the messages, press **#**.

すべて消去しますか?  
はい=\* いいえ=#

## Erasing a specific message

Press **消去** (Erase) while listening to the message you want to erase, then press **\***.


## Erasing all of the recorded messages

- 1 Press **機能/画質** (Function/Resolution).
- 2 Press **# 1 6 3**.  

用件全消去  
[決定]押す
- 3 Press **決定** (Set).
- 4 Press **\***.

# Operating the built-in answering device

## Operating the answering device from a remote location

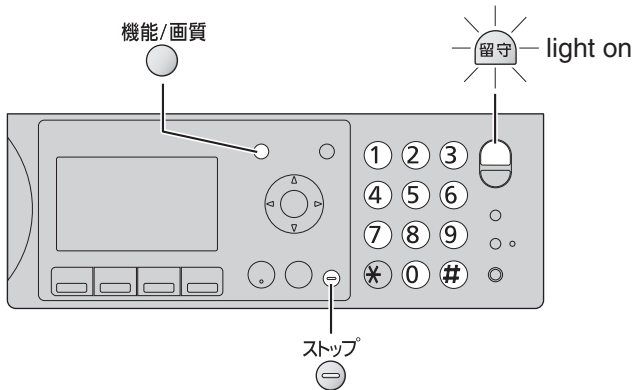

### Preparation: Programming the remote operation ID

1. Press **機能/画質** (Function/Resolution).
2. Press **# 0 0 6**.
3. Enter any 4-digit number (remote operation ID) except \* or #.

**Example :** 暗証番号=1234  
[4桁, 決定]押す

4. Press **決定** (Set).
5. Press **ストップ** (Stop).


### Operation: Listening to a recorded message from a remote location

Turn the **留守** (Auto answer) light on before you go out. Remote operations are available only from a touch tone telephone.

1. Call your unit.
2. Enter the remote operation ID during the greeting message.
3. Press **2** or wait 4 seconds.
  - Only the new recorded messages will be played back.
  - To listen to all the recorded messages, press **4** after the new messages have been played back.

# Night mode

## Turn on the night mode

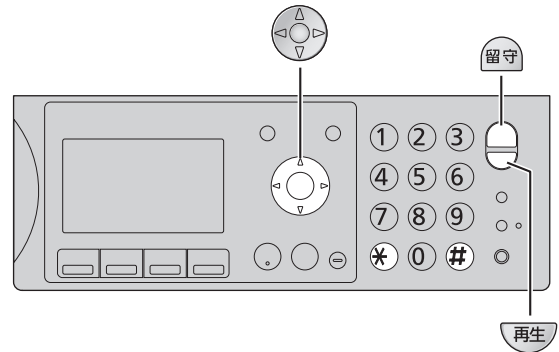

Press **\*** (Night mode) for about 3 seconds.  
おやすみ(3秒)

- “\*” is displayed and **留守** lights on.
- When a call is received during night mode, the unit will handle the call silently, either by storing the received fax into memory or by recording the caller's message.
- Night mode allows you to select a block of time during which the unit will not ring for outside calls or make sounds when you change the settings. This feature is useful when you do not want to be disturbed, for example, while sleeping.

## Listening to recorded messages

When new messages are recorded, the following will be displayed.

新しい用件が  
録音されました

Press **再生** (Playback) to listen to recorded messages.

After the messages are played back, the following will be displayed.

- To erase the messages, press **\***.
- To save the messages, press **#**.

再生した用件を消去  
する=\* しない=#

## Printing received fax documents

When new faxes are received, the following will be displayed.

ファクスが 届いています  
印刷は[決定]押す

Press **決定** (Set) 2 times to print fax documents.


## Turn off the night mode

Press **\*** (Night mode) for about 3 seconds.  
おやすみ(3秒)


# Call block

## Blocking the incoming calls

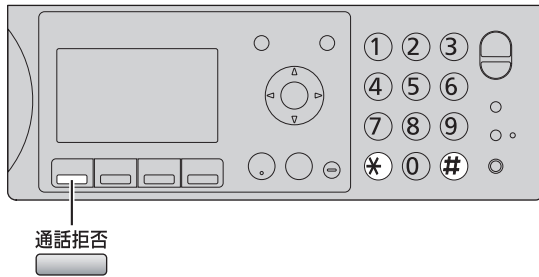

Using the main unit:



### To block a call using a message


While the unit is ringing, press  (Block).

OR

While you are on an incoming call, press  (Block), then press .

- The unit announces a message to the caller 2 times, then hangs up automatically. The message is announced in Japanese and means "We're sorry, but your call cannot be connected."

### To block a call using chimes

**1** While you are on an incoming call, press  (Block).

**2** Press .

- Chimes are heard by the caller.

**3** Explain to the caller that a visitor came and hang up.


### For Number Display service subscribers


If you subscribe to Number Display service, the message heard by the caller will change according to the caller's situation.

#### Example :

If the caller requested not to send caller's information, the message heard by the caller will change to mean "Your phone number is blocked by service provider. Please call again with adding '186' to the beginning of the phone number."

When the following is displayed after pressing

 (Block), you can set the unit to block the call from the same telephone number.

■ To block the call, press .


迷惑設定しますか?  
はい=\* いいえ=#


■ To cancel blocking, press .


● When the following is displayed, press  to cancel.

拒否設定しますか?  
はい=\* いいえ=#

Using the portable handset (KX-FKN515):

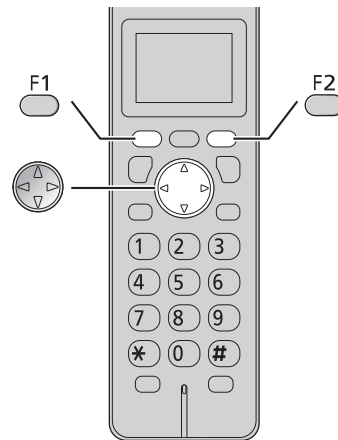

**1** Press  while the unit is ringing or while you are on an incoming call.

**2** Press  (Search button) repeatedly until the "通話拒否" is displayed.

**3** Press  2 times.

- The unit announces a message to the caller 2 times, then hangs up automatically. The message is announced in Japanese and means "We're sorry, but your call cannot be connected."


### For Number Display service subscribers

If you subscribe to Number Display service, the message heard by the caller will change according to the caller's situation.

#### Example :


If the caller requested not to send caller's information, the message heard by the caller will change to mean "Your phone number is blocked by service provider. Please call again with adding '186' to the beginning of the phone number."

When the following is displayed after operating step 1 to 3, you can set the unit to block the call from the same telephone number.

■ To block the call, press .

迷惑設定  
しますか?

■ To cancel blocking, press .

● When the following is displayed, press  to cancel.

拒否設定  
しますか?

# Specifications

KX-PW507DL KX-PW507DW	Main unit	Portable handset (KX-FKN515)	Battery charger
<b>Power supply</b>	AC 100 V (50 Hz/60 Hz)	Ni-MH battery (Part no. KX-FAN51) DC 3.6 V, 650 mAh	AC 100 V (50 Hz/60 Hz)
<b>Power consumption</b>	Transmission: Approx. 10 W Reception: Approx. 13 W Copy: Approx. 18 W Stand by: Approx. 0.7 W (When the F-net service is not in use.) Maximum(*1): Approx. 130 W		<ul style="list-style-type: none"> <li>• Charging: Approx. 1.2 W</li> <li>• Stand by: Approx. 0.5 W</li> </ul>
<b>Dimensions (H x W x D)</b>	Approx. 86 X 296 X 191 mm (without handset, projections) Approx. 265 X 296 X 231 mm (recording paper tray opened, without handset, projections)	Approx. 171 X 44.5 X 33.5 mm	Approx. 34 X 72.5 X 100.5 mm
<b>Mass (Weight)</b>	Approx. 2.4 kg (10 m ink film installed)	Approx. 157 g (battery installed)	Approx. 160 g
<b>Operating environment</b>	5 °C – 35 °C, 45 % – 85 % RH (Relative Humidity)		

KX-PW507DL KX-PW507DW	Main unit
<b>Applicable line</b>	Public Switch Telephone Network (Tone/Pulse), F-Net, NCC Lines
<b>DC resistance</b>	275 Ω
<b>Compatibility</b>	G3 compatible
<b>Document size</b>	A4–A5 (Max. 210 mm in width, Max. 600 mm in length)
<b>Effective scanning size</b>	208 mm (A4)
<b>Effective printing size</b>	202 mm (A4 size plain paper)
<b>Transmission time</b>	Approx. 15 s/page (Original mode) (*2)
<b>Modem speed</b>	9,600 / 7,200 / 4,800 / 2,400 bps; Automatic fallback
<b>Halftone level</b>	64-level
<b>Scanning density</b>	Horizontal: 8 pels/mm Vertical : 7.7 lines/mm (Fine/Photo), 3.85 lines/mm (Standard)
<b>Scanner type</b>	Contact image sensor
<b>Printer type</b>	Thermal transfer printing on plain paper
<b>Data compression system</b>	Modified Huffman (MH), Original mode
<b>Recording paper size</b>	A4: 210 mm x 297 mm (Plain paper)
<b>Answering device</b>	Greeting message: Digital recording system (up to 16 sec) Pre-recording greeting message ICM Recording: Digital recording system (Approx. 12 min. in total) (*3)
<b>Memory capacity</b>	Max. Approx. 50 pages (Only receiving fax etc.) (*4) Max. Approx. 12 min. (Only recording message) (*3)

\*1 When copying a 100 % black document.

\*2 Transmission speed is based on an A4-size document of 700 characters sent in standard resolution at 9,600 bps. The actual transmission speed depends upon the contents of the page, resolution, telephone line conditions and capability of the other party's machine.

\*3 If there is a silent pause, the total recording time will be longer.

\*4 The memory capacity is based on an A4-size document of 700 characters.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>