## **OWNERS MANUAL**



Intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

CAUTION: Risks of electrical shock — DO NOT OPEN


CAUTION: To reduce the risk of electric shock, do not remove cover. No user serviceable parts inside. Refer Servicing to qualified service personnel.



# **CLASSIC** 120/120

WARNING: TO PREVENT ELECTRICAL SHOCK OR FIRE HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. BEFORE USING THIS APPLIANCE, READ THE OPERATING GUIDE FOR FURTHER WARNINGS.

#### FRONT PANEL:

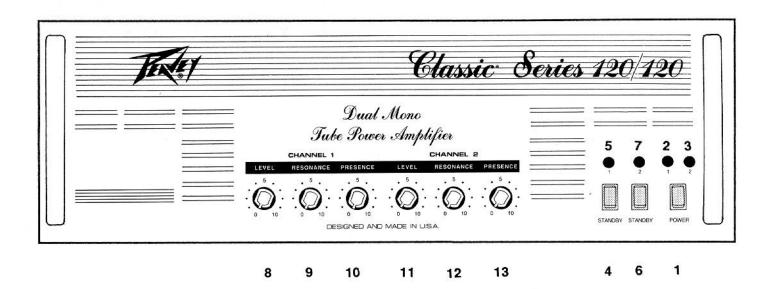

#### **POWER SWITCH (1)**

Depress the switch to the "on" position. Two red pilot LEDs will illuminate indicating power is being supplied to both power supplies.

#### CHANNEL 1 POWER LED (2)

Indicates power is being supplied to the channel 1 power supply.

#### **CHANNEL 2 POWER LED (3)**

Indicates power is being supplied to the channel 2 power supply.

#### **CHANNEL 1 STANDBY SWITCH (4)**

Allows channel 1 amp to be in standby or active mode. In standby mode the tubes in channel 1 remain hot, but the channel 1 amp is not active.

#### **CHANNEL 1 STANDBY LED (5)**

Illuminates when channel 1 is active, does not illuminate when channel 1 is in standby mode.

#### **CHANNEL 2 STANDBY SWITCH (6)**

Allows channel 2 amp to be in standby or active mode. In standby mode the tubes in channel 2 remain hot, but the channel 2 amp is not active.

#### CHANNEL 2 STANDBY LED (7)

Illuminates when channel 2 is active, does not illuminate when channel 2 is in standby mode.

#### **CHANNEL 1 LEVEL CONTROL (8)**

Controls the output level of channel 1 when in stereo; controls the output level in mono mode. Maximum output level is obtained with the level control rotated fully in a clockwise direction.

#### **CHANNEL 1 RESONANCE CONTROL (9)**

Used to fine tune the low frequency range of the speaker enclosure by varying the damping factor of the amplifier at low frequencies.

#### **CHANNEL 1 PRESENCE CONTROL (10)**

Used to fine tune the high frequency range of the speaker enclosure by varying the damping factor of the amplifier at high frequencies.

#### CHANNEL 2 LEVEL CONTROL (11)


Controls the output level of channel 2 when in stereo. Maximum output level is obtained with the level control rotated fully in a clockwise direction.

#### **CHANNEL 2 RESONANCE CONTROL (12)**

Used to fine tune the low frequency range of the speaker enclosure by varying the damping factor of the amplifier at low frequencies.

#### **CHANNEL 2 PRESENCE CONTROL (13)**

Used to fine tune the high frequency range of the speaker enclosure by varying the damping factor of the amplifier at high frequencies.

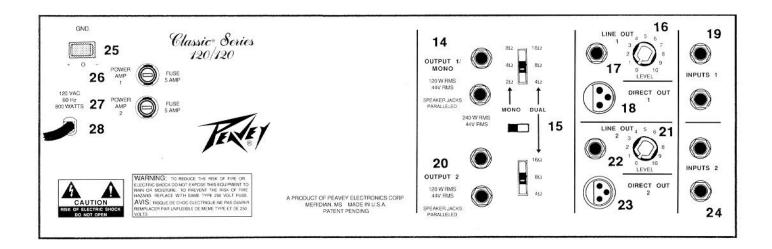

#### **REAR PANEL:**

#### **CHANNEL 1 SPEAKER OUTPUTS (14)**

Two 1/4" speaker output jacks are provided. These jacks are in parallel. The impedance switch for Channel 1 selects the total impedance plugged into the channel 1 output.

- \* When switch (15) is switched to dual...use the numbers 16 ohm, 8 ohm, and 4 ohm to the right of the impedance switch for channel 1.
- \* When switch (15) is switched to mono...use the numbers 8 ohm, 4 ohm, and 2 ohm to the left of the impedance switch for channel 1.

#### MONO/DUAL SWITCH (15)

Selects mono or dual (stereo) operation of the amplifier.

**NOTE:** When in mono, use channel 1 inputs and channel 1 outputs only. Only channel 1 level, resonance, and presence controls will function. Be sure that BOTH standby switches are turned ON for mono operation.

#### **CHANNEL 1 LINE OUTPUT LEVEL (16)**

Controls the signal level at the line output jack. This control may be used as a balance control when slave power amp/speaker systems are driven from the line output.

#### **CHANNEL 1 LINE OUTPUT (17)**

The line output provides a signal with level control to drive other power amplifier/slave speaker systems. (See Line Output Level)

#### CHANNEL 1 DIRECT OUT (18)

Provides 600 ohm, transformer balanced signal to be used as "direct" patch into mixing consoles, tape recorders, etc. The signal at this point has been frequency compensated for low noise operation.

#### **CHANNEL 1 INPUTS (19)**

Unbalanced 1/4" phone jacks are in parallel. Used to connect line level signal to the power amplifier.

#### **CHANNEL 2 SPEAKER OUTPUTS (20)**

Two 1/4" speaker output jacks are provided. These jacks are in parallel. The impedance switch for channel 2 selects the total impedance plugged into the channel 2 output.

NOTE: Not used for mono operation.

#### **CHANNEL 2 LINE OUTPUT LEVEL (21)**

Controls the signal level at the line output jack. This control may be used as a balance control when slave power amp/speaker systems are driven from the line output.

NOTE: Not used for mono operation.

#### CHANNEL 2 LINE OUTPUT (22)

The line output provides a signal with level control to drive other power amplifier/slave speaker systems. (See Line Output Level) **NOTE:** Not used for mono operation.

#### **CHANNEL 2 DIRECT OUT (23)**

Provides 600 ohm, transformer balanced signal to be used as "direct" patch into mixing consoles, tape recorders, etc. The signal at this point has been frequency compensated for low noise operation.

NOTE: Not used for mono operation.

#### **CHANNEL 2 INPUTS (24)**

Unbalanced 1/4" phone jacks are in parallel. Used to connect line level signal to the power amplifier.

NOTE: Not used for mono operation.

#### **GROUND SWITCH (25)**

Three position rocker-type switch which, in most applications, should be operated in its center or zero position. There may be some situations when audible hum and/or noise will come from the loudspeaker. If this situation arises, position the ground switch to either positive or negative (+ or -) or until the noise is minimized.

**NOTE:** Should the noise problem continue, consult your Authorized Peavey Dealer, the Peavey Factory, or a qualified service technician. THE GROUND SWITCH IS NOT FUNCTIONAL ON 220/240 VOLT MODELS.

#### **CHANNEL 1 FUSE (26)**

The fuse is located within the cap of the fuseholder. If the fuse should fail, IT MUST BE REPLACED WITH THE SAME TYPE AND VALUE IN ORDER TO AVOID DAMAGE TO THE EQUIPMENT AND TO PREVENT VOIDING THE WARRANTY. If the amp repeatedly blows fuses, it should be taken to a qualified service center for repair.

WARNING: THE FUSE SHOULD ONLY BE REPLACED WHEN THE POWER CORD HAS BEEN DISCONNECTED FROM ITS POWER SOURCE.

#### **CHANNEL 2 FUSE (27)**

The fuse is located within the cap of the fuseholder. If the fuse should fail, IT MUST BE REPLACED WITH THE SAME TYPE AND VALUE IN ORDER TO AVOID DAMAGE TO THE EQUIPMENT AND TO PREVENT VOIDING THE WARRANTY. If the amp repeatedly blows fuses, it should be taken to a qualified service center for repair.

WARNING: THE FUSE SHOULD ONLY BE REPLACED WHEN THE POWER CORD HAS BEEN DISCONNECTED FROM ITS POWER SOURCE.

#### LINE CORD (120V PRODUCTS ONLY) (28)

For your safety, we have incorporated a 3-wire line (mains) cable with proper grounding facilities. It is not advisable to remove the ground pin under any circumstances. If it is necessary to use the equipment without proper grounding facilities, suitable grounding adaptors should be used. Less noise and greatly reduced shock hazard exists when the unit is operated with the proper grounded receptacles.

**CAUTION:** To help prevent damage to rack or unit **use all 8 rack mounting points. Do not use plastic hardware** when rack mounting this unit.

### CLASSIC® SERIES 120/120 ENGINEERING SPECIFICATIONS

#### **EACH CHANNEL**

#### Rated Power:

120 W RMS into 16, 8, & 4 ohms (Continuous sine wave with less than 5% THD, 40 Hz to 20 kHz, 120 V AC)

#### Mono:

240 W RMS into 8, 4, & 2 ohms (Continuous sine wave with less than 5% THD, 40 Hz to 20 kHz, 120 V AC)

#### Power @ Clipping: (Typical)

125 W RMS into 16, 8, & 4 ohms (Continuous sine wave with less than 5% THD, 40 Hz to 20 kHz, 120 V AC)

#### Mono:

250 W RMS into 8, 4, & 2 ohms (Continuous sine wave with less than 5% THD, 40 Hz to 20 kHz, 120 V AC)

#### Frequency Response:

+0, -3 dB @ 100 W RMS into 16, 8, & 4 ohms, 40 Hz to 20 kHz

#### Hum & Noise:

78 dB below full rated power (40 Hz to 20 kHz, unweighted)

#### Subsonic Filter:

Active tube subsonic filter 18 dB/octave roll-off Cutoff frequency 40 Hz

#### Input:

Input Impedance: 250K ohms Minimum Input Level: 1 V RMS, 0 dBV

#### **Direct Output:**

Output Impedance: 270 ohms Nominal Output Level: 0.3 V RMS, -10 dBV Transformer Balanced


#### Line Output:

Output Impedance: 10K ohms Maximum Output Level: 32 V RMS, 30 dBV


#### Weight & Dimensions:

55.3 lbs. 19" W x 51/4" H x 16" D


#### MONO APPLICATION

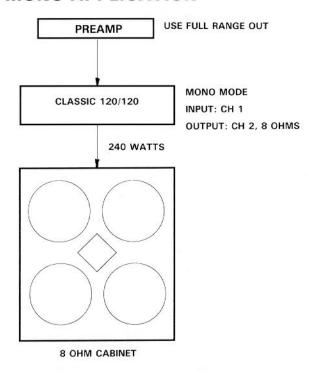


## **DUAL MONO APPLICATION**

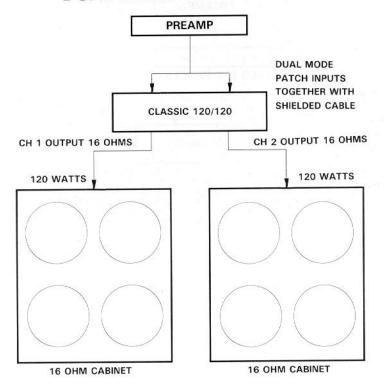

#### **BI AMP APPLICATION**

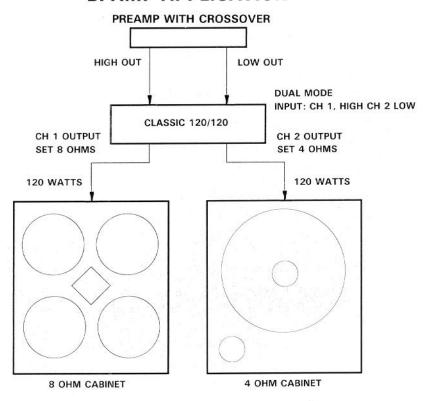

#### STEREO APPLIICATION

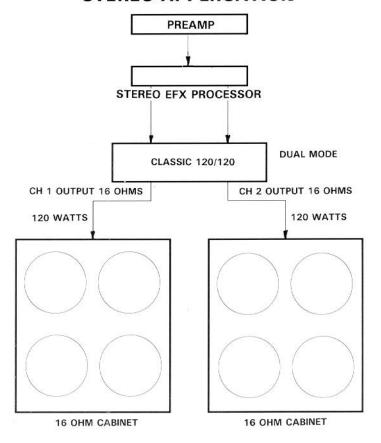

THIS LIMITED WARRANTY VALID ONLY WHEN PURCHASED AND REGISTERED IN THE UNITED STATES OR CANADA. ALL EXPORTED PRODUCTS ARE SUBJECT TO WARRANTY AND SERVICES TO BE SPECIFIED AND PROVIDED BY THE AUTHORIZED DISTRIBUTOR FOR EACH COUNTRY.

Ces clauses de garantie ne sont vaiables qu'aux Etats-Unis et au Canada. Dans tous les autres pays, les clauses de garantie et de maintenance sont fixees par le distributeur national et

assuree par lul seion la legislation en vigueur.

assure par nation at general region of the properties of the prope garantias y servicio que cada distribuidor autorizado determine y ofrezca en los diferentes paises.

#### ONE-YEAR LIMITED WARRANTY/REMEDY

PEAVEY ELECTRONICS CORPORATION ("PEAVEY") warrants this product, EXCEPT for covers, footswitches, patchcords, tubes and meters, to be free from defects in material and workmanship for a period of one (1) year from date of purchase, PROVIDED, however that this limited warranty is extended only to the original retail purchaser and is subject to the conditions, exclusions and limitations hereinafter set forth:

#### PEAVEY 90-DAY LIMITED WARRANTY ON TUBES AND METERS

If this product contains tubes or meters, Peavey warrants the tubes or meters contained in the product to be free from defects in material and workmanship for a period of ninety (90) days from date of purchase; PROVIDED, however, that this limited warranty is extended only to the original retail purchaser and is also subject to the conditions, exclusions and limitations hereinafter set forth.

#### CONDITIONS, EXCLUSIONS AND LIMITATIONS OF LIMITED WARRANTIES

These limited warranties shall be void and of no effect if:

- a. The first purchase of the product is for the purpose of resale; or
  b. The original retail purchase is not made from an AUTHORIZED PEAVEY DEALER; or
  c. The product has been damaged by accident or unreasonable use, neglect, improper service or maintenance, or other causes not arising out of defects in material or workmanship; or
- d. The serial number affixed to the product is altered, defaced or removed.

  In the event of a defect in material and/or workmanship covered by this limited warranty, Peavey will:
- a. In the case of tubes or meters, replace the defective component without charge;
- b. In other covered cases (i.e., cases involving anything other than covers, footswitches, patchcords, tubes or meters), repair the defect in material or workmanship or replace the product, at Peavey's option;

and provided, however, that, in any case, all costs of shipping, if necessary, are paid by you, the purchaser.

THEWARRANTY REGISTRATION CARD SHOULD BE ACCURATELY COMPLETED AND MAILED TO AND RECEIVED BY PEAVEY WITHIN FOURTEEN (14) DAYS FROM THE DATE OF YOUR PURCHASE.

In order to obtain service under these warranties, you must:
a. Bring the defective item to any AUTHORIZED PEAVEY DEALER or AUTHORIZED PEAVEY SERVICE CENTER and present therewith the ORIGINAL PROOF OF PURCHASE supplied to you by the AUTHORIZED PEAVEY DEALER in connection with your purchase from him of this product.

If the DEALER or SERVICE CENTER is unable to provide the necessary warranty service you will be directed to the nearest other PEAVEY AUTHORIZED DEALER or AUTHORIZED PEAVEY SERVICE CENTER which can provide such service.

b. Ship the defective item, prepaid, to:

PEAVEY ELECTRONICS CORPORATION International Service Center Highway 80 East MERIDIAN, MS 39301

including therewith a complete, detailed description of the problem, together with a legible copy of the original PROOF OF PURCHASE and a complete return address. Upon Peavey's receipt of these items:

If the defect is remedial under these limited warranties and the other terms and conditions expressed herein have been complied with, Peavey will provide the necessary warranty service to repair or replace the product and will return it, FREIGHT COLLECT, to you, the purchaser.

Peavey's liability to the purchaser for damages from any cause whatsoever and regardless of the form of action, including negligence, is limited to the actual damages up to the greater of \$500.00 or an amount equal to the purchase price of the product that caused the damage or that is the subject of or is directly related to the cause of action. Such purchase price will be that in effect for the specific product when the cause of action arose. This limitation of liability will not apply to claims for personal injury or damage to real property or tangible personal property allegedly caused by Peavey's negligence. Peavey does not assume liability for personal injury or property damage arising out of or caused by a non-Peavey alteration or attachment, nor does Peavey assume any responsibility for damage to interconnected non-Peavey equipment that may result from the normal functioning and maintenance of the Peavey equipment.

UNDER NO CIRCUMSTANCES WILL PEAVEY BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, ANY INCIDENTAL DAMAGES OR ANY CONSEQUENTIAL DAMAGES

ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, EVEN IF PEAVEY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

THESE LIMITED WARRANTIES ARE IN LIEU OF ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE; PROVIDED, HOWEVER, THAT IF THE OTHER TERMS AND CONDITIONS NECESSARY TO THE EXISTENCE OF THE EXPRESS, LIMITED WARRANTIES, AS HEREINABOVE STATED, HAVE BEEN COMPLIED WITH, IMPLIED WARRANTIES ARE NOT DISCLAIMED DURING THE APPLICABLE ONE-YEAR OR NINETY-DAY PERIOD FROM DATE OF PURCHASE OF THIS PRODUCT.

SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL

DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THESE LIMITED WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

THESE LIMITED WARRANTIES ARE THE ONLY EXPRESS WARRANTIES ON THIS PRODUCT, AND NO OTHER STATEMENT, REPRESENTATION, WARRANTY OR AGREEMENT BY ANY PERSON SHALL BE VALID OR BINDING UPON PEAVEY.

In the event of any modification or disclaimer of express or implied warranties, or any limitation of remedies, contained herein conflicts with applicable law, then such modification,

disclaimer or limitation, as the case may be, shall be deemed to be modified to the extent necessary to comply with such law

Your remedies for breach of these warranties are limited to those remedies provided herein and Peavey Electronics Corporation gives this limited warranty only with respect to equipment purchased in the United States of America.

INSTRUCTIONS - WARRANTY REGISTRATION CARD

1. Mail the completed WARRANTY REGISTRATION CARD to:

PEAVEY ELECTRONICS CORPORATION POST OFFICE BOX 2898 MERIDIAN, MISSISSIPPI 39302-2898

- a. Keep the PROOF OF PURCHASE. In the event warranty service is required during the warranty period, you will need this document. There will be no identification card issued by Peavey Electronics Corporation.

  2. IMPORTANCE OF WARRANTY REGISTRATION CARDS AND NOTIFICATION OF CHANGES OF ADDRESS:

  - a. Completion and mailing of WARRANTY REGISTRATION CARDs Should notification become necessary for any condition that may require correction, the REGISTRATION CARD will help ensure that you are contacted and properly notified.

    b. Notice of address changes If you move from the address shown on the WARRANTY REGISTRATION CARD, you should notify Peavey of the change of address so as to
  - facilitate your receipt of any bulletins or other forms of notification which may become necessary in connection with any condition that may require dissemination of information or correction.
- 3. You may contact Peavey directly by telephoning (601) 483-5365.
- 4. Please have the Peavey product name and serial number available when communicating with Peavey Customer Service.

DANGER

EXPOSURE TO EXTREMELY HIGH NOISE LEVELS MAY CAUSE A PERMANENT HEARING LOSS, INDIVIDUALS VARY CONSIDERABLY IN SUSCEPTIBILITY TO NOISE INDUCED HEARING LOSS, BUT NEARLY EVERYONE WILL LOSS SOME HEARING IF EXPOSED TO SUFFICIENTLY INTENSE NOISE FOR A SUFFICIENT TIME.

THE U.S. GOVERNMENT'S OCCUPATIONAL SAFETY AND HEALTH ADMINISTRATION (OSHA) HAS SPECIFIED THE FOLLOWING PERMISSIBLE NOISE LEVEL EXPOSURES:

DURATION PER DAY IN HOURS

SOUND! EVEL 483 STOWN DEPONDED.

% or loss
ACCORDING TO, OSHA, ANY EXPOSURE IN EXCESS OF THE ABOVE PERMISSIBLE LIMITS COULD RESULT IN SOME HEARING LOSS.

EAR PLUGS OF PROTECTORS IN THE EAR CARALS OR OVER THE EARS MUST BE WORD WHEN DEPRATING THE AMPLIER AND LIFE ATION SYSTEM IN ORDER TO PREVENT A PERMANENT HEARING LOSS IF EXPOSURE IS IN EXCESS OF THE LIMITS AS SET FORTH ABOVE TO HISURE AGAINST SOTERTIALLY DANGEROUS EXPOSURE TO HIGH SQUING PROTECTION FOR THE EXPOSED TO COLUMN PREVENT ABOVE TO HIGH SQUING PROTECTION OF THE EXPOSED TO COLUMN PROTECTION OF THE EXPOSED TO COLUMN

CAUTION

CAU

- All safety and operating instructions should be retained for future reference.
- 3. Obey all cautions in the operating instructions and on the back of the unit.
- 4. All operating instructions should be followed.

©1992

- 4. An operating instructions anounce of convent.
  5. This product should not be used near water, i.e. a bathtub, sink, swimming pool, wet basement, etc.
  6. This product should be located so that its position does not interfere with its proper ventilation. It should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
  7. This product should not be placed flat page as a sure of heat.
- This product should not be placed near a source of heat such as a stove, radiator or another heat producing amplifier.
- Never break off the ground pin on the power supply spitd.
   For more information on grounding write for our free booklet "Shock Hazard and Grounding."
- DUDKIEL SHOCK MAZARD AND GROUNDING.

  10. Power supply cords should always be handled carefully. Never walk or place equipment on power supply cords. Periodically check cords for cuts or signs of stress, especially at the plug and the point where the cord exits the unit.
- The power supply cord should be unplugged when the unit is to be unused for long periods of time.
- If this product is to be mounted in an equipment rack, rear support should be provided.
- 13. Meral parts can be cleaned with a damp rap. The viryl covering used on some units can be cleaned with a damp rap, or an ammonia based disusehold cleaney if necessary.
- necessary

  14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation holes or any other openings.

  15. This unit should be checked by a qualified service technician if:

  A. The power supply cord or plug has been damaged.

  B. Anything has fallen or been spilled into the unit.

  C. The unit does not operate correctly.

  D. The unit has been dropped or the enclosure damaged.

- The user should not to attempt to service this equipment.
   All service work should be done by a qualified service technician.



Features and specifications subject to change without notice.

**Peavey Electronics Corporation** 

711 A Street, P. O. Box 2898, Meridian, MS 39302-2898 / (601) 483-5376 / Telex: 504115 / Fax: (601) 484-4278 #80390045 Printed in U.S.A. 1/92 Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com