



C2931M (7/05) PMCD750 DLP™ Display Removable On-Screen Code Chart

The PMCD750 will flash a sequence of red and amber lights on the screen to indicate current status or if a fault exists. Cut out these cards for convenient referencing of the on-screen codes.

	Condition	Priority	Each block represents 0.2 seconds														
Starts with red; lamp is off	Door open	1	R		R		R										
	Power supply fan failed	2	R		Amber												
	DLP fan failed	3	R		Amber			R									
	350V failed	4	R		R		Amber										
	Optical engine failed	5	R		R		Amber			R							
	Lamp failed	6	R		R		R		R								
	Lamp off (wait, auto off) ²	7	R		R			Amber			Amber						
	Wait (lamp off, cooling)	8	R		R			R		R							
Starts with amber	Lamp off (lamp saver) ³	9	Amber				Amber			R							
	Lamp off (ready to turn on)	10	Amber				Amber										
	Lamp striking (starting)	11	Amber				Amber			Amber							
	Lamp on, no alarms	12	Amber on continuously														

See footnote 1

R = Red To show the code, press MONITOR button once.

¹With Priority 1-6, to turn lamp on, cycle off, and then on. If Auto Codes in the Miscellaneous menu is checked, events with Priority 1-5 start the on-screen code automatically.

²Lamp Saver turned lamp off; lamp is cooling and will turn on at end of cooling period.

³A Lamp On command from the remote or from RS-232 commands will turn lamp on.

	Condition	Priority	Each block represents 0.2 seconds														
Starts with red; lamp is off	Door open	1	R		R		R										
	Power supply fan failed	2	R		Amber												
	DLP fan failed	3	R		Amber			R									
	350V failed	4	R		R		Amber										
	Optical engine failed	5	R		R		Amber			R							
	Lamp failed	6	R		R		R		R								
	Lamp off (wait, auto off) ²	7	R		R			Amber			Amber						
	Wait (lamp off, cooling)	8	R		R			R		R							
Starts with amber	Lamp off (lamp saver) ³	9	Amber				Amber			R							
	Lamp off (ready to turn on)	10	Amber				Amber										
	Lamp striking (starting)	11	Amber				Amber			Amber							
	Lamp on, no alarms	12	Amber on continuously														

See footnote 1

R = Red To show the code, press MONITOR button once.

¹With Priority 1-6, to turn lamp on, cycle off, and then on. If Auto Codes in the Miscellaneous menu is checked, events with Priority 1-5 start the on-screen code automatically.

²Lamp Saver turned lamp off; lamp is cooling and will turn on at end of cooling period.

³A Lamp On command from the remote or from RS-232 commands will turn lamp on.

Worldwide Headquarters • 3500 Pelco Way • Clovis, California 93612 USA • www.pelco.com

USA & Canada • Tel: 800/289-9100 • Fax: 800/289-9150

International • Tel: 1-559/292-1981 • Fax: 1-559/348-1120

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>