

USER'S MANUAL

4.2 "TFT LCD REAR MIRROR MONITOR



1、 Specification:

- 1、 Display Size: 4.2Inch;
- 2、 Display: TFT LCD 16:9Panel;
- 3、 Resolution: 320XRGBX234;
- 4、 Brightness: 400;
- 5、 Contrast: 250;
- 6、 Visual Angle: 145;
- 7、 Chromatic System: NTSC/PAL(Auto Switch);
- 8、 Working Power: 12V;
- 9、 Working Current: 500mA;
- 10、 Operation temperature: 0-45;
- 11、 Input Port: One Video Input、 One Camera Input;


2、 Features:

- 1、 Type of Car: Saloon Car、 Business Car、 Minitype Truck;
- 2、 Installion Measure:Can be Instead of the origin Rearview Mirror Directly;
- 3、 Special Customized Lens in order to be Consistent with the Rearview Image.;
- 4、 Auto switch to Rearview system when backing a car to insure the safety.

3、 Causion:

- 1、 Pay Attention to the Polarity when connecting in case of damaging the machine;
- 2、 Do not Dismantle the machine because of its high exactitude, If u have some problem.
Please contact with current Distributor.
- 3、 Do not use the cleanser or other impregnate to clean the lens and that you can use soft cloth bumf.
- 4、 Avoiding Being laid the machine below the Sunshine. Dust, Humidity;
- 5、 It is common that appear few luminosity in panel;
- 6、 The chromatic system of the camera matched with machine is NTSC system, so in order to avoiding frequently switching display chromatic system, please enact the Chromatic system of DVD or VCD to be NTSC.

4、 The Instruction of Connection:

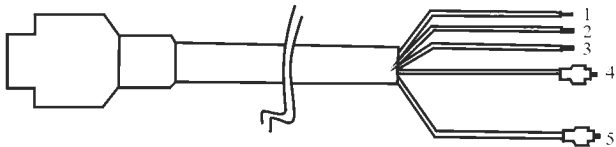

- (1)Power Line (Red): Connect DC+12V;
(2)Ground Line (Black): Connect Power Line of Ground;
(3)Rearview control Line (Green): Connect Power Line of Rearview Light
(4)Video Input one (Yellow RCA): Connect video input of VCD or DVD;
(5)Video Input Two (Yellow RCA): Connect Rearview Camera.
(6)Tie-in of Power: Connect Power of Rearview Light;
(7)RCA: Connect Monitor;

5、 The Instruction of Installation:

- 1、 Method of Installation: As the following drawing one, sticking the 3M double side pastern on the side which is used for installing the shelf when installing this machine (fittings are attached), then stick the machine directly to the vehicle window. Specially pay attention to:
 - a、 the position of the vehicle window used for sticking up should be cleaned up. Do not leave behind dusty and other sundries in case effecting stickup result.
 - b、 pay attention to throw definite pressure to make the pastern and the stickup face touch adequately to strength the agglutinate
 - c、 requiring several hours to get the best result after sticking up the plaster, so do not use the machine after several hours of installing the machine.


4、 Front Panel



- 1、 Power Button
- 2、 Mode Button
- 3、 Volume Increasing Button
- 4、 Menu Button
- 5、 Volume Recloing Button

6、 Instruction of Operating Remote:

- 1、 Volume Reducing Button;
- 2、 Menu Button;
- 3、 Display Mode Select Button;
- 4、 Power Button;
- 5、 Input Switch Button;
- 6、 Volume Increasing Button;

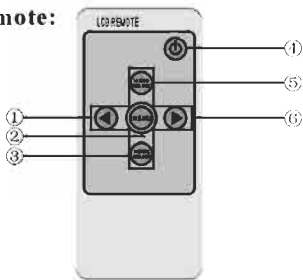

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>