

OWNER'S MANUAL

 


DVD/VCD/CD/MP3 PLAYER

Contents

Safety Precautions.....	2	Play Operation.....	8
Electric Connection.....	3	Play/Pause	
Reception collection		Scan	
Speaker collection		Repeat	
Installation.....	4	Random	
Install the unit		Stop	
Remove the unit		N/P	
General Features.....	5	Radio Operation.....	9
Power		Band	
Volume		Band tuner	
Eject		Remote Control.....	10
Release		Loading and Replacing the battery	
Mode		Basic operation	
Loud		Specifications.....	22
L/R		Trouble Shooting.....	23
Clock			
Dsp			
Speaker setting.....	7		
Volume setting			
Bass setting			
Treble setting			
Balance setting			
Fader setting			

plea
es to av
pper
n to

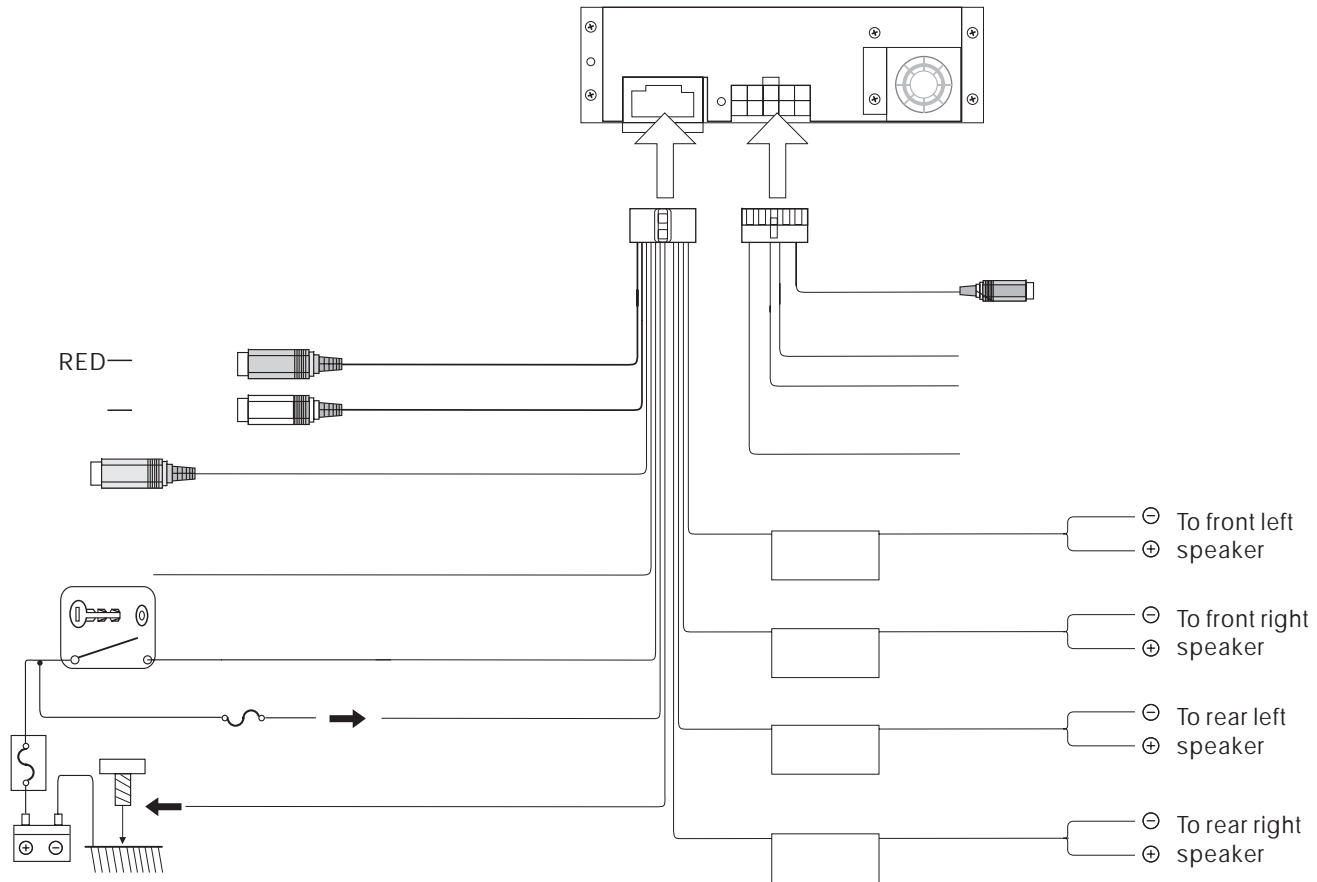

Installation

 
Before installing the receiver permanently, fit it in the approximate place in your car, and connect the equipment according to the speakers and electrical connections. When your system is operated properly, (preferably with the car engine running), follow the instructions for permanent installation of your system.

INSTALL THE UNIT

- 1) Install half sleeve, can be with or without adapter. It will fit better with adapter.
- 2) Bend over some tabs to secure the half sleeve inside of dash.
- 3) Support strap to be strapped under dash, secure this strip to avoid skipping of disc.

REMOVE THE UNIT


- 1) Insert removal wrench into the small gap on the right side of the unit and pull the unit slightly out on the same side, then release the wrench. Repeat the same action for the left side. By now, you can remove the unit and unplug the wires connector.

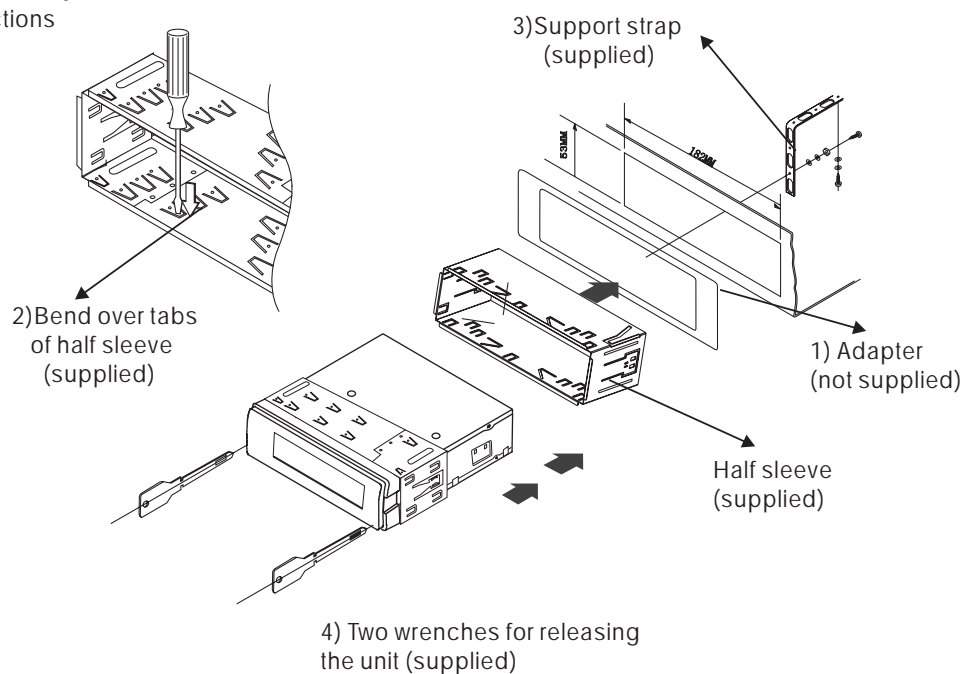




MODE

Selecting radio and play

 Each time you press the key, it will switch between radio position and disc position.

Loud

 press the “DSP” button to emphasize the bass output, press it again to resume the normal listening.

L/R

 In VCD mode, press [BAND] button, it will switch between right channel and left channel position.

Clock

Short press CLK can display time even power off .
Long Press CLK for 3 seconds will enter set mode.

Hour

Rotate the SEL/VOL button to set the hour.

Minute

Press the SEL/VOL button, and then rotate it to set the minute.

 
Quit clock set mode

there is no operation in 5 seconds, it will quit clock set mode.

Dsp

Speaker setting


Speaker mode

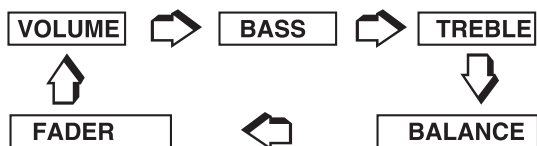

● Volume set mode

Press SEL/VOL button once, display will show “VOL” on, then rotate the button in clockwise direction to increase volume level; rotate the button in anticlockwise direction to decrease volume level.

 
VOL 10

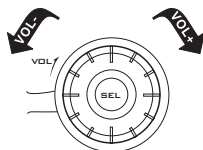

● Bass set mode

Press SEL/VOL button twice, display will show “BAS” on, then rotate the button to adjust bass level up/down in different direction.

 BAS -6

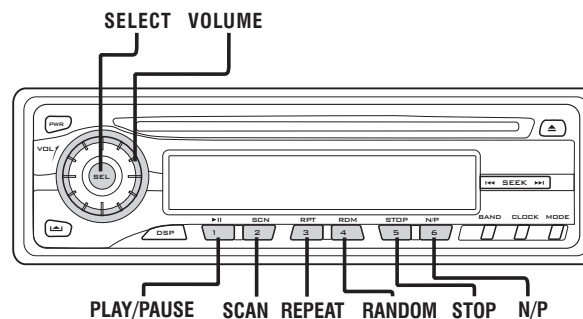

● Treble set mode

Press SEL/VOL button third, display will show “TRE” on, then rotate the button to adjust treble level up/down in different direction.

TRE 5

● Balance set mode

Press SEL/VOL button fourth, display will show “BAL” on, then rotate the button to adjust left and right speakers level up/down in different direction.

BAL 4

● Fader set mode

Press SEL/VOL button fifth, display will show “FAD” on, then rotate the button to adjust front and rear speakers level up/down in different direction.

FAD -3

Play control


Play/pause

Play

If with DISC in unit, Press the [▶||] to pause music.


Pause

Press the [▶||] button again, come back DISC playing.

 If a disc is loaded, a sector sign will show on the display.


Scan

Press [SCN] button

 Press this button once for TRACK INTRODUCTION. The first 10 seconds of each track on the disc will play. And the track number shows on LCD. To select a desired song, press [SCN] button while it is playing.


Repeat

Press [RPT] button

 Press the button to repeat the same track continuously, "RPT" will appear on the LCD display. Press the button again to come back normal playing.


Random

Press [RDM] button

 Press this button to play all the track in random order. Press it again to stop random playing. This button is invalid if the unit is in "PBC On" mode.


Stop

Press [STOP] button


 Press "STOP" button to stop music, and press "▶||" button to start playing from track one.

N/p

Press [N/P] button

 In video mode, press this button to exchange between the PAL and NSTC.

 
Radio Operation

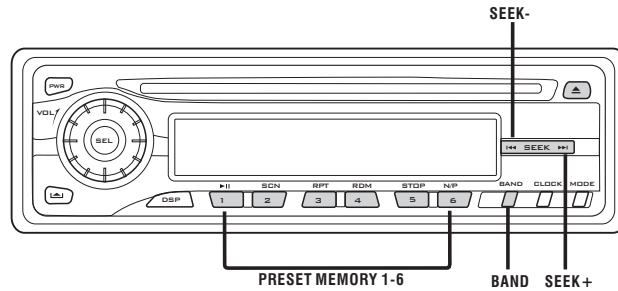

Band

Selecting band

 Press BAND button to select among three FM or two AM bands. (FM1-FM2-FM3-AM1-AM2)

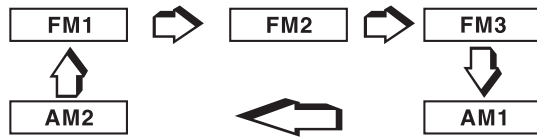

← LCD display

Tuner

 
In radio mode:

manual tuning:

short press ►► button it can select higher frequency station.
Short press ◄◄ can select lower frequency station.

Auto loading tuning:

long press ►► button can automatically select higher frequency station. And long press ◄◄ can automatically select lower frequency station.

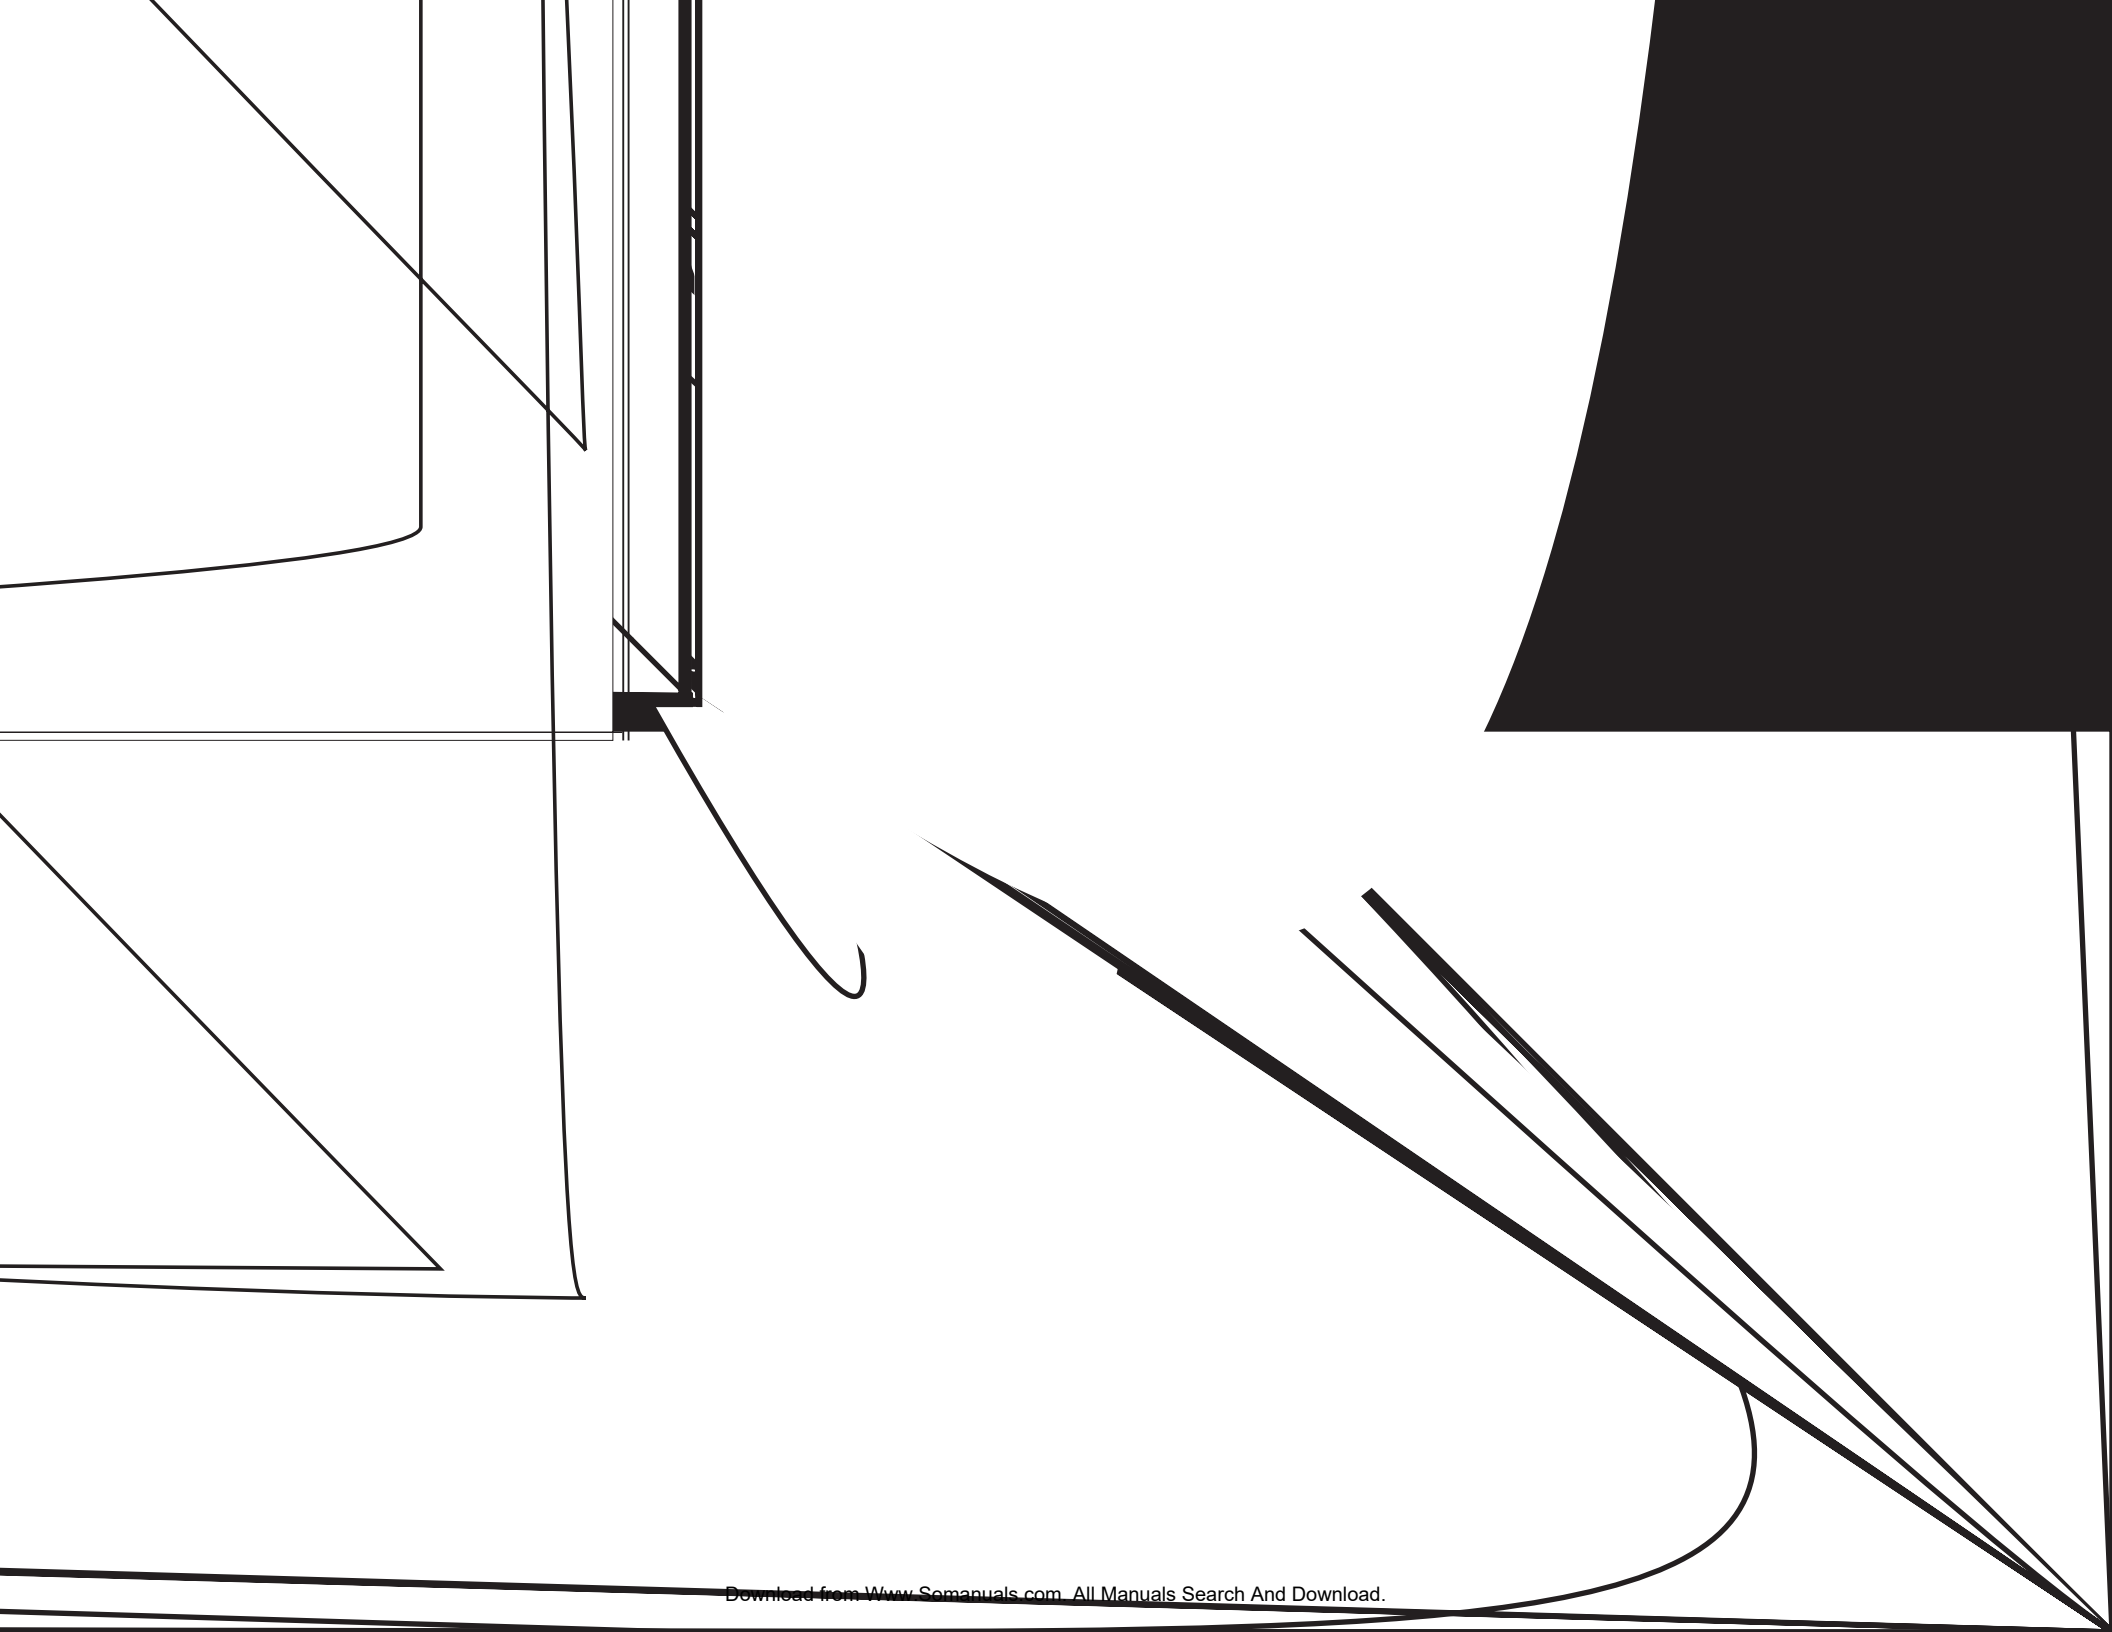

Basic operation

POWER

Press this button to turn on/off the unit.

DSP

Press this button can show the time, and long press to enter clock adjustment.

SOURCE

Press this button can select needed receiving and playing mode.

EQ

Press this button can select mode as POPS, JAZZ, ROCK, DSP OFF.

SEEK+/SEEK-

Press this button can manually search tune, fast, back and track searching control.

LOUD

Press this button can start up LOUD function.

SEL

Repeatfully press this button can select needed mode.

BAND (P/N)

Under receiving position, press this button can select band; under VCD, DVD position, press this button can select automatic, PAL or NTSC.

VOL+/VOL-

Press this button can increase or decrease volume.

LOC/RDM

Under receiving position, press this button can do far and close switch; under VCD, CD playing, press this button can play randomly.

■/⏏ Stop ▶|| Play/pause

■/⏏ Press this button to stop playing.

▶|| Press this button can switch between play and pause. Under stop state, similarly press it to play.

ST/PROG

Under receiving state, press this button can select stereo or single track; under playing state, it can do programme play cooperating with "STOP" button.

Basic operation

PBC

When playing VCD,OK disc,press this button can show all the programme menu,and can cooperate numeral buttons to select programmes.

[◀] [▶] [▲] [▼] [ENTER]

Under DVD mode, press this button can move cursor in up,down,left and right directions after entering SETUP Menu.Press “ETR” button can confirm selected item.

AMS/RPT

 
Under receiving state,press this button can scan memory stations.Long press it can automatically scan and store them.

SETUP

Under playing mode,press this button can open SETUP Menu.

ZOOM

Press this button can zoom picture.

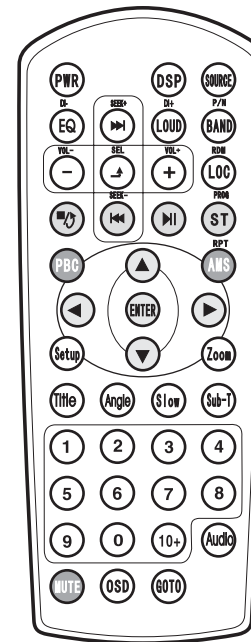


TITLE

Under VCD mode,press this button to enter Menu selection same as PBC.

Under DVD mode,press this button to return to the top of Menu.

 Basic operation

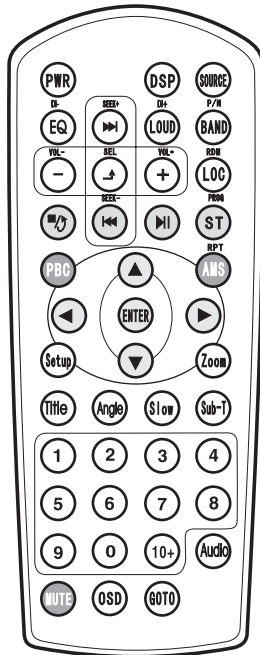

GOTO

When playing DVD,press this button can set play time and confirm it by pressing ENTER button.

When playing VCD,it can directly enter after setting time ready.

ANGLE

Under DVD mode,press this button can change visual angle.

SLOW

Under VCD mode,press this button can advance slowly.

Under DVD mode,press this button can advance and back off slowly.

SUBTITLE (0-10+)

Under DVD mode,press this button can switch dialogue language.

Press this button can directly select track and chapter,and 1-6 buttons can select presetted stations.

AUDIO

Under VCD mode,press this button can switch track.

Under DVD mode,press this button can switch dialogue language.

MUTE

Press this button to turn off volume out ,and again to resume.

 
OSD

Press this button can show play time, surplus time.




Press[▲]or[▼]then press ENTER





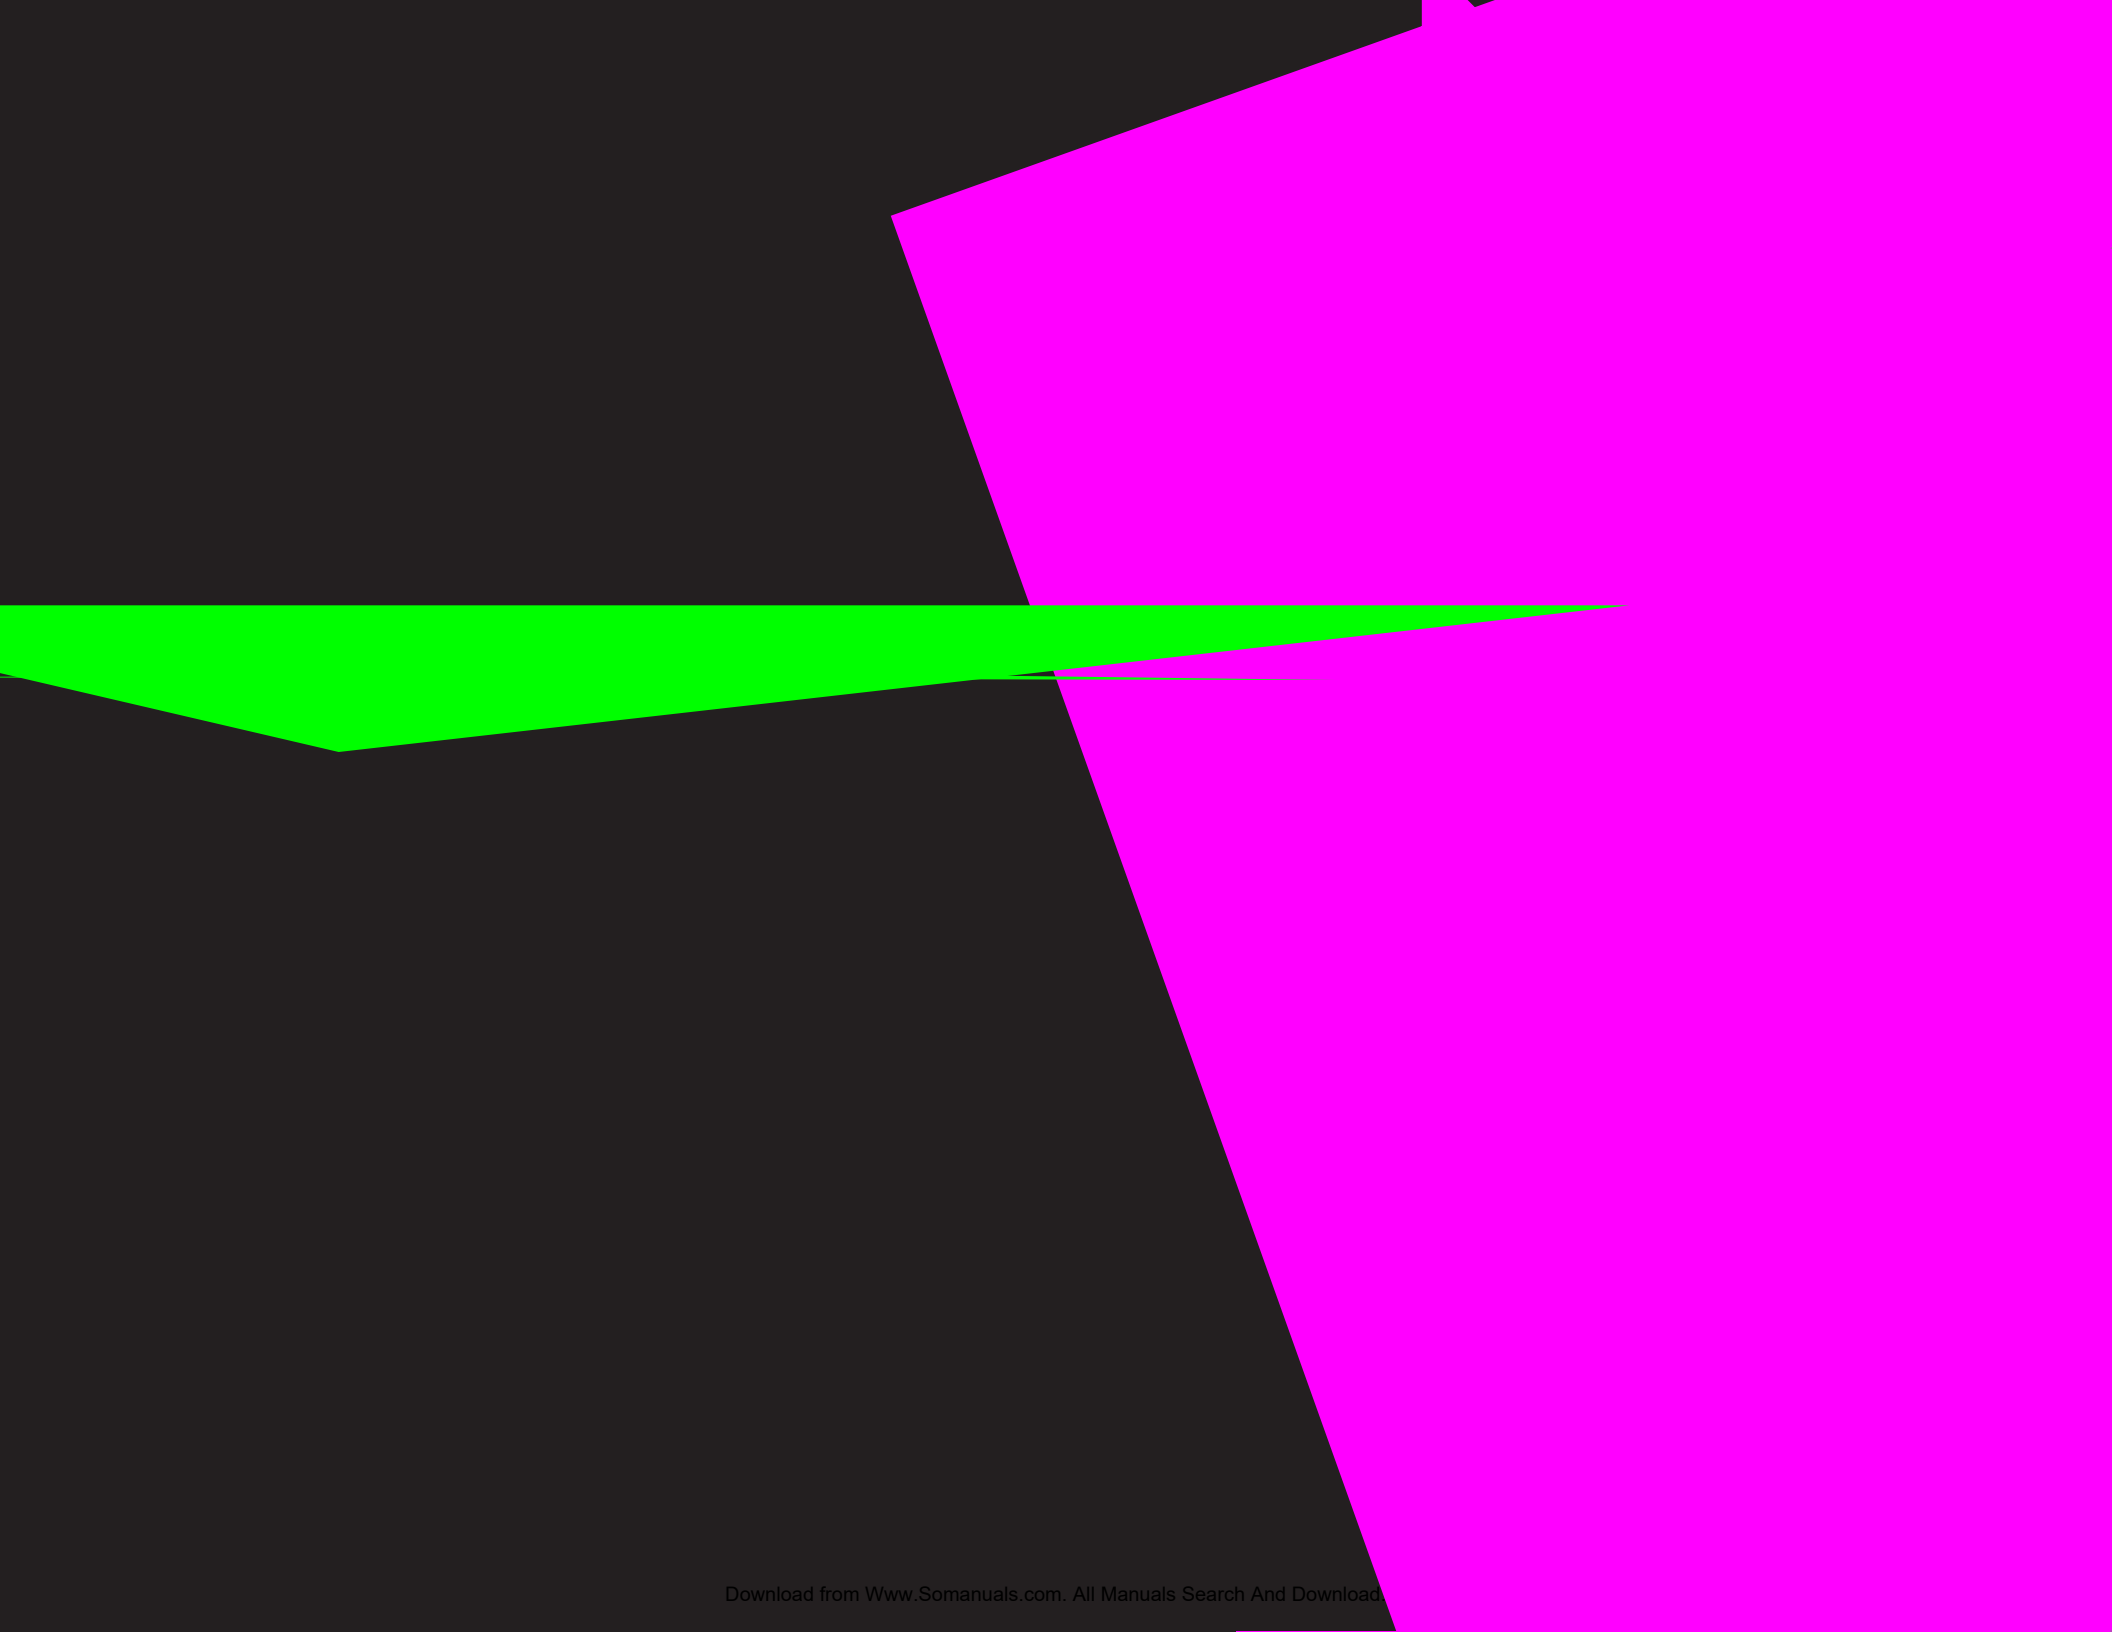


Basic operation

 Setup Menu for Universal Capability




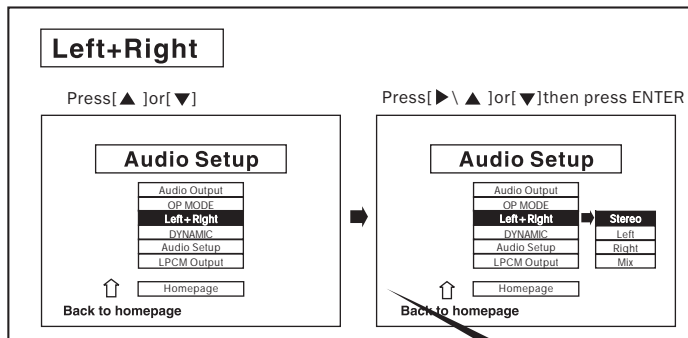


Setup Menu for Universal Capability

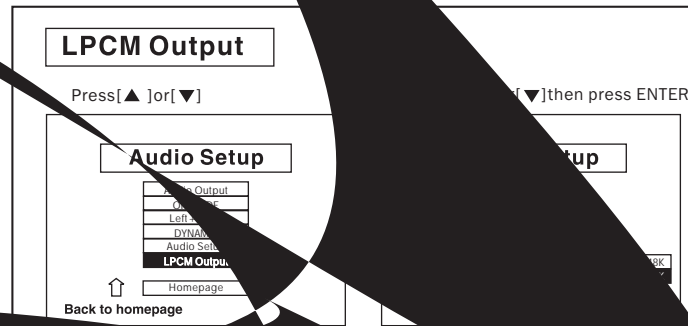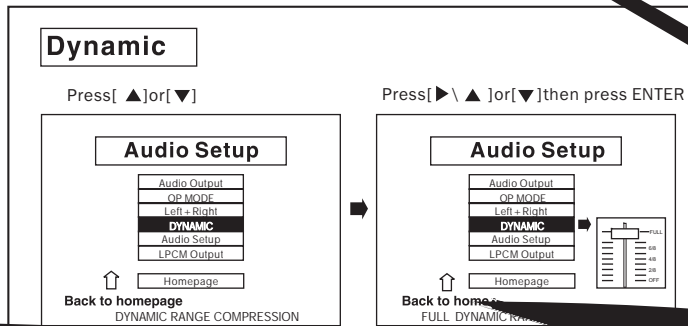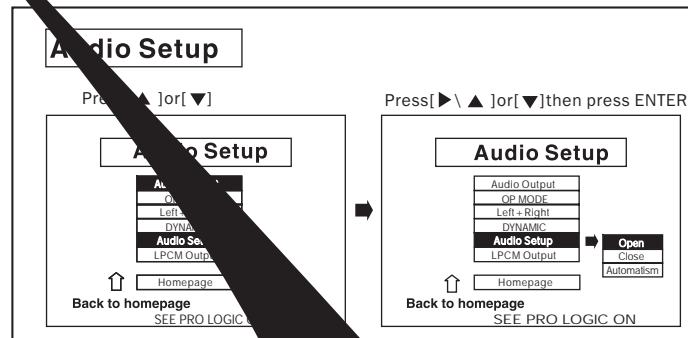   




Basic operation

    Setup Menu for Universal Capability

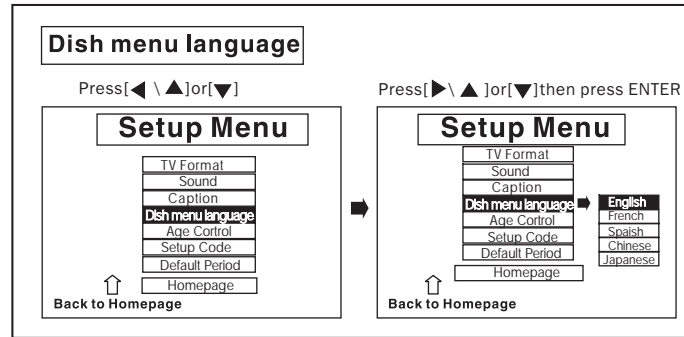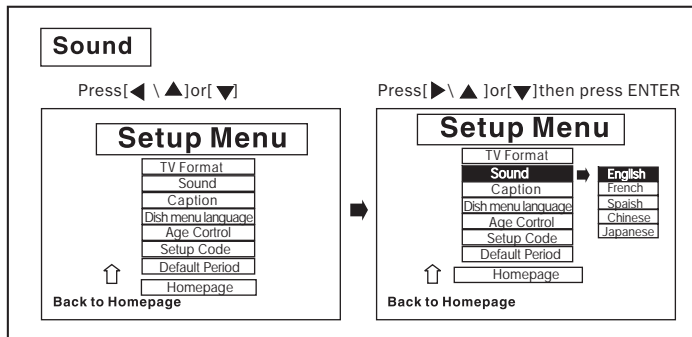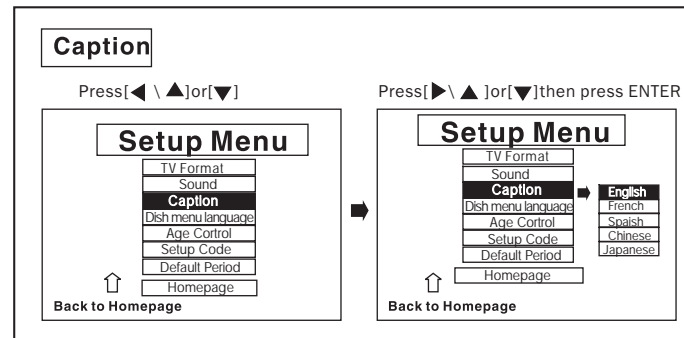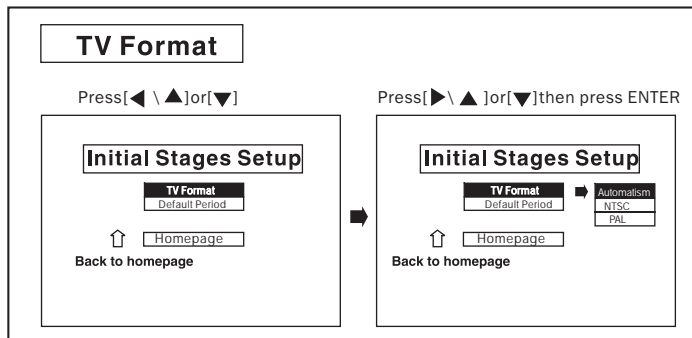


Basic operation

   Setup Menu for Universal Capability

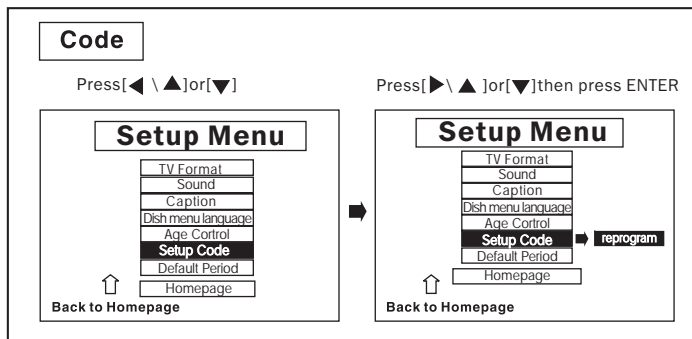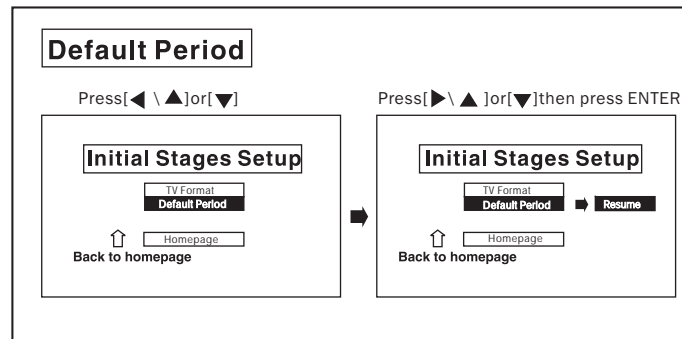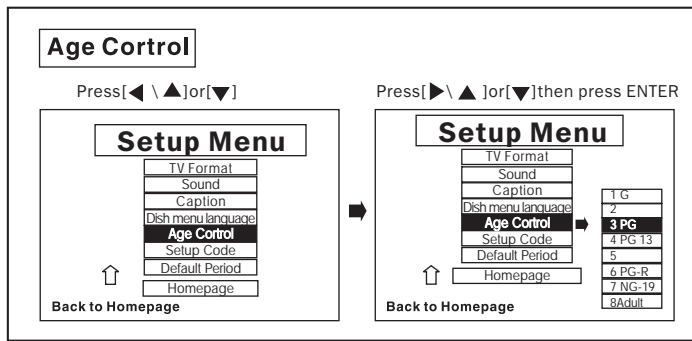


Basic operation

 Setup Menu for Universal Capability

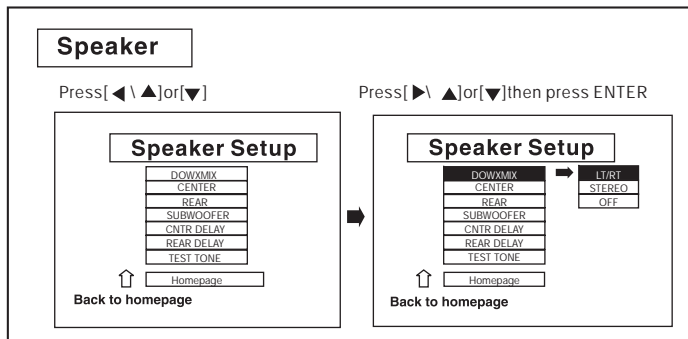

Mp3 menu

 Insert MP3 disc, and TV will show menu as follows:

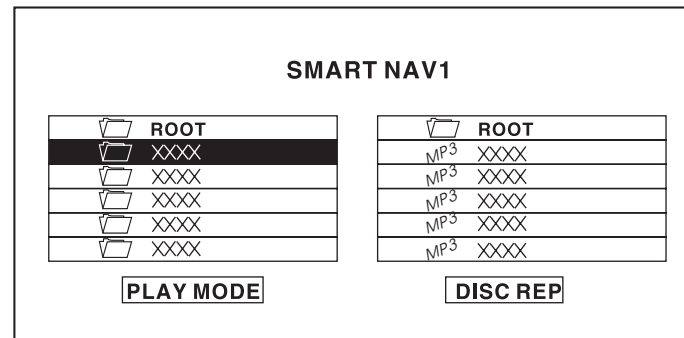

In this menu, the right is the submenu of the left, and it can cooperate remote control [◀] [▶] [▲] [▼] buttons to select wanted contents and programmes and press ENTER to confirm.

Accessories

External view
..... Number of items

①1

② 1

③ 1

④ 1

⑤ 2

External view
..... Number of items

⑥ 1

⑦ 1

⑧ 1

⑨ 1



The use of any accessories except of those provided might result in damage to the unit .Make sure only to use the accessories shipped with the unit , as shown above.

Specifications

Specifications subject to change without notice.

CD PLAYER

Signal/Noise ratio.....70dB
Frequency response.....20Hz-20KHz(+ 3dB)
Channel separation..... > 45dB
Dual D/A converter.....16Bit

FM Tuner

Tuning range.....EUROPE:87.5-108.0MHz
(50KHz step)
USA:87.5-108MHz
(100KHz step)
FM usable sensitivity(S/N = 30dB)..... < 12dB
Stereo separation..... > 45dB

AM Tuner

Tuning range.....EUROPE:522-1620KHz
(9KHz step)
USA:520-1720KHz
(10KHz step)
AM sensitivity.....28dB

GENERAL

Operating power.....12 Volts DC,negative
ground
%10THD output wiring.....Designed for using four
speakers only front and rear
channels cannot be combined
in use with 2speakers.
Load impedance.....compatible 4 to 8 ohm
speakers
Fuses.....10 amp
Dimensions.....178mm(L)x50mm(W)
x150mm(H)
Weight.....2.5Kgs

poor reception
For more information, see the
speaker wires and
Adjust the unit
Check the battery and black wire, or check the fuse block on the

(Check the Red wire with Key Ign

DVD **OWNER'S MANUAL**

Before installation and operating the unit please read
this manual thoroughly and retain
it for future reference

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>