## HD Home cinema projector





## Model: PRJHD66 User Manual

Download from Www.Somanuals.com. All Manuals Search And Download.

## **CONTENTS**

1177 ·
Warning
Safety Precautions
Caution
Installation of projector 4
Full setting
standard setting (front projection)5
Installation method ····································
input port instruction ······· 7
signalconnection map
Remote control instruction
Panel keystoke instruction
Open/close
Open operation
Close operation
Image trapezoid adjustment 12
Focus adjustment
Trapezoid adjustment ·······12
Image trapezoid adjustment 13
Menu setting method
1. Image menu adjustment
2. volume menu adjustment 14
3. Function menu adjustment ·······14
4. system menu adjustment
5. PIP menu adjustment
6. preset menu adjustment 14
7.TV Search menu adjustment
Maintenance
filter clearance
lamp replacement
Trouble shooting
Specification ····································
Accessory

## Accessory and purchasable parts

When you open the carton of projector, plese check the full accessories

Accessory list :

Projector 1 unit
remote control1 pc
power cable1 pc
AV signal cable1 pc
VGA signal cable1 pc
warranty card1pc
manual 1 pc
spare fuse1 pc
clear paper1 pc

Purchasable accessory:

- 1, projector screen
- 2, projector ceiling mount
- 3, spare lamps

# **Specification**

# WARNING

LCD Model 5"TFT
Input signal video component video(Ypbpr) ,VGA, HDMI TV audio stereo
output signal audio 5W×2 speaker(select)
LCD native resolution 640×480 (support 576P, 720P, 1080P) contrast ratio 800:1
Lens aperture 3.8 Focus 160mm
Lamp Power 150W Color-Temperature 9300K Life > 6000 hours working time < 24 hours
Imagesize $60 \sim 100$ inchBrightness1800 Lumenskeystone $\pm 20$ degree
Power Voltage $220\pm10\%$ VAC, 50Hz or $110\pm10\%$ VAC, 60Hz power consumption < 200W
Working condifitiontemperature $0^{\circ}C \sim +70^{\circ}C$ humidity $10\% \sim 65\%$
store condition temperature $-20^{\circ}C \sim +70^{\circ}C$ humidity $10\% \sim 90\%$
Remote control Frequency 38KHz
machine size $298 \times 210 \times 120$ mm weight $6$ Kg
(If all parameter changed,donot note again)

warning:

Please remember the model Number and series number if you need. And please check all accessories when you drop the carton package.

MODEL NUMBER:

 
SERIES NUMBER:

When you use this projector , please read this manual carefully



Donot see the light from the lens ,it is high bright lamp. It will damage your eye .specially for chirdren.

Warning:Donot place the projector in the wet condition, avoid to getting an electric shock



It indicates there is a instruction for important operation

It indicates there is a dangerous voltage

## Warning:

when close the projector ,the fans will continue to turn 90seconds. Before pull out the power cable, please be sure the fans stop to turn . Or it will damage the projector lamp.

1

## About the remote control battery:

The remote control battery should be fixed correctly , Or it will damage the remote control. Make sure the remote control out of chirdren reach.

# Safety precautions

# Trouble shooting

#### Warning;

when use this projector ,please read this manual carefully. If wrong operation ,it will cause electric shock or fire.so when use and repair this projector ,please comply with the following points.

# 1,Read manual9,Before use this projector ,pleasePlread full manual carefully andaroperate according to this manual instructionpr2,Clear10when clear this projector ,please pullndout the power cable. Use the wet clothouto clear,not the cleasner113.AccessoryAplease use our recommended accessory.ddOr it will damage the projector.p4,Use environmentpDonot place the projector in wet environmentth

5, installation and fix please place this projector in stable table .

6, Ventilationthe ventilation in the projector are bestfor projector work stably. Donot let the dustwall up the filter. Or it will cause the projectorhigh-temperature protected. So please use thewater to clear the filter per month.7. Power

please make sure the power same as your projector inquiry specification. (220 V or 110V) 8, Earthing wire

this projector has earthing wire .

It is three pin plug.

9, protect the power cable Please confirm the power cable are perfect when connect the projector. 10.Thunder when the thunder happen or long time no use, please pull the power cable out of projector. 11,Repairment As the high voltage inside ,please donot open or try to repair the projector by yourself. . Please ask a professional technician to repair the projector. 12, Far away Heat device please make sure this projector far away other heat device. It will damage the projector service life

#### **TROUBLE SHOOTING**

Please refer to this chapter when you encounter a problem list prior to contacting your dealer.

Problem:	Possible solution(s):
Projector turns off automatically	1, Dust cover the filter , Please wash this filter by water .
	2, Some of fans are broken ,donot turn again, It is high temperature protected system. Please replace the broken fans quickly.
Lamp doesn't work.	1, Power supplier are wrong . Please confirm your Projector power specification . 220V or 110V .
	2, Lamp are broken or out of service life. Please replace the lamp and test it again
	3, Check the ignitor . It is broken , please change a New ignitor.

## **Trouble Shooting**

# Caution

## **TROUBLE SHOOTING**

Please refer to this chapter when you encounter a problem list prior to contacting your dealer.

Problem:	Possible solution(s):			
No power	1, The projector donot connect the power cable			
	2, Donot open the projector .			
	3, Fuse broken			
Remote doesn't operate	1,Projector turned on to quickly after last turn off (needs 5 minutes).			
	2,Batteries defect.			
	3, Aim remote correctly at IR receiver.			
No image	1, Please remove the len cap at first			
	2, Projector turned off.			
	3, Selected the wrong input signal.			
	4, the mainboard are broken . Please Replace this mainboard.			

About the installation

- In order to improve the projector service life,
   About Open and close the projector It shouldnot place in a wet and ventilation condition.
   when open the projector ,connect
- Donot put the projector under the sunshine directly.
- Projector working temperature: 0°C ~+70°C ∘
   Projector store temperature : -20°C ~+70°C ∘
- Donot block the ventilation-window of projector
   If the projector interior temperature are too hot , the machine will be shut off automatically. This is hot protected system.
   So please clean the filter of projector per month . It is very important.
   Donot let the dust cover the filter.
- when open the projector ,connect the power cable and press the "power" key on the panel .the projector will work ,but the lamp will be bright more and more .After 5 minutes, the lamp wor normally
- when close the projector , press the power key again . And then the lamp shut off. But the fans still work until 5minutes lat When close the projector ,donot pull out the power cable directly . After 5minutes the projector will shut off automatically.

## Warning:


Fans will adjust the temperature, It is controlled by system . when the projector work, the fans turn slowly or quickly, so the fans noise are different. But it is normal. when the projector work, donot pull out the pwer cable. If the fans stop to work, it will cause the projector interior temperature very high, so it may damage the projector.

# Installation


# Maintenance

#### **PROJECTOR INSTALLATION**

Please use the setup instruction below:

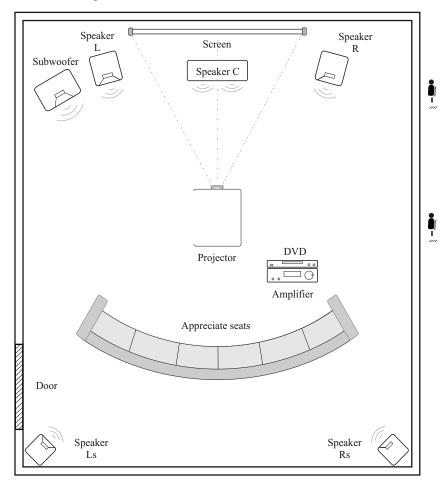

In order to get good image quality ,donot let the sunlight shine the screen directly .If you use the projector in the day time, 2. Take away the panel like the picture  $2_{\circ}$ 

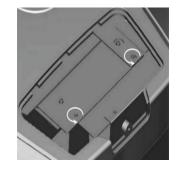

2

★Before replacing the lamp,make sure the lamp are cold₀
★Before open the lamp cover board,pull out the power cable
★When replacing the lamp,donot drop some dirty goods inside the projector.


# Maintenance

# **Projector Installation**

## Replace the projector lamp

Our projector lamp warranty 6 months. In different use environment, after 6000hours, the lamp brightness will reduce, the image will become dark .Therefore, please replace the lamp according to the following steps.

1, use the tool to remove the screw, like the picture 1 show

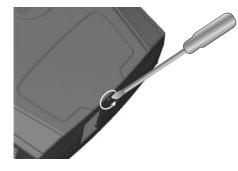

1

## Standard setting (Front projection)


Please refer to the following sheet, adjust your picture size and distance (from the lens to screen)

Taille D'écran	4:3	16:9
50"	2.45m	2.65m
72"	3.45m	3.75m
100"	4.73m	5.15m

The data maybe have 3% error, due to the image size according to the distance between projector and screen . if the distance is less 2m or over 5m, the image maybe not clear.

#### warning:

Please check the following picture to show the trapezoid adjustment

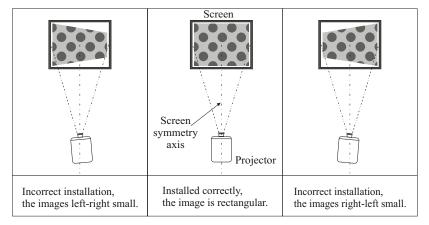


# Projector installation

# Maintenance

#### Installation method:

Contact a proffessional service man to mount this projector to a ceiling. Follow the instructions belowe for the correct projector positions:

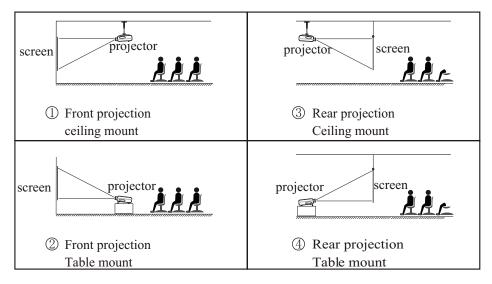

#### Warning:

- 1) This projector might damage beyond repair when it is incorrectly mounted on a ceiling or when its incorrectly installed on a surface or installed on a incorrect surface. It may also inflict damage to persons within close vicinity.
- 2)This projector can only be used in an environment with a temperature not exceeding the range of 0- 35 degree .The projector may malfunction if temperatures vary outside the normal operating range.
- 3) The sharpness of the screen might be interrupted when the projector is being used in a dusty,wet,moist or smoke filled environment. The projector might malfunction in a moist or wet environment.
- 4) Take care of sufficient ventilation around the projector.Otherwise this projecctor might overheat and cause life threatening situations

## Maintenance filter

The filter should be cleaned at least once a month (more often in dusty environments), or the projector will overheat. the step as follow:

> 1. Remove the grille like indicated below  $_{\circ}$



2. clear the dusty on the filter, Dry the filter sufficiently neverinstall a moist filter in this projector, and complete the installation.

# Menu setting

## Projector installation

2. SOUND INTERFACE




4. SYSTEM INTERFACE



3. ADVANCE INTERFACE



## 5. PIP INTERFACE

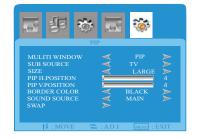

(NOTE: only HDMI and Pc, support PIP function, when PIP function not close, the singal just switch between HDMI and PC)

7. TV-CHANNEL INTERFACE


## 6. GEOMETRY INTERFACE



	19	÷	9		F
		TV	7		
MTS SKIP				MO N O ON	$\geq$
	TUNING		XX.		
	UAL SEA DR SYST		AV		
	D SYST			BG	

## Input port instruction

This projector can support component video signal, s-video signal, VGA signal and TV signal, the audio in and audio out function.

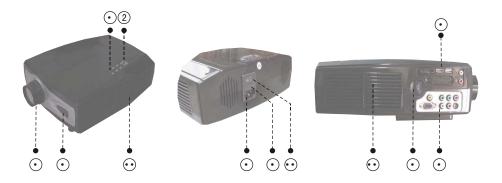

1. Indicator light

on stay situation, the light is red, on working situation, the light is green.

2. Panel key

use panel key to adjust parameter, ( read the introduce of the panel key )

- 3. Remote control receiver when use the remote control, please point this receiver directly.
- 4. Lens adjust the lens focus to improve the image quality.
- 5. Trapezoid correction


turn the knob on the projector left or right .Adjust the image become square,can adjust +/-156. HDMI signal input , max support 1080i signal.


7. Signal wire connect connect projector signal source, (read the signal port introduce) 8. Power switch when use ,you need connect the power wire with projector and the power jace. 9. Fuse if open the power switch, the indicator light donot work, it maybe the fuse broken。 (5A220V) 10. Power switch open and shut off this switch. when you want to open the projector it must open this switch at frist 11. ventilation this ventlilation window is very important donot block this window.otherwise it will burn the projector 12. ventilation two side of the projector have the ventilation, when use ,you must ensure do not block it

14

# Projector install

## Connect main equipment

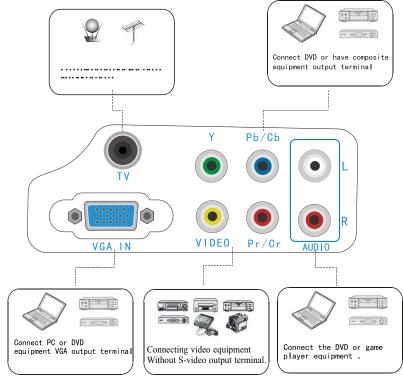

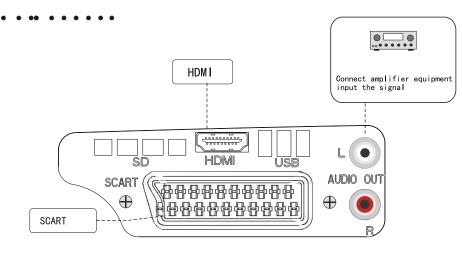

#### 8

## Menu setting method

- Using the projector, press "menu" key, the picture disply on screnn to adjust the menu(picture one);
- 2. press " ◀/ ▶ " key, the menu in turn circle into "image" > "volume" > "function" > "system" > "setting" > "image" adjust interface;
- Elect the adjust interface, use ▲/♥ key elect the item that need to adjust(picture two);
- 4. use (-) key to adjust the elect item paremeter;
- 5. Finished the elect item parameter, press the "menu" key again, exit the page ;
- 6. Repeat operate the 2~5step, till finished all the parameter's enactment, press "exit" key,exit the menu page, otherwise, the menu page will auto exit after a period time.

## 1. Image menu adjustment

- a. Press "menu" key, untile disply the above picture of the menu;
- b. Press "▲/▼" key, elect the option that need to adjust;
  c. Press "◀/▶" key, adjust
- c. Press " **\***/ **\***" key, adjust parallelisn elect parameter.
- d. Press the "menu" key again exit the menu page parameter adjust station.

 


(**0**ne)



(Two)

	f5	ঁ	G	٤	P	365
	FRAST	Pic		_		50
HUE SATU					_	55 50 50
COLC SCAL			AA	STAN 4	idari 3	
3D N MPEC		≠ : AE	AAA		ID GH	





13

# Image adjustment

# Remote control instruction

The new projector, using it first time, commonly will appear image faintness and the the image is trapezoid, it is course that not adjust well of the lens focus and the trapezoid. please follow the step the correction:

## Focus adjustment


- $\bullet_{\mathbf{x}}$  turn the lens into the projector, then turn it out slowly
- , at the same time, looking at the resolution point carefully,
   when the image is very clearly (take the middle area of the image), it is the best situation of the lens



**NOTE:** When you replace the projector from a cold to a warm environment water vapour might occur. Don't turn the projector on when this occurs but wait until the vapour has disappeared.


#### KEYSTONE

If a projected picture has keystone distortion, correct image with **Keystone** adjustment. The image becomes trapezoid shape when the screen or project is not level. Please reposition the projector to improve its angle to the screen. However, the circumference of the image may not be focussed.

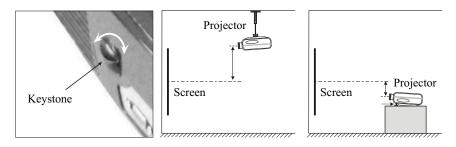

If not able to use the Keystone correction function to correct the trapezoid distortion, please reduce of the projector to centre the screen vertically.

## Remote panel instruction

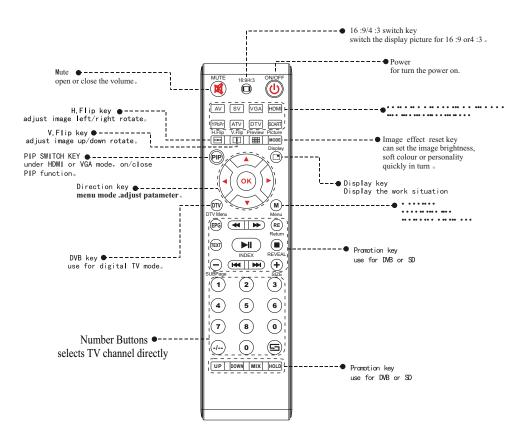


#### Precautions:

- 1, you need to dry the remote control with a dry cloth immediately when it gets wet.
- 2, when the battery hasn't been used for a long time we advise you to remove it from the remote .be sure that children can't reach the removed button cell .swallowing a of harm and is very dangerous

# Panel keystoke instruction

# Open/close

## Panel keystoke sketch map

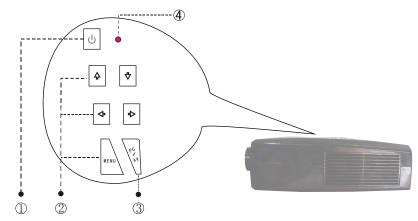

• Power key It can open or close the projector its function same as the "power" in the remote control

• Menu,direction Key It can adjust the menu by UP/Down ,left/right

Indicator light

•

2 PC/AV Key

It can choose the input signal (such as: AV.SVIDEO .Component video , HDMI,PC or TV) If the projector is the new one, please read "projector install" chapter, placed the projector, connect the powerwire and the signelwire, the operation as follow:

## Open operation

1.Before use the remoter . Put in two 7 size battery in it



Power

2. Open the power switch on the backboard, the power light begin to flash.



- 3. press the power key on the remote control or panel, the indicator light turn light.
- 4. After 2 second, the projector lamp begin work, began appear unclear white light on the screen, after 2 minute the projector begin work.

5. For the new projector. When the frist time to use, maybe will appear image unclear or **trapezoid distortion**, **please read** "**image adjustment**" **chapter**.

6. After the image is clear, then you can watch program. during watching, you also can setup the system parameter, please read "menu setting" chapter.

## Close operation

- 1.During use the projector, press "power" key, can let the projector switch to stay situation.
- 2.After inter into stay situation, the projector under auto protect, auto release hot, the indicator light is flase situation, but here, the projector is under auto protect situation, not accept any order. if need to startup again, must wait for finished the release hot.

电源

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com