

OPERATING INSTRUCTIONS

PRINCE CASTLE INC. 
WORLDWIDE

Kleen-Skreen Model No. 167

Redi-Gril®



Prince Castle's Kleen-Skreen® and Grill Wiper are part of an extensive line of grill tools designed to make the job of maintaining a griddle fast and easy. The Kleen-Skreen® polisher removes grease build-up and burnt food with ease. This tool helps restore grill surface's original shine. Replaceable skreens and pads take only minutes to change.

WARRANTY

This product is warranted to be free from defects in material and workmanship for (1) one year from date of original installation not to exceed 18 months from date of shipment from our factory. This warranty covers parts only. No labor is covered under the terms of this warranty.

ORDERING INFORMATION

Model No.	Description	Packing	Shipping Weight
167	Redi-Grill Kleen-Skreen	1 per pkg.	1 lb. (0.45 kg)
167-1	Skreens Only	12 per pkg.	8 oz. (226.80G)
167-2	Pads Only	4 per pkg.	6 oz. (170.10G)

PRINCE CASTLE INC. 
WORLDWIDE

355 East Kehoe Blvd. • Carol Stream, IL 60188

Tel: (630) 462-8800 • Fax: (630) 462-1460

Toll Free: 1-800-PCASTLE

Printed in February 1998
Prince Castle Inc.

167-501

PARTS

1. Always refer to the Parts List in this manual. Part numbers are needed for reference when ordering.
2. All replacement parts should be purchased from your local Prince Castle Service Agency or your local Prince Castle Distributor.
3. RETURNS: All inoperable warranty parts must be returned to the Service Center.
4. MATERIALS: Prince Castle reserves the right to make suitable substitutions in materials upon their availability.

INSTALLATION

1. After you have removed the unit from the carton, inspect the unit for signs of damage. If there is damage to the unit:
 - Notify carrier within 24 hours after delivery.
 - Save carton and packing materials for inspection purposes.
 - Contact the Prince Castle Customer Sales Department at 1-800-722-7853 to arrange for a replacement to be sent.
2. Verify that all parts have been received.


OPERATION

1. Scrape grill first with the Redi-grill® scraper (Model No. 161) available from your Restaurant Equipment Dealer.
2. Place one hand on Kleen-Skreen® handle and the other hand on the guard. Place the Kleen-Skreen® flat on the grill. Pressing down on the grill, move the Kleen-Skreen® back and forth over the grill. For more "bite" tilt the handle so that about half of the screen and the pad are on the grill during motion.

REPLACING OR REVERSING PADS AND SCREENS


1. Set Kleen-Skreen® down and remove screen by lifting holding clips.
2. Wash in hot soapy water.
3. Crease screen about 1/2" on both ends. Set down with pad positioned on top. See figure 1.

 figure 1

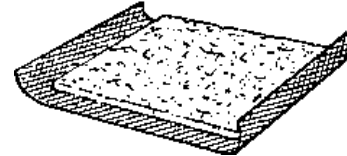


4. Place Kleen-Skreen® handle on pad. Pull back clip and insert screen under clip as shown. See figure 2.

 figure 2

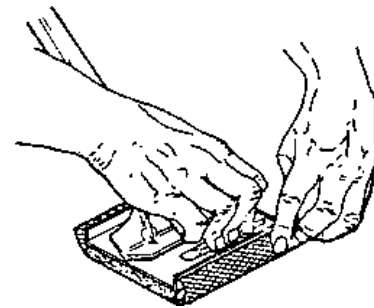

5. Turn unit around. Pull back clip and insert other end of screen. See figure 3.

 figure 3

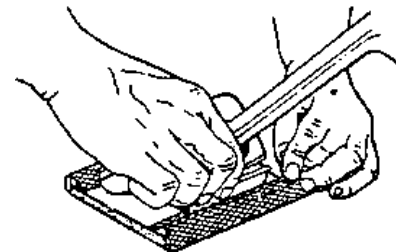

6. Snug screen against pad by repeating insertions if required.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>