

PRO-FORM[®] 515S


elliptical trainer

Patent Pending

Model No. PFEL03010

Serial No. _____

Serial
Number
Decal

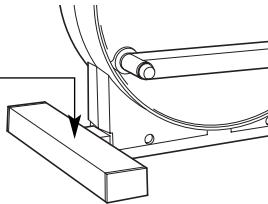

USER'S MANUAL

QUESTIONS?


As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing parts, we will guarantee complete satisfaction through direct assistance from our factory.

TO AVOID DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge.

CUSTOMER HOT LINE:

1-800-999-3756

Mon.-Fri., 6 a.m.-6 p.m. MST

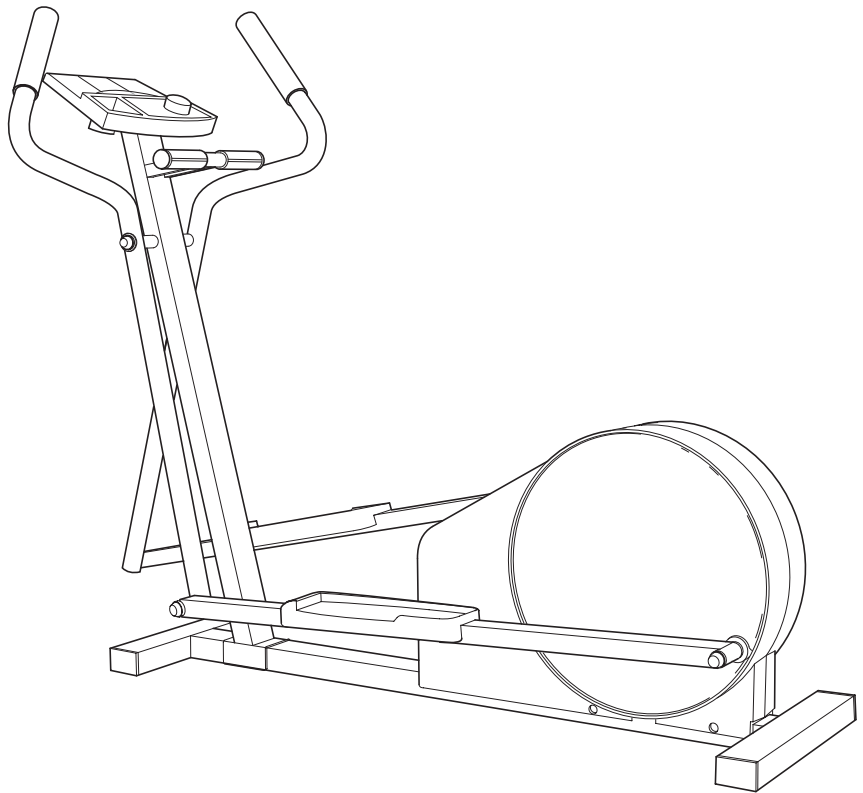

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.



Visit our website at

www.proform.com

*new products, prizes,
fitness tips, and much more!*

PRO-FORM[®] 515S

elliptical trainer

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS3
BEFORE YOU BEGIN4
PART IDENTIFICATION CHART5
ASSEMBLY6
HOW TO USE THE ELLIPTICAL TRAINER9
MAINTENANCE11
CONDITIONING GUIDELINES12
PART LIST14
EXPLODED DRAWING15
HOW TO ORDER REPLACEMENT PARTSBack Cover
LIMITED WARRANTYBack Cover

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the PROFORM® 515S elliptical trainer.

1. Read all instructions in this manual before using the elliptical trainer.
2. Use the elliptical trainer only as described in this manual.
3. It is the responsibility of the owner to ensure that all users of the elliptical trainer are adequately informed of all precautions.
4. The elliptical trainer is intended for in-home use only. Do not use the elliptical trainer in a commercial, rental, or institutional setting.
5. Place the elliptical trainer on a level surface, with a mat beneath it to protect the floor or carpet. Keep the elliptical trainer indoors, away from moisture and dust.
6. Inspect and tighten all parts regularly. Replace any worn parts immediately.
7. Keep children under the age of 12 and pets away from the elliptical trainer at all times.
8. The elliptical trainer should not be used by persons weighing more than 250 pounds.
9. Wear appropriate clothing when using the elliptical trainer. Always wear athletic shoes for foot protection.
10. When mounting and dismounting the elliptical trainer, always hold the handlebars or the T-handle and step onto and off the pedal that is in the lowest position.
11. Each time you stop exercising on the elliptical trainer, allow the pedals to come to a complete stop before dismounting.
12. Always keep your back straight when using the elliptical trainer. Do not arch your back.
13. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.
14. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


BEFORE YOU BEGIN

Congratulations for selecting the PROFORM® 515S elliptical trainer. The 515S is an incredibly smooth exerciser that moves your feet in a natural elliptical path, minimizing the impact on your knees and ankles. And the unique 515S features adjustable resistance, upper-body and stationary handlebars, and a multi-mode console to help you get the most from your exercise. Welcome to a whole new world of natural, elliptical-motion exercise from PROFORM.

For your benefit, read this manual carefully before you use the elliptical trainer. If you have questions after reading the manual, call our Customer Service

Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is PFEL03010. The serial number can be found on a decal attached to the elliptical trainer (see the front cover of this manual for the location of the decal).





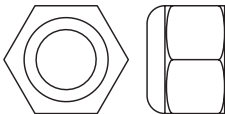
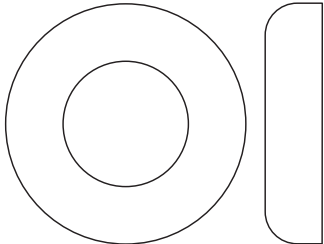
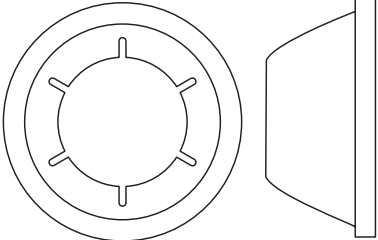
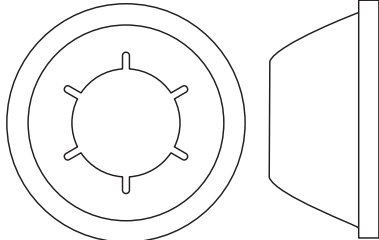
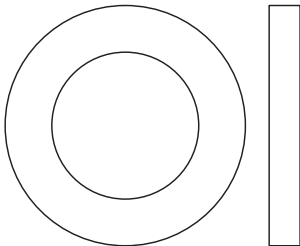
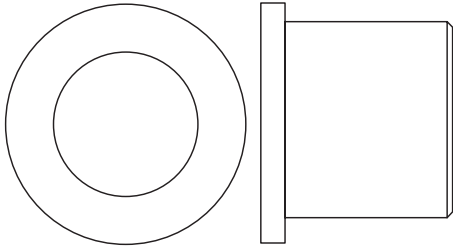
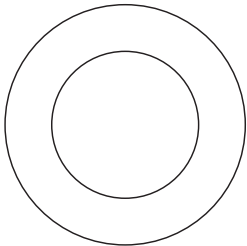
 
Before reading further, please look at the drawing below and familiarize yourself with the parts that are labeled.

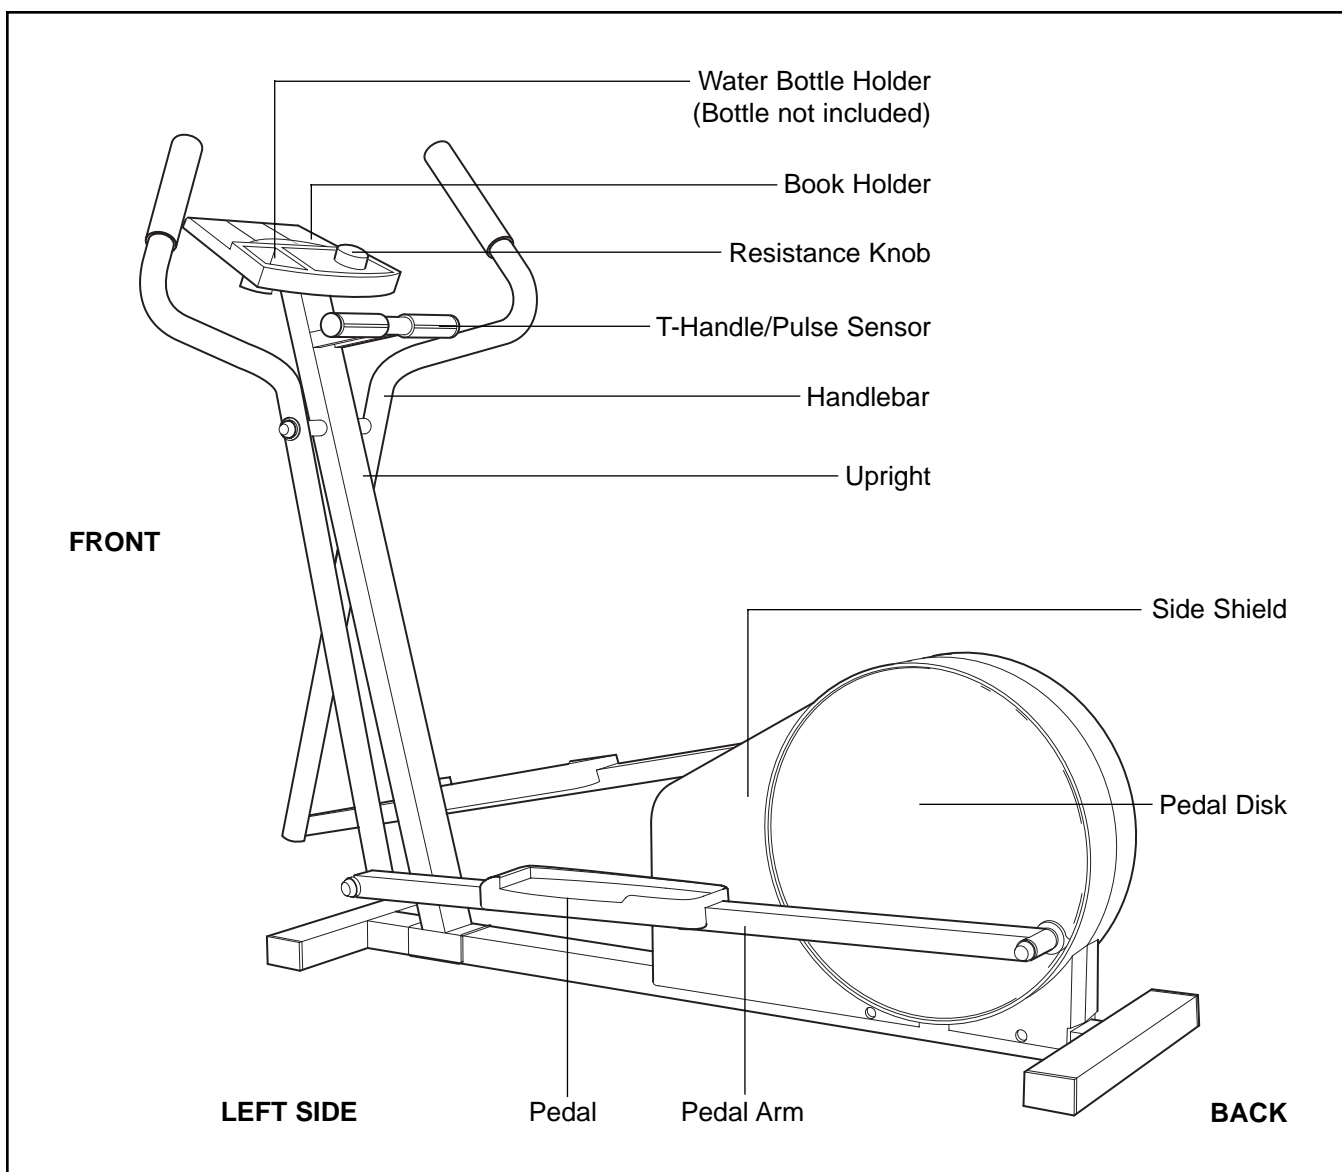

PART IDENTIFICATION CHART

Use the chart below to identify the small parts used in assembly. The number in parenthesis below each part refers to the key number of the part, from the PART LIST on page 14. The number after the dash indicates



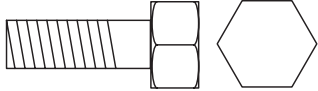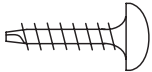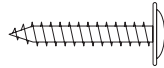

the quantity needed for assembly. **Note: Some parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.**

		
M6 x 16mm Screw (54)—2	M4 x 16mm Screw (34)—5	M4 x 19mm Flange Screw (16)—6
		
M6 Black Nylon Locknut (55)—2	M10 Nylon Locknut (29)—4	
		
Weld Spacer (49)—2	3/4" Axle Cap (43)—4*	5/8" Axle Cap (57)—2*
		
Handlebar Spacer (39)—2	Rear Pedal Arm Bushing (11)—8	
		
Pedal Arm Spacer (41)—2		


* Extra parts may be included.

ASSEMBLY


Assembly requires two people. Place all parts of the elliptical trainer in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.

Assembly requires that you have a phillips screwdriver , two adjustable wrenches , a rubber mallet , and a pair pliers .

1. While another person holds the Console (6) near the Upright (3), insert the Resistance Cable (26) down through the Upright.

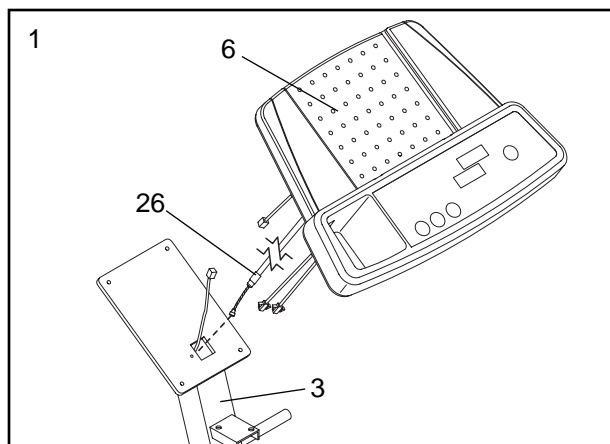


2. While another person holds the Upright (3) near the Frame (1) as shown, connect the Extension Wire (61) to the Sensor Wire (25).

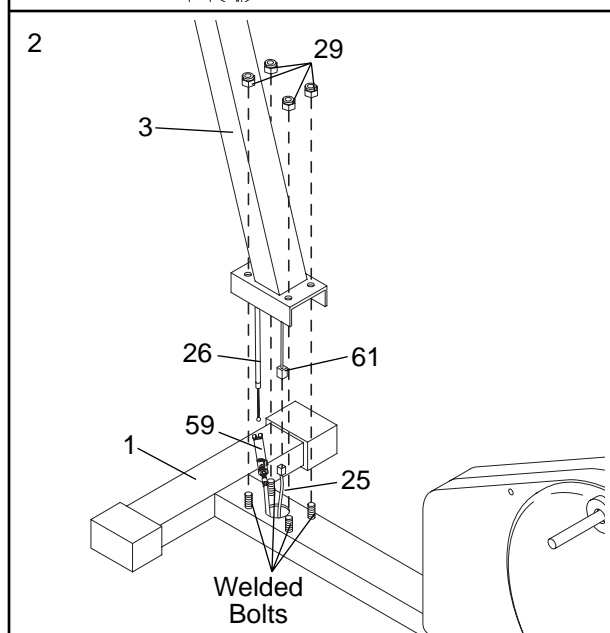


Next, connect the Resistance Cable (26) to the Lower Cable (59) in the following way:

- Refer to drawing A. Pull up on the metal bracket, and insert the tip of the Resistance Cable (26) into the wire clip on the Lower Cable (59) as shown.
- Refer to drawing B. **Firmly** pull the Resistance Cable (26) and slide it into the metal bracket on the Lower Cable (59) as shown.
- Refer to drawing C. Using pliers, squeeze the prongs on the upper end of the metal bracket together.


Slide the Upright (3) onto the welded bolts on the Frame (1). **Make sure that the Lower Cable (59) doesn't become caught on the Upright or the Frame. Be careful to avoid pinching the Lower Cable, the Resistance Cable (26), the Sensor Wire (25), or the Extension Wire (61) between the Upright and the Frame.** Tighten an M10 Nylon Locknut (29) onto each welded bolt.

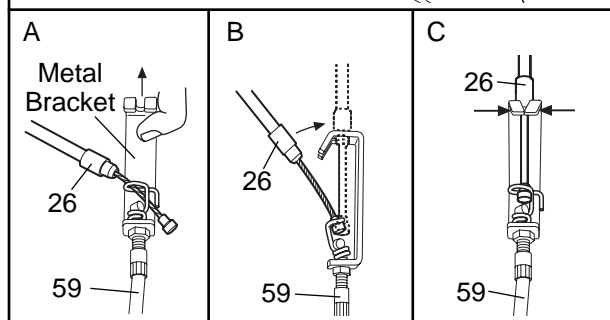

3. Insert the pulse wires beneath the indicated bracket on the Upright (3) and up out of the hole in the top of the Upright. Attach the T-Handle (10) to the Upright with two M6 x 16mm Screws (54) and two M6 Black Nylon Locknuts (55).

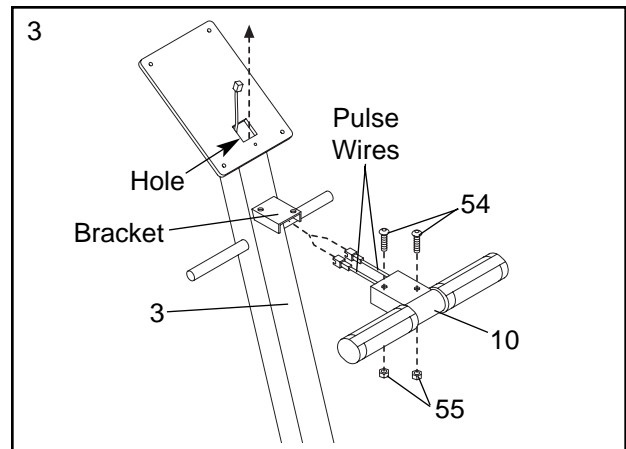


4. While another person holds the Console (6) near the Upright (3), attach the ground wire to the Upright with an M4 x 16mm Screw (34). Connect the Extension Wire (61) to the corresponding console wire. Connect the pulse wires to the corresponding console wires.

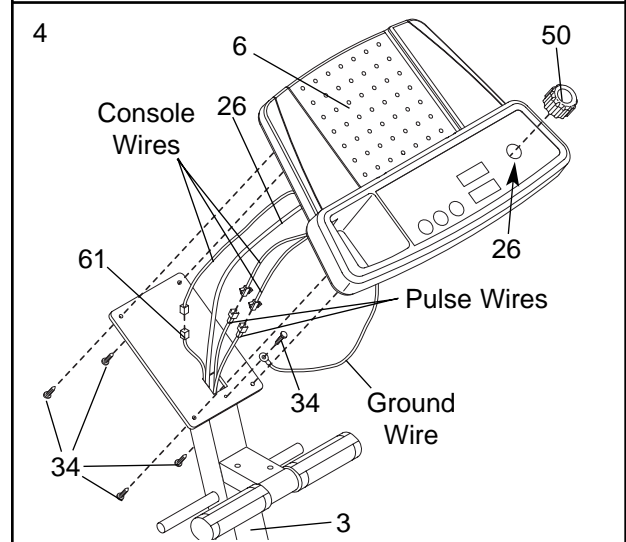

Pull any slack Resistance Cable (26) up out of the Upright (3) and push it into the Console (6). Feed the slack Extension Wire (61) down into the Upright. Attach the Console to the Upright with four M4 x 16mm Screws (34). **Be careful to avoid pinching the wires or pinching or kinking the Resistance Cable.**


Press the Resistance Knob (50) onto the upper end of the Resistance Cable (26).

5. Find the Left Pedal (31), which has a ridge on the right side. Attach the Left Pedal to one of the Pedal Arms (12) with three M4 x 19mm Round Head Screws (16) as shown.

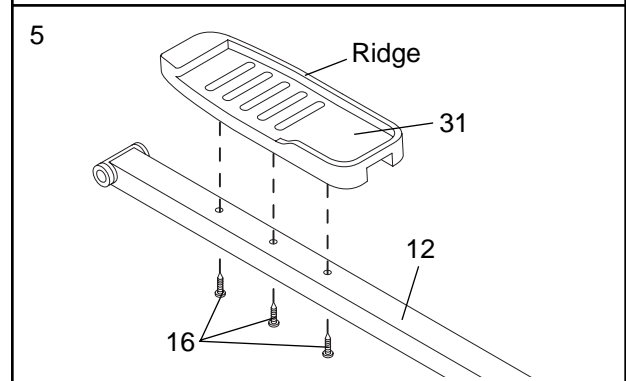

Repeat this step to attach the Right Pedal to the other Pedal Arm (not shown).

6. Locate the Left Handlebar (8) (there is an "L" sticker on the Left Handlebar for identification). Apply a thin film of the included grease to the axle at the lower end of the Left Handlebar.

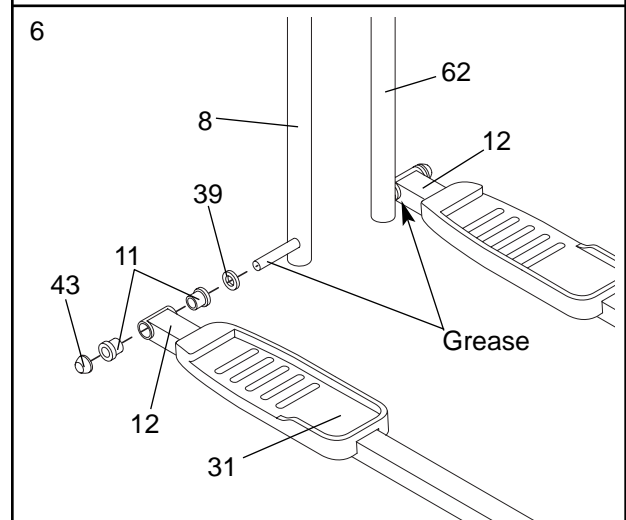

Slide a Handlebar Spacer (39) and the Pedal Arm (12) with the Left Pedal (31) onto the Left Handlebar (8) as shown. Make sure that there are two Pedal Arm Bushings (11) in the Pedal Arm. (Note: These parts fit tightly; it may be helpful to use a rubber mallet). Next, refer to the PART IDENTIFICATION CHART on page 5 and identify the 3/4" Axle Caps (43). Tap a 3/4" Axle Cap onto the Left Handlebar.

Repeat this step to attach the other Pedal Arm (12) to the Right Handlebar (62).

- Slide a Weld Spacer (49) onto the left axle on the Upright (3). Make sure that the open side of the Weld Spacer is facing the Upright.

Apply a thin film of the included grease to the axles and the Crank Arms (59) in the locations indicated.

Slide a Pedal Arm Spacer (41) onto the left Crank Arm (59). Make sure that there are two Rear Pedal Arm Bushings (11) in the Pedal Arm (12) attached to the Left Handlebar (8).


With the help of another person, slide the Left Handlebar (8) onto the left axle on the Upright (3) while sliding the left Pedal Arm (12) onto the left Crank Arm (59). Note: These parts fit tightly; it may be helpful to use a rubber mallet. In addition, it may be helpful to rotate the left Crank Arm (59) to a different position.

Tap a 5/8" Axle Cap (57) onto the left axle on the Upright (3). Tap a 3/4" Axle Cap (43) onto the left Crank Arm (59).

Repeat this step to attach the Right Handlebar and the right Pedal Arm (not shown).

- The Console (6) requires four "AA" batteries (not included). Alkaline batteries are recommended.

To install batteries, look under the Console (6) and locate the two Battery Covers (9) (there is one Battery Cover on each side). Remove the Battery Covers by sliding them in the direction shown by the arrows on the Battery Covers. Insert two batteries into each battery compartment; **make sure that all four batteries are turned so the negative ends (marked "-") are touching the springs in the battery compartments.** Then, reattach the Battery Covers by sliding them in the opposite direction.

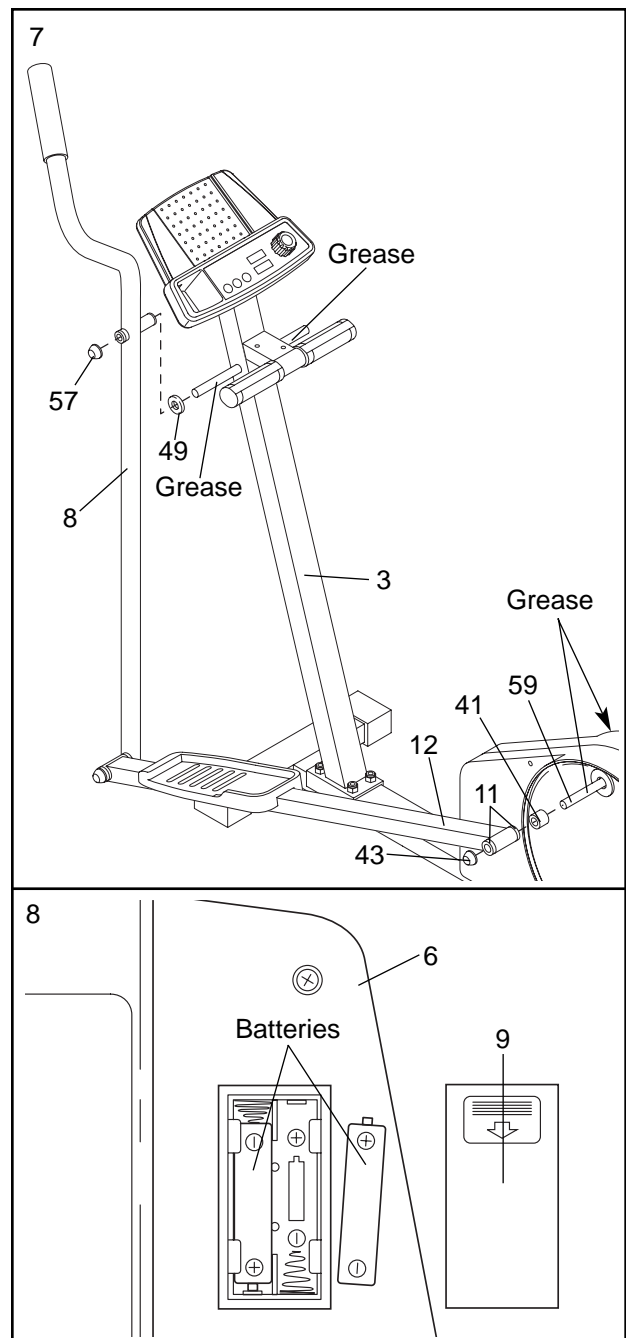


- Make sure that all parts of the elliptical trainer are properly tightened.** Place a mat under the elliptical trainer to protect the floor or carpet from damage.

HOW TO USE THE ELLIPTICAL TRAINER

HOW TO EXERCISE ON THE ELLIPTICAL TRAINER


To mount the elliptical trainer, firmly hold the handlebars or the T-handle and carefully step onto the pedal that is in the lowest position. Next, step onto the other pedal. Push the pedals until they begin to move with a continuous motion. **Note: The pedal disks can turn in either direction. It is recommended that you turn the pedal disks in the direction shown below; however, to give variety to your exercise, you may choose to turn the pedal disks in the opposite direction.**

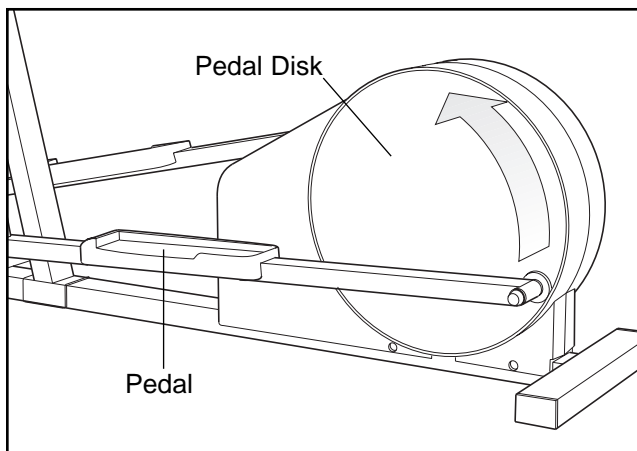


To dismount the elliptical trainer, allow the pedals to come to a complete stop. **CAUTION: The elliptical trainer does not have a free wheel; the pedals will continue to move until the flywheel stops.** When the pedals are stationary, step off the highest pedal first. Then, step off the lowest pedal.

HOW TO ADJUST THE RESISTANCE OF THE PEDALS

As you exercise, you can adjust the resistance of the pedals with the resistance knob on the console. To increase the resistance, turn the knob clockwise; to decrease the resistance, turn the knob counterclockwise.

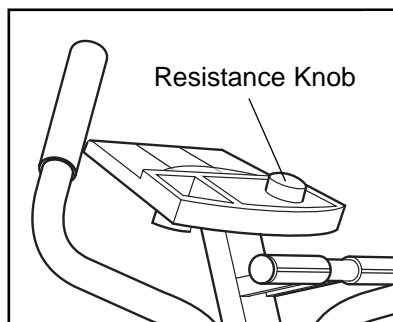

DESCRIPTION OF THE CONSOLE

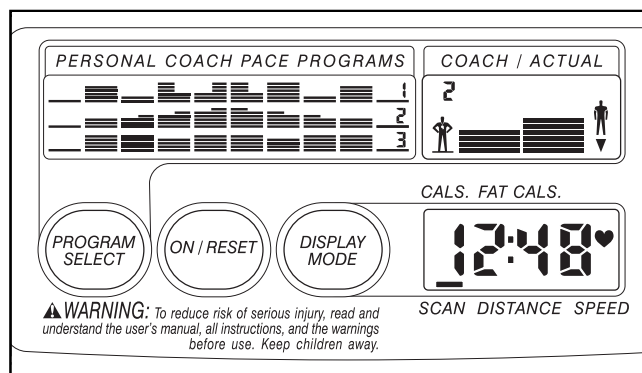

The innovative console offers a manual mode and three personal coach pace programs. The pace programs are designed to help you achieve specific exercise goals by pacing your exercise. You can choose from a stamina-building interval program, an aerobic program, and a special fat burning program. The console also features six modes that display instant exercise feedback. The modes are described below:

Calories—This mode shows the approximate number of calories you have burned.

Fat Calories—This mode shows the approximate number of *fat calories* you have burned (see Burning Fat on page 12).

Time—If you select the manual mode, this mode will show the elapsed time. If you select one of the three pace programs, this mode will count down the time remaining in the program. Note: When you stop exercising, the time will flash when it is displayed.

Distance—This mode shows your total distance, in miles.


Speed—This mode shows your exercise pace, in miles per hour.

Scan—This mode displays the other five modes, for seven seconds each, in a repeating cycle.

Pulse—This mode shows your heart rate when the pulse sensor is used.


HOW THE PACE PROGRAMS OPERATE

When you use a pace program, two columns of bars will appear in the upper display. The left column represents a target pace, and the right column shows your actual exercise

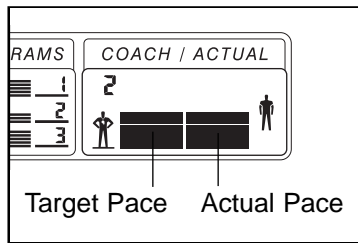

pace. The target pace will change periodically during the program; as the target pace changes, simply adjust your pace to keep both columns at the same height. **Important: The target pace is a goal pace. Your actual pace may be slower than the target pace, especially during the first few months of your exercise program. Be sure to exercise at a pace that is comfortable for you.**

The three graphs on the console show how the target pace will change during the programs. During the Aerobic

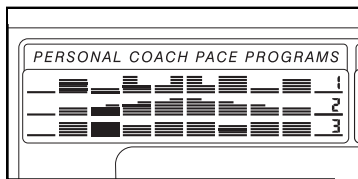

program (program 2), for example, the target pace will gradually increase during the first half of the program, and gradually decrease during the last half of the program. Each program will last for twenty minutes.

STEP-BY-STEP CONSOLE OPERATION


Before the console can be operated, batteries must be installed. See assembly step 8 on page 8.

Follow the steps below to operate the console.

1 Turn on the power

To turn on the power, press the on/reset button or simply begin exercising.


The entire display will appear for two seconds; the console will then be ready for use. Note: If batteries were just installed, the power will already be on.

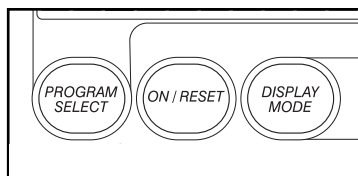

2 Select one of the three pace programs or the manual mode

To select one of the pace programs, repeatedly press the program select button. A


1, 2, or 3 will appear in the upper display to show which program you have selected. To select the manual mode, press the program select button until no number appears in the upper display. The programs will be selected in the following order: program 1 (interval), program 2 (aerobic), program 3 (fat burn), manual mode.

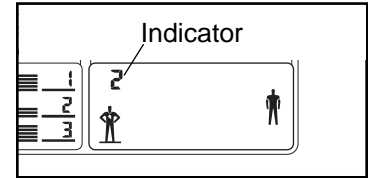

3 Begin your workout

If you selected the manual mode, go to step 4. If you selected one of the pace programs, two

columns of bars will appear in the upper display. The left column will show a target pace. The right column will show your actual exercising pace. Adjust your pace until the same number of bars appear in both columns. The arrows on the right side of the upper display will show whether you need to increase or decrease your pace. Each time the target pace changes during the program, adjust your pace to keep both columns at the same height.

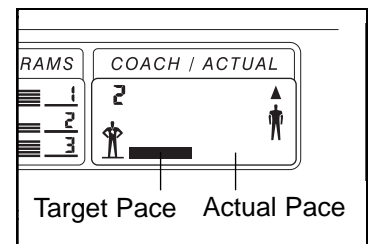


4 Follow your progress with the six feedback modes

The scan mode—


Repeatedly press the mode button until a bar appears above the scan

symbol. When the scan mode is selected, the console will display the calories, fat calories, time, distance, and speed modes, for seven seconds each, in a repeating cycle.

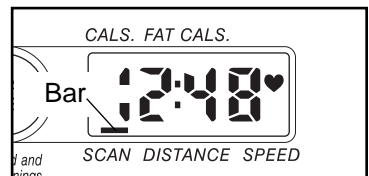

The calories, fat calories, time, distance, or speed mode—


Repeatedly press the mode button until a bar appears below or above the name of the desired mode. (Note: When the time mode is selected, no bar will appear; when the speed mode is selected, the letters MPH will appear instead of a bar.) Make sure that there is not a bar above the word “scan.”

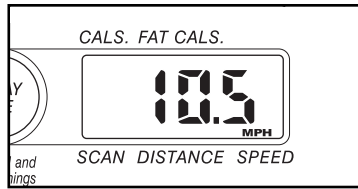

If desired, press the on/reset button to reset the lower display.

5 Measure your heart rate if desired

Note: If the metal contacts on the pulse sensor are covered by thin sheets of plastic, peel off the plastic.

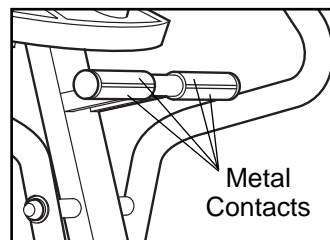

To use the pulse sensor, place your hands on the metal contacts. Your palms must be resting on

the upper contacts and your fingers must be touching the lower contacts. Avoid moving your hands. After a moment, the heart-shaped indicator in the display will begin to flash and your heart rate will be shown. For the most accurate heart rate reading, continue to hold the contacts for about 15 seconds.

Make sure that your hands are positioned as described above, and that you are not moving your hands excessively or squeezing the metal contacts too tightly.

⚠ WARNING: The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.

6 Turn off the power

To turn off the power, simply wait for about six minutes. If the pedals are not turned and the buttons are not pressed for six minutes, the power will turn off automatically.

MAINTENANCE

Inspect and tighten all parts of the elliptical trainer regularly. Replace any worn parts immediately.

The elliptical trainer can be wiped clean with a soft cloth and mild detergent. **Do not use abrasives or solvents.** To prevent damage to the console, keep liquids away from the console. Use only a sealable water bottle in the console.

CONSOLE TROUBLE-SHOOTING

If the console does not function properly, the batteries should be replaced. To replace the batteries, refer to assembly step 8 on page 8.

PULSE SENSOR TROUBLE-SHOOTING

- Avoid moving your hands while using the pulse sensor. Excessive movement may interfere with heart rate readings.

- Do not hold the metal contacts too tightly; doing so may interfere with heart rate readings.
- For the most accurate heart rate reading, hold the metal contacts for about 15 seconds.
- For optimal performance of the pulse sensor, keep the metal contacts clean. The contacts can be cleaned with a soft cloth—never use alcohol, abrasives, or chemicals.

STORAGE

When storing the elliptical trainer, remove the batteries from the console. Keep the elliptical trainer in a clean, dry location, away from moisture and dust.

CONDITIONING GUIDELINES

The following guidelines will help you to plan your exercise program. Remember that proper nutrition and adequate rest are essential for successful results.

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems.

The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.

EXERCISE INTENSITY

Whether your goal is to burn fat or to strengthen your cardiovascular system, the key to achieving the desired results is to exercise with the proper intensity. The proper intensity level can be found by using your heart rate as a guide. The chart below shows recommended heart rates for fat burning, maximum fat burning, and cardiovascular (aerobic) exercise.

HEART RATE TRAINING ZONES									
MIN ♥	125	120	115	110	105	95	90	Fat Burn	
BPM	145	138	130	125	118	110	103	Max Burn	
MAX ♥	165	155	145	140	130	125	115	Aerobic	
AGE	20	30	40	50	60	70	80		

To find the proper heart rate, first find your age at the bottom of the chart (ages are rounded off to the nearest ten years). Next, find the three numbers above your age. The three numbers are your "training zone." The smallest number is the recommended heart rate for fat burning; the middle number is the heart rate for maximum fat burning; the largest number is the heart rate for aerobic exercise.

Burning Fat

To burn fat effectively, you must exercise at a low intensity level for a sustained period of time. During

the first few minutes of exercise, your body uses easily accessible *carbohydrate* calories for energy. Only after the first few minutes of exercise does your body begin to use stored *fat* calories for energy. If your goal is to burn fat, adjust the intensity of your exercise until your heart rate is near the smallest number in your training zone as you exercise. For maximum fat burning, adjust the intensity of your exercise until your heart rate is near the middle number.

Aerobic Exercise

To strengthen your cardiovascular system, your exercise must be "aerobic." Aerobic exercise is activity that requires large amounts of oxygen for prolonged periods of time. This increases the demand on the heart to pump blood to the muscles, and on the lungs to oxygenate the blood. For aerobic exercise, adjust the intensity of your exercise until your heart rate is near the largest number in your training zone.

WORKOUT GUIDELINES

Each workout should include the following three parts:

A Warm-up

Begin each workout 5 to 10 minutes of stretching and light exercise (see page 13). A proper warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.

Training Zone Exercise

After warming up, exercise for 20 to 30 minutes with your heart rate in your training zone. (During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes.)

A Cool-down

Finish each workout with 5 to 10 minutes of stretching. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

EXERCISE FREQUENCY

To maintain or improve your condition, plan three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may plan up to five workouts each week, if desired.

Remember, the key to success is make exercise a regular and enjoyable part of your everyday life.

SUGGESTED STRETCHES

The correct form for several basic stretches is shown at the right. Move slowly as you stretch—never bounce.

1. Toe Touch Stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Hamstrings, back of knees and back.

2. Hamstring Stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Hamstrings, lower back and groin.

3. Calf/Achilles Stretch


With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall. Hold for 15 counts, then relax. Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well. Stretches: Calves, achilles tendons and ankles.

4. Quadriceps Stretch

With one hand against a wall for balance, reach back and grasp one foot with your other hand. Bring your heel as close to your buttocks as possible. Hold for 15 counts, then relax. Repeat 3 times for each leg. Stretches: Quadriceps and hip muscles.

5. Inner Thigh Stretch

Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible. Hold for 15 counts, then relax. Repeat 3 times. Stretches: Quadriceps and hip muscles.

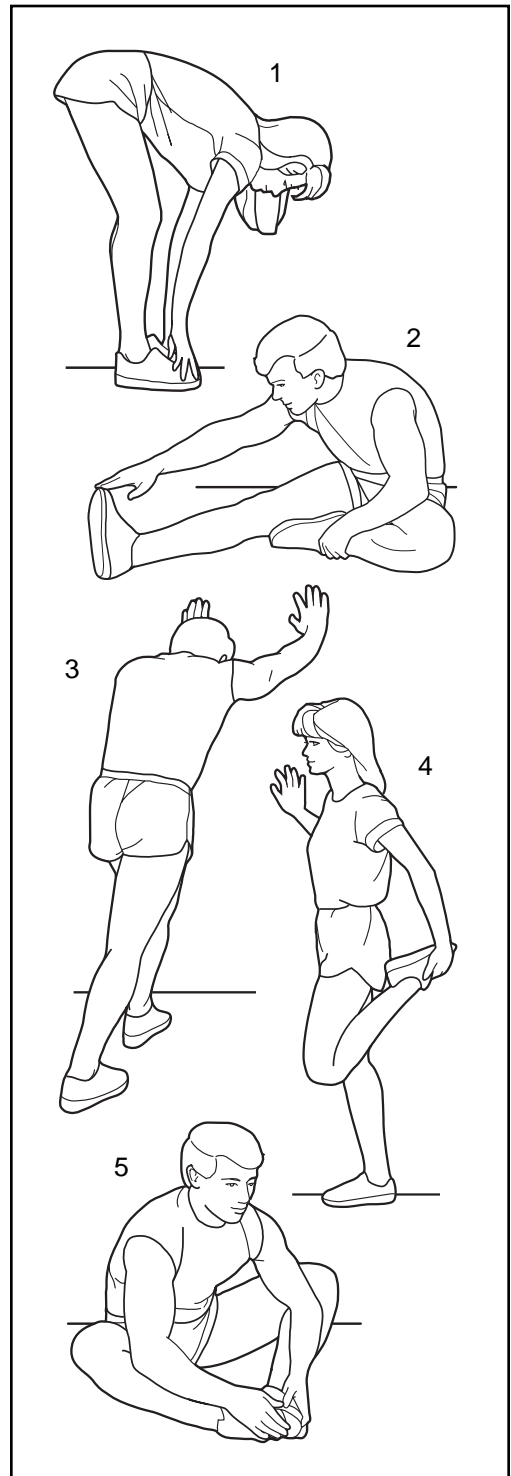

PART LIST—Model No. PFEL03010


R1101A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Frame	35	2	5/16" Zinc Bolt
2	2	Pulse Grip	36	2	Pulley Bearing
3	1	Upright	37	2	Pedal Disk
4	1	Right Side Shield	38	4	M4 x 16mm Round Head Screw
5	1	Left Side Shield	39	2	Handlebar Spacer
6	1	Console	40	1	Side Shield Bracket
7	2	Foam Handlebar Grip	41	2*	Pedal Arm Spacer
8	1	Left Handlebar	42	1	Console Back
9	2	Battery Cover	43	4*	3/4" Axle Cap
10	1	T-Handle	44	1	M4 x 16mm Flat Head Screw
11	8	Pedal Arm Bushing	45	1	Right Pedal
12	2	Pedal Arm	46	4	#8 Flat Washer
13	11	M5 x 16mm Screw	47	1	Clamp Nut
14	1	Resistance Strap	48	1	Clamp Bolt
15	1	Strap Buckle	49	2	Weld Spacer
16	6	M4 x 19mm Flange Screw	50	1	Resistance Knob
17	2	M6 Nut	51	4	M4 x 25mm Screw
18	2	Adjustment Bracket	52	1	Return Spring
19	2	M6 Eyebolt	53	2	M8 Washer
20	2	M8 Nylon Jam Nut	54	2	M6 x 16mm Button Screw
21	1	Flywheel Axle	55	2	M6 Black Nylon Locknut
22	2	Flywheel Bearing	56	4*	Pivot Bushing
23	1	Flywheel	57	2*	5/8" Axle Cap
24	1	Magnet	58	1	M4 x 64mm Screw
25	1	Sensor Wire/Reed Switch	59	1	Lower Cable
26	1	Resistance Control/Cable	60	1	3/4" Plastic Spacer
27	4	Stabilizer Endcap	61	1	Extension Wire
28	1	Tension Spring	62	1	Right Handlebar
29	4	M10 Nylon Locknut	63	1	Nylon Washer
30	1	Belt	#	1	User's Manual
31	1	Left Pedal	#	2	Side Shield Decal
32	1	Pulley w/Shaft	#	1	Warning Decal
33	2	Crank Arm	#	1	Hardware Kit
34	12	M4 x 16mm Screw	#	1	Grease Packet

Note: “#” indicates a non-illustrated part. “*” indicates that an extra part may be included. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. PFEL03010

R1101A

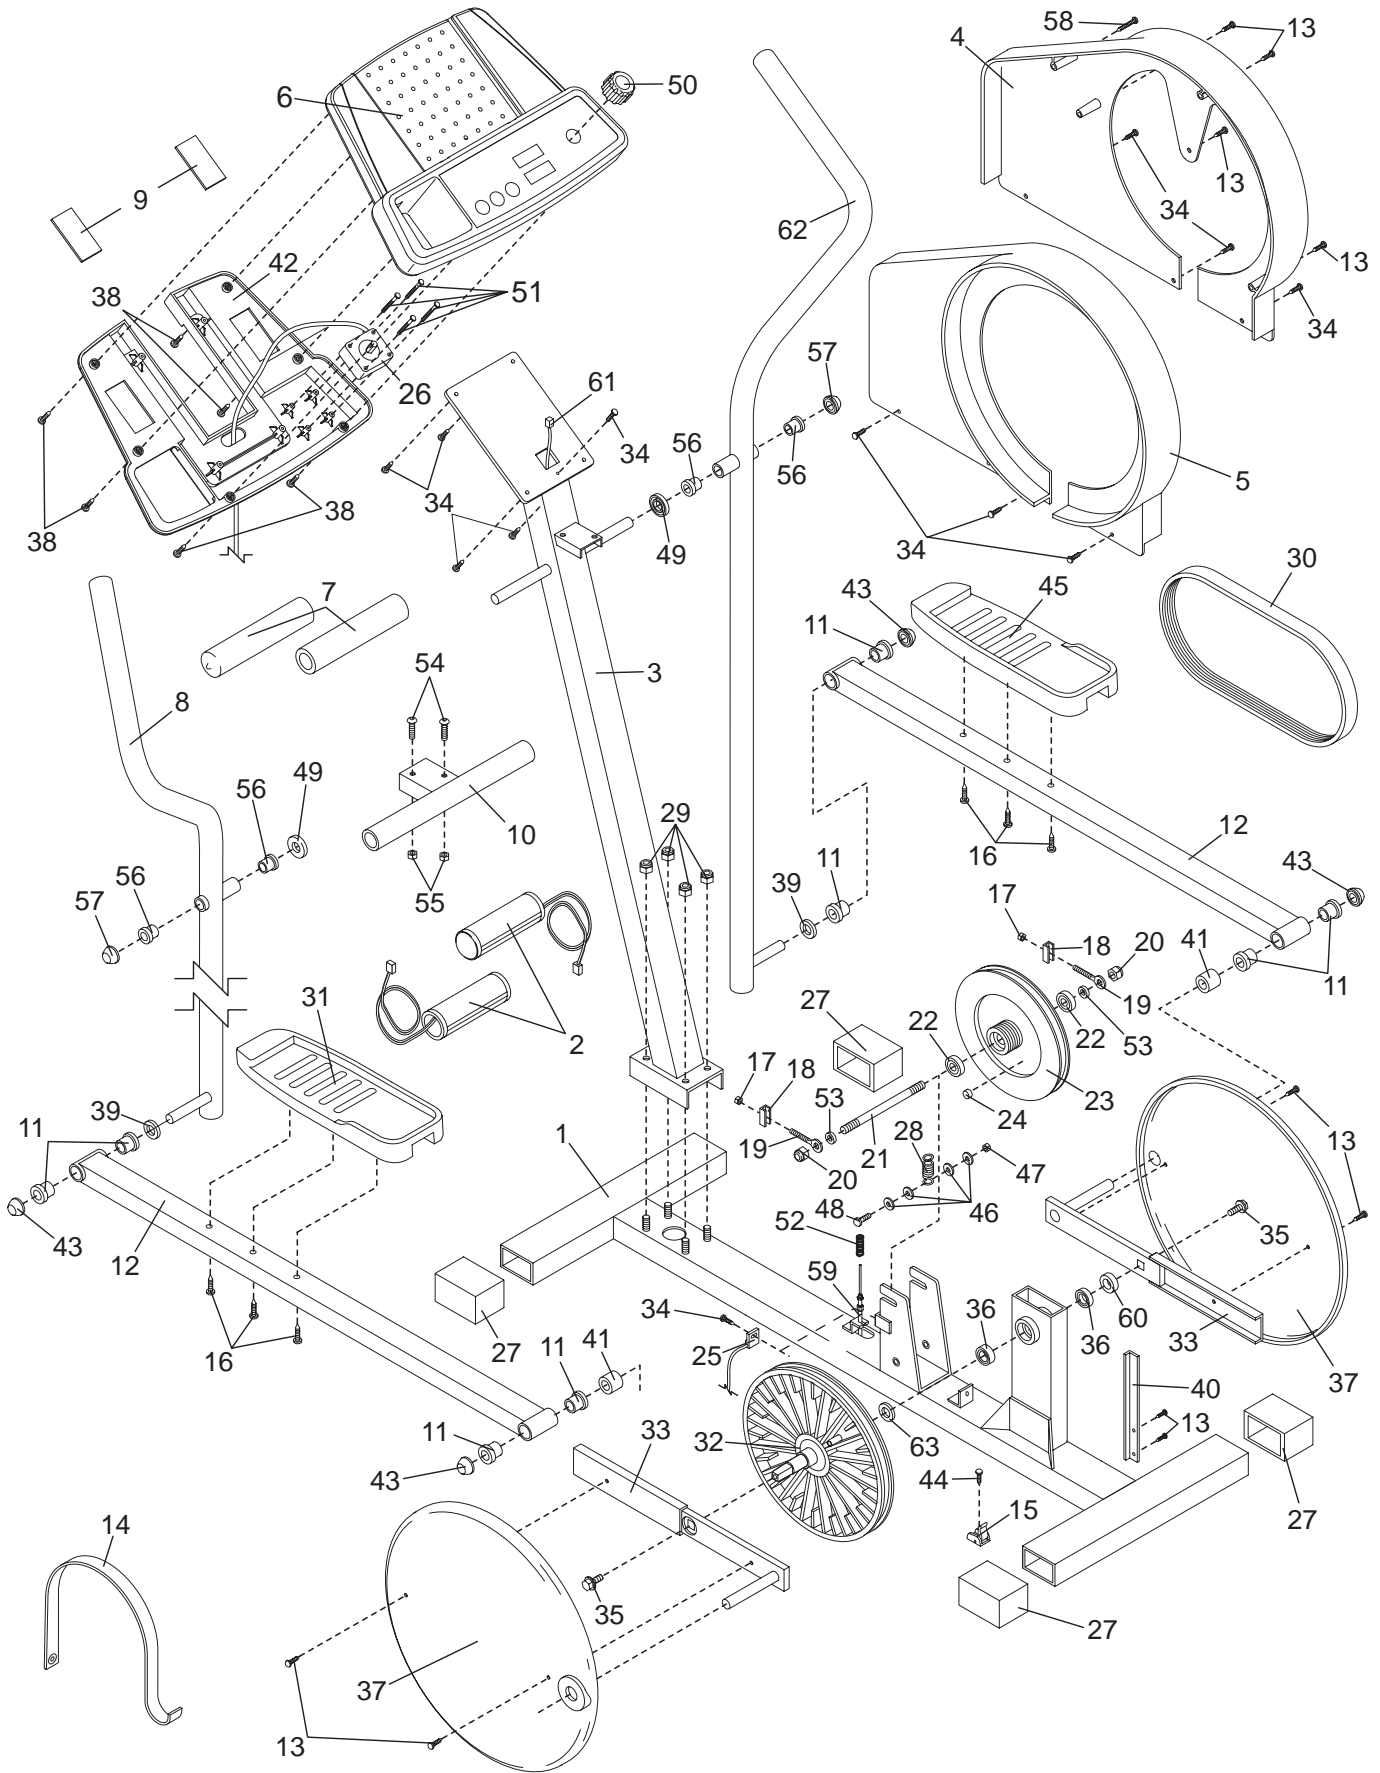

HOW TO ORDER REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information when calling:

- The MODEL NUMBER of the product (PFEL03010)
- The NAME of the product (PROFORM® 515S elliptical trainer)
- The SERIAL NUMBER of the product (see the front cover of this manual)
- The KEY NUMBER and DESCRIPTION of the part(s) (see page 14).

LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON) warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by ICON at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center, to products used for commercial or rental purposes, or to products used as store displays. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>