



Infrared Remote Control – for Canon

Replaces Canon RC-1/RC-6 Infrared Remote Control



Upper Controls of Remote (For SLR Camera)
S button for camera instant shutter.
2S button for 2seconds delay shutter.
Lower Controls of Remote(For PowerShot Camera)
S button for camera instant shutter.
W/T controls Canon PowerShot zoom

IMPORTANT NOTICE

Your PROMASTER Remote Control features a POWER SAVE mode. Please observe the following to ensure proper operation:

1. After initially installing the battery or changing the battery, press and hold the shutter release button for at least 2 seconds to activate the remote.
2. The remote will enter the POWER SAVE mode after 8 minutes of inactivity. To wake the remote from the POWER SAVE mode and activate it for use, press and hold the shutter release button for at least 2 seconds.

Using the PROMASTER Infrared Remote Control for Canon

1. Before using the remote for the first time, install the CR2025 battery (included).
2. Mount the camera on a tripod (recommended) or place the camera on a stable, level surface.
3. Set your camera for delayed remote or quick response remote per the instructions provided with your camera.
4. Aim the remote control at the infrared receiver on the camera (usually within +/- 20 degree of the lens axis, from the left to the right and from the top to the bottom) and press the shutter-release button on the remote control. When using the remote outdoors, make sure that the subject is not backlit and that the line of site between the transmitter and the infrared receiver is not blocked by the lens or other obstacles.
5. How the camera focuses and shoots depends upon the options selected for your camera. For further information, check your camera's instruction manual.
6. Infrared cannot be seen by human eyes so you will see no visible light from the LED on the front of the remote control during operation.

To Replace the Battery



1. The remote control is powered by a three-volt CR2025 lithium battery which is included.
2. After sliding the latch in the direction shown, remove the battery holder.
3. Remove the battery from the battery holder.
4. Insert a fresh battery with the face marked "+" on top.
5. Slide the battery holder into the remote until the latch clicks into place.

Specifications

- 100% compatible with Canon RC-1/RC-6 infrared remote control.
- Works with all remote shutter release control modes (Quick-response, W/T Zoom).
- Easy-to-replace CR2025 lithium battery.
- Operating temperature: 5°C to 40°C (40°F to 105°F).
- Typical Battery Life: up to 3 years; 20,000 exposures.

Care and Storage

1. When the remote control is not in use for an extend period of time, please remove the battery from the remote control.
2. Do not expose the remote control to excessive heat or humidity.
3. Do not leave the remote control on or near a television, refrigerator, or other appliance with a magnetic field.
4. If the remote control gets wet, wipe it with a dry towel as soon as possible.
5. Do not use organic solvents, such as alcohol or paint thinner when cleaning the remote control.

Compatible Canon DSLR/SLR Cameras (uses upper controls only)

Digital SLR	550D	500D	450D	400D
	350D	300D	Rebel XSi	Rebel T1i
	Rebel T2	Rebel XT	Rebel XTi	Rebel T2i
Film SLR	ELAN	10	30	33
	50	55	100	300v
	300x	3000v QD	Rebel K2	Rebel T1 Date
	Rebel T2 Date	Kiss III	Kiss III L	A10
APS SLR	EOX IX			

Compatible Canon Power Shot Cameras (uses lower controls only)

Power Shot	Pro 1	G6	G5	G3
	G2	G1	S1 IS	S70*
	S60*		Pro 90 IS	

*Shutter release function only

LIMITED WARRANTY

This product carries a one-year limited warranty from the date of purchase against defects in materials and workmanship. This warranty does not cover damage resulting from accidents, misuse, unauthorized repair/alterations to the product or failure to follow operating instructions. If the product should become defective within the warranty period and under the above mentioned conditions, please return it to the store you originally purchased it from with proof of purchase, for repair or replacement free of charge.

Code 7599

Made in China

www.promaster.com

Fairfield, CT 06825

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>