


**Proctor Silex**

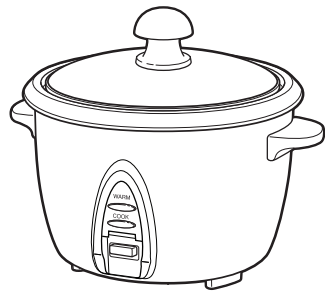

## Rice Cooker Cuisueur de riz Ollas para cocer arroz

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.  
Lire avant utilisation.  
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

[proctorsilex.com](http://proctorsilex.com)

### Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

[proctorsilex.ca](http://proctorsilex.ca)

### ¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc. ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

[proctorsilex.com.mx](http://proctorsilex.com.mx)

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

840180202

## IMPORTANT SAFETY INSTRUCTIONS

When using your electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Use pot holders when removing hot containers.
3. To protect against a risk of electrical shock, do not immerse cord, plug, or base in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, has been dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or an electric burner or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil, hot food, water, or other hot liquids.
12. To disconnect, lift up the switch; then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Lift and open lid carefully to avoid scalding, and allow water to drip into the cooking pot.
15. Caution: To reduce risk of electric shock, cook only in cooking pot.
16. Do not place the unit directly under cabinets when operating as this product produces large amounts of steam. Avoid reaching over the product when operating.

## SAVE THESE INSTRUCTIONS


### Other consumer safety information

This appliance is intended for household use only.

**WARNING!** Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

### Parts and features

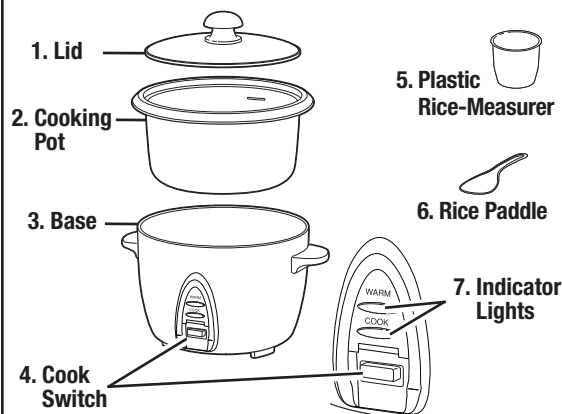

### Before first use

**WARNING** Electrical Shock Hazard. Only cook in the cooking pot. Never cook in the base.

1. Wash cooking pot and lid following the "Care and cleaning" instructions in this Use and Care Guide. Dry thoroughly.
2. Do not throw away the plastic rice-measurer that came with your unit. This is an important tool in using your rice cooker successfully and its size is standard in the rice industry. One rice-measurer cup does not equal one standard U.S. cup (plastic rice-measurer is 6 oz/180 ml or approximately 3/4 U.S. cup). When directed to use "1 cup" for either rice or water, this means use one full, level rice-measurer cup. Most rice package directions are listed in terms of rice-measurer cups.



Rice Water

3. The most important detail when cooking rice is the ratio of rice to water. A good general ratio is two parts water to one part rice (see illustration above). If the plastic rice-measurer is lost or misplaced, measure BOTH rice and water using a standard U.S. cup—your rice will turn out just as well. To prevent overflow and/or overheating, do not exceed the "MAX" line or go below the "MIN" line when both rice and water are added to the cooking pot.

### How to cook rice

1. Add desired amount of uncooked rice and water to cooking pot. Add rice first; then add water. Do not exceed "MAX" fill line. Follow rice package directions for appropriate water/rice ratio. **NOTE:** You may need to adjust the amount of water to achieve the desired texture. If the rice is too wet after cooking, or if water overflows during cooking, use less water (up to 20% less). If the rice is too firm after cooking, use a little more water.
2. Carefully place cooking pot straight down in base. Make sure cooking pot is securely seated into base by gently rotating the pot left and right. **NOTE:** Ensure bottom of cooking pot is not bent or warped or it will not conduct heat correctly.
3. Place lid on cooking pot. Plug cord into outlet. The WARM indicator light will come on BUT UNIT IS NOT COOKING.
4. Push the cook switch DOWN to start cooking. The COOK indicator light will come on.
5. The rice will cook (cooking times will be approximately what is listed on your rice package directions). The WARM indicator light will come on when the rice is finished cooking. This feature will keep the rice warm until the unit is unplugged.
6. Use the rice paddle to scoop out the cooked rice. When finished, unplug cord from outlet. A good ratio for cooking rice is 2 parts water to 1 part rice. The cooking chart below may be useful for cooking white and brown rice. For other rice blends, cooking time and rice/water ratio will vary. Follow package directions for best results.

TYPE OF RICE	AMOUNT OF UNCOOKED RICE	AMOUNT OF WATER	COOK TIME	SERVES
White rice				
Min amt.	1 cup/180 ml	2 cups/360 ml	15-20	2-3
Max amt.	4 cups/720 ml	8 cups/1440 ml	30-40	8-10
Brown rice				
Min amt.	1 cup/180 ml	2-1/2 cups/450 ml	25-35	2-3
Max amt.	4 cups/720 ml	8 cups/1440 ml	35-50	8-10

- The "cups" listed in chart refer to RICE-MEASURER cups.
- This chart is a guide only. Rice cooking times are approximate and will vary. Brown rice takes longer to cook and can require more water. Adding 1/2 rice-measurer cup (90 ml) of water when cooking brown rice will yield a moister texture. Do not exceed the MAX fill line.
- Serving size = 3/4 cup (175 g)

### Cooking tips

- Stir prepackaged, boxed rice mixes at least once during cooking; otherwise, spices may stick to the bottom of the cooking pot. For best results, unplug unit when finished cooking this type of rice. Do not "keep warm."
- Rinsing rice will sometimes increase bubbling during cooking. When cooking a half pot or less of rice, minimize bubbling/overflow by reducing water by about one-third.
- Allowing rice to "rest" for approximately 5-10 minutes after cooking will yield better textured rice.
- Give rice a flavor boost by substituting an equal amount chicken/beef/vegetable broth for water.
- There are many types of rice, each with different amounts of water recommended for cooking. If the rice is too wet after cooking, or if water overflows during cooking, use less water (up to 20% less). If the rice is too firm after cooking, use a little more water.

### Care and cleaning

**WARNING** Shock Hazard. Do not immerse the base, cord, or plug in water or any other liquid.

1. Unplug cord from wall outlet.
2. Wash cooking pot, lid, plastic rice-measurer, and rice paddle in hot, soapy water or in top rack of dishwasher. Do not bend or warp bottom of cooking pot.
3. Rinse, dry, and reassemble to store.
4. Wipe base with a soft, damp cloth or a scrub pad for all surfaces. Do not clean with abrasive cleansers.

### Limited warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit [proctorsilex.com](http://proctorsilex.com) in the U.S. or [proctorsilex.ca](http://proctorsilex.ca) in Canada. For faster service, locate the model, type, and series numbers on your appliance.

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

Pendant l'utilisation d'appareils électriques, des mesures de sécurité élémentaires doivent être respectées, incluant les suivantes :

1. Lire toutes les instructions.
2. Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons. Utiliser des sous-plats pour déposer les récipients chauds.
3. Pour éviter les risques d'électrocution, ne pas immerger le cordon, la prise ou la base dans l'eau ou tout autre liquide.
4. L'utilisation de tout appareil par ou près des enfants exige une surveillance accrue.
5. Débrancher de la prise murale dès la fin de l'utilisation et avant le nettoyage. Laisser refroidir l'appareil avant d'installer ou retirer des pièces.

6. Ne pas faire fonctionner aucun appareil dont le cordon ou la fiche est endommagé ou suite à un dysfonctionnement de l'appareil, s'il est tombé ou endommagé de quelque manière que ce soit. Appeler la ligne sans frais du Service à la clientèle pour plus d'information à propos d'une vérification, réparation ou réglage.
7. L'utilisation de tout accessoire auxiliaire contre-indiqué par le fabricant de l'appareil peut causer des blessures.
8. Ne pas utiliser à l'extérieur.
9. Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact avec les surfaces chaudes.
10. Ne pas placer sur ou près de surfaces chaudes comme un brûleur électrique ou à gaz.
11. Exercer une très grande prudence lors du déplacement d'un appareil contenant des aliments, de l'eau ou tout autre liquide chaud.
12. Pour débrancher, soulever l'interrupteur puis débrancher la fiche de la prise murale.
13. N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
14. Soulever et ouvrir le couvercle prudemment pour éviter les brûlures et permettre à l'eau de s'égoutter dans le pot de cuisson.
15. Mise en garde : Pour éviter les risques d'électrocution, cuire uniquement les aliments dans le pot de cuisson.
16. Ne pas placer l'appareil directement sous les armoires pendant le fonctionnement, car cet appareil dégage une grande quantité de vapeur. Éviter de tendre la main pour atteindre l'appareil pendant le fonctionnement.

## CONSERVER CES INSTRUCTIONS

### Information de sécurité pour le consommateur

Cet appareil est conçu pour une utilisation domestique seulement.

**AVERTISSEMENT !** Risque d'électrocution : Ce produit est doté d'une fiche polarisée (lame plus large) pour réduire le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise avec mise à la terre. Ne pas transformer le dispositif de sécurité de la fiche en modifiant celle-ci de quelque façon ou en utilisant un adaptateur. Si vous ne pouvez pas insérer complètement la fiche dans la prise, inversez la fiche. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de faux pas causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas faire courir sur le comptoir ou sur une table pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

### Pièces et caractéristiques

1. Couvercle
2. Pot de cuisson amovible
3. Base
4. Interrupteur de cuisson
5. Mesureur en plastique pour le riz
6. Spatule à riz
7. Témoins lumineux

### Avant la première utilisation

**AVERTISSEMENT** Risque d'électrocution. Cuire les aliments uniquement dans le pot de cuisson. Ne jamais cuire les aliments dans la base.

1. Laver le pot de cuisson et le couvercle en suivant les instructions du chapitre « Entretien et nettoyage » de ce manuel. Assécher complètement.
2. Ne pas jeter le mesureur en plastique pour le riz qui accompagne votre appareil. Le mesureur est un accessoire important pour l'utilisation optimale du ciseur de riz grâce à son format conforme à l'industrie du riz. Une tasse du mesureur de riz n'est pas équivalente à une tasse à mesurer basée sur le système de mesures américain (le mesureur de riz en plastique contient 180 ml (6 oz) ou environ 3/4 de tasse. Lorsque la quantité à utiliser est d'une tasse de riz ou d'eau, ceci signifie l'utilisation d'une mesure complète et rase contenue dans le mesureur de riz. La plupart des instructions sur les emballages de riz sont indiquées comme étant des tasses équivalentes au mesureur de riz.



Riz Eau





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>