



INSTALLATION INSTRUCTION - INSTRUCCIONES DE INSTALACION CLAD HINGED PATIO DOOR — (INCLUDES STANDARD, PERFORMANCE UPGRADE AND HURRICANESHIELD® IMPACT RESISTANT IN-SWING AND OUT-SWING)


Important Safety Information:

Pella® HurricaneShield Products have been tested in accordance with the large missile impact testing requirements and have been certified to meet those requirements. Check with the individual (building owner, architect, contractor, installer and/ or consumer) responsible for the project in addition to local building code officials to determine if these products comply with local codes. Pella HurricaneShield Products are neither hurricane proof nor are they shatter proof. Severe wind and rain may produce temporary conditions which exceed product performance standards. When these units are subjected to intense storms or extreme conditions, which exceed the intended design pressures, air, water and flying debris infiltration may occur.

These instructions were developed and tested for use with typical wood frame wall construction in a wall system designed to manage water. **These instructions are not to be used with any other construction method.** Installation instructions for use with other construction methods, multiple units or bow and bay windows, may be obtained from Pella Corporation, a local Pella retailer or by visiting <http://www.pella.com>. Building designs, construction methods, building materials, and site conditions unique to your project may require an installation method different from these instructions and additional care. Determining the appropriate installation method is the responsibility of you, your architect or construction professional.

IMPORTANT NOTICE: To achieve maximum door performance, the performance upgrade installation may be required. Additional performance information may be obtained from your Pella retailer or <http://www.pella.com>. All doors with HurricaneShield impact-resistant glass are required to use the Performance Upgrade Installation steps contained within this instruction.

REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.

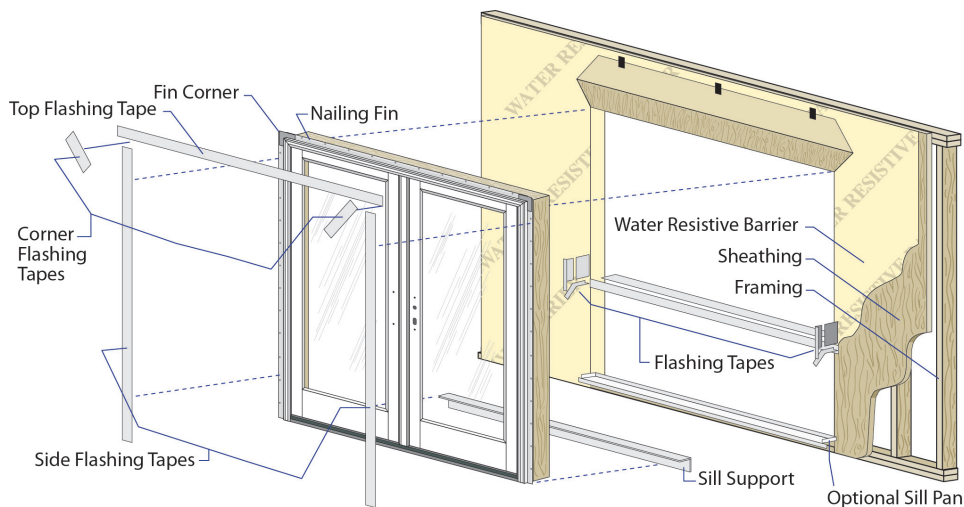

Always read the Pella® Limited Warranty before purchasing or installing Pella products. By installing this product, you are acknowledging that this Limited Warranty is part of the terms of the sale. Failure to comply with all Pella installation and maintenance instructions may void your Pella product warranty. See Limited Warranty for complete details at <http://warranty.pella.com>.



 
 




Download from www.Somanuals.com. All Manuals Search And Download.

The performance of any building is dependent upon the design, installation, and workmanship of the entire building system. Pella Corporation strongly recommends consulting an experienced architect, contractor or structural engineer prior to installation of Pella products.













The individual (building owner, architect, contractor, installer and/or consumer) responsible for the project must take into account local conditions, building codes, inherent component limitations, the effects of aging and weathering on building components, and other design issues relevant to each project.

The determination of the suitability of all building components for each project, as well as the design and installation of flashing and sealing systems, are the responsibility of the building owner, architect, contractor, installer and/or consumer.


YOU WILL NEED TO SUPPLY:

- Cedar or Impervious shims/spacers (12 to 20) 
- 2" galvanized roofing nails (1/4 lb.) 
- #10 x 3-1/2" corrosion resistant wood screws (Performance Upgrade & HurricaneShield) 
- Masonry screws for concrete applications (Minimum of 3/16" diameter x 3") 
- Closed cell foam backer rod/sealant backer (21 to 30 ft.) 
- Pella® SmartFlash™ foil backed butyl window and door flashing tape or equivalent 
- High quality exterior grade polyurethane or silicone sealant (2 to 3 tubes per door) 
- Great Stuff™ Window and Door Insulating Foam Sealant by the Dow Chemical Company or equivalent low pressure polyurethane window and door foam - DO NOT use high pressure or latex foams 
- Sill pan (optional)
6-5/8" x (Rough Opening Width +2)
- Pella aluminum sill support or wood blocking
- Interior trim and/or jamb extensions (15 to 40 ft.)

TOOLS REQUIRED:

- Tape measure 
- Level 
- Square 
- Hammer 
- Stapler 
- Sealant Gun 
- Scissors or utility knife 
- Tin Snips 
- Screwdrivers (#2 Phillips with 8" shaft and small flat blade) 
- T20 Torx Wrench (Architect Series®)
- 1/8" Allen wrench (Designer Series®) 
- Drill 
- Drill Bits 13/64" and 1/8" and masonry bit for concrete applications 

Installation Clip Option:

- 6" or 8" installation clips 
- #6 x 5/8" corrosion resistant flat head wood screws
- #8 x 1-1/2" corrosion resistant screws or 3/16" x 1-1/2" masonry screws

1 ROUGH OPENING PREPARATION


A. Confirm the opening is plumb and level.

Note: It is critical that the bottom is level.

B. Confirm the door will fit the opening. Measure all four sides of the opening to make sure it is 3/4" larger than the door in width and 1/2" larger in height.


Measure the width at the top, bottom, and center. Measure the height at the far left side, the far right side, and in the center.

Note: 1-1/2" or more of solid wood blocking is required around the perimeter of the opening. Fix any problems with the rough opening before proceeding.

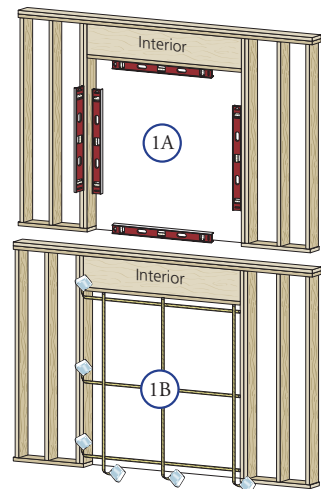


C. Cut the water resistive barrier.

4th cut:
Make a 6" cut up from each top corner at a 45° angle to allow the water resistive barrier to be lapped over the fin at the head of the door.

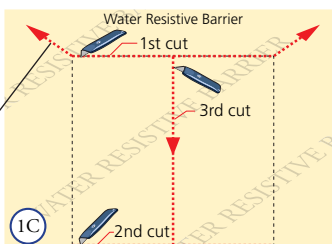


- D. Fold the water resistive barrier.** Fold side flaps into the opening and staple to inside wall. Fold top flap up and temporarily fasten with flashing tape.

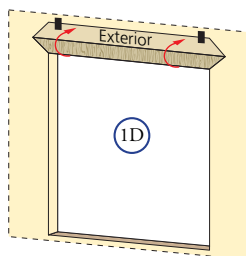**FOR DOORS USING OPTIONAL SILL PAN GO TO STEP 1I.**

- E. Apply sill flashing tape #1.** Cut a piece of flashing tape 12" longer than the opening width. Apply at the bottom of the opening as shown (1E) so it overhangs 1" to the exterior.

Note: The tape is cut 12" longer than the width so that it will extend 6" up each side of the opening.

- F. Tab the sill flashing tape and fold.** Cut 1" wide tabs at each corner (1/2" from each side of the corner) (1F). Fold tape to the exterior and press firmly to adhere it to the water resistive barrier.

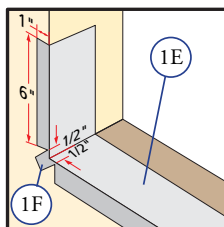


- G. Apply sill flashing tape #2.** Cut a piece of flashing tape 12" longer than the opening width. Apply at the bottom, overlapping tape #1 by at least 1". DO NOT allow the tape to extend past the interior face of the framing (1G).


In-swing doors:

If the wall depth is greater than 5", add a third piece of flashing tape. The flashing tape should come to within 1" of the interior face of the framing.

Note: The flashing tape may not fully cover the framing members.

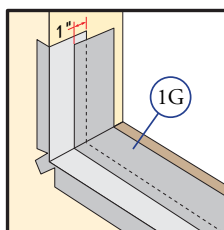

- H. Attach the aluminum sill support or wood blocking** to the exterior of the box plate to support the edge of the door sill. Place the sill support flush with the subfloor.

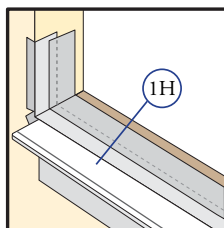
**GO TO STEP 2**

Optional Sill Pan Instructions:


- I. **Cut the sill pan** to the width of the rough opening plus 2".
Note: The 2" added onto the rough opening width is for a 1" bend on each end.

- J. **Make a 1" cut in each fold** at both end of the sill pan.
Note: These cuts will allow the edges of the sill pan to be bent.


Note: 4-5/8" wide for Out-Swing and In-Swing for 4-9/16" wall condition. For other wall conditions, measure wall depth and add 1/16".

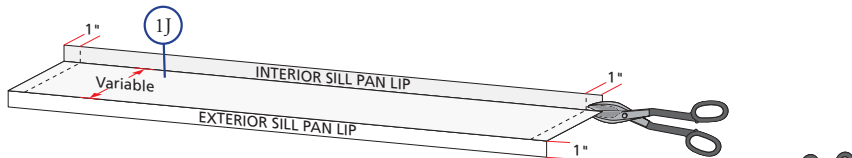

- K. **Cut 1" off each end of the interior sill pan lip.**

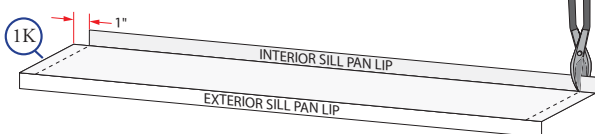


- L. **Bend each end of the center panel up.**

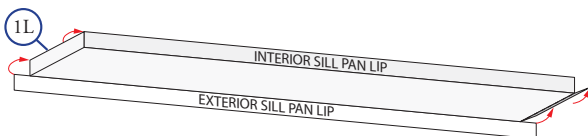


- M. **Install the sill pan by sliding into place** until the exterior sill pan lip is flush with the exterior of the rough opening.

- N. **Apply sill flashing tape.** Cut a piece of flashing tape 2" longer than the opening width. Apply at the bottom of the opening, covering the exterior sill pan lip as shown.


Note: If applicable, apply spray adhesive to building felt prior to applying the flashing tape.

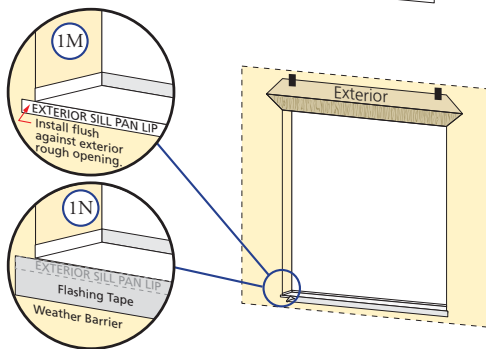

- O. **Cut two 9" pieces of flashing tape with a 1" x 3" tab** at the bottom, on opposite corners as shown.

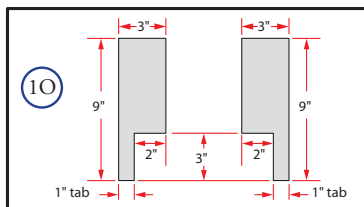

- P. **Apply the tabbed 9" pieces of flashing tape.** The tape is applied so 2" will cover the inside of the rough opening and lap over the side flange of the sill pan. The 1" x 3" tab laps over the bottom flashing tape as shown.

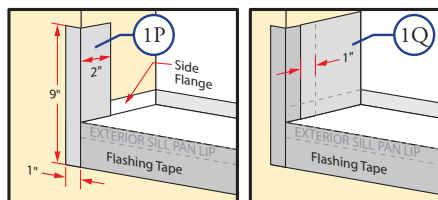

- Q. **Cut two 6" pieces of flashing tape and apply to each side of the rough opening,** overlapping the first piece by 1" and lapping the bottom over the side flange of the sill pan as shown.

Applications for Performance Upgrade and HurricaneShield:

Out-Swing Vent and Fixed


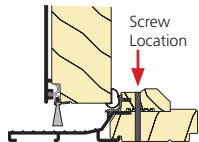



DIAGRAM FOR PLACEMENT OF THRESHOLD SCREWS & INSTALLATION CLIPS

In-Swing Vent

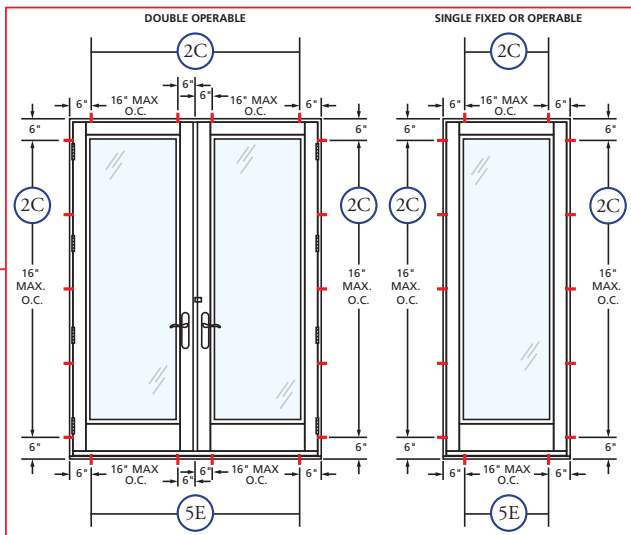

- C. **Doors using Installation Clips:** Install installation clips. Place each clip so the lip is facing up and against the installation fin at the locations shown in the placement diagram. Secure each clip by driving a #6 x 5/8" corrosion resistant screw through each of the outer two holes of the three holes shown.

Note: If clips are to be bent; pre-bend before attaching to frame.


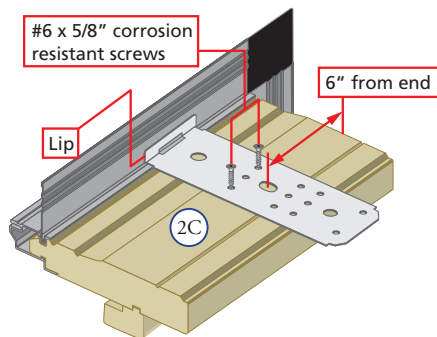


3 SETTING AND FASTENING THE DOOR

- A. **Place three 3/8" beads of sealant.**

Place the first beads sealant 1/2" from the base of the interior sill pan lip. This bead should also continue up the corner of the sill pan at each end, sealing the vertical joints of the sill pan legs. Continue the first bead up 6" onto each jamb side of the rough opening. The second bead should be approximately 1/2" from the exterior edge of the rough opening, running from jamb to jamb with a 2" break in the middle of the opening. Place a third sealant bead in the groove of the sill support from end to end or 1/4" from the exterior edge of the wood blocking.


Note: Sill sealant detail is the same for applications with and without optional sill pan.

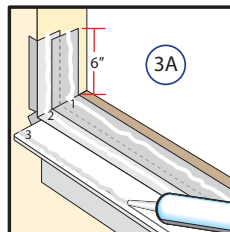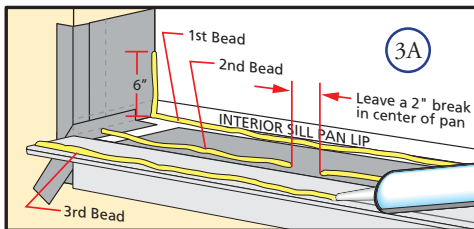

TWO OR MORE PEOPLE WILL BE REQUIRED FOR THE FOLLOWING STEPS:


B. **Cut and remove** the strap that runs from the door lock to the sill of the door.

C. **Insert the door from the exterior of the building.** DO NOT slide the bottom of the door into the opening. Sliding will damage the sealant lines. Place the bottom of the door at the bottom of the opening, then tilt the top into position. Center the door between the sides of the opening to allow clearance for shimming, and insert one roofing nail in the first hole from the corner on each end of the top nailing fin. These are used to hold the door in place while shimming it plumb and square.

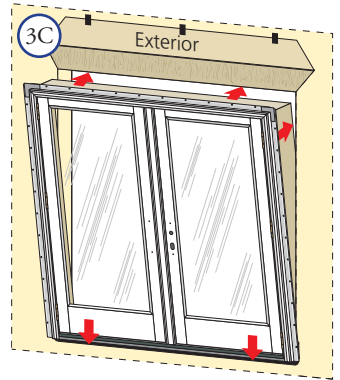



D. **Plumb and square door.** Place shims at each hinge and lock strike location between the door and the sides of the opening. Insert shims in other locations as needed starting up 6" from the bottom of the door to square it in the opening. Make sure that the reveal around the door(s) is equal. On double doors, make sure that panels are even across the bottom.

Note: On center latch double doors the lock strike will not be shimmed since it is located in the center of the unit. DO NOT over shim.

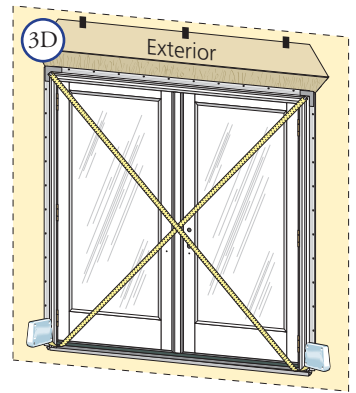


E. **Check the interior reveal.** Make sure the measurement from the interior face of the door to the interior face of the wall is equal at several points around the door.

Note: If the dimensions are not equal, check to make sure the fins are folded out to 90° at all points.

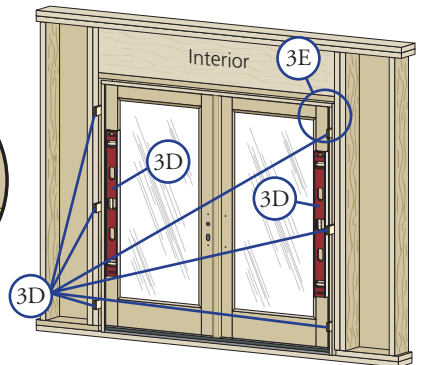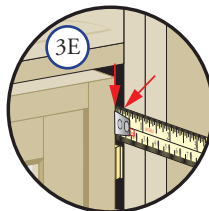


4 INTEGRATING THE DOOR TO THE WATER RESISTIVE BARRIER


Note: The flashing tape must be applied approximately 1/2" onto the frame cladding at the jambs and head. Pre-folding the tape at 1/2" before removing the paper backing will make it easier to apply the tape correctly. If the siding is less than 1/2" thick, adjust the dimension of the fold so the exterior sealant line will cover the exterior edge of the tape.

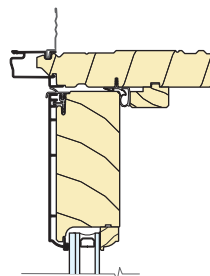


- A. **Apply side flashing tape.** Cut two pieces of flashing tape 4" longer than the frame height of the door. Apply one piece 1/2" onto the frame cladding, over the nailing fin and onto the water resistant barrier on each side. The tape should extend 2" above the top of the door and 2" below the bottom of the door. Press the tape down firmly while folding down the excess tape at the top and bottom of the door.

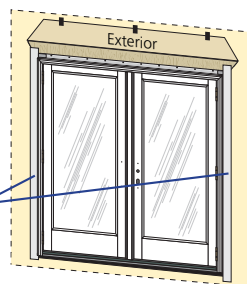

- B. **Apply top flashing tape.** Cut a piece of flashing tape long enough to go across the top of the door and extend at least 1" past the side flashing tape on both sides. Apply the tape 1/2" onto the frame cladding, over the top nailing fin as shown. Fold the overlapping tape down, and press all tape down firmly.

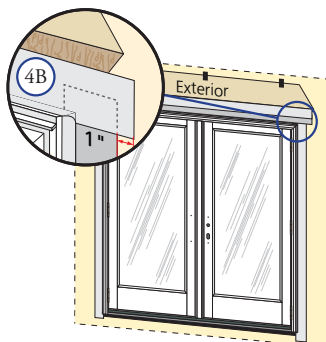

- C. **Fold down top flap of water resistant barrier.**

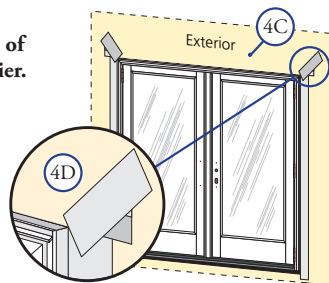

- D. **Apply flashing tape to diagonal cuts.** Cut pieces of flashing tape at least 1" longer than the diagonal cuts in the water resistant barrier. Apply the tape covering the entire diagonal cut in the water resistant barrier at both upper corners of the door.

Note: Be sure to overlap the top corners.

5 INSTALL THE FASTENERS FOR PERFORMANCE UPGRADE OR HURRICANESHIELD PRODUCT


Frame Screw Method:

Note: If installing with installation clips, proceed to Step E.



A. Jamb:

Out-swing: On the room side of the jamb; drill and counter-sink 13/64" deep diameter clearance holes through the door frame only and not into the rough opening in the locations shown. (See Out-Swing diagram in lower right).

In-swing: Open door panels; drill and counter-sink 13/64" deep diameter clearance holes through the door frame only and not into the rough opening in the locations shown. (On hinge jamba; clearance hole locations are centered between hinges).

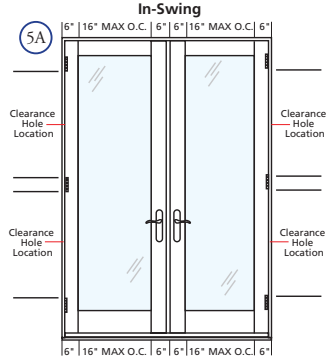


Hinge Jamba: See (5A) In-Swing diagram (upper right). Fixed and Lock jamba diagram for placement of threshold screws and installation clips (see out-swing diagram in lower right).

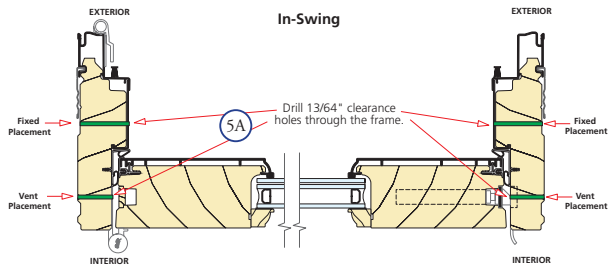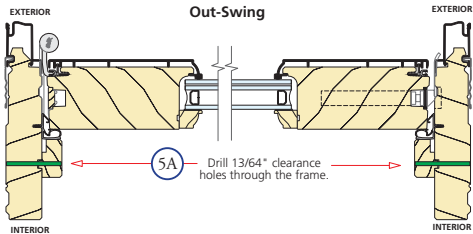

- B. **Drill 13/64" deep clearance holes** through the door frame head only and not into the rough opening in the locations shown.
- C. **Drill 1/8" x 1" deep pilot holes** through the clearance holes and into the rough opening framing in the head, jamba, and threshold of the unit frame.

Note: Be certain to shim between jamba and rough opening at all screw locations.

Out-Swing Vent and Fixed

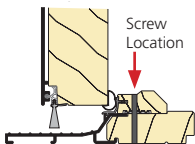

In-Swing Vent



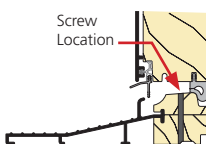


DIAGRAM FOR
PLACEMENT OF
FRAME SCREWS &
INSTALLATION CLIPS

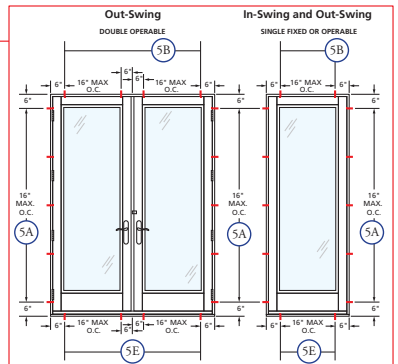


D. Secure the jambs and head of the door.

Drive #10 x 3-1/2" corrosion resistant wood screws through the door frame and shim, into the rough framing. Drive the screws until snug but **DO NOT** overtighten the screws. **DO NOT** bend or bow the unit frame.

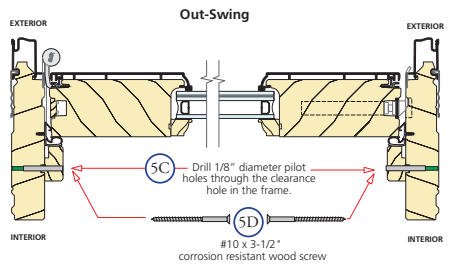

- E. Drill 13/64" clearance holes** through the threshold but not into the rough opening, at the locations shown in illustration on previous page (5E & 5G). Install # 10 x 3/1-2" corrosion resistant wood screws through the threshold into the floor. For Masonry applications use masonry screws that are a minimum size of 3/16" diameter x 3" and pilot drill per screw manufacturer's recommendations.



NOTE: Not required on In-swing Fixed doors.

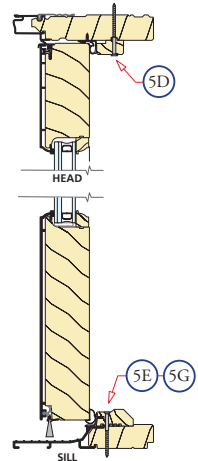

Installation Clip Method:

- F. Fasten the door to the opening** by driving two #8 x 1-1/4" corrosion resistant screws into the pre-punched holes in the clips. If the clips are bent and fastened to the interior stud/block, install the screws as close to the bend as possible.

Note: DO NOT shim above the door. For masonry openings use two masonry screws that are a minimum size of 3/16" x 1-1/2" per clip. Pre-drill the masonry per screw manufacturer's recommendations before attempting to drive the screws in.

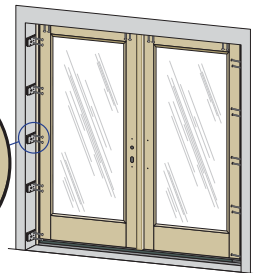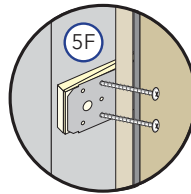

Frame Screw and Installation Clip Methods:

- G. Drive #10 x 3-1/2" corrosion resistant wood screws** through the holes in the threshold into the floor.


Note: For concrete floors, use masonry screws that are a minimum size of 3/16" diameter x 3".

6 INTERIOR SEAL

Caution: Ensure use of low pressure polyurethane window and door insulating foams and strictly follow the foam manufacturer's recommendations for application. Use of high pressure foams or improper application of the foam may cause the door frame to bow and binder operation.

- A. **Apply insulating foam sealant.** From the interior, insert the nozzle of the applicator into the space between the door and the rough opening approximately 1" past the edge of the frame (and past the jamb extensions) and apply a 1" deep bead of foam. This will allow room for expansion of the foam and will minimize squeeze out. If using insulating foam other than Great Stuff™ Window and Door Insulation Foam by the Dow Chemical Company, allow the foam to cure completely (usually 8 to 24 hours) before proceeding to the next step.

Note: DO NOT place any foam between jamb extensions and the rough opening.

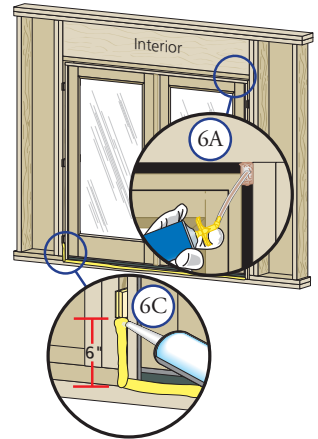

- B. **Check the door operation by opening and closing the door.**

Note: If the door does not operate correctly, check to make sure it is still plumb, level, square and that the sides are not bowed. If adjustments are required, remove the foam with a serrated knife. Adjust the shims, and reapply the insulating foam sealant.

- C. **Add a sealant bead across the inner sill and 6" up each jamb** between the frame and rough opening.

INTERIOR FINISHING

If products cannot be finished immediately, cover with clear plastic to protect from dirt, damage and moisture. Remove any construction residue before finishing. Sand all wood surfaces lightly with 180 grit or finer sandpaper. DO NOT use steel wool. BE CAREFUL NOT TO SCRATCH THE GLASS. Remove sanding dust.

Pella products must be finished per the below instructions; failure to follow these instructions voids the Limited Warranty.

- On casement and awnings, it is optional to paint, stain or finish the vertical and horizontal sash edges.
- On single-hung and double-hung, do not paint, stain or finish the vertical sash edges, any finish on the vertical sash edges may cause the sash to stick; it is optional to paint, stain or finish the horizontal sash edges.
- On patio doors, it is optional to paint, stain or finish the vertical and horizontal panel edges.

Note: To maintain proper product performance do not paint, finish or remove the weather-stripping, mohair dust pads, gaskets or vinyl parts. Air and water leakage will result if these parts are removed. After finishing, allow venting windows and doors to dry completely before closing them.

Pella Corporation is not responsible for interior paint and stain finish imperfections for any product that is not factory-applied by Pella Corporation. Use of inappropriate finishes, solvents, brickwash, or cleaning chemicals will cause adverse reactions with window and door materials and voids Limited Warranty.

For additional information on finishing see the Pella Owner's Manual or go to www.pella.com.

EXTERIOR FINISHING

The exterior frame and sash are protected by aluminum cladding with a Pella EnduraClad® or EnduraClad Plus baked-on factory finish that needs no painting. Clean this surface with mild soap and water. Stubborn stains and deposits may be removed with mineral spirits. DO NOT use abrasives. DO NOT scrape or use tools that might damage the surface.

Use of inappropriate finishes, solvents, brickwash or cleaning chemicals will cause adverse reactions with window and door materials and voids the Limited Warranty.

CARE AND MAINTENANCE

Care and maintenance information is available in the Pella Owner's Manual. You can obtain an owner's manual by contacting your local Pella retailer. This information is also available at www.pella.com.

IMPORTANT NOTICE

Because all construction must anticipate some water infiltration, it is important that the wall system be designed and constructed to properly manage moisture. Pella Corporation is not responsible for claims or damages caused by anticipated and unanticipated water infiltration; deficiencies in building design, construction and maintenance; failure to install Pella products in accordance with Pella installation instructions; or the use of Pella products in wall systems which do not allow for proper management of moisture within the wall systems. The determination of the suitability of all building components, including the use of Pella products, as well as the design and installation of flashing and sealing systems are the responsibility of the Buyer or User, the architect, contractor, installer, or other construction professional and are not the responsibility of Pella.


Pella products should not be used in barrier wall systems which do not allow for proper management of moisture within the wall systems, such as barrier Exterior Insulation and Finish Systems, (EIFS) (also known as synthetic stucco) or other non-water managed systems. Except in the states of California, New Mexico, Arizona, Nevada, Utah, and Colorado, **Pella makes no warranty of any kind and assumes no responsibility for Pella windows and doors installed in barrier wall systems. In the states listed above, the installation of Pella products in barrier wall or similar systems must be in accordance with Pella installation instructions.**

Product modifications that are not approved by Pella Corporation will void the Limited Warranty.

TROUBLESHOOTING - Adjustable Strike Latching Issues



Issue 1:

Door is difficult to latch. Remove the strike and adjustable strike shim then reinstall the strike.

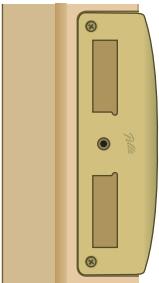

Issue 2:

Door needs to close more tightly against the weather-strip. Remove the strike and adjustable strike shim. Remove the tabs from the adjustable strike shim and install so that the thicker side is visible at the strike edge. Reinstall the strike.

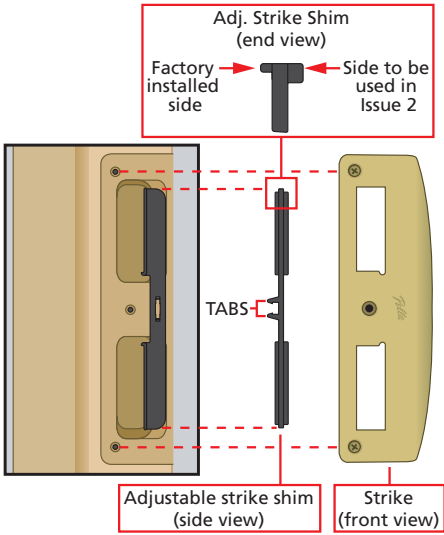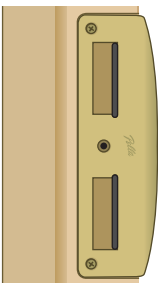

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>