

Register your product and get support at

www.philips.com/welcome

HFL3008D/W

EN User Manual

PHILIPS

Contents

1	Important	3		
	Safety	3		
	Care	4		
	Legal	5		
	Sustainability	7		
	Help and support	8		
2	Use your TV	9		
	TV controls	9		
	Watch TV	10		
	View programme guide	14		
	Play multimedia files	14		
3	Use more of your TV	16		
	Professional mode	16		
	Play games	20		
	View Text	21		
	Set locks and timers	22		
4	Change your TV settings	24		
	Picture and sound	24		
	Channels	26		
	Language settings	28		
	Universal access settings	29		
	Other settings	30		
	Reset all	30		
5	Connect your TV	31		
	About cables	31		
	Connect antenna	32		
	Connect devices	32		
	Connect more devices	39		
	Watch connected devices	40		
	Set up EasyLink devices	41		
	Connect a CAM (Conditional Access Module)	43		
6	Troubleshooting	44		
	General issues	44		
	Channel issues	44		
	Picture issues	45		
	Sound issues	45		
	Connection issues	46		
	Contact Philips	46		
7	Specifications	47		
	Power and reception	47		
	Display and sound	47		
	Display resolutions	47		
	Multimedia	48		
	Connectivity	52		
	Supported TV mounts	53		
	Help version	53		
8	Index	54		

1 Important

Safety

Precautions

Read and understand all instructions before you use your TV. If damage is caused by failure to follow the instructions, the warranty does not apply.

Risk of electric shock or fire!

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilled on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV.
- Never expose the remote control or batteries to rain, water or excessive heat.
- Avoid force coming onto power plugs. Ensure that the power plug is fully inserted into the power socket. Loose power plugs can cause arcing or fire.
- When the TV is swivelled, ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- To disconnect the TV from the mains power, the power plug of the TV must

be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

Risk of damage to the TV!

- Two people are required to lift and carry a TV that weighs more than 25kg or 55lbs.
- When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
- When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. TP Vision Netherlands B.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- If you need to store the TV, disassemble the stand from the TV. Never lay the TV on its back with the stand installed.
- Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.
- Parts of this product may be made of glass. Handle with care to avoid injury and damage.

Risk of injury to children!

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.

- Educate children about the dangers of climbing on furniture to reach the TV.

Risk of swallowing batteries!

- The product/remote control may contain a coin-type battery, which can be swallowed. Keep the battery out of reach of children at all times!

Risk of overheating!

- Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure that curtains or other objects never cover the ventilation slots on the TV.

Risk of injury, fire or power cord damage!

- Never place the TV or any objects on the power cord.
- Disconnect the TV from the socket and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.

Risk of hearing damage!

- Avoid using earphones or headphones at high volumes or for prolonged periods of time.

Low temperatures

- If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

Placement tips

- Position the TV where light does not shine directly on the screen.
- The ideal viewing distance of this TV is three times its diagonal screen size. For example, if the diagonal screen size of the TV is 81 cm / 32", the ideal viewing distance is ~2.5 m / ~92" from the front of the screen.
- While seated, your eyes should be level with the centre of the screen.

TV placement

You can apply the best sound settings for your TV by selecting the TV placement (wall mount or stand mount).

1. Press **⬆**.
2. Select **[Setup]**, then press **OK**.
3. Select **[TV settings] > [General settings]** or **[TV placement]**.
4. Select **[On a TV stand]** or **[Wall mounted]**, then press **OK**.


Care

Screen

- Risk of damage to the TV screen!
Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth and wipe gently. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

Lock the TV

Your TV is equipped with a Kensington security slot at the base of the TV. To secure the TV, purchase a Kensington anti-theft lock (sold separately).

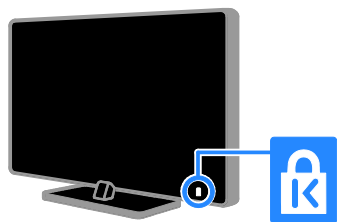

TP Vision Netherlands B.V. cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty

- Risk of injury, damage to TV or void of warranty! Never attempt to repair the TV yourself.
- Use the TV and accessories only as intended by the manufacturer.
- The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips Customer Care for service or repairs.
- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual, shall void the warranty.

Legal

Notice

2013 © TP Vision Netherlands B.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. TP Vision Netherlands B.V. reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision Netherlands B.V. warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Pixel characteristics

This LCD/LED product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

CE compliance

This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC) and 2011/65/EU (ROHS).



Compliance with EMF

TP Vision Netherlands B.V. manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the Electro Magnetic Field (EMF) standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. TP Vision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Open source

This product contains software licensed under an open-source licence. For acknowledgments and licence texts, please refer to the electronic in-product user manual. TP Vision Netherlands B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licences.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please send your request in English with product number to:

"Intellectual Property Department, TP Vision Netherlands B.V., P.O. Box 80077, 5600 KA Eindhoven, The Netherlands."

Trademarks and copyrights

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.



Manufactured under licence from Dolby Laboratories. Dolby and the double D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.



Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

DivX Certified® to play DivX® video up to HD 1080p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device which has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

PlayReady Final Products

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

All other registered and unregistered trademarks are the property of their respective owners.

Sustainability

Energy efficiency

This TV is designed with energy-efficient features. To access these features, press the **Green button** on the remote control.

- **Energy saving picture settings:** You can apply a combination of energy saving picture settings. While you watch TV, press the **Green button** and select **[Energy saving]**. Then select the **[Energy saving]** picture setting.
- **Screen off:** If you only want to listen to audio from the TV, you can switch off the TV display. Other functions continue to operate normally. While you watch TV, press the **Green button** and select **[Screen off]**.
- **Auto switch off:** To conserve energy, set the TV to switch off automatically after a period of inactivity. While you watch TV, press the **Green button** and select **[Auto switch off]**. Then select the period after which the TV switches off.

- **Switch off inactive devices:** Switch off connected EasyLink HDMI-CEC (Consumer Electronic Control) compliant devices that are inactive. While you watch TV, press the **Green button** and select **[Inactive devices off]**.
- **Power management:** An advanced power management helps save the energy consumed by this TV. To view how your personalised TV settings affect the TV's relative power consumption, press **⬆**, then select **[Setup] > [Watch demos] > [Active Control demo]**.

Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.



Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and human health.



Energy label

The European Energy Label informs you on the energy efficiency class of the product. The greener the energy efficiency class of this product is, the lower the energy it consumes.

On the label, you can find the energy efficiency class, the average power consumption of the product in use and the average energy consumption for 1 year. You can also find the power consumption values for the product on the Philips website for your country at www.philips.com/TV.

Help and support

Visit the Philips website

Visit the Philips support website at www.philips.com/support.

On the Philips support website, you can also:

- Find answers to Frequently Asked Questions (FAQ)
- Download a printable PDF version of this user manual
- Email us a specific question
- Chat online with Philips Consumer Care (available in certain countries only)

Use the Philips connectivity guide

An easy-to-use connectivity guide gives you guidance on how to connect your TV to other devices. Visit

<http://www.connectivityguide.philips.com>.

Search the TV forum

Your question may have already been answered by the Philips TV community of users. Visit www.supportforum.philips.com.

Contact Philips

You can contact Philips Consumer Care in your country for support. The number is available in the leaflet accompanying this product or online at


www.philips.com/support.

Before you contact Philips, write down the model and serial number of your TV. You can find this information on the back of your TV or on the TV packaging.

2 Use your TV


TV controls

Rear controls

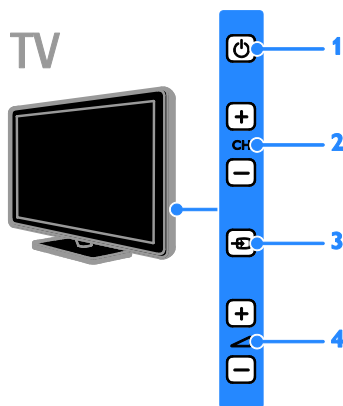

1. **⏻ (Standby):** Switch the TV on or off.
2. **CH +/-:** Switch to the next or previous channel.
3. **TV (SOURCE):** Watch a connected device.
4. **+/- (Volume):** Increase or decrease volume.


Sensors and indicators

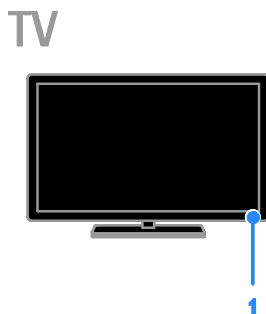


1. Remote control sensor

Point the remote control at the sensor. Make sure that the line of sight between the remote control and the TV is not blocked.

Remote control

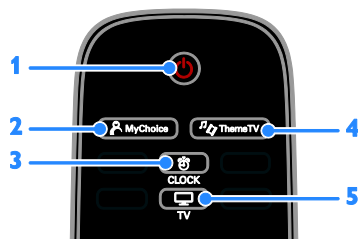


1. **⏻ (Standby):** Switch the TV on or to standby.
2. **MyChoice:** Access customised menu.
3. **CLOCK:** Access the TV clock.
4. **ThemeTV:** Access ThemeTV options.
5. **TV:** Switch source to watch TV.

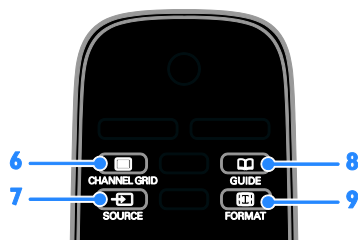


6. **CHANNEL GRID:** View the TV channel list.
7. **SOURCE:** Watch a connected device.
8. **GUIDE:** Access TV guide.
9. **FORMAT:** Change picture format.




10. **Home:** Access the Home menu.
11. **OK:** Confirm an entry or selection.
12. **Navigation buttons:** Navigate through menus and select items.

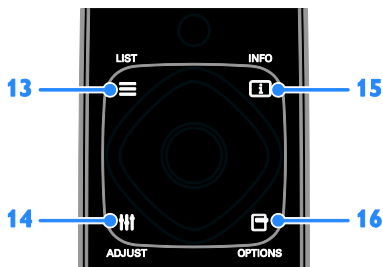

- 13. **LIST**: Access the TV channel list.
- 14. **ADJUST**: Adjust TV settings.
- 15. **INFO**: Display information about current activity.
- 16. **OPTIONS**: Access currently available options, picture and sound menus.

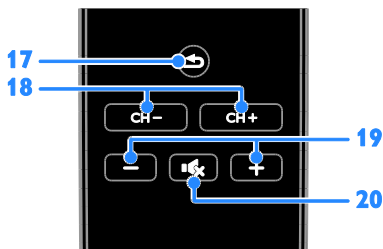

- 17. **Back**: Return to the previous menu page or exit from a TV function.
- 18. **CH - / CH +**: Change channels.
- 19. **+/- (Volume)**: Adjust volume.
- 20. **Mute**: Mute or restore audio.

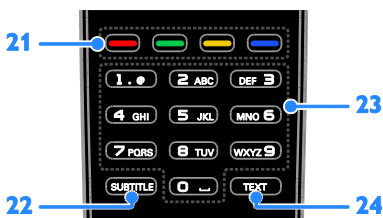

- 21. **Colour buttons**: Select tasks or options.
- 22. **SUBTITLE**: Enable or disable subtitles.
- 23. **0-9 (Numeric buttons)**: Select TV channels or enter text.
- 24. **TEXT**: Enable or disable text.

EasyLink controls

If you connect your TV to HDMI-CEC enabled devices, such as a Blu-ray player or home theatre, you can control them at the same time with one remote control. Simply switch on EasyLink after connection.

Read more about Easylink in **Connect your TV > Set up Easylink devices > Control devices** (Page 42).

On-screen remote control



You can also control connected HDMI-CEC enabled devices through other buttons that are available through the on-screen remote control. Make sure that Easylink is switched on after connection. Read more about Easylink in **Connect your TV > Set up Easylink devices > Control devices** (Page 42).

To access the on-screen remote control

1. While you watch a connected device, press **OPTIONS**.
2. Select **[Show remote control]**, then press **OK**.
3. Select an on-screen button, then press **OK**.

Watch TV

Switch TV on or off

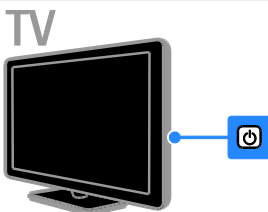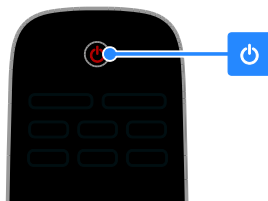

Switch the TV on

- Connect the TV to the mains outlet and switch on the main power.
- If the TV is not switched on, the standby LED remains off. Press \odot on the TV.
- If the standby LED is lit, press \odot on the remote control.

Note: There is a short delay before the TV responds.

Tip: If you cannot find your remote control and want to switch on the TV from standby, press any button the TV.

Switch TV to standby

Press \odot on the remote control.
The standby LED on the TV switches to red.

Switch off the TV

Press \odot on the TV.
The standby LED switches to off.

Note: Though your TV consumes very little energy when it is in standby or switched off, it does use some energy. If you are not going to use the TV for an extended period of time, disconnect the TV from the mains plug.



Automatic switch off

You can save energy with this TV's energy efficiency settings, which are enabled by default. If there is no user interaction (such as pressing a remote control button or a control on the TV) for four hours, the TV will automatically switch to standby.

To disable automatic switch off

1. While you watch TV, press the **Green button** on the remote control.
2. Select **[Auto switch off]**, then press **OK**.
3. Use the **Navigation buttons** to select **[0 mins]**, then press **OK**.

Adjust TV volume

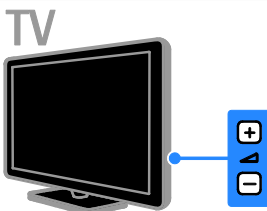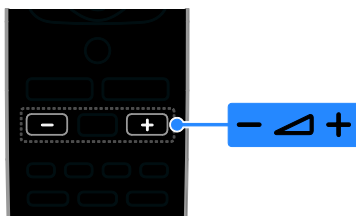

Increase or decrease the TV volume

- Press +/- on the remote control.
- Press \triangle +/- on the TV.



Mute or restore the TV volume

- Press Mute on the remote control to mute the volume.
- Press Mute again to restore the volume.

Adjust headphone volume

1. Press Home .
2. Select **[Setup] > [TV settings] > [Sound] > [Headphone volume]**, then press **OK**.
3. Select a level.

Switch TV channels

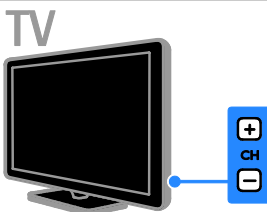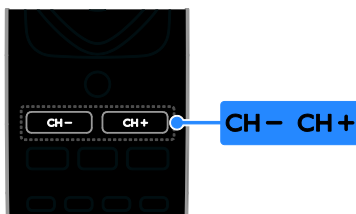

- Press **CH +/-** on the remote control or TV.
- Press the **Numeric buttons** to enter a channel number.

Manage favourite channels

You can view all channels or only a list of your favourite channels.

Create a list of your favourite channels

1. Press **≡ LIST**.

The channel list is displayed.

2. Select the channel to mark as favourite, then press **≡ OPTIONS**.

3. Select **[Add/remove favourites]**, then press **OK**.

The selected channel is marked with an asterisk.

To remove a channel from the favourites list, select **[Add/remove favourites]**, then press **OK**.

Display your list of favourite channels

1. Press **≡ LIST**, then press **≡ OPTIONS**.
2. Select **[List] > [Favourites]** to display channels in the favourite list.
3. Press **OK** to confirm.

Manage channel lists

After the channels are installed, you can:

- Filter channels.
- Switch between antenna and cable channels.
- Rename channels.
- Reorder channels.
- Lock a channel.
- Listen to digital radio.

Filter channels

1. While you watch TV, press **≡ LIST**.
2. Press **≡ OPTIONS**, then select **[Filter]**.
3. Select an option, then press **OK**.
 - **[Digital + Analogue]**: Display all channels in the channels list.
 - **[Digital TV channels]**: Display only digital channels.
 - **[Analogue Channels]**: Display only analogue channels.
 - **[Free + scrambled]**: Display all channels in the channels list.

- **[Free channels]**: Display only free channels.
- **[Scrambled channels]**: Display only scrambled channels.

Note: The filtering options may vary according to your broadcaster.

Switch between antenna and cable channels

You can switch between antenna and cable channels while you are watching TV.

1. While you watch TV, press **▲**.
2. Select **[Setup] > [Channel settings] > [Channel installation] > [Antenna connection]**.

3. Select **[Antenna (DVB-T)]** to watch antenna channels or **[Cable (DVB-C)]** to watch cable channels, then press **OK**.

Rename channels

When you select a channel, its name appears. You can change this channel name.

1. While you watch TV, press **≡ LIST**. The channel list is displayed.
2. Select the channel to rename, then select **≡ OPTIONS**.
3. Select **[Rename]**, then press **OK**. The onscreen keyboard is displayed.
4. Press the **Navigation buttons** to select each character, then press **OK**.
5. Once complete, select **[Done]**, then press **OK** to confirm.

Reorder channels

After the channels have been installed, you can reorder the channel list.

1. While you watch TV, press **≡ LIST**. The channel list is displayed.
2. Press **≡ OPTIONS**.
3. Select **[Reorder]**, then press **OK**.
4. Select the channel to reorder, then press **OK**.
5. Press the **Navigation buttons** to move the highlighted channel to another location, then press **OK**.
6. Once complete, press **≡ OPTIONS**.
7. Select **[Exit reorder]**, then press **OK**.

Lock a channel

You can prevent unauthorised access to channels by locking them.

1. While you watch TV, press **≡ LIST**.
The channel list is displayed.
2. Select the channel to lock, then press **≡ OPTIONS**.
3. Select **[Lock channel]**, then press **OK**.
4. If prompted, enter the PIN code.
The channel is marked with a lock icon in the channel list.

Tip: To watch a locked channel, enter the PIN code when prompted.

Listen to digital radio

If digital radio channels are available, you can listen to them. They are installed automatically when you install the TV channels.

1. While you watch TV, press **≡ LIST**.
The channel list is displayed.
2. Press **≡ OPTIONS**.
3. Select **[Filter] > [Radio]**, then press **OK**.
4. Select a radio channel, then press **OK**.

Watch connected devices

Before you can watch a device, connect the device to the TV. See **Connect your TV > Connect devices** (Page 32).

Select a device with SOURCE

1. Press **↔ SOURCE**.
2. Select a device, then press **OK**.

Select a device from the Home menu

1. Press **🏠**.
2. Select **[Source]**, then press **OK**.
3. Select the device, then press **OK**.

To add or manage your connected devices, see **Connect your TV > Watch connected devices > Change device settings** (Page 40).

Use picture and sound presets

Your TV comes with predefined picture and sound settings. You can apply these settings or customise them.

Select your preferred picture settings

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Picture and sound] > [Picture style]**, then press **OK**.
3. Select an option, then press **OK**:
 - **[Personal]**: Apply your personalised picture settings.

- **[Vivid]**: Rich and dynamic settings, ideal for daytime viewing.
- **[Natural]**: Natural picture settings.
- **[Standard]**: Default settings that suit most environments and types of video.
- **[Movie]**: Ideal settings for movies.
- **[Photo]**: Ideal settings for photos.
- **[Energy saving]**: Settings that conserve the most energy.

Select your preferred sound settings

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Picture and sound] > [Sound style]**, then press **OK**.
3. Select an option, then press **OK**:
 - **[Personal]**: Apply your personalised sound settings.
 - **[Original]**: Settings that suit most environments and types of audio.
 - **[Movie]**: Ideal settings for movies.
 - **[Music]**: Ideal settings for listening to music.
 - **[Game]**: Ideal settings for games.
 - **[News]**: Ideal settings for spoken audio, such as the news.

Change picture format

You can change the picture format to suit the video source.

1. Press **📺 FORMAT**.
2. Select a picture format, then press **OK**.

The available picture formats depend on the video source:

- **[Auto fill]**: Adjust the picture to fill the screen (subtitles remain visible). Recommended for minimal screen distortion but not for HD or PC.
- **[Auto zoom]**: Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC.
- **[Super zoom]**: Remove the black bars on the sides of 4:3 broadcasts. Not recommended for HD or PC.
- **[Movie expand 16:9]**: Scale 4:3 format to 16:9. Not recommended for HD or PC.

- **[Wide screen]:** Shows widescreen format content unstretched. Not recommended for HD or PC.
- **[Unscaled]:** Provide maximum detail for PC. Only available when PC mode is selected in the Picture menu.
- **[4:3]:** Display the classic 4:3 format.

- **[Search by genre]:** Search programmes by genre.
- **[All reminders]:** Display a list of all programme reminders.

View programme guide

What you can do

You can view channel schedules and programme synopses for digital TV channels using programme guides provided by the broadcasters. The availability of programme guides is dependent on your broadcaster.

You cannot view a channel's programme guide information if:

- the age rating of the channel is equal or higher than the age rating set on your TV.
- the channel is locked.

From the broadcaster

Access broadcaster programme guide

1. Press **HOME**.
2. Select **[TV guide]**, then press **OK**.
3. If you are viewing the programme guide for the first time, follow the onscreen instructions to update the guide.

Customise broadcaster programme guide

You can customise the displayed information to:

- Remind you when programmes start.
- Display only preferred channels.
- Change day of display.

Note: Options may vary according to the programme information available from the broadcaster.

1. In the programme guide, press **INFO** **OPTIONS**.
2. Select an option, then press **OK**:
 - **[Acquire EPG data]:** Update programme guide information.
 - **[Change day]:** Select the day to display programme guide.

Play multimedia files

What you can do

You can play videos, photos and music on your TV from a USB device connected to the TV.

Play files from USB device

If you have photos, videos or music files on a USB storage device, you can play the files on TV.

Caution:

- TP Vision is not responsible if the USB hard drive is not supported, nor is it responsible for damage to or loss of data in the device.
- Do not overload the USB port. If you connect a USB storage device that consumes more than 500mA power, make sure that it is connected to its own external power supply.

Browse USB device


1. Connect the USB device to the USB connector on the TV.
2. Press **INPUT SOURCE**, select **[USB]**, then press **OK**.
3. Select a file from the content browser, then press **OK** to start play.
4. Press **OK** to control play.
5. Optional: To select a different USB device, select **[USB device]** at the bottom of the TV screen.




Tips:

- Select the top bar to filter your files by type.
- Select **[Sort]** to arrange the files by name, date or other fields.

Play options

Watch video

1. Select  in the top bar.
2. Select a video, then press **OK**.
3. Optional: To play all the videos in a folder, select a video, then select **[Play all]**.



- To skip to the next or previous video, press **CH+** or **CH-**.
- To pause the video, press **OK**. Press **OK** again to resume playback.
- To skip forward or backward 10 seconds, press  or .
- To stop the video or exit the content browser, press .

Video options


While you play video, press **≡ OPTIONS**, then press **OK** to select an option:

- **[Subtitles]**: Select the available subtitle settings.
- **[Subtitle language]**: Select the language for subtitles if available.
- **[Character set]**: Select the correct character set for the subtitles.
- **[Audio language]**: Select an audio language.
- **[Repeat]**: Select **[Repeat]** to play the video file repeatedly or **[Play once]** to play the video file once.
- **[Shuffle on] / [Shuffle off]**: Enable or disable random play of video files.
- **[DivX® VOD]**: Display the DivX registration and deregistration codes for this TV.




Note:

To view information about a video (for example, played position, duration, title or date), select the video, then press  **INFO**. To hide the information, press  **INFO** again.

Listen to music

1. Select  in the top bar.
2. Select a track, then press **OK**.
3. Optional: To play all the tracks in a folder, select a track, then select **[Play all]**.

- To skip to the next or previous track, press **CH+** or **CH-**.

- To pause the track, press **OK**. Press **OK** again to resume playback.
- To skip forward or backward 10 seconds, press  or .
- To stop the video or exit the content browser, press .


Music options

While you play music, press **≡ OPTIONS**, then press **OK** to select an option:


- **[Repeat]**: Select **[Repeat]** to play a track or an album repeatedly, or select **[Play once]** to play a track once.
- **[Shuffle on] / [Shuffle off]**: Enable or disable random play of tracks.

Note:

To view information about a song (for example, title, artist or duration), select the song, then press  **INFO**.


To hide the information, press  **INFO** again.

View photos

1. Select  in the top bar.
2. Select a photo thumbnail, then press **OK**.

Start a slideshow

If there are multiple photos in a folder, select a photo, then select **[Slideshow]**.

- To skip to the next or previous video, press **CH+** or **CH-**.
- To stop the slideshow or close the photo, press  **LIST**.

Slideshow options

While you play a slideshow, press **≡ OPTIONS**, then press **OK** to select an option:

- **[Shuffle off] / [Shuffle on]**: Enable or disable random display of pictures in the slideshow.
- **[Repeat]**: Select **[Repeat]** watch a slideshow repeatedly or **[Play once]** to watch once.
- **[Slideshow time]**: Select the display time for each photo in the slideshow.
- **[Slideshow transitions]**: Select the transition from one photo to the next.

3 Use more of your TV

Professional mode

What you can do

With professional mode, you can configure this TV for commercial use. This includes features such as:

- Blocking guests from modifying the TV channels or settings
- Programming the TV to switch on to a specific channel and volume
- Limiting the maximum volume
- Blocking specific channels
- Locking buttons on the remote control
- Controlling on-screen information

Note: In professional mode, most of the mainstream features are replaced by similar features for commercial use.

Access professional-mode settings

1. Press **Home** on the remote control.
2. Press **3, 1, 9, 7, 5, 3, Mute**.

The professional setup menu appears.

Switch on professional mode

1. In the professional setup menu, select **[Professional Settings] > [Professional mode]**.
2. Select a setting to change, then press **OK**:
 - **[On]:** Switch on professional mode. Hospitality features are enabled.
 - **[Off]:** Switch off professional mode. The TV operates as a normal consumer TV.
3. Press **Home** to store all professional mode settings and exit.
4. Restart the TV.

Display hotel information

You can store and display information about your hotel on TV sets, such as:

- Welcome logo
- Welcome message

- Hotel information page

Display a welcome logo

You can create a welcome logo with images such as your hotel's logo.

1. Create a welcome screen in .png format and save the file to a USB storage device.
2. Connect the USB storage device to the TV, then switch on the TV.
3. In the professional setup menu, select **[Welcome logo] > [USB to TV]**.
4. Select **[Welcome logo] > [Display logo] > [On]** to display the logo.

Display a welcome message

You can create and display a welcome message for your guests. The message can consist of up to two lines of text, each containing a maximum of 20 alphanumeric characters.

1. In the professional setup menu, select **[Welcome message] > [Display message] > [On]**.
2. Select a setting to change:
 - **[Line 1] / [Line 2]:** Enter the content for the welcome message.
 - **[Clear]:** Clear **[Line 1]** and **[Line 2]**.
 - **[Message Time-out]:** Set how long to display the message.

3. Press **OK** to display the on-screen keyboard and use the **Navigation buttons** to compose the welcome message.

Display a hotel information screen

You can create and display static information screens about your hotel. The information page appears as an icon in the home menu, when you switch on the TV, and can also be accessed by pressing **INFO**.

1. Create an information screen in .jpg format and save the file to a USB storage device.
2. Connect the USB storage device to the TV, then switch on the TV.
3. In the professional setup menu, select **[Hotel information] > [USB to TV]**.
4. Select **[Hotel information] > [Display information] > [On]** to display the hotel information.

To view the hotel information screen by pressing **ⓘ** **INFO**, in the professional setup menu, select **[Hotel information]** > **[Info key enable]** > **[On]**.

Change professional mode settings

Professional mode settings

Use professional-mode settings to speed up installation of your TV for commercial use.

1. In the professional setup menu, select **[Professional Settings]**, then press **OK**.
2. Select a setting to change, then press **OK**:
 - **[Room ID]**: Set a Room ID for the TV.
 - **[Consumer setup]**: Shortcut to the full TV menu to configure all the TV settings.
 - **[Channel setup]**: Shortcut to channel list where you can re-arrange, rename and hide channels.
 - **[USB to TV]**: Clone settings stored on a USB storage device from another Philips TV to your TV.
 - **[TV to USB]**: Copy your TV's settings to a USB storage device. These settings can be cloned onto another Philips TV.
 - **[RF to TV]**: Copy settings from a Philips TV using RF signal.
 - **[Reset]**: Reset all professional mode settings to the factory default.

Installation settings

Use these settings to configure installation settings.

1. In the professional setup menu, select **[Installation]**.
2. Select a setting to change, then press **OK**:
 - **[Blank channel]**: Select a channel to play audio only.
 - **[Auto channel update]**: Update channels automatically.
 - **[Auto software update]**: Update your TV software automatically.
 - **[Skip scrambled signals]**: Enable or disable scrambled channels in the channel list.
 - **[Multi remote control]**: Select an option to identify a paired remote control.
 - **[MyChoice]**: Enable or disable MyChoice channels.

- **[ThemeTV]**: Enable or disable Theme TV.
- **[SmartPay]**: Enable or disable SmartPay.

Pairing TVs with a remote control

You can pair a TV with up to ten remote controls.

1. In the professional setup menu, select **[Installation]** > **[Multi remote control]**.
2. Select an option from **[TV0]** to **[TV9]** to identify the paired remote control, then press **OK**.
3. To set the remote control in a specific mode, simultaneously press **▲** and a number key for 5 seconds to set the remote control in the **[TV0]** to **[TV9]** mode.

Note:

- Press and hold **OK** on a remote control for more than five seconds. The TV displays the TV ID (for example, **[TV0]**) as well as the ID of the transmitting remote control.
- If the batteries in the remote control are replaced after pairing, you will need to pair the remote control with your TV again to assign an ID to your TV.

Power-on settings

Customise the way the TV behaves when it is switched on.

1. In the professional setup menu, select **[Switch on setting]**.
2. Select a setting to change, then press **OK**:
 - **[Switch on channel]**: Select a channel to display when the TV is switched on.
 - **[Switch on vol]**: Select the volume of the speakers to be used when the TV is switched on.
 - **[Max volume]**: Limit the maximum volume of the TV.
 - **[Switch on picture format]**: Select a picture format to be used when the TV is switched on. If the source does not support the pre-defined format, **[Auto fill]** is enabled.
 - **[Power on]**: Select the mode to be used when the TV is switched on:
 - **[On]**: If the mains power is switched on, the TV automatically switches on.
 - **[Standby]**: If the mains power is

switched on, the TV automatically switches to standby.

- **[Last status]:** If the mains power is switched on, the TV automatically switches to the last status (i.e. on or to standby).

- **[Smart power]:** Enable or disable energy saving mode.

Load clock

In Professional mode, you can set the local time according to the broadcast channel or country. For general clock features, see **Use more of your TV > Set locks and timers > Clock** (Page 22).

1. In the professional setup menu, select **[Clock setup]**.
2. Select a setting to change, then press **OK**:
 - **[Download program]:** Select a channel to download the clock settings.
 - **[Country selection]:** Select a country for the local time to be based on.
 - **[Time offset]:** Select the number of hours to offset.

Combine channel list

In Professional mode, you can create an integrated channel list comprising of broadcast channels, connected devices and multimedia files from a USB storage drive. Channels are named based on the TV connector or the media file name.

1. In the professional setup menu, select **[Combine channel list]**.
2. Select a setting to change, then press **OK**:
 - **[AV]:** Add connected devices to the channel list.
 - **[Media]:** Add multimedia files to the channel list.

Control user access

You can control user access to the TV with the following features:

- Lock remote control buttons
- Limit access from USB, HDMI-CEC or SCART connectors
- Customise guest view

Enable SCART

Use this feature to control the TV through a connected SCART device. When the SCART device is switched on, the TV automatically switches on.

1. Switch on the TV and the connected SCART device.
2. In the professional setup menu, select **[Control settings] > [Auto SCART] > [Power on scart]**, then press **OK**.

Enable HDMI-CEC

If your TV is connected to HDMI devices that are HDMI-CEC compliant, control these devices with the TV's remote control. For more details on how to use HDMI-CEC, see **Connect your TV > Set up EasyLink devices** (Page 41).

1. Switch on the TV and all connected HDMI-CEC devices.
2. Press **⬆**.
2. Select **[Setup] > [TV settings] > [EasyLink] > [On]**, then press **OK**.
3. In the professional setup menu, select **[Control settings] > [HDMI-CEC IN] > [On]**, then press **OK**.

Enable or disable access to a USB storage device

1. In the professional setup menu, select **[Control settings] > [Enable USB]**.
2. Select **[On]** or **[Off]**, then press **OK**.



 
Direct USB access

You can set the TV to automatically display the contents of a USB storage device when the device is connected.

1. In the professional setup menu, select **[Control settings] > [USB break-in] > [On]**, then press **OK**.

Change other control settings

1. In the professional setup menu, select **[Control settings]**.
2. Select a setting to change, then press **OK**:
 - **[Lock KB lock]:** Select **[On]** to lock all TV buttons except **⏻**. Select **[Off]** to unlock all buttons. Select **[All]** to lock all buttons.

- **[RC lock]:** Select **[On]** to disable all buttons on the remote control. Note that you can still enter the professional setup menu by pressing **3, 1, 9, 7, 5, 3, **.
- **[OSD display]:** Select **[On]** to enable on-screen information.
- **[High security]:** Select **[On]** to restrict access to the professional setup menu.
- **[Enable teletext]:** Select **[On]** to enable text.
- **[Enable MHEG]:** Select **[On]** to enable MHEG channels. Applicable to UK only.
- **[Enable EPG]:** Select **[On]** to enable the electronic programme guide.
- **[Enable subtitle]:** Select **[On]** to enable subtitles.
- **[Blue mute]:** Select **[On]** to change the background colour to blue when no signal is received. The default colour is black.
- **[Digit Timeout]:** Set the maximum time interval between selection of consecutive numeric buttons on the remote control.
- **[Selectable AV]:** Select which external sources are available when ** SOURCE** is pressed.
- **[Watch TV]:** Select which external source is displayed when ** TV** is pressed on the remote control.
- **[Independent main speaker mute]:** This setting is only available if the TV speaker is enabled.
 - **[On]:** Control the TV speaker and headphone volume separately. You can only mute the TV volume.
 - **[Off]:** Control both TV speaker and headphone volume together.
- **[Default main speaker volume]:** If the TV speaker and headphone volume are controlled separately, you can set the volume range to avoid sudden loud volumes when the TV speaker is enabled.

MyChoice and ThemeTV

Install MyChoice

You can customise a list of premium channels for your hotel guests. These channels are only accessible with an authorised PIN code.

1. In Professional setup menu, select **[Installation]**.
2. Select **[MyChoice] > [On]**, then press **OK**.


The **MyChoice** button on the remote control is activated.

Set up MyChoice

1. In Professional setup menu, select **[MyChoice setup]**.
2. Select the list of channels, then press **OK**.

- **[Ask for PIN]:** Enable PIN to access MyChoice channels.
- **[Package 1], [Package 2]:** List of MyChoice and free channels.
- **[Free Package]:** List of all available free channels accessible to hotel guests.


Watch MyChoice channels

1. Press ** MyChoice**.
2. Enter the PIN code to watch the channels.

Install ThemeTV

You can create a maximum of six theme lists for your hotel guests.

1. In the Professional setup menu, select **[Installation]**.
2. Select **[ThemeTV] > [On]**, then press **OK**.

The ** ThemeTV** button on the remote control is activated.

Change speaker settings

You can set the audio output and volume of the TV. If independent external speakers are attached, they will match the audio of the TV speakers.

1. In the Professional setup menu, select **[Speaker settings]**.
2. Select a setting to change, then press **OK**.
 - **[TV speaker enable]:** Enable or disable TV speakers. Select **[Off]** to output audio through headphones or external speakers.

Tip: To enable ThemeTV at TV start-up, select **[ThemeTV]** > **[Startup]**.

Set up ThemeTV

1. In the Professional setup menu, select **[ThemeTV Configuration]**.
2. Select a channel group to edit.
3. Select **[ThemeTV Channel setup]**.
4. Select the channels to add to your channel group.

Change guest menu settings

Here are a few settings that hotel guests can change.

Picture settings

1. Press **⬆**.
2. Select **[Guest menu]** > **[Picture]**, then select one of these options:
 - **[Picture format]:** Change the picture format.
 - **[Brightness]:** Adjust screen brightness.
 - **[Video contrast]:** Change the intensity of the bright areas, keeping dark areas unchanged.
 - **[Colour]:** Adjust colour saturation of the picture.
 - **[Sharpness]:** Adjust the sharpness of the picture.

Sound settings

1. Press **⬆**.
2. Select **[Guest menu]** > **[Sound]**, then select one of these options:
 - **[Audio language]:** Select the preferred audio language for digital channels.
 - **[Dual / I/II]:** Select preferred audio language for analogue channels.
 - **[Mono / stereo]:** Select preferred audio format for analogue channels.

Feature settings

1. Press **⬆**.
2. Select **[Guest menu]** > **[Features]**, then select one of these options:
 - **[Subtitle mode]:** Select the subtitle mode.
 - **[Subtitle language]:** Select the available subtitle language.
 - **[Sleep timer]:** Set the timer.

Alarm settings

1. Press **⬆**.
2. Select **[Guest menu]** > **[Alarm]**, then select one of these options:
 - **[Alarm status]:** Enable or disable the alarm.
 - **[Alarm time]:** Set the time for the alarm.
 - **[Wakeup volume]:** Set the TV volume when the TV wakes up from standby.
 - **[Wakeup tune]:** Select a tune to play when the TV wakes up from standby.
 - **[Wakeup channel]:** Select the channel to display when the TV wakes up from standby.

Multimedia

1. Press **⬆**.
2. Select **[Guest menu]** > **[Multimedia]** to open the USB content browser and access multimedia files. This option is only available if **[Enable USB]** is enabled in the **[Control settings]** menu.

Mychoice

1. Press **⬆**.
2. Select **[Guest menu]** > **[MyChoice]** to access **MyChoice** channels. This option is only available if **[MyChoice]** is enabled in the **[Installation]** menu.
Enter the PIN to watch the channels.

ThemeTV

1. Press **⬆**.
2. Select **[Guest menu]** > **[ThemeTV]** to access ThemeTV options. This option is only available if **[ThemeTV]** is enabled in the **[Installation]** menu.

Play games

What you can do

On this TV, you can play standard games in full-screen with optimised picture settings for games.

What you need



- Connect your game console to this TV. See **Connect your TV > Connect devices > Game console** (Page 36). If the TV automatically adds the game console to the Source menu, it also applies the game sound preset when you start playing games (for certain models).

Start gaming

1. Press **☰ SOURCE**.
2. Select the game console, then press **OK**.
3. If needed, load a game disc on the game console, then select a game to play.
4. Follow the onscreen instructions to start gaming.

Game settings

Picture setting for games

You can optimise the TV display for gaming without picture lag.

1. Press **🏠**.
2. Select **[Setup] > [TV settings] > [Picture]**, then press **OK**.
3. Select **[Game or computer] > [Game]**.

Sound preset for games

You can optimise sound effects for gaming.

1. Press **☰ OPTIONS**.
2. Select **[Picture and sound] > [Sound style] > [Game]**, then press **OK**.

The TV is ready for gaming.

Note: When your gaming session ends, switch back to your usual sound setting.

View Text

Select a page

While you watch channels that broadcast text, you can view the text.

1. Select a channel that broadcasts text, then press **TEXT**.
2. Select a page in one of the following ways:
 - Enter the page number with the **Numeric buttons**.
 - Press **CH + / CH -** to view the next or previous page.
 - Press the **Colour buttons** to select a colour coded item.

Text options

1. While you view text, press **☰ OPTIONS**.
2. Select an option:
 - **[Freeze page] / [Unfreeze page]:** Freeze or unfreeze the current page.
 - **[Dual screen] / [Full screen]:** Enable or disable dual screen text. Dual screen displays both the current channel and the text broadcast on two halves of the TV screen.
 - **[T.O.P. overview]:** Table Of Pages (T.O.P.) text broadcasts allow you to jump from one subject to another without entering page numbers.
 - **[Enlarge] / [Normal view]:** Zoom in on the page. Press the **Navigation buttons** to move around the enlarged view.
 - **[Reveal]:** Hide or reveal hidden information on a page, such as solutions to riddles or puzzles.
 - **[Cycle subpages]:** If subpages are available, each is shown automatically.
 - **[Language]:** Switch to a different language group to correctly display different character sets.
 - **[Text 2.5]:** View text with more colours and better graphics than normal text. If Text 2.5 is broadcast by a channel, it is switched on by default.

Text language

For digital TV channels where the broadcasters provide different text languages, you can select your preferred primary and secondary languages.

1. Press **▲**.
2. Select **[Setup] > [Channel settings]**.
3. Select **[Languages] > [Primary Text]** or **[Secondary Text]**.
4. Select a language, then press **OK**.

Subpages

If the text page contains several subpages, you can view each subpage in succession. These subpages are shown on a bar next to the main page number.

Press **◀** or **▶** to select them.

Search

You can search for a word or number that exists on the current text page.

1. While you are viewing text, press **OK** to highlight the first word or number.
2. Press the **Navigation buttons** to skip to the word or number to search.
3. Press **OK** to begin the search.
4. To exit the search, press **▲** until no word or number is highlighted.

Digital text

If a digital TV channel's broadcaster offers dedicated digital text or interactive services, you can view digital text. Channels such as BBC1 may have digital text with more interactive features.

Note: Digital text services are blocked when subtitles are broadcast and switched on. See **Change your TV settings > Language settings > Subtitles on digital channels** (Page 28).

When in digital text:

- Press the **Navigation buttons** to select or highlight items.
- Press the **Colour buttons** to select an option, then press **OK** to confirm or activate.

Set locks and timers

Clock

You can display a clock on the TV. The clock displays the time that is broadcast by your TV service operator.

Display the TV clock

1. While you watch TV, press **⌚** **CLOCK**. The clock is displayed on the top right-hand corner of the TV screen.

Change the clock mode

You can change the clock mode to automatic or manual. By default, it is set to automatic mode, which automatically synchronises it to Coordinated Universal Time (UTC). If your TV cannot receive UTC transmissions, change the clock mode to **[Manual]**.

1. While you watch TV, press **▲**.
2. Select **[Setup] > [TV settings] > [General settings]**.
3. Select **[Clock] > [Auto clock mode]**.
4. Select **[Automatic]**, **[Manual]** or **[Country dependent]**, then press **OK**.

Change the time zone

In countries with clock transmission data, you can change the time zone if **[Auto clock mode] > [Automatic]** or **[Country dependent]** is selected.

1. In the **[Clock]** menu, select **[Time zone]**.
2. Select your time zone, then press **OK**.

Set daylight saving time

In countries with clock transmission data, you can enable or disable daylight saving time if **[Auto clock mode] > [Automatic]** or **[Country dependent]** is selected.

1. In the **[Clock]** menu, select **[Daylight saving]**.
2. Select **[Standard time]** or **[Daylight saving time]**, then press **OK**.

Set the clock manually

You can set the date and time manually. Before you start, set the clock mode to **[Manual]**.

1. In the **[Clock]** menu, select **[Date]** or **[Time]**, then press **OK**.
2. Set the time or date with the **Navigation buttons**.
3. Select **[Done]**, then press **OK**.

Sleep timer

You can switch the TV to standby after a specified time. During the countdown to the specified time, you can switch off your TV earlier or reset the sleep timer.

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [General settings] > [Sleep timer]**.
3. Select the sleep timer duration.
The sleep timer can be set up for to 180 minutes. To switch off the sleep timer, set it to zero minutes.
4. Press **OK** to activate the sleep timer. After the specified time, the TV switches to standby.

Child lock

To protect children from unsuitable TV programmes, you can lock the TV or block age rated programmes.

Set or change the child lock code

1. Press **⬆**.
2. Select **[Setup] > [Channel settings] > [Child lock]**.
3. Select **[Set code]** or **[Change code]**.
4. Enter the code with the **Numeric buttons**.

Tip: If you access the channels from the channel list, you are prompted to enter your lock code. If you forget your code, enter '8888' to override any existing codes.

Lock or unlock channels

1. In the child lock menu, select **[Channel lock]**.
2. Enter the child lock code with the **Numeric buttons**.
3. Select the channels to lock or unlock.
Restart the TV to activate the lock.

Note:

If you access the channels from the channel list, you are prompted to enter your lock code.

Parental rating

You can set your TV to display only programmes with age ratings lower than your child's age. This restriction only applies to digital channels from broadcasters that rate their programmes according to age.

1. Press **⬆**.
2. Select **[Setup] > [Channel settings]**.
3. Select **[Child lock] > [Parental rating]**.
You are prompted to enter the child lock code.
4. Enter the child lock code with the **Numeric buttons**.
5. Select an age rating, then press **OK**.

All programmes above the selected age rating are blocked.

For information on child lock codes, see **Use more of your TV > Set locks and timers > Child lock** (Page 23).

4 Change your TV settings

Picture and sound

Settings assistant

You can select picture and sound settings with the help of the settings assistant, which demonstrates the effect of your chosen setting immediately.

1. While you watch TV, press **⬆**.
2. Select **[Setup]** > **[Quick picture and sound settings]**, then press **OK**.
3. Select **[Continue]**, then press **OK**.
4. Follow the onscreen instructions to choose your preferred settings.

More picture settings

You can change the settings in the Picture menu.

1. Press **⬆**.
 2. Select **[Setup]** > **[TV settings]** > **[Picture]**, then press **OK**.
 3. Select a setting to change, then press **OK**.
- **[Picture style]**: Select a predefined picture setting.
 - **[Restore style]**: Restores the previously selected picture settings.
 - **[Backlight contrast]**: Adjust the brightness of the display backlight.
 - **[Colour]**: Adjust the colour saturation of the picture.
 - **[Sharpness]**: Adjust the sharpness of the picture.
 - **[Noise reduction]**: Select the amount of noise reduction for the picture.
 - **[MPEG artifact reduction]**: Smoothen transitions and haziness in the digital picture.
 - **[Digital Crystal Clear]**: Fine-tune each pixel to match the surrounding pixels and produce a brilliant, high-definition image.
 - **[Advanced sharpness]**: Enable

superior sharpness, especially on lines and contours in the picture

- **[Dynamic contrast]**: Dynamically enhance the details in the dark, medium and light areas of the picture.

- **[Dynamic backlight]**: Select a backlight level to optimise dynamic power consumption and picture contrast.

- **[Colour enhancement]**: Dynamically enhance the vividness and details of colours.

- **[Advanced]**: Access advanced settings such as gamma, tint settings and video contrast settings.

- **[Gamma]**: Adjust the non-linear setting for picture luminance and contrast.

- **[Tint]**: Change the colour balance.

- **[Custom tint]**: Customise colour balance setting. Only available if **[Tint]** > **[Custom]** is selected.

- **[Video contrast]**: Adjust video contrast.

- **[Brightness]**: Adjust screen brightness.

- **[Hue]**: Compensate colour variations in NTSC transmissions.

- **[Game or computer]**: When viewing content from a connected game console, select **[Game]** to apply game settings. When a computer is connected through HDMI, select **[Computer]**. Make sure that **[Format and edges]** > **[Picture format]** > **[Unscaled]** is selected to view maximum detail.

- **[Format and edges]**: Access advanced settings to control the display format of the picture.

- **[Picture format]**: Change the picture format.

- **[Screen edges]**: Change the picture size.

- **[Picture shift]**: If available, move the position of the picture.

More sound settings

You can change the settings in the Sound menu.

1. Press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[Sound]**, then press **OK**.

3. Select a setting to change, then press **OK**.

- **[Sound style]**: Access predefined sound settings.
- **[Restore style]**: Restore the last selected predefined sound setting.
- **[Bass]**: Adjust the bass level of the speaker and headphones.
- **[Treble]**: Adjust the treble level of the speaker and headphones.
- **[Surround mode]**: Select a surround sound mode to enhance your audio experience.
- **[Auto incredible surround 3D]**: Select a surround sound mode to enhance your audio experience in 3D mode. For certain models.
- **[Headphone volume]**: Adjust headphone volume.
- **[Advanced]**: Access advanced settings to enhance your audio experience.
 - **[Auto volume levelling]**: Enable the reduction of sudden volume changes, for example, when switching channels.
 - **[TV speakers]**: Select the preferred speakers to stream audio from the TV. See **Connect your TV > Set up EasyLink devices > Select speaker output** (Page 42).

- **[Clear Sound]***: Enhance sound quality.

- **[Audio Out format]**: Select the type of audio output through the digital audio output connector. Choose between **[Multichannel]** and **[Stereo]**.

* Available on certain models only.

- **[Audio Out levelling]**: Set the output level for stereo audio. Select **[Less]** for a certain amount of loss in intensity or signal strength. Select **[More]** for no loss in intensity or signal strength.

- **[HDMI 1 - ARC]**: Enable audio

output from the ARC-compliant device connected to the HDMI 1 connector.

- **[Audio out delay]**: Automatically sync the image on the TV to the audio from a connected home theatre. You do not need to use this setting when connecting the TV to a Philips home theatre.

- **[Audio out offset]**: Adjust the setting for audio output delay. Available if **[Audio out delay]** is switched on.

Audio format

Digital channels

If a digital TV channel broadcaster streams audio in multiple formats, you can select an audio format.

1. Press **▲**.
2. Select **[Setup]** > **[Channel settings]** > **[Languages]** > **[Preferred audio format]**.
3. Select an option, then press **OK**.

- **[Standard]**: Receive standard audio format (MPEG).
- **[Advanced]**: Receive advanced audio formats, if available (AAC, Dolby Digital or Dolby Digital Plus).

Analogue channels

If an analogue TV channel broadcaster streams stereo audio in multiple formats, you can select an audio format.

1. Press **▲**.
2. Select **[Setup]** > **[Channel settings]** > **[Mono/Stereo]**.
3. Select a setting, then press **OK**.

Reset picture and sound

You can restore the default picture and sound settings, while the channel installation settings remain the same.

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[TV settings]** > **[General settings]** > **[Factory settings]**, then press **OK**.
3. Select **[OK]**, then press **OK**.

All TV settings (except for channel settings) are reset to the default factory settings.

Channels

Automatic installation

When the TV was switched on for the first time, a full installation of channels was performed.

To change your language, country and reinstall all available TV channels, you can run this full installation again.

Start installation

Note: If you are prompted to enter a code, enter '8888'.

1. Press **▲**.
2. Select **[Setup]** > **[Search for channels]** > **[Reinstall channels]**, then press **OK**.
3. Select your country, then press **OK**.
4. Select your network, then press **OK**:
 - **[Antenna (DVB-T)]**: Access free-to-air antenna transmissions.
 - **[Cable (DVB-C)]**: Access cable transmissions.
5. Follow the onscreen instructions to select other options, if any.
The start menu for channel search is displayed.
6. Select **[Start]**, then press **OK**.
7. Once the channel search is complete, select **[Finish]**, then press **OK**.

Tip: Press **≡ LIST** to see the channel list.

Note: When digital TV channels are found, the list of installed channels may display empty channel numbers. You can rename or reorder these channels.

Install analogue channels

You can search and store analogue TV channels one by one.

Step 1: Select your system

Note: Skip this step if your system settings are correct.

1. While you watch TV, press **▲**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual installation]** > **[System]**, then press **OK**.

4. Select the system for your country or region, then press **OK**.

Step 2: Search and store new TV channels

1. While you watch TV, press **▲**.
 2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
 3. Select **[Analogue: Manual installation]** > **[Search channel]**, then press **OK**.
 4. Find the channel:
 - If you know the channel frequency, enter it with the **Navigation buttons** or **Numeric buttons**.
 - If you do not know the channel frequency, search for the next frequency that has a strong signal. Select **[Search]**, then press **OK**.
 5. After you have found the correct channel, select **[Done]**, then press **OK**.
 6. Select **[Store as new channel]**, then press **OK** to store the new TV channel.
- Note:** If the reception is poor, reposition your antenna and repeat the procedure.

Install digital channels

If you know the channel frequency of the channels you want to install, you can search and store digital channels one by one. For best results, contact the service provider.

1. Press **▲**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Digital: Reception test]** > **[Search channel]**, then press **OK**.
4. Press the **Numeric buttons** to enter the channel frequency.
5. Select **[Search]**, then press **OK**.
6. When the channel is found, select **[Store]**, then press **OK**.

Fine-tune analogue channels

If the reception of an analogue TV channel is poor, you can fine-tune the TV channel.

1. Press **▲**.
2. Select **[Setup]** > **[Channel settings]** > **[Channel installation]**.
3. Select **[Analogue: Manual installation]** > **[Fine tune]**, then press **OK**.
4. Press **▲** or **▼** to fine-tune the channel.

5. When you have selected the correct channel frequency, select **[Done]**, then press **OK**.
6. Select an option, then press **OK**.
 - **[Store current channel]**: Store the channel under the current channel number.
 - **[Store as new channel]**: Store the channel under a new channel number.

Update channel list

When the TV was switched on for the first time, a full installation of channels was performed. By default, when there are changes to these channel lists, the TV updates them automatically. You can also switch off the automatic update or manually update the channels.

Note: If you are prompted to enter a code, enter '8888'.

Automatic update

To add or remove digital channels automatically, leave the TV in standby mode. The TV updates channels and stores new channels everyday. Empty channels are removed from the channel list.

Switch off the channel update message

If a channel update is performed, a message is displayed at startup. You can switch off this message.

1. Press **⬆**.
2. Select **[Setup] > [Channel settings]**.
3. Select **[Channel installation] > [Channel update message]**.
4. Select **[Off]**, then press **OK**.

Switch off automatic updates

In the **[Channel installation]** menu, select **[Automatic channel update] > [Off]**.

Update channels manually

1. Press **⬆**.
2. Select **[Setup] > [Search for channels] > [Update channels]**, then press **OK**.
3. Follow the onscreen instructions to update the channels.

Copy channels

ATTENTION: This feature is intended for dealers and service personnel.

You can copy channel lists from one Philips TV to another through a USB storage device. You do not need to search for channels or install them again on the second TV. The channel list file is small enough to fit on any USB storage device.

What you need

Two Philips TVs that have these properties:

- The same country setting
- The same year range
- The same DVB type, as indicated by the suffix (H, K, T, D/00) in the model name
- The same hardware type, as indicated by the sticker on the back of the TV. For example: TPM10.1E LA.
- Compatible software versions

Note: If you are prompted to enter a code, enter '8888'.

Step 1: Check the country setting

1. Switch on the first TV (with the channels that you want to copy to the second TV).
2. Press **⬆**.
3. Select **[Setup] > [Search for channels] > [Reinstall channels]**, then press **OK**. The country menu is displayed.
4. Make a note of the current setting.
5. Press **⬅**.
6. Press **[Cancel]** to exit.

Step 2: Copy channel list to USB

1. Connect a USB storage device to the first TV (with the channels installed on it).
2. Press **⬆**.
3. Select **[Setup] > [Channel settings]**.
4. Select **[Channel installation] > [Copy channel list] > [Copy to USB]**, then press **OK**.

The channel list is copied to the USB storage device.

5. Disconnect the USB storage device.

Step 3: Copy channels to a TV with no channels installed

1. Switch on the second TV, on which you want to copy the channel list. Initial installation starts.
2. Follow the onscreen instructions and select the same country as the TV whose channel list you want to copy.

3. Skip the search for channels.
4. Connect the USB storage device.
5. Press **⬆**.
6. Select **[Setup] > [Channel settings]**.
7. Select **[Channel installation] > [Copy channel list] > [Copy to TV]**, then press **OK**.

The channel list is copied to the TV storage device.

8. Disconnect the USB storage device.

Step 3: Copy channels to a TV with pre-installed channels

1. Switch on the second TV, on which you want to copy the channel list.
2. Press **⬆**.
3. Select **[Setup] > [Search for channels] > [Reinstall channels]**, then press **OK**.
The country menu is displayed.
4. Make sure that the country setting is the same as for the first TV.
5. Press **↩**.
6. Press **[Cancel]** to exit.
7. If the country setting is different, reinstall the second TV to match the country setting of the first TV. See **Change your TV settings > Reset all**.
8. Connect the USB storage device to the second TV.
9. Press **⬆**.
10. Select **[Setup] > [Channel settings]**.
11. Select **[Channel installation] > [Copy channel list] > [Copy to TV]**, then press **OK**.
The channel list is copied to the second TV.
12. Disconnect the USB storage device.

Language settings

Menu language

1. While you watch TV, press **⬆**.
2. Select **[Setup] > [TV settings] > [General settings] > [Menu language]**.
3. Select a menu language from the list, then press **OK**.

Audio language

If the TV channel broadcasts multiple or dual audio languages, you can select your preferred audio language.

1. While you watch TV, press **≡ OPTIONS**.
2. For digital channels, select **[Audio language]**. For analogue channels, select **[Dual I-II]**. Press **OK** to confirm your selection.
3. Select from the available languages, then press **OK**.

You can set your preferred primary and secondary audio languages to hear when available.

1. While you watch TV, press **⬆**.
2. Select **[Setup] > [Channel settings] > [Languages]**.
3. Select **[Primary audio language]** or **[Secondary audio language]** and select from the available languages.
4. Press **OK** to confirm.

Subtitles on analogue channels

1. While you watch an analogue TV channel, press **TEXT**.
2. Enter the three-digit page number of the subtitles page, which is usually '888'.
If available, subtitles are switched on.

Subtitles on digital channels

1. While you watch a digital TV channel, press **≡ OPTIONS**.
2. Select **[Subtitles]**, then press **OK**.
3. Select **[Subtitles off]**, **[Subtitles on]** or **[Automatic]**, then press **OK**.

Subtitle language

When available, you can change the subtitle language for digital channels.

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Subtitle language]**, then select from the available languages and press **OK**.
The subtitle language is changed for the specific channel.

You can set your preferred primary and secondary subtitle languages to display when available.

1. While you watch TV, press **⬆**.
2. Select **[Setup] > [Channel settings] > [Languages]**.
3. Select **[Primary subtitle language]** or **[Secondary subtitle language]** and select from the available languages.
4. Press **OK** to confirm.

Universal access settings

Switch on

Some digital TV broadcasters provide special audio and subtitle features for people who are hearing or visually impaired. You can switch these features on or off.

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [General settings]**.
3. Select **[Universal access] > [On]** or **[Off]**, then press **OK**.

Set audio feedback

When you press a button on the remote control or TV, you can set the TV to play a beep.

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Universal access] > [Key beep] > [On]**, then press **OK**.

Hearing impaired access

To make sure that a hearing-impaired audio language is available, press **≡ OPTIONS**, then select **[Audio language]**. Languages that support hearing-impaired audio are indicated with an ear-shaped icon.

Switch on hearing-impaired audio and subtitles

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Universal access] > [Hearing impaired]**.
3. Select a setting, then press **OK**.
 - **[Off]**: Switch off hearing impaired features.
 - **[On]**: Switch on hearing impaired audio and subtitles.

Visually impaired access

To make sure that a hearing-impaired audio language is available, press **≡ OPTIONS**, then select **[Audio language]**. Languages that support visually impaired audio are indicated with an eye-shaped icon.

Select speakers or headphones

You can choose to hear the visually impaired audio through the TV speakers, headphones or both.

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Universal access] > [Visually impaired]**.
3. Select a setting, then press **OK**.
 - **[Speakers]**: Hear visually impaired audio from speakers only.
 - **[Headphones]**: Hear visually impaired audio from headphones only.
 - **[Speakers + headphones]**: Hear visually impaired audio from speakers as well as headphones.
 - **[Off]**: Switch off visually impaired audio.

Note: If the EasyLink remote control is switched on, you cannot select the Green button. To switch off EasyLink, see **Connect your TV > Set up EasyLink devices > What you need** (Page 41).

Change volume for visually impaired audio

1. While you watch TV, press **≡ OPTIONS**.
2. Select **[Universal access] > [Mixed volume]**.
3. Press the **Navigation buttons** to change the volume, then press **OK**.

Audio effects

1. Press **⬆**.
2. Select **[Setup] > [Channel settings]**.
3. Select **[Languages] > [Visually impaired]** or **[Audio effects]**.
4. Select a setting, then press **OK**.
 - **[On]**: Enable audio effects in the visually impaired audio.
 - **[Off]**: Disable audio effects in the visually impaired audio.

Type of speech

1. Press **⏠**.
2. Select **[Setup]** > **[Channel settings]**.
3. Select **[Languages]** > **[Visually impaired]** or **[Speech]**.
4. Select a setting, then press **OK**.
 - **[Descriptive]**: Hear descriptive speech in the visually impaired audio.
 - **[Subtitles]**: Hear subtitles in the visually impaired audio.

Other settings

TV demo

You can watch a demo to find out more about the features on this TV.

1. While you watch TV, press **⏠**.
2. Select **[Setup]** > **[Watch demos]**, then press **OK**.
3. Select a demo, then press **OK**.

Home mode

Some TV settings may not be available in **Shop** mode. To make sure that the correct TV settings are applied, set the TV to **Home** mode.

1. While you watch TV, press **⏠**.
2. Select **[Setup]**, then press **OK**.
3. Select **[TV settings]** > **[General settings]** > **[Location]**.
4. Select **[Home]** or **[Shop]**, then press **OK**.
5. Restart the TV.

Reset all

You can reset all picture and sound settings and reinstall all TV channels on your TV.

1. Press **⏠**.
2. Select **[Setup]** > **[TV settings]** > **[General settings]** > **[Reinstall TV]**, then press **OK**.
3. Select **[Yes]**, then press **OK**.
4. Follow the onscreen instructions.

5 Connect your TV

About cables

Cable quality

Before you connect devices to the TV, check the available connectors on the device. Connect the device to the TV with the highest quality connection available. Good quality connectors transfer picture and sound better.


The connections shown in this user manual are recommendations only. Other solutions are possible. For more examples, visit <http://www.connectivityguide.philips.com>.

Tip: If your device has only composite or RCA connectors, use a composite (CVBS) cable to connect the device to the CVBS/Y connector on the TV.

HDMI

An HDMI connection has the best picture and sound quality.


- An HDMI cable combines video and audio signals. Connect HDMI for high-definition (HD) TV signals and to switch on EasyLink.
- An HDMI Audio Return Channel (ARC) connector allows output of TV audio to an HDMI ARC compliant device.
- Connect HDMI cables shorter than 5 meters/16.4 feet.

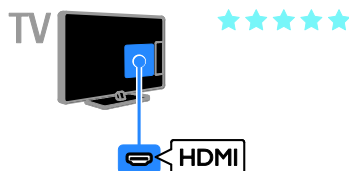

Y Pb Pr

Component video (Y Pb Pr) only transmits video. For sound, also connect to Audio Left/Right.


- The Y Pb Pr connection can handle high-definition (HD) TV signals.
- Match the Y Pb Pr connector colours to the cable plugs.

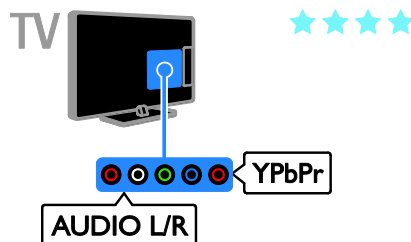

SCART

A SCART connection combines video and audio signals.


SCART connectors can handle RGB video signals but cannot handle high-definition (HD) TV signals.

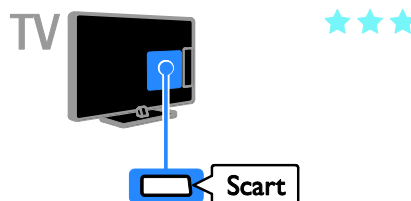

VGA*


You can connect VGA to display PC content on the TV. VGA only transmits video.

* Available on 22, 24, and 26-inch models only.

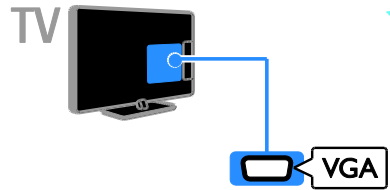

Connect antenna


Connect the antenna to the TV.

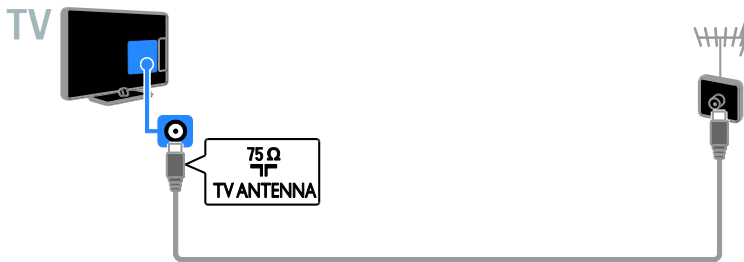


Connect devices

Blu-ray or DVD disc player

Connect the disc player to the TV with an HDMI cable.

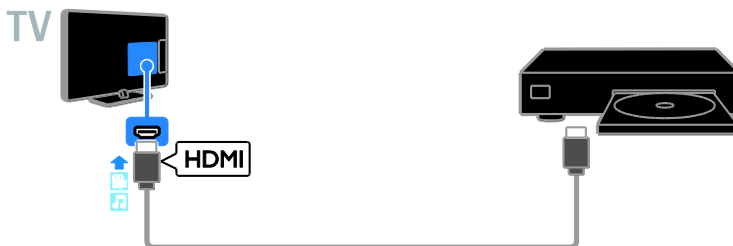


Connect the disc player to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

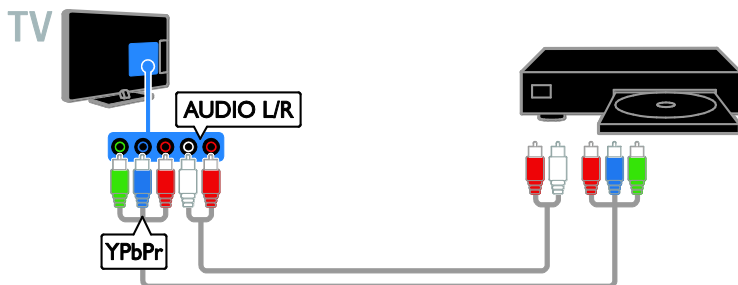

TV receiver

Connect the digital TV receiver with an antenna cable to the TV.

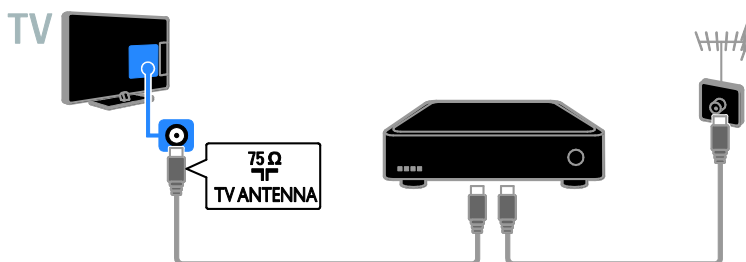


Connect the satellite or digital TV receiver to the TV with an HDMI cable.



Connect the digital TV receiver to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.




Connect the digital TV receiver to the TV with a SCART cable.

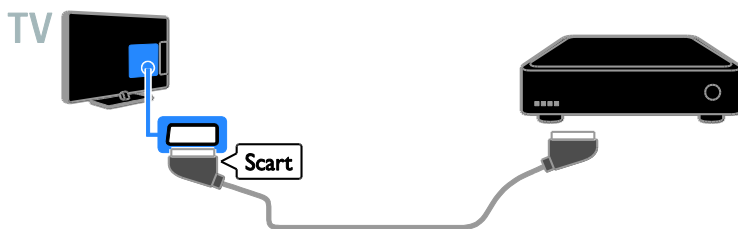


Video recorder


Connect the recorder to the TV with an antenna cable.

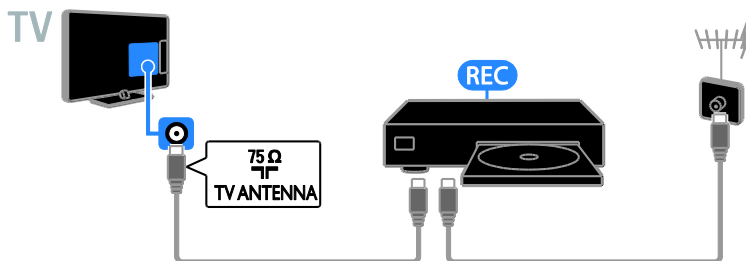


Connect the recorder to the TV with an HDMI cable.

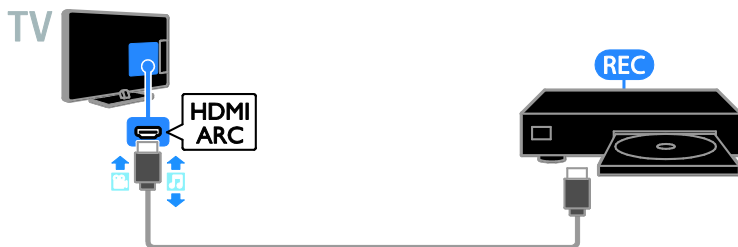

Connect the recorder to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

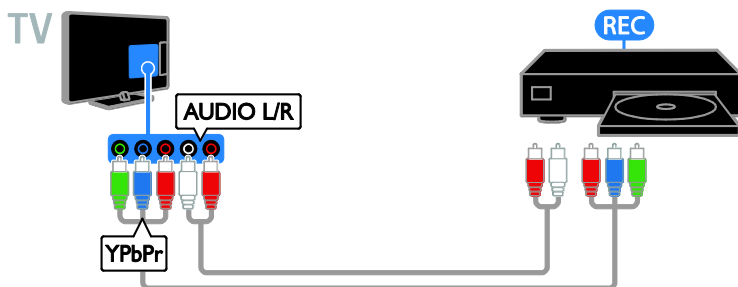

Connect the recorder to the TV with a SCART cable.

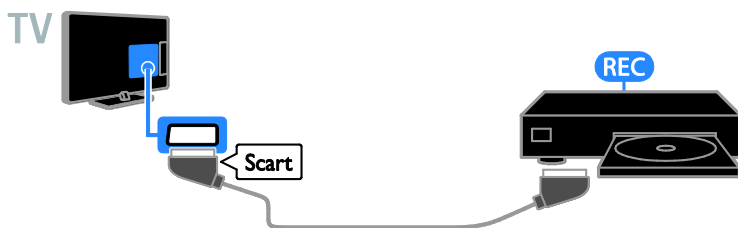


Game console

Connect the game console to the TV with an HDMI cable.




Connect the game console to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

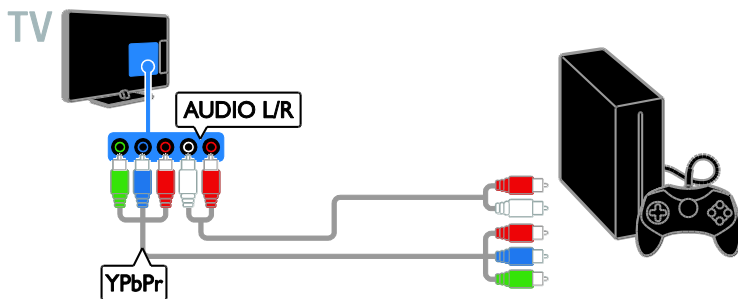


Home theatre


Connect an HDMI-ARC compliant home theatre to the TV with an HDMI cable.

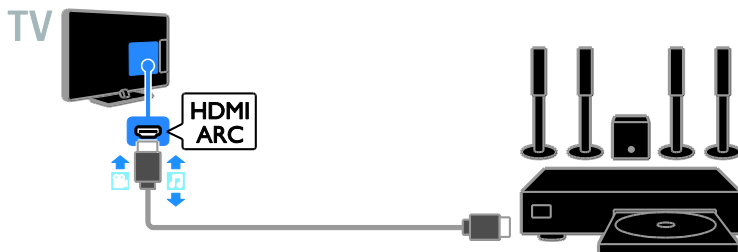


Connect the home theatre to the TV with an HDMI cable and a coaxial audio cable.

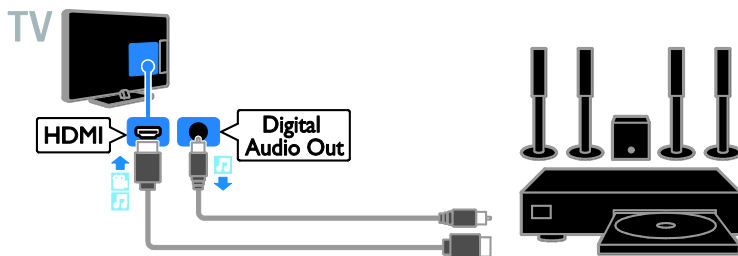

Connect the home theatre to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

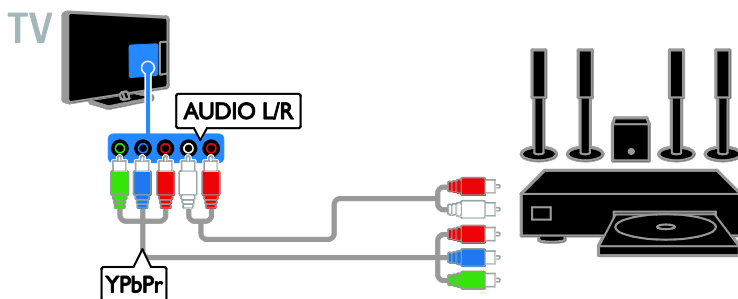

Connect the home theatre to the TV with a SCART cable.

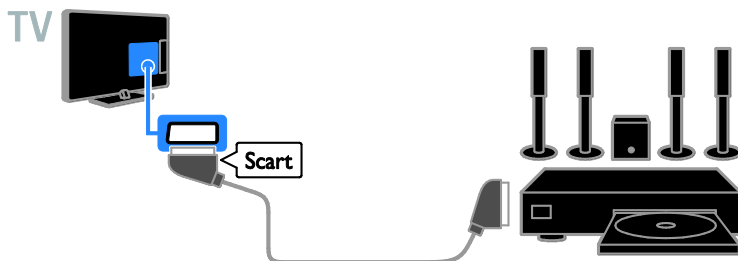

Digital camera

Connect the digital camera to the TV with a USB cable.




Digital camcorder

Connect the digital camcorder to the TV with an HDMI cable.




Connect the digital camcorder to the TV with a component video cable (Y Pb Pr) and an audio L/R cable.

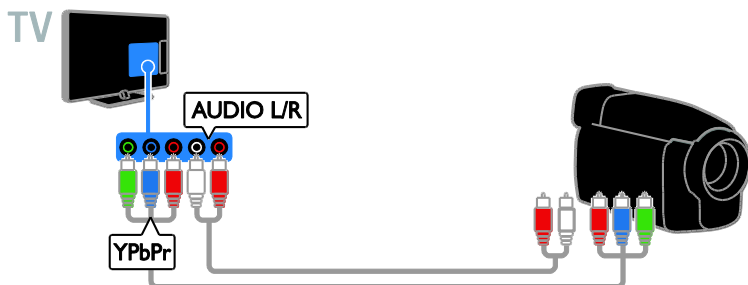


Connect more devices

USB storage device

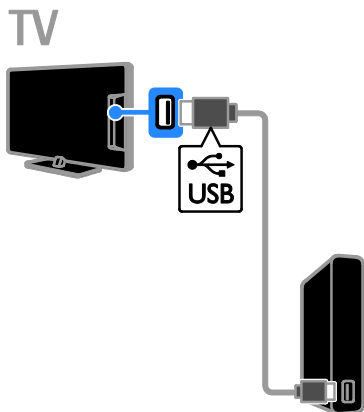

Connect the USB hard drive to the TV with a USB cable.

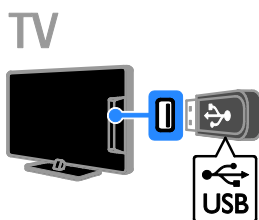

Connect the USB flash drive with a USB cable to the TV.

Computer

Connect the computer to the TV with an HDMI cable.



Connect the computer to the TV with a DVI-HDMI cable.



Connect the computer to the TV with a VGA cable*.

* Available on 22, 24, and 26-inch models only.



Watch connected devices

Select a device

Before you can watch a device, connect the device to the TV. See **Connect your TV > Connect devices** (Page 32).

Select a device with SOURCE

1. Press **SOURCE**.
2. Select a device, then press **OK**.

Select a device from Home menu

1. Press **Home**.
2. Select **[Source]**, then press **OK**.
3. Select a device, then press **OK**.

Update the source list

If you add or remove a device, update the source list.

1. Press **SOURCE**.
2. Press **OPTIONS**.
3. Select **[Scan connections]**, then press **OK**.
4. Follow the onscreen instructions.

Change device settings

Change the device type

You can change the device type to easily access it from the Source menu.

1. Press **SOURCE**.
2. Select the device, then press **[Device type]**.
3. Select a suitable device type, then press **OK**.

Rename a device

You can rename a device after it is connected to the TV.

1. Press **SOURCE**.
2. Select the connector, then press **[Rename]**.
3. Use the on-screen keypad to enter a new name.
4. When complete, select **[Done]**, then press **OK**.

Reset device settings

You can reset the type and name of the device to default settings.

1. In the **[Source]** menu, select the device and press **OPTIONS**.
2. Select **[Original name and icon]**, then press **OK**.

Set up EasyLink devices

What you can do

You can get the most out of your HDMI-CEC-compliant devices with Philips EasyLink enhanced control features. Connect your HDMI-CEC compliant devices through HDMI to your TV and control them at the same time with your TV remote control.

Note: Other brands describe HDMI-CEC functionality differently. Some examples are Anynet (Samsung), Aquos Link (Sharp) or BRAVIA Sync (Sony). Not all brands are fully compatible with Philips EasyLink.

After you have switched on Philips EasyLink, the following features are available:

One-touch play

When you play an HDMI-CEC compliant device, the TV switches on from standby and switches to the correct source.

One-touch standby

When you press **⏻** on the TV remote control, the TV and all HDMI-CEC compliant devices switch to standby mode.

Auto switch off inactive devices

If a HDMI-CEC compliant device has been inactive for some time, it switches to standby mode.

EasyLink remote control

You can control multiple HDMI-CEC compliant devices with your TV remote control.

System audio control

If you connect an HDMI-CEC compliant device that includes speakers through the HDMI ARC connector, you can choose to hear the TV audio from those speakers instead of the TV speakers.

Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, you can switch on Pixel Plus Link to retain picture quality.

Maximise display for subtitled video

Some video subtitles can create a separate subtitle bar under the video, which limits the video display area. To maximise the video display area, you can switch on auto subtitle shift and display the subtitles on the video image.

What you need

- Connect an HDMI-CEC compliant device to the TV. You can connect more than one HDMI-CEC device. See **Connect your TV > Connect devices** (Page 32).
- Configure each HDMI-CEC compliant device properly.
- Switch on EasyLink.

Switch on EasyLink

1. Press **⬆**.
2. Select **[Setup] > [TV settings] > [General settings] > [EasyLink]**.
3. Select **[EasyLink] > [On]**, then press **OK**.

Control devices

If you connect multiple HDMI-CEC devices that support this setting, you can control all such devices through the TV remote control.

Note: This is an advanced setting. Devices that do not support this setting cannot respond to the TV remote control.

1. Press **⬆️**.
2. Select **[Setup] > [TV settings] > [General settings] > [EasyLink] > [EasyLink remote control]**.
3. Select **[On]** or **[Off]**, then press **OK**.

Tips:

- To switch back to TV control, press **⬆️**, then select **[Watch TV]**.
- To control another device, press **⬆️**, then select the device from the Home menu.

EasyLink buttons

You can control HDMI-CEC compliant devices with the following buttons on the TV remote control:

- **⏻**: Switch the TV and the connected device on or to standby.
- **Numeric buttons**: Select a title, chapter or track.
- **OK**: Start, pause or resume play on the connected device, activate a selection, or access the device menu.
- **⬆️**: Display the TV Home menu.

Switch off connecting devices

You can also set the TV to switch off the connecting HDMI-CEC compliant devices if they are not the active source. The TV switches the connecting device to standby after 10 minutes of inactivity.

1. Press **⬆️**.
2. Select **[Setup] > [TV settings] > [General settings] > [EasyLink]**.
3. Select **[Auto switch off devices] > [On]**, then press **OK**.

Select speaker output

If a connected device is HDMI Audio Return Channel (HDMI ARC) compliant, you can output TV audio through an HDMI cable. Additional audio cables are not required. Make sure you connect the device to the HDMI ARC connector on the TV. See **Connect your TV > About cables > HDMI** (Page 31).

Switch on HDMI ARC

1. Press **⬆️**.
2. Select **[Setup] > [TV settings] > [Sound] > [Advanced] > [HDMI 1 - ARC]**.

3. Select one of the following, then press **OK**.

- **[On]**: Hear the TV audio through the connected HDMI-ARC compliant device.
- **[Off]**: Hear the TV audio through the TV speakers, or through a device connected through the digital audio out connector.

Note: Make sure that all HDMI-CEC settings are properly set up on the connected device.

Set up TV speakers

1. Press **⬆️**.
2. Select **[Setup] > [TV settings] > [Sound] > [Advanced] > [TV speakers]**.
3. Select an option, then press **OK**:
 - **[Off]**: Switch off TV speakers.
 - **[On]**: Switch on TV speakers.
 - **[EasyLink]**: Switch off TV speakers and stream TV audio to a connected HDMI-CEC audio device.
 - **[EasyLink autostart]**: When a HDMI-CEC audio device is connected, automatically switch off TV speakers and stream TV audio to the device.

Change TV audio streaming

You can switch audio between TV speakers and a connected amplifier at any time.

1. Press **≡** **OPTIONS**.
2. Select **[Picture and sound] > [Speakers]**.
3. Select one of the following, then press **OK**.
 - **[TV]**: On by default. Stream TV audio through TV and the connected HDMI-CEC audio device until the connected device switches to system audio control. TV audio is then streamed through the connected device.
 - **[Amplifier]**: Stream audio through the connected HDMI-CEC device. If system audio mode is not enabled on the device, audio continues to stream from the TV speakers. If **[EasyLink autostart]** was selected, the TV prompts the connected device to switch to system audio mode.

Retain picture quality

If your TV picture quality is affected by the picture-processing features of other devices, you can switch on Pixel Plus Link.

Switch on Pixel Plus Link

1. Press **Home**.
 2. Select **[Setup] > [TV settings] > [General settings] > [EasyLink]**.
 3. Select **[Pixel Plus Link] > [On]**, then press **OK**.
-

Maximise video display

Some subtitles create a separate subtitle bar under the video that limits the video display area. To maximise the video display area, you can switch on auto subtitle shift. The subtitles are then displayed over the video image.

Switch on auto subtitle shift

1. Press **Home**.
 2. Select **[Setup] > [TV settings] > [General settings] > [EasyLink]**.
 3. Select **[Auto subtitle shift] > [On]**, then press **OK**.
-

Connect a CAM (Conditional Access Module)

What you can do

You can watch scrambled digital TV channels with a Conditional Access Module (CAM). Once you have inserted the CAM and paid the subscription fees, you can watch the programmes.


This TV supports CI (Common Interface) as well as CI+. CI+ supports premium HD digital programmes with a high level of copy protection.

Note: The applications, functions, content and onscreen messages depend on the CAM service provider.

What you need

Caution: To protect the CAM from damage, insert the CAM as instructed.

Note: Refer to the documentation from your service operator on how to insert a smart card into the Conditional Access Module.

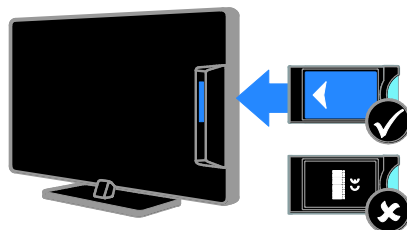

1. Switch off the TV.
 2. Follow the directions printed on the CAM to insert the CAM into the Common Interface slot at the side of the TV. Push the CAM in as far as it will go.
 3. Switch on the TV, then wait for the CAM to be activated. This takes a few minutes. To maintain access to encrypted digital TV channels, leave the CAM in the slot.
-

Access CAM services

1. After you insert and activate the CAM, press **Alt** **OPTIONS**.
2. Select **[Common interface]**, then press **OK**.
3. Select the CAM provider, then press **OK**.

6 Troubleshooting

General issues

The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Make sure that the power cable is securely connected.

When you are turning the TV on, off or to standby, you hear a creaking sound from the TV chassis:

No action is required. The creaking sound is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

The TV does not respond to remote control or TV controls when switched on:

The TV requires some time to start up. During this time, the TV does not respond to the remote control or TV controls. This is normal behaviour.

If the TV continues to be unresponsive to the remote control, view the remote control sensor through a digital camera – if you press any button on the remote control and notice red flickering at the sensor, the remote control is working but the TV may need to be checked by Philips Consumer Care. This troubleshooting procedure is not applicable to remote controls that are paired wirelessly with the TV.

When the TV is in standby, a start-up splash screen is displayed, then the TV returns to standby mode:

This is normal behaviour. When the TV is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup.

To switch on the TV from standby, press **⏻** on the remote control or press any key on the TV.

The standby light on the TV blinks red:

Disconnect the power cable from the power outlet. Wait until the TV cools down before you reconnect the power cable. If the

blinking reoccurs, contact Philips Consumer Care.

The TV audio is in the wrong language:

If you select audio language via **⏻** **OPTIONS**, the TV resets to the default language when you change channels or switch off the TV. To retain the selected language, change your audio language by pressing **⏻**, then selecting **[Setup] > [Channel settings] > [Languages] > [Primary audio language]** or **[Secondary audio language]**.

The TV or Smart TV menu is in the wrong language:

Change the menu to your preferred language.

For more information, see **Change your TV settings > Language settings > Menu language** (Page 28).

You forgot the 4-digit code to unlock the channel blocking feature (child lock):

Enter '8888'.

You want to upgrade your TV software:

Visit www.philips.com/support and download the latest software package for your TV. Software installation instructions and release notes indicating what's been updated are also available at the site. Full instructions on how to upgrade your TV software are also available at **Change your TV settings > Update software** (Page **Error! Bookmark not defined.**).

Channel issues

You want to install TV channels:

See **Change your TV settings > Automatic installation** (Page 26) for instructions on installing analogue or digital channels.

No digital channels were found during the installation:

- See the technical specifications to make sure that your TV supports DVB-T or DVB-C in your country.
- Make sure that all cables are properly connected and that the correct network is selected.

Previously installed channels do not appear in the channel list:

Make sure that the correct channel list is selected.

You want to rearrange or reorder the channel list:

After channels have been installed, they appear in the channel list. For information about managing channel lists, including rearranging channels, see **Watch TV > Manage channel lists** (Page 12).

Picture issues

The TV is on, but there is no picture or the picture is distorted:

- Make sure that the antenna is properly connected to the TV.
- Make sure that the correct device is selected as the display source.
- Make sure that the external device or source is properly connected.

There is sound but no picture:

Make sure that the picture settings are set correctly.

There is poor TV reception from an antenna connection:

- Make sure that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine-tune this channel.

There is poor picture quality from connected devices:

- Make sure that the devices are connected properly.
- Make sure that the picture settings are set correctly.

The TV did not save your picture settings:

Make sure that the TV location is set to **Home**. You can change and save settings in this mode.

The picture does not fit the screen; it is too big or too small:

Change to a different picture format.

The picture format keeps changing with different channels:

Instead of the picture format **[Auto zoom]**, select a different picture format.

The picture position is incorrect:

Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

The picture from broadcasts is scrambled:

You may need a Conditional Access Module to access content. Check with your service operator.

An "e-sticker" banner displaying information appears on the TV display:

The TV is in **[Shop]** mode. To remove the e-sticker, set the TV to **[Home]** mode, then restart the TV. See **Change your TV settings > Other settings > Home mode** (Page 30).

The computer display on the TV is not stable:

- Make sure that your PC uses the supported resolution and refresh rate. See **Specifications > Display resolutions** (Page 47).
- Change the TV picture format to **[Unscaled]**.

Sound issues

There is a picture but sound quality is poor:

If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Make sure that all cables are properly connected.
- Make sure that the volume is not muted or set to zero.
- Make sure that the TV speaker setting is selected. Press **III** **OPTIONS**, select **[Picture and sound] > [Speakers]**, then select **[TV]**.
- Make sure that the TV audio output is connected to the audio input on the

HDMI-CEC enabled or EasyLink compliant home theatre device. Sound should be heard from the home theatre speakers.

- Some devices may require you to manually enable HDMI audio output. If HDMI audio is already enabled, but you still do not hear audio, try changing the digital audio format of the device to PCM (Pulse Code Modulation). Refer to the documentation accompanying your device for instructions.

There is a picture but the sound quality is poor:

Make sure that the sound settings are correctly set.

Connection issues

There are problems with HDMI devices:

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from an HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.
- If you use an HDMI-to-DVI adapter or HDMI to DVI cable, make sure that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

You cannot use EasyLink features:

Make sure that your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

If an HDMI-CEC compliant audio device is connected to the TV and the TV does not display any mute or volume icon when the volume is muted, increased or decreased:

When a HDMI-CEC audio device is connected this behaviour is normal.

USB device content is not displayed:

- Make sure that the USB storage device is set to **Mass Storage Class** compliant, as described in the storage device's documentation.
- Make sure that the USB storage device is compatible with the TV.
- Make sure that the audio and picture file formats are supported by the TV.

Audio and picture files on your USB storage device do not play or display smoothly:

The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

Contact Philips

Warning: Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

If are not able to resolve your problem, refer to the frequently asked questions (FAQs) for this TV at www.philips.com/support. You can also consult and contribute to the Philips TV community at www.supportforum.philips.com.

If you wish to speak to or email a Philips representative, contact the Philips Consumer Care in your country. You can find the contact details in the leaflet accompanying this TV or at www.philips.com/support.

Note your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

7 Specifications

Power and reception

Product specifications are subject to change without notice.

Power

- Mains power: AC 220-240 V (50-60 Hz)
- Standby power consumption: < 0.3 W
- Ambient temperature: 5 to 40 degree Celsius
- For power consumption, see the product specifications at www.philips.com/support.

The power rating stated on the product typeplate is the power consumption for this product during normal household use (IEC 62087 Ed.2). The maximum power rating, stated between brackets, is used for electrical safety (IEC 60065 Ed. 7.2).

Reception

- Antenna input: 75 ohm coaxial (IEC75)
- TV system: DVB COFDM 2K/8 K
- Video playback: NTSC, PAL, SECAM*
- Digital TV: MPEG-4, DVB-T (Terrestrial), DVB-C (Cable)
- Tuner bands: VHF, UHF, S-Channel, Hyperband

* Available on certain models only.

Display and sound

Picture / Display

- Display type: LED backlight HD/Full HD
- Diagonal size:
 - 56 cm / 22 inches
 - 61 cm / 24 inches
 - 66 cm / 26 inches
 - 81 cm / 32 inches
 - 99 cm / 39 inches
 - 107 cm / 42 inches
- Aspect ratio: 16:9 (widescreen)
- Panel resolution:
 - Full HD: 1920x1080p
 - HD: 1366 x 768

- Picture enhancement: Digital Crystal Clear
- Perfect Motion Rate (PMR): 100 Hz

Sound

- Output power (RMS) @ 10% THD
 - 22 - 24 inch models: 8W
 - 26 inch models: 10W
 - 32 - 42 inch models: 20W
- Clear Sound
- Mono / Stereo / Secondary audio programming

Display resolutions

Computer formats - HDMI (Resolution - refresh rate)

640 x 480 - 60 Hz
 800 x 600 - 60 Hz
 1024 x 768 - 60 Hz
 1280 X 720 - 60 Hz
 1280 X 768 - 60 Hz
 1280 x 1024 - 60 Hz
 1360 x 768 - 60 Hz
 For Full HD TV only:
 1680 x 1050 - 60 Hz
 1920 x 1080 - 60 Hz

Computer formats - VGA (Resolution - refresh rate)

640 × 480 - 60 Hz
800 × 600 - 60 Hz
1024 × 768 - 60 Hz
1280 × 1024 - 60 Hz
1360 × 768 - 60 Hz
1600 × 1200 - 60 Hz
1920 × 1080 - 60 Hz

Video formats (Resolution - refresh rate)

480i - 60 Hz
480p - 60 Hz
576i - 50 Hz
576p - 50 Hz
720p - 50Hz, 60 Hz
1080i - 50Hz, 60 Hz
1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60 Hz

Multimedia

Note: Multimedia file names must not exceed 128 characters.

Supported multimedia connections

- USB: Connect only those USB devices that consume 500 mA of power or less.
 - NTFS, FAT 16 (Read only)
 - FAT 32

Supported image files

- JPEG: *.jpg, *.jpeg, *.mpo
- GIF (87a, 89a): *.gif
- PNG: *.png
- BMP: *.bmp, *.dib
- JPS: *.jps
- PNS: *.pns
- BMS: *.bms

Supported audio/video formats

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.mpg .mpeg .vob	PS	MPEG-1	1920x1088	25p, 30p, 50i, 60i	30	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), DVD-PCM, Dolby Digital	Yes
		MPEG-2	1920x1088	25p, 30p, 50i, 60i	30		Yes
		MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30		Yes
		H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30		Yes
.ts	TS	MPEG-2	1920x1088	25p, 30p, 50i, 60i	30	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, Dolby Pulse	Yes
		MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30		Yes
		H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30		Yes
		MVC	1920x1080i @ field rate = 50, 60Hz 1920x1080p @ frame rate = 24, 25, 30Hz 1280x720p @ frame rate = 50, 60Hz	-	30		Yes

Supported audio/video formats

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.ts .m2ts .mts .m2	M2TS TTS	MPEG-2	1920x1088	25p, 30p, 50i, 60i	30	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, Dolby Pulse	Yes
		MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30		Yes
		H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30		Yes
		MVC	1920x1080i @ field rate = 50, 60Hz 1920x1080p @ frame rate = 24, 25, 30Hz 1280x720p @ frame rate = 50, 60Hz	-	30		Yes
.ts .m2ts .mts	AVCHD	MPEG-2	1920x1088	25p, 30p, 50i, 60i	30	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, Dolby Pulse	Yes
		MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30		Yes
		H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30		Yes

Supported audio/video formats

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.ts .m2ts .mts	AVCHD	MVC	1920x1080i @ field rate = 50, 60Hz 1920x1080p @ frame rate = 24, 25, 30Hz 1280x720p @ frame rate = 50, 60Hz	-	30	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, Dolby Pulse	Yes
.m4v	M4V	H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30	AAC	Yes
.ism/Manifest .mpd	frag MP4	H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30	AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, WMA, WMA-PRO	No
		MVC	1920x1080i @ field rate = 50, 60Hz 1920x1080p @ frame rate = 24, 25, 30Hz 1280x720p @ frame rate = 50, 60Hz	-	30		No

Supported audio/video formats

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.mp4	MP4	MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30	AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, WMA, WMA-PRO	Yes
		H.264	1920x1088		30		Yes
		MVC	1920x1080i @ field rate = 50, 60Hz 1920x1080p @ frame rate = 24, 25, 30Hz 1280x720p @ frame rate = 50, 60Hz	-	30		Yes
		WMV9/VC1	1920x1088	30p, 60i	30		Yes
.mkv .mk3d	MKV	MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital, Dolby Digital Plus, WMA, WMA-PRO	Yes
		H.264	1920x1088		30	Yes	

Supported audio/video formats

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.asf .wmv	ASF	MPEG-2	1920x1088	25p, 30p, 50i, 60i	20	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital Plus, Dolby Digital, WMA, WMA-PRO	Yes
		MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	20		Yes
		WMV9/VC1	1920x1088	30p, 60i	20		Yes
.avi .avid	AVI	MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	4	MPEG-1 (L1&L2), MPEG-MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital Plus, Dolby Digital, WMA, WMA-PRO	Yes
		DivX 3.11	1920x1088	30p, 60i	4	Yes	
.webm	WebM	VP8	1920x1088		5	Ogg Vorbis	Yes
.swf	SWF	Contains FLV	-	-	30	-	No
.divx	DMF (DIVX)	MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	20	MPEG-1 (L1&L2), MPEG-1,2,2.5 L3, AAC/HE-AAC (v1&v2), Dolby Digital Plus, Dolby Digital, WMA, WMA-PRO	Yes
		DivX 3.11	1920x1088	30p, 60i	20		Yes

Supported audio/video formats

File Extensions	Container	Video codec	Maximum resolution	Max. Frame Rate (fps)	Max. Bit Rate (Mbps)	Audio codec	USB
.3gp .3g2	3GP	MPEG-4 ASP	1920x1088	25p, 30p, 50i, 60i	30	AAC/HE-AAC (v1&v2), AMR	Yes
		H.264	1920x1088	25p, 30p, 50p, 60p, 60i	30		Yes
		H.263	1920 x 1088	30p	30		Yes
.mov .qt	QuickTime	-	-	-	30	-	Yes

Supported audio formats

File Extensions	Container	Video codec	Maximum resolution	Frequency (kHz)	Max. Bit Rate (Mbps)	Audio codec	USB
.mp3	MP3	-	-	48	384	MPEG-1,2,2.5 L3	Yes
.wma .asf	WMA (V2 up to V9.2)	-	-	48	192	WMA	Yes
.wma	WMA Pro	-	-	96	768	WMA, WMA Pro	Yes
.lpcm (PC) .pcm (PC)	LPCM	-	-	192	768	LPCM	No
.wav (PC)	LPCM	-	-	192	768	LPCM	Yes
.aif (mac) .aiff (mac)	LPCM	-	-	192	768	LPCM	Yes
.aac .mp4 .m4a	AAC	-	-	48	1024	AAC, HE-AAC (v1&v2)	Yes
.pls .m3u	Playlists	-	-	-	-	-	Yes
.m4a	M4A	-	-	48	1024	AAC, HE-AAC (v1&v2)	Yes

Supported audio formats

File Extensions	Container	Video codec	Maximum resolution	Frequency (kHz)	Max. Bit Rate (Mbps)	Audio codec	USB
.amr	AMR-NB (SmartTV only)	-	-	8 16	12.8 6.6 8.85 12.65 14.25 15.85 18.25 19.85	AMR	Yes
.ogg .oga	Ogg	-	-	48	498	Ogg Vorbis	Yes

Supported subtitle formats

Format	File Extension	USB
SRT	.srt	Yes
MKV/SRT	-	Yes
SUB	.sub	Yes
TXT	.txt	Yes
Substation alpha V4	.ssa	Yes
Advanced substation alpha V4+	.ass	Yes
DVB	-	Yes
SAMI	.smi .sami	Yes
XSUB, XSUB+	.avi .divx	Yes
TTML	.ttml	No

Character encoding

- Windows-1250 (CP-1250): Central Europe and Eastern Europe Latin (Czech, Hungarian, Polish, Slovak, Slovenian, Croatian, Romanian, Serbian)
- Windows-1251 (CP-1251): Cyrillic
- Windows-1252 (CP-1252): Western Europe Latin
- Windows-1253 (CP-1253): Greek
- Windows-1254 (CP-1254): Turkish
- UTF-8: Multi-byte character encoding for Unicode

Connectivity

Rear

- HDMI 1 ARC: HDMI Audio Return Channel
 - SERV. U: Service port
 - CVBS/Y, Pb, Pr, Audio L/R: Composite video and audio
 - VGA*: PC input
 - IR IN/OUT: RJ48 cable adaptor
 - DIGITAL AUDIO OUT: Coaxial
 - TV ANTENNA: 75 ohm coaxial (IEC)
 - SCART (RGB/CVBS): SCART adaptor
- * Available on 22, 24, and 26-inch models only.

Side

- CI: Common Interface
- HDMI
- USB
- Headphones: stereo 3.5mm mini-jack

Supported TV mounts

You can mount your TV on the wall with a compatible TV mount (sold separately). Select the type of TV mount for your TV screen size:

56 cm / 22 inches: 75mm x 75mm, M4

61 cm / 24 inches: 75mm x 75mm, M4

66 cm / 26 inches: 100mm x 100mm, M4

81 cm / 32 inches: 100mm x 100mm, M6

99 cm / 39 inches: 200mm x 200mm, M6

107 cm / 42 inches: 200mm x 200mm, M6

Note: Before you mount the TV on the wall, remove the existing VESA screws on the back panel.

Warning: Follow all instructions provided with the TV mount. TP Vision Netherlands B.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

To prevent damage to cables and connectors, leave a gap of at least 5.5 cm / 2.2 inches from the back of the TV.

Before you mount the TV on the wall, find the correct length of the screw. To find the length of the screw, add the thickness of your wall mount to the screw length (y), as shown in the graphic.

For 22-26 inch models


All screws: 10 mm

For 32 inch models

All screws: 12 mm

For 39-42 inch models

All screws: 14 mm

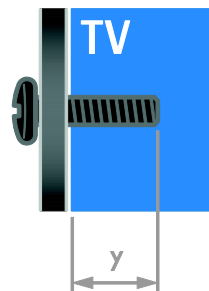

Help version

UMv 300812131603 - 20130806

8 Index

A

amplifier, select output - 42
analogue channels, fine-tune - 26
analogue channels, install - 26
analogue channels, subtitles - 28
audio language - 28
auto subtitle shift - 43
Auto switch off, devices - 41

C

cables - 31
CAM - 43
CAM, enable - 43
CAM, insert - 43
channel list - 12
channel list, copy - 27
channels - 11
channels, favourites - 12
channels, fine-tune (analogue) - 26
channels, hide or unhide - 12
channels, install (analogue) - 26
channels, install (automatic) - 26
channels, install (digital) - 26
channels, logo - 12
channels, reinstall - 30
channels, rename - 12
channels, sort - 12
channels, switch - 11
channels, update - 27
child lock - 23
CI - 43
clock - 22
codecs, supported - 48
Common Interface - 43
Conditional Access Module - 43

connect, computer - 39
connect, digital camcorder - 38
connect, digital camera - 38
connect, disc player - 32
connect, external hard disk - 39
connect, game console - 36
connect, home theatre - 36
connect, recorder - 34
connect, TV receiver - 33
connect, USB device - 39
connected device, rename - 40
connectivity - 52
connectivity guide - 8
connectors - 31
contact Philips - 8
controls - 9

D

demo - 30
devices, watch - 40
digital camcorder - 38
digital camera - 38
digital channels, install - 26
digital channels, subtitles - 28
digital radio - 12
disc player, connect - 32
display resolutions - 47
display specifications - 47

E

EasyLink - 41
EasyLink, controls - 41
EasyLink, enable - 41
EasyLink, features - 41
EasyLink, onscreen control - 10
EasyLink, remote control - 41
EasyLink, TV speakers - 42

Energy label - 8
 energy-efficient settings - 7
 EPG, broadcaster - 14
 external hard disk - 39

F

favourite channels, list - 12

G

game console, connect - 36
 game settings - 21

H

HDMI - 31
 HDMI ARC - 31
 hearing-impaired access - 29
 Help, version - 53
 home mode - 30
 home theatre, connect - 36
 hotel information - 16

I

install channels, automatic - 26

K

Kensington lock - 5
 key beep - 29

L

language, menu - 28
 language, subtitles - 28
 lock TV - 5

M

mode, home or shop - 30
 multimedia, play files - 14
 multimedia, play options - 15
 multimedia, supported formats - 48
 MyChoice - 19

O

online forum - 8

P

parental rating - 23
 PC, display resolutions - 47
 picture format - 13
 picture settings - 24
 picture settings, reset - 25
 Pixel Plus link - 43
 placement, stand or wall - 4
 placement, tips - 4
 play, USB files - 14
 power specifications - 47
 presets, picture and sound - 13
 product support - 8
 professional mode - 16
 professional mode, access settings - 16
 programme guide, broadcaster - 14

R

rear controls - 9
 recorder, connect - 34
 recycle - 7
 reinstall - 30
 remote control - 9
 rename channels - 12
 rename, connected device - 40

S

safety - 3
 SCART - 31
 screen care - 4
 sensors - 9
 settings assistant - 24
 settings, audio format - 25
 settings, game - 21

settings, picture - 24
settings, sound - 25
shop mode - 30
sleep timer - 23
sound settings - 25
sound settings, reset - 25
sound specifications - 47
source, select - 13
source, update - 40
standby - 10
standby LED - 9
subtitles, analog - 28
subtitles, digital - 28
subtitles, language - 28
sustainability - 7
switch TV on, off - 10

T

teletext, search - 22
text 2.5 - 21
text, digital text - 22
text, dual screen - 21
text, enlarge - 21
text, language - 22
text, subpages - 22
text, Table Of Pages - 21
ThemeTV - 19
trademarks and copyrights - 6
TV controls - 9
TV guide, broadcaster - 14
TV receiver, connect - 33
TV speakers, mute - 11

U

universal access, enable - 29
universal access, hearing impaired - 29
universal access, visually impaired - 29

update, source list - 40
USB, play files - 14

V


VGA - 32
visually impaired access - 29
volume - 11

W

wall mount - 53

Y

YPbPr, component video - 31

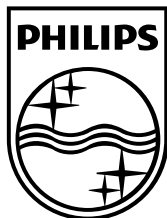

All registered and unregistered trademarks are the property of their respective owners. Specifications are subject to change without notice.
Philips and the Philips' shield emblem are registered trademarks of Koninklijke Philips Electronics N.V. and are used under license
from Koninklijke Philips Electronics N.V.
2013 © TP Vision Netherlands B.V. All rights reserved.
www.philips.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>