

Stereo Radio Cassette Player

AQ 6691



*Let's make things better.*



**PHILIPS**

# INDEX

## **N** Norge

**Advarsel:** For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

Typeskilt finnes på apparatens bakside.

**Observer:** Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

## **I** Italia

### **DICHIARAZIONE DI CONFORMITA'**

Si dichiara che l'apparecchio AQ 6691 Philips risponde alle prescrizioni dell'art. 2 comma 1 del D. M. 28 Agosto 1995 n. 548.

Fatto a Eindhoven, il 10/15/1999

Philips Consumer Electronics  
Glaslaan 2  
5616 JB Eindhoven, The Netherlands

**English** ..... 4

**Français** ..... 10

**Español** ..... 16

**Deutsch** ..... 22

**Nederlands** ..... 28

**Italiano** ..... 34


**Portugûes** ..... 40

**Dansk** ..... 46

**Svenska** ..... 52

**Suomi** ..... 58

**Ἑλληνικά** ..... 64

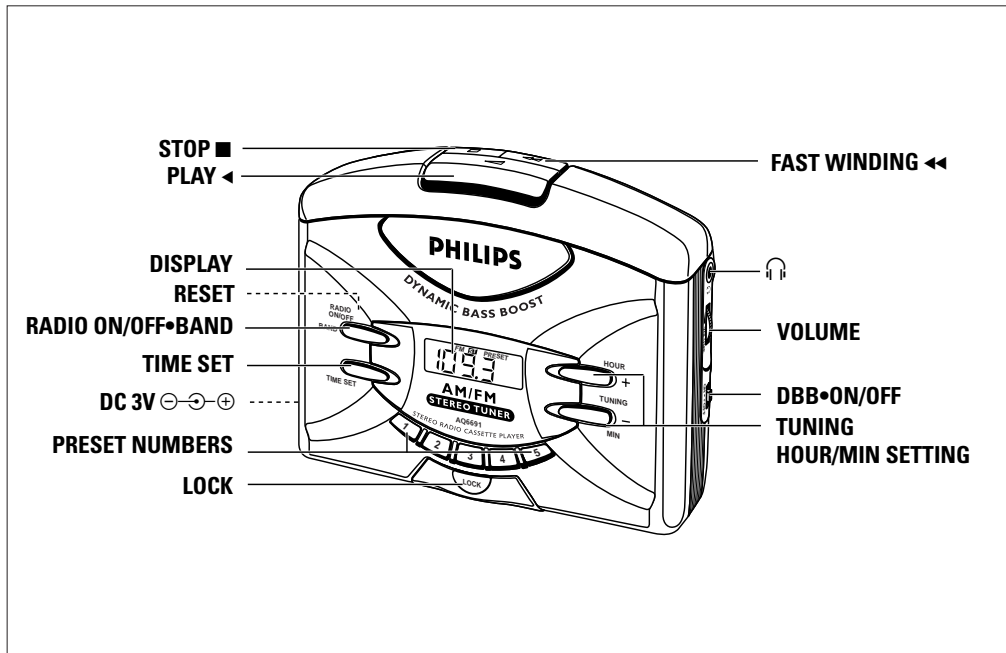

## POWER SUPPLY


### POWER SUPPLY

#### Mains Adapter (not included)

The voltage of the 3V adapter must match with the local voltage. The 3.5 mm adapter plug's 1.3 mm centre pin must also be connected to the minus pole ⊖.

- Connect the mains adapter to the set's DC 3V socket and a wall socket.
- Always disconnect the mains adapter if you are not using it.

#### Battery (not included)

- Open battery door and insert two alkaline batteries, type R6, UM3 or AA as indicated.
- Remove the batteries from the set if they are exhausted or not to be used for a long time.
  - When the batteries are running low,  flashes in the display. If the radio is on, it will automatically switch off.
  - It may be necessary to reprogramme your preset stations.

### SETTING THE CLOCK

#### Clock display

The time is displayed using the 24-hour clock system. The clock display is shown when the radio and cassette functions are switched off.

## SETTING THE CLOCK

#### 1 Press **TIME SET**.

- The clock digits flash for about 5 seconds when you press **TIME SET**.

#### 2 To set the hour/minutes, press **HOUR** or **MIN** while the display is still flashing.

- With your finger held down on **HOUR**, the hour increases steadily as a number from 0-23. Release **HOUR** when you reach the correct hour setting.
- With your finger held down on **MIN**, the minutes increase rapidly and continuously. Press briefly and repeatedly if you need to adjust the minutes slowly.
- When the clock digits stop flashing, the time is set.

### RADIO RECEPTION

#### 1 Connect headphones to the socket.

#### 2 Press **RADIO ON/OFF•BAND** to switch on the radio.

#### 3 Press **RADIO ON/OFF•BAND** again to select AM or FM waveband.

- The display shows the radio station details throughout the radio mode.
- **FM ST** appears on the display when you are receiving a FM stereo transmission.

#### 4 Select your station by pressing one of the preset numbers (1-5), or by using the **TUNING** controls + or –.

**To improve reception:**

**FM:** The headphone cord functions as the FM-aerial. Extend it fully and position the cord.

**AM:** Uses the built-in aerial. Turn the set to find the best position.

**5** Adjust the sound with **VOLUME** and **DBB ON/OFF** (Dynamic Bass Boost).

**6** To switch off the radio, press **RADIO ON/OFF•BAND** once or more until **OFF** appears briefly.  
– The display returns to clock time.

**TUNING****Manual tuning**

- Press **TUNING +** or **–** briefly, once or more until the right frequency is found. In this way, the frequency can be changed step by step.

**Automatic tuning**

- 1** Press and hold down the **TUNING +** or **–** control until the display frequency starts to run.
- 2** When a station of sufficient strength has been found tuning stops, or you can stop automatic tuning by pressing either **TUNING +** or **–** control again.
- 3** Repeat steps 1 and 2 until you have found the desired station.

**SELECTING & STORING FREQUENCIES: PRESETS**

You can store the frequencies of up to 10 radio stations in the memory, 5 on each wave band. A stored frequency is only erased from the memory by storing another frequency in its place.

- 1** Select your wave band and tune to your desired station (See previous chapter on TUNING).
- 2** Press one of the preset numbers (1-5) for 2 seconds or more to store your station.  
– **PRESET** appears in the display.
- 3** To listen to a preset station, select your wave band and then press the preset number of your desired station.






**Erasing the PRESET Memory**

- Use the tip of the headphone plug or a ballpoint pen to press **RESET** found on the back of the cassette door.  
– The display shows **0:00**. All previous preset stations are erased and the clock time will need to be re-entered.

## CASSETTE PLAYBACK

English

### CASSETTE PLAYBACK

- 1 Connect headphones to the  socket.
- 2 Open the cassette door and insert a tape.
- 3 Press the door lightly to shut.
- 4 To start playback, press .
  - The display shows *tAPE* throughout tape mode.
- 5 Adjust the sound with **VOLUME** and the **DBB ON/OFF** (Dynamic Bass Boost).
- 6 To fast wind, press . Press  to stop fast winding.
- 7 To stop, press  and the set is switched off.
  - At the end of a tape, the cassette keys are automatically released and the set switched off.
  - **OFF** appears briefly before the display returns to clock time.

## GENERAL INFORMATION

 
### Accessories (included)

1x AY 3360 stereo headphones, 1x Belt clip

### Using the Belt Clip

- 1 To attach: position shaped grip on reverse of clip to fit into belt clip hole .


### BELTCLIP

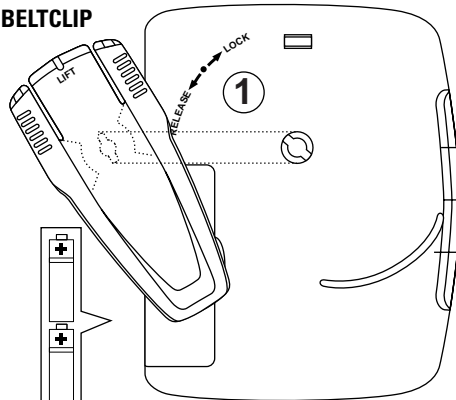

2x

R6/UM3/AA-cells

 - 2 Push the belt clip down ② and turn ③ to LOCK as indicated on the set.
- 3 *To detach:* gently lift belt clip and turn to RELEASE as indicated on the set.

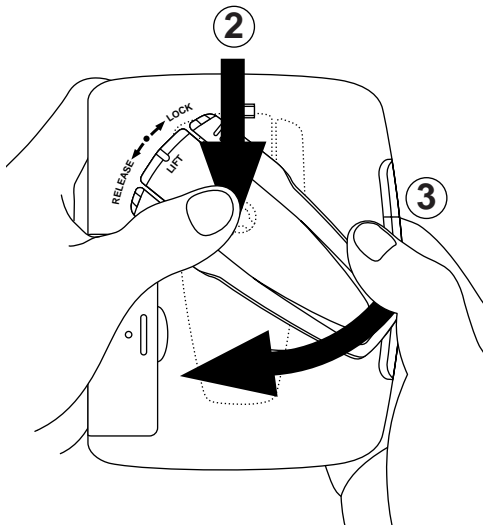

## GENERAL FEATURES

### Reset button

Should you receive external interference e.g. static electricity from carpets, thunderstorms, etc. which affects the display and electronic functions of your set, the **RESET** button allows you to clear all data (e.g. time setting, presets) from your set and to start up again.

- Use the tip of the headphone plug or a ballpoint pen to press RESET found on the back of the cassette door.

### Memory protection

The memory protection acts as a backup should there be a power failure or interruption. When changing batteries or power supply, the time setting, presets and the last station listened to are retained for about 30 minutes. This allows you to change batteries or power supply without having to set your stored data all over again.

**Note:** The clock time freezes during memory protection, so you may have to adjust the time when battery/ power supply is resumed.

## Locking

This control helps to prevent any of the other front panel controls from being accidentally pressed when you are listening to the radio or when you are not using the radio.

### 1 Press **LOCK**.

 appears when LOCK is activated.

### 2 To deactivate the LOCK function, press **LOCK** again.

 disappears from the display.


## TAKE CARE WHEN USING HEADPHONES

**Hearing Safety:** Listen at a moderate volume. Use at high volume can impair your hearing!

**Traffic Safety:** Do not use headphones while driving or cycling as you may cause an accident!

## MAINTENANCE

- Clean the tape heads every month with a cotton bud dipped in alcohol, or by playing through a cleaning tape.
- Use a soft damp cloth to wipe off dust and dirt. Don't use benzene or corrosives to clean the set.
- Don't expose the set or cassettes to rain, moisture, sand or to excessive heat e.g. cars parked in direct sunlight.
- Don't use C-120 tapes.

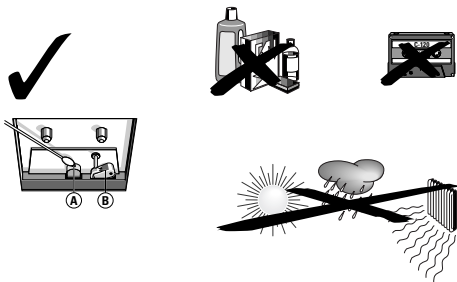

## ENVIRONMENTAL NOTE

- The packaging has been minimized so that it is easy to separate into two materials: cardboard and plastic. Please observe the local regulations regarding the disposal of these packaging materials.
- Please inquire about local regulations on how to hand in your old set for recycling.
- **Batteries contain chemical substances, so they should be disposed of properly.**



# TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

**WARNING:** Under no circumstances should you try to repair the set yourself, as this will invalidate your guarantee.

## **Hum when using mains adapter**

---

- *Adapter used is unsuitable*
- Use a good quality regulated 3V DC adapter

## **Poor sound/ no sound**

---

- *Headphone plug not fully inserted*
- Insert plug fully
- *Volume is turned down*
- Turn up volume
- *Tape head dirty*
- Clean tape head (see MAINTENANCE)

## **Severe radio hum/distortion**

---

- *FM aerial (headphone cord) not fully extended*
- Extend FM aerial fully
- *Set too close to TV, computer, etc.*
- Move set away from other electrical equipment
- *Batteries weak*
- Insert fresh batteries

## **Front panel controls/ display does not function properly**

---

- *Electrostatic discharge*
- Use the tip of the headphone plug/ball-point pen to press RESET and then reprogramme settings

***The model number is found at the back of the set and the production number in the battery compartment.***

***This product complies with the radio interference requirements of the European Union.***

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>