


PHILIPS

AW 7960 Stereo Radio Cassette Recorder

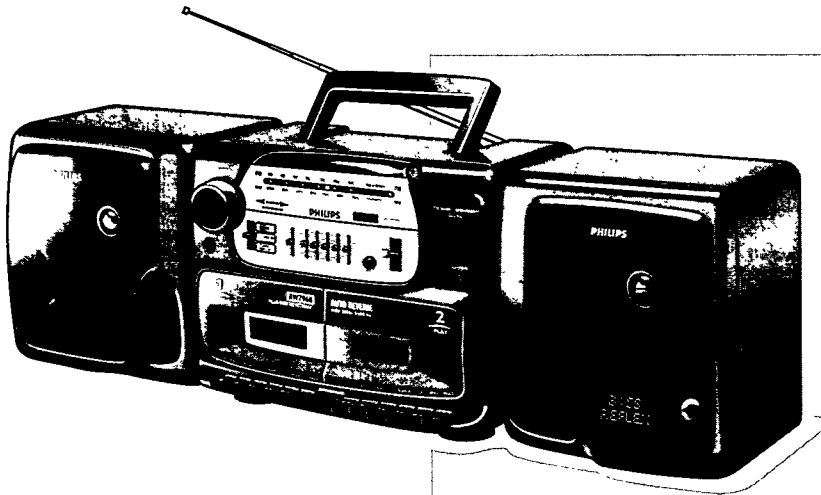

Instructions for use
Mode d'emploi
Instrucciones de manejo
使用説明書



PHILIPS

(AUS) Australia

Guarantee

Page 32

(MEX) México

Garantía

NOM

Página 33

(NZ) New Zealand

Guarantee

Page 33

English4

English

Français11

Français

Español.....18

Español

中文.....25










中文

México

NOM

Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA No abrir, riesgo de choque eléctrico	
	ATENCIÓN Verifique que el voltaje de alimentación sea el requerido para su aparato	
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, diríjase al personal calificado.		

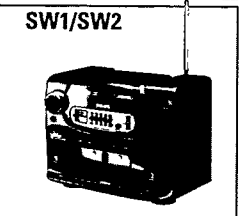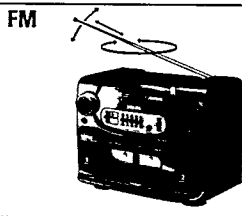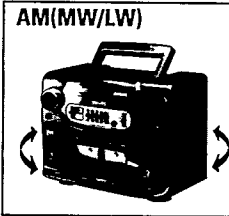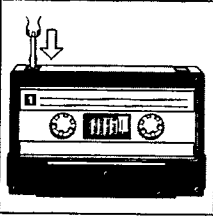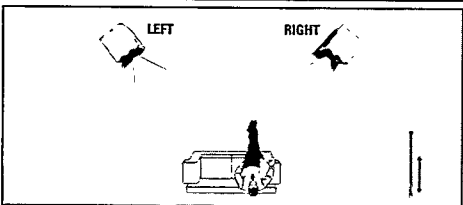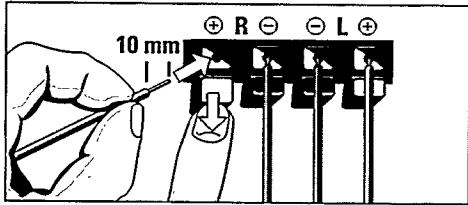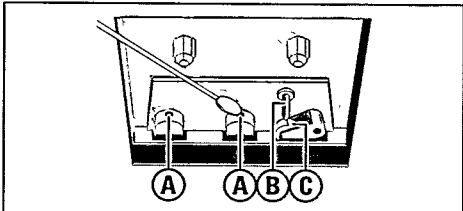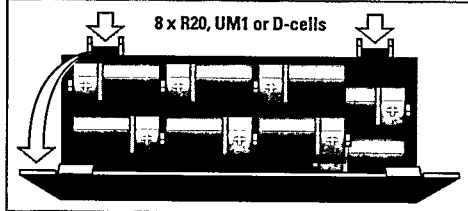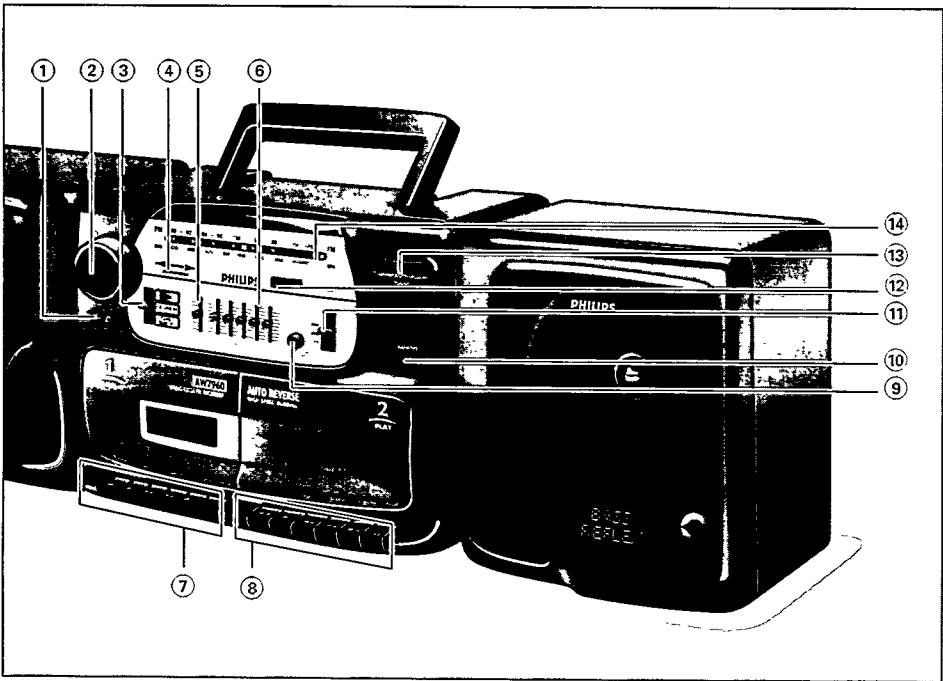

CONTROLS

English


Front panel

- ① – 3.5 mm stereo headphone socket
- ② **VOLUME** – to adjust the volume level
- ③ **MODE** selector – to select the sound source
– **RADIO**
– **CD/LINE IN**
– **TAPE / RADIO OFF**
- ④ **DIRECTION** indicators ◀ ▶ – to show the tape direction during playback/auto reverse in deck 2.
- ⑤ **BALANCE** – To adjust stereo balance
- ⑥ **GRAPHIC EQUALIZER** – to adjust the range of sound
- ⑦ **DECK 1:**
RECORD ●: to start recording
PLAY ▶: to start playback
SEARCH ◀◀/▶▶: to fast wind/rewind
STOP • OPEN ■▲: to stop the tape / to open the cassette compartment
PAUSE II: to interrupt recording or playback
- ⑧ **DECK 2:**
REVERSE ◀▶ to select the reverse mode
– (pressed) single reverse, to play both sides of a cassette once
■ (released) continuous reverse for non-stop playback
PLAY ▶: to start playback
SEARCH ◀◀/▶▶: to fast wind/rewind
STOP • OPEN ■▲: to stop the tape / to open the cassette compartment
DIRECTION ◀▶: to select tape direction before or during playback
- ⑨ **HIGH SPEED DUBBING** – to dub a cassette at high speed
- ⑩ **KARAOKE** – 3.5 mm stereo socket for microphone
- ⑪ **BAND** – to select the wave bands (SW and LW bands not all versions)

- ⑫ **FINE TUNING** – to tune to short wave bands (for SW version only)
- ⑬ **TUNING** – to tune to radio stations
- ⑭ **FM STEREO** indicator – lights up when receiving a FM stereo station

Back panel

- ⑮ **CD/LINE IN** – for CD/other audio input connection
- ⑯ **Beat Cut** switch – to eliminate any whistle tones during AM recordings
- ⑰ **Telescopic aerial**
- ⑱ **Speakers** – loudspeaker terminals
- ⑲ **Speaker levers** – to lock and unlock the speaker boxes
- ⑳ **MAINS** – socket for mains lead
- ㉑ **Voltage selector** – not for all versions
- ㉒ **Battery door** – to open the battery compartment

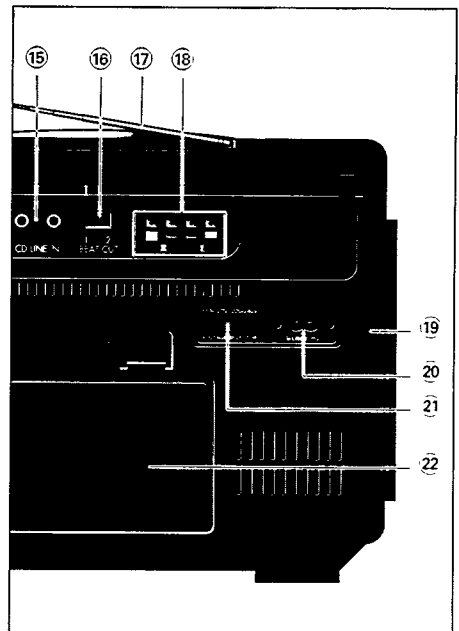

POWER SUPPLY

CONNECTIONS

Batteries (optional)

Whenever convenient, use mains supply to conserve battery life.

1. Open the battery compartment and insert eight batteries, type R20, UM1 or D-cells (preferably alkaline), with the correct polarity as indicated by the '+' and '-' symbols inside the compartment.
2. Replace the compartment door, making sure that the batteries are firmly and correctly in place. The set is now ready to operate.
 - The battery supply is switched off when the set is connected to the mains. To change over to battery supply, pull out the plug from the MAINS socket.

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:

- Don't mix battery types.
- When inserting new batteries replace eight batteries at the same time. Do not try to mix old batteries with the new ones.
- Remove the batteries if they are empty or when the set will not be used again for a long time.

Mains supply

- Check if the mains voltage, as shown on the model number plate (on the base of the set) corresponds to your local mains voltage. If it does not, consult your dealer or service centre.
- If the set is equipped with a voltage selector, switch to local main voltage.
- Connect the mains lead to the MAINS socket and the wall socket. The mains supply is switched on.
- The battery supply is switched off when the set is connected to the mains. To change over to battery supply, pull out the plug from the set's MAINS socket.
- To disconnect the set from the mains completely, withdraw the mains plug from the mains socket.

The model and production numbers are located at the bottom of the set.

Removable speakers

Connecting the loudspeakers

- Connect the right loudspeaker to the R terminal and the left loudspeaker to the L terminal.
- Clip the exposed portion of the wire into the corresponding colour terminal.
- Repeat the wiring procedure for the left speaker to terminal L, making sure that you connect the red wire to '+' and black to '-'.

Note: Loudspeakers other than supplied can be used. They have to be 6 Ohms or higher. Do **NOT** use loudspeakers with an impedance lower than 6 Ohms, as this will damage the set.

Taking off the loudspeakers

- Keep the lever (on the back of the loudspeakers) pressed and slide the loudspeaker upwards.


Attaching the loudspeakers

- Slide the loudspeakers from above in the sleeves on the sides of the set cabinet. The loudspeakers will click into position.

Positioning the loudspeakers

- You will find the best loudspeaker position by experimenting. Placing the loudspeakers on the floor will increase the bass response. Placing the loudspeakers behind curtains, furniture etc. will reduce the treble response and the stereo effect. The ideal position is obtained when the 2 front loudspeakers and the listening position build an equilateral triangle and the loudspeakers are at ear-height.


 
Stereo headphone socket

You may connect stereo headphones with a 3.5 mm plug to the  socket.

When headphones are inserted, the loudspeakers are then muted.

Karaoke socket

For a microphone with a 3.5 mm socket. You can reproduce your voice amplified through the loudspeakers.

- Connect a microphone to the KARAOKE socket. To avoid disturbing noise, reduce the volume before connection.
- Set the mode selector in position TAPE/RADIO OFF.
 - The TAPE/RADIO OFF indicator lights up.
- Press PLAY  and PAUSE  of deck 1.

You can also mix your voice with the radio or a cassette signal (Karaoke). You can record it all on deck 1. See 'Microphone & Karaoke recording' for details of recording and the mixing functions.

CD/Line in

Cinch sockets for amplifying or recording from a CD player, amplifier, receiver, tuner, recorder, etc.

- Connect and make sure the R (right) and L (left) CD/LINE IN sockets corresponds with the R and L LINE OUT or REC OUT sockets of the other set.
- The connection cords should be fully inserted into the CD/LINE IN sockets.

General operation

- Set the mode selector to the source you want to listen to.
- Adjust the sound using VOLUME and GRAPHIC EQUALIZER controls.

GRAPHIC EQUALIZER controls:



 
 - 100 Hz - bass
 - 300 Hz - mid range tones
 - 1 KHz - vocals
 - 3.0 KHz - brightness of sound
 - 10 KHz - treble

To adjust the graphic equalizer, set each control towards + 10 or - 10. When the equalizer is not used, set the controls to 0 (the centre position).
- Set the mode selector to TAPE/RADIO OFF position (with the cassette keys released) to switch off the set.
 - The indicator of your selected mode will go out.

Radio reception



- Set the mode selector to RADIO.
 - The RADIO indicator lights up.
- Adjust the sound using the VOLUME and GRAPHIC EQUALIZER controls.
- Select the wave band using the BAND selector. (*SW/LW not for all versions.*)
- Tune to a radio station using the TUNING knob, or FINE TUNING for tuning short wave stations.
 - For FM, pull out the telescopic aerial. To improve FM-reception, incline and turn the aerial. Reduce its length if the FM-signal is too strong (very close to a transmitter).
 - For MW/LW, the set is provided with a built-in aerial, so the telescopic aerial is not needed. Direct the aerial by turning the whole set.
 - For SW1 and SW2, pull out the telescopic aerial and place in the vertical position. Vary the length to improve reception.
- When FM STEREO lights up, you are receiving a FM stereo transmitter.
- To switch off the set, set the MODE selector to TAPE / RADIO OFF position.
 - The RADIO indicator will go out.

Playback on deck 1 or 2

- Set the mode selector to TAPE/RADIO OFF.
- Press STOP • OPEN ■ ▲ to open the cassette holder.
- Insert a recorded cassette.
- For playback on deck 2 only, set the REVERSE key  to:
 -  **continuous reverse** - For non-stop playback. The recorder reverses the tape direction whenever reaching the end of the cassette. To stop, STOP • OPEN ■ ▲ must be pressed.
 -  **single reverse** - To play both sides of the cassette only once. At the end of the first side, the tape direction is reversed. The recorder stops at the end of the second cassette side.
- Press PLAY ► to start playback.
 - The TAPE/RADIO OFF indicator lights up.
- Adjust the sound using the BALANCE, VOLUME and GRAPHIC EQUALIZER controls.
- To interrupt playback, press PAUSE II. To resume press PAUSE II again.
- On deck 2, you can reverse the tape direction automatically at any moment by pressing DIRECTION ◀. The tape direction indicator will show the actual direction of the tape during operation of deck 2.
- For fast winding, press SEARCH ◀◀ or ▶▶.
- Press STOP • OPEN ■ ▲ to stop playback.
 - The TAPE/RADIO OFF indicator will go out.

Note: When the end of the tape is reached, the keys are automatically released and the set switched off.

 Continuous playback

- Set the mode selector to TAPE/RADIO OFF.
- Press both STOP • OPEN ■ ▲ keys to open the cassette holders.
- Insert a recorded cassette into both decks.
- Set the REVERSE key  on deck 2 to  and select the tape direction using the DIRECTION key ◀.
- Press PLAY ► on deck 2.
 - Deck 2 will start playback.
- Press PAUSE II and then PLAY ► on deck 1.
 - As soon as deck 2 stops (at the end of the cassette or when STOP • OPEN ■ ▲ is pressed), PAUSE II is released and deck 1 will start playback.
- To stop the tape, press STOP • OPEN ■ ▲.
 - The TAPE/RADIO OFF indicator will go out.

Recording

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- Recording is only possible with deck 1. During recording it is advisable not to wind or rewind a cassette in deck 2.
- For recording only use NORMAL type cassettes (IEC type I) on which the tabs are not broken out. This set is NOT suited for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes.
- Before recording, tighten slack tape with a pencil, to avoid jamming the deck mechanism.
- The best recording level is automatically set. Altering the BALANCE, VOLUME and GRAPHIC EQUALIZER controls will not affect the recording in progress.
- At the very beginning and end of the tape, no recording will take place during 7 seconds when the leader passes the recorder heads.
- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Now, recording on this side is no longer possible. To render this safeguard ineffective, cover the aperture with a piece of adhesive tape.

CASSETTE RECORDER

Recording from the radio

- Set the MODE selector to RADIO.
 - The RADIO indicator will lights up.
- Tune to the desired radio station (see 'Radio reception').
- Insert a blank cassette in deck 1.
- Press RECORD ● to start recording.
 - For brief interruptions, press PAUSE II. To resume recording press PAUSE II again.
 - A whistling sound occurring during AM radio recordings can be suppressed by setting the BEAT CUT switch to another positions.
- To stop recording, press STOP • OPEN ■ ▲.

Microphone & Karaoke recording

- Connect the microphone to the KARAOKE socket, with the volume turned down to avoid noise disturbance.
- Set the MODE selector to the desired position (TAPE/RADIO OFF, CD/LINE IN or RADIO).
- Insert a blank cassette in deck 1.
- Press RECORD ● to start recording.
 - For brief interruptions, press PAUSE II. To resume recording press PAUSE II again.
- To stop recording, press STOP • OPEN ■ ▲.
 - If you want to monitor your microphone recording, you can insert headphones in the ☎ socket.

Karaoke

- For recording karaoke, connect the microphone to the KARAOKE socket, with the volume turned down to avoid noise disturbance.
- Press both STOP • OPEN ■ ▲ buttons and insert a recorded tape into deck 2 and a suitable tape for recording in deck 1.
- Press PAUSE II and then RECORD ● on deck 1.
- To start recording, press PLAY ► on deck 2. PAUSE II on deck 1 is then released.
- By pressing PAUSE II on deck 1, you can omit undesired passages while deck 2 continues. Press PAUSE II to resume recording.
- To stop recording karaoke, press both STOP • OPEN ■ ▲ buttons.

Recording from CD/LINE IN sources

- Connect the CD/LINE in sockets of the set with the LINE OUT or REC OUT sockets of the other set.
- Set the mode selector to CD/LINE in. The CD/LINE IN indicator lights up.
- Insert a blank cassette tape in the cassette holder.
- Press RECORD ● to start recording.
- to stop recording, press STOP • OPEN ■ ▲.
 - The CD/LINE IN indicator will go out.

Dubbing – Copying from deck 2 to 1

When copying, it is recommended to use fresh batteries or to connect the set to the mains supply.

- Set the MODE selector to TAPE/RADIO OFF. Do not move this selector during dubbing.
- Press HIGH SPEED DUBBING, unless you want to record at normal speed. Do not press this button during dubbing otherwise your recording will be affected!
- Press both STOP • OPEN ■ ▲ buttons and insert a recorded tape into deck 2 and a suitable tape for recording in deck 1.
- Press PAUSE II and then RECORD ● on deck 1.
- To start dubbing, press PLAY ► on deck 2. PAUSE II on deck 1 is then released.
- By pressing PAUSE II on deck 1, you can omit undesired passages while deck 2 continues. Press PAUSE II to resume dubbing.
- To stop dubbing, press both STOP • OPEN ■ ▲ buttons.

General maintenance

- Do not expose the set, batteries or cassettes to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft, slightly dampened chamois leather. Do not use any cleaning agents and solvents such as thinner, benzene, as they could have a corrosive effect.

Tape deck maintenance

To ensure a good recording and playback quality, clean the parts (A), (B) and (C) after approx. 50 hours of operation or, on average once a month. Use a cotton bud slightly moistened with alcohol or a special cleaning fluid.

- Open the cassette holder by pressing STOP • OPEN ■ ▲.
- Press PLAY ► and clean the rubber pressure roller (C).
- Press PAUSE II and clean the magnetic heads (A), and also the capstans (B).
- After cleaning, press STOP • OPEN ■ ▲.

Note: Cleaning of the heads (A) can also be done by playing a cleaning cassette through once

Environmental information

All redundant packaging material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), expandable polystyrene (buffer) and polyethylene (bags, protective foam sheet).

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packing materials, exhausted batteries and old equipment.

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking your set for repair.
If you are unable to remedy a problem by following hints, consult your dealer or service centre.

Warning:

Under no circumstances should you try to repair the set yourself, as this would invalidate the guarantee.

PROBLEM	POSSIBLE CAUSE	REMEDY
No sound / no power	<ul style="list-style-type: none">– Volume not adjusted– Headphones are connected– Mains lead not securely connected– Batteries exhausted– Batteries incorrectly inserted– Batteries loaded but mains lead still connected	<ul style="list-style-type: none">• Adjust the volume• Disconnect headphones• Connect the mains lead properly• Insert new batteries• Insert the batteries correctly• Pull out the mains plug from the wall socket and the set
Severe radio hum or noise	<ul style="list-style-type: none">– Set too close to TV, VCR or computer	<ul style="list-style-type: none">• Increase the distance
Poor radio reception	<ul style="list-style-type: none">– Weak radio aerial signal	<ul style="list-style-type: none">• FM: aim the aerial for the best reception;• AM: rotate the entire set
Reversed left and right sound / no sound from one speaker	<ul style="list-style-type: none">– Loudspeakers incorrectly connected	<ul style="list-style-type: none">• Connect speakers properly, L to left, R to right
Bad sound	<ul style="list-style-type: none">– Unsuitable speakers are used	<ul style="list-style-type: none">• Use recommended speakers, impedance 6 Ohms.
Poor bass sound	<ul style="list-style-type: none">– Speakers not in phase	<ul style="list-style-type: none">• Connect speakers properly, + to + -pole (red marked or sleeved cable); – to – -pole (unmarked cable)
Poor cassette sound quality	<ul style="list-style-type: none">– Dust and dirt on the heads, capstan or pressure roller– Use of incompatible cassette types (METAL or CHROME)	<ul style="list-style-type: none">• Clean the heads etc., see Tape deck maintenance• Only use NORMAL (EIC I) for recording
Recording does not work	<ul style="list-style-type: none">– Cassette tab(s) may be broken out	<ul style="list-style-type: none">• Apply a piece of adhesive tape over the missing tab space.

Warranty conditions valid for Colour Television, Video Cassette Recorders, Audio Systems, and Portable Audio.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Sound and Vision warrants its products to the purchaser as follows and subject to the stated conditions.

12 months free service

Any defect in materials or workmanship in the product occurring within 12 months from the original date of purchase will be rectified free of charge by Philips Service or one of our authorised service centers.

Conditions of warranty

1. All claims for warranty service should be made to your nearest Philips Service Branch or to a Philips authorised service dealer. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects occurring under normal use of the product when operated in accordance with the instructions.
3. Home service within the normal service area of Philips Service or one of our authorised service centres will be provided for television receivers with screen size 59cm and above. All other products are to be brought or sent to your nearest Philips Service Branch or to an authorised service centre.
4. This warranty does not cover:
 - a) Mileage or traveling time, pickup or delivery, cost of insurance.
 - b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
 - c) Product failures caused by misuse, neglect, normal wear and tear, accidental breakage, transit damage, inexpert repairs or modification by unauthorised persons, lightning strikes, vermin infestation or liquid spillage.
 - d) Cleaning of video or audio heads.
 - e) Inadequate receiving antennae.
 - f) Replacement of worn or used batteries, styli or other consumables.

The conditions contained in this warranty replace and override the provisions of the World-Wide Guarantee for Products sold in Australia.

Philips Service Branches

To contact your nearest Philips Service Branch call

13 13 92 from anywhere in Australia.

Sydney

Technology Park
Australia Centre
3 Figtree Drive
Homebush NSW 2140

Newcastle & Central Coast

984 Hunter Street
Newcastle West NSW 2302

Perth

1 Fredrick Street
Belmont WA 6104

Melbourne

Cnr Wellington &
Springvale Roads
Mulgrave VIC 3170

Brisbane

10 Graystone Street
Tingalpa QLD 4173

Also Service Centres: Adelaide

348 Torrens Road
Croydon Park SA 5008

Hobart

2A Pierce Street
Moonah TAS 7009

Wollongong

1/216 Corrimal Street
Wollongong NSW 2500

Canberra

Unit F,
66-70 Maryborough Street
Fyshwick ACT 2609

Service is also provided through 1,200 accredited service dealers throughout Australia. To find out about your nearest centre, call **13 13 92**.

Call us direct on the Philips Customer Helpline

Philips customer care lasts as long as you keep the product. Whenever you need any information on the care or operation of your product, remember it's always best to go straight to the source. Phone Philips Helpline direct on

13 13 91

7 days a week

— your call is always welcome.

Please record the following information for your records and keep in a safe place.

Model No:.....

Serial No:.....

***Please retain your purchase receipt
which is required to claim service
under warranty.***

Philips Electronics Australia Limited
ACN 008 445 743, 3 Figtree Drive
Homebush NSW 2140

Version 2, 03/97, FFCP-030

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller
Philips New Zealand Ltd.

✉ P.O. Box 41.021

Auckland

☎ (09) 84 94 160

fax ☎ (09) 84 97 858

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestras Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.

Esta garantía no cubrirá las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo.

Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de este instructivo haya sido debidamente llenado en el momento de la compra del aparato.


En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.

Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor ponerse en contacto con:

Centro de Servicio Philips
Bld. de los Ferrocarriles No.339
Col. Industrial Vallejo, 02300
México, D.F.
☎ 728-42 00

Centro de Información al Consumidor
☎ 368-77 88 ó 91 (800) 504-62 00

AW 7960 - Stereo Radio Cassette Recorder

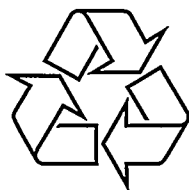

Meet Philips at the internet
<http://www.philips.com>

TC text / CvB / 9817

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>