 
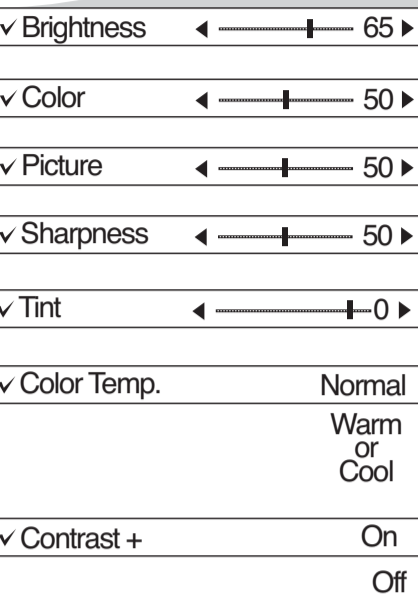 


15 PICTURE MENU CONTROLS

To adjust your TV picture controls, select a channel and use the Picture Menu Controls listed below.

 
 
- BRIGHTNESS CONTROL - Press the CURSOR RIGHT > or LEFT < buttons until the darkest parts of the picture are as bright as you prefer.
COLOR CONTROL - Press the CURSOR RIGHT > or LEFT < buttons to add or eliminate color.
PICTURE CONTROL - Press the CURSOR RIGHT > or LEFT < buttons until lightest parts of the picture show good detail.
SHARPNESS CONTROL - CURSOR RIGHT > or LEFT < buttons to improve detail in the picture.
TINT CONTROL - Press the CURSOR RIGHT > or LEFT < buttons to obtain natural skin tones.
COLOR TEMP CONTROL - Press the CURSOR RIGHT > or LEFT < buttons to select NORMAL, COOL, or WARM picture preferences.
CONTRAST + CONTROL - Press the CURSOR RIGHT > or LEFT < buttons to toggle the control On or OFF.

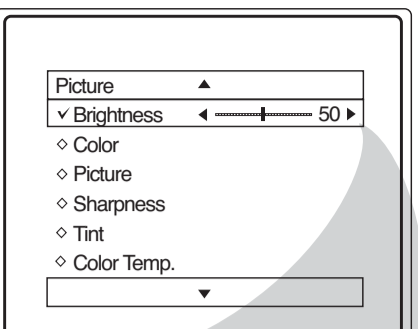

16 SOUND MENU CONTROLS

To adjust your TV sound, select and use the Sound Menu Controls listed below.




- TREBLE: Press the CURSOR RIGHT > or LEFT < buttons to adjust the control. The control will enhance the high frequency sounds.
BASS: Press the CURSOR RIGHT > or LEFT < buttons to adjust the control. The control will enhance the low frequency sounds.
BALANCE: Press the CURSOR RIGHT > or LEFT < buttons to adjust the level of sound coming from the left and right speakers.
AVL: (Auto Volume Leveller) Press the CURSOR RIGHT > or LEFT < buttons to turn the control On or Off.
INCR SURROUND: Press the CURSOR RIGHT > or LEFT < buttons to select between Incr Surround or Stereo settings.
ULTRA BASS: Press the CURSOR RIGHT > or LEFT < buttons to turn Ultra Bass On or Off.
SOUND: Press the CURSOR RIGHT > or LEFT < buttons to select between Stereo or Mono settings.

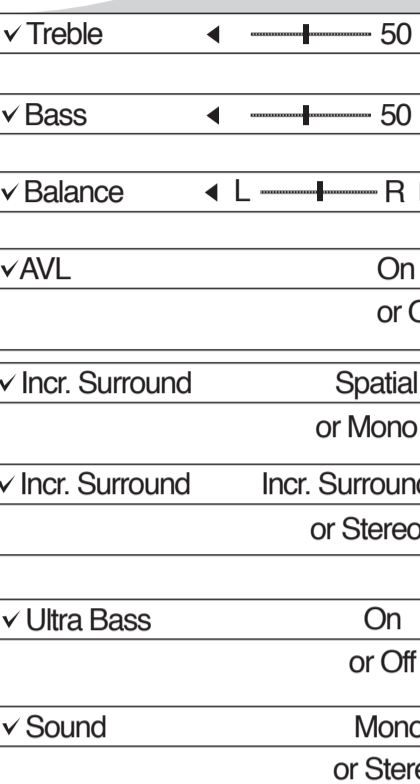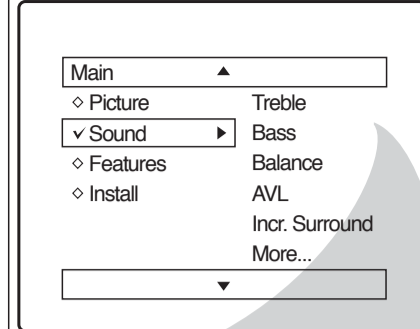

17 THE 4:3 EXPAND FORMAT CONTROL

Many times while watching movies from a DVD player the image is shown in "letter box" format. This is the format that is shown in movie theaters when shown on a TV screen, the image will have areas of black on top and bottom of the screen.

   - 1 Press the MENU button on the remote to display the on-screen menu.
2 Press the CURSOR DOWN V button until the word FEATURES is highlighted.
3 Press the CURSOR RIGHT > button to display the FEATURES menu options (AutoLock or Format).
4 Press the CURSOR DOWN V button until the word Format is highlighted.
5 Press the CURSOR RIGHT > or LEFT < buttons to select one of the two options 4:3 or Expand 4:3.
6 When finished, press the STATUS/EXIT button to remove the menu from the TV's screen.

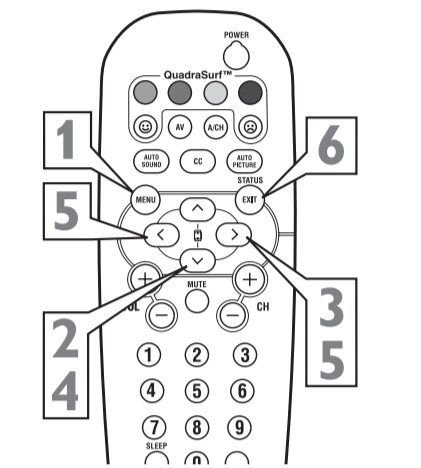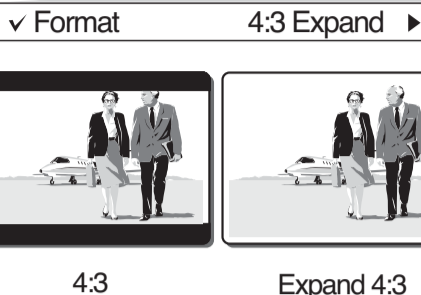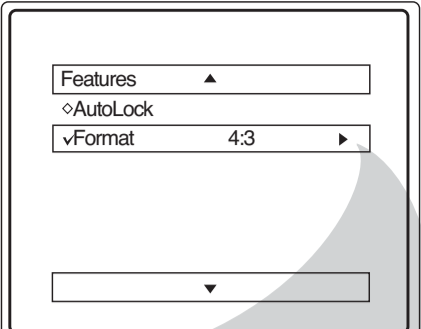

18 UNDERSTANDING AUTOLOCK CONTROLS

The AutoLock™ feature is an integrated circuit that receives and processes data sent by broadcasters, or other program providers, that contain program content advisories. When programmed by the viewer, AutoLock™ can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of viewing children may watch.
AutoLock™ offers various BLOCKING controls from which to choose:
Access Code - An Access Code must be set to prevent children from unblocking questionable or censored programming set by their parents.
Channel Block - After an access code has been programmed, you can block individual channels including the A/V inputs.
Clear All - Allows you clear all channels being blocked from your viewing set with the Channel Block Control.
Block All - Allows you to block ALL channels and A/V inputs at one time.
Movie Ratings - Certain blocking options exist which will block programming based on ratings patterns by the Motion Pictures Association of America.
TV Ratings - Just like the Movie Ratings, programs can be blocked from viewing using standard TV ratings set by TV broadcasters.

- MOVIE RATINGS
G: General Audience - All ages admitted. Most parents would find this program suitable for all ages.
PG: Parental Guidance Suggested - This programming contains material that parents may find unsuitable for younger children.
PG-13: Parents Strongly Cautioned - This programming contains material that parents may find unsuitable for children under the age of 13.
TV RATINGS
TV-Y: All Children - All children may watch.
TV-Y7: Children 7 and Above - Most children aged 7 and above may watch.
TV-G: General Audience - All children may watch.
TV-14: Parents Strongly Cautioned - Children under 14 years of age.
TV-MA: Mature Audience Only - Children under 17 years of age.

 
 
 
MOVIE RATINGS Continued
R: Restricted - This is programming is specifically designed for adults.
NC-17: No one under the age of 17 will be admitted.
TV RATINGS
TV-Y: All Children - All children may watch.
TV-Y7: Children 7 and Above - Most children aged 7 and above may watch.
TV-G: General Audience - All children may watch.
TV-14: Parents Strongly Cautioned - Children under 14 years of age.
TV-MA: Mature Audience Only - Children under 17 years of age.

TV-R: Restricted - This is programming is specifically designed for adults.
NC-17: No one under the age of 17 will be admitted.
TV RATINGS
TV-Y: All Children - All children may watch.
TV-Y7: Children 7 and Above - Most children aged 7 and above may watch.
TV-G: General Audience - All children may watch.
TV-14: Parents Strongly Cautioned - Children under 14 years of age.
TV-MA: Mature Audience Only - Children under 17 years of age.

19 SETTING UP AN ACCESS CODE

Once you've entered your access code and the AutoLock™ features are displayed on the screen:




- 1 Press the MENU button on the remote to display the on-screen menu.
2 Press the CURSOR UP ^ or DOWN V buttons until the word FEATURES is highlighted.
3 Press the CURSOR RIGHT > button to display the FEATURES menu options.
4 Press the CURSOR UP ^ or DOWN V buttons until the words AUTOLOCK™ are highlighted.
5 Press the CURSOR RIGHT > button to turn blocking ON or OFF.
6 Using the NUMBERED buttons, enter 0, 7, 1, 1. "XXXX" appears on the Access Code screen as you press the numbered buttons.
7 The screen will ask you to enter a "New Code." Enter a "new" 4 digit code using the NUMBERED buttons.

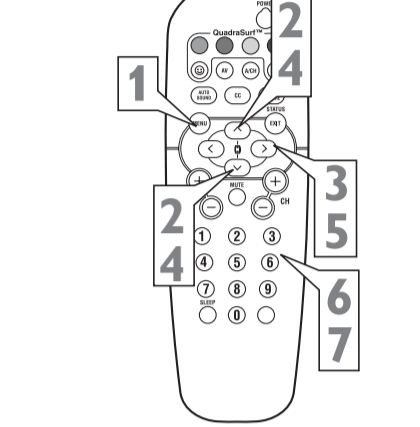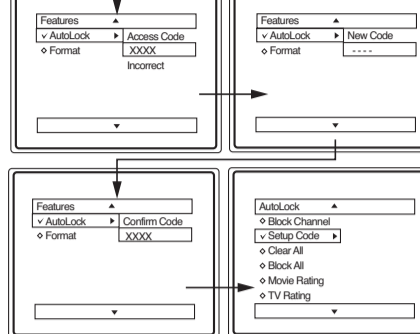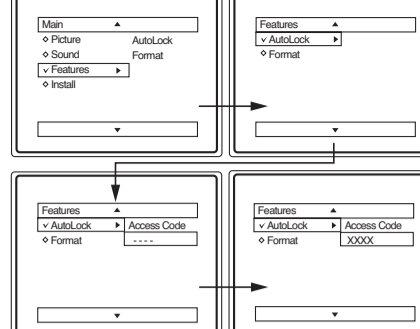

20 BLOCK CHANNELS

After your personal access code has been set (see previous page), you are now ready to select the channels or the A/V inputs you want to block out or censor. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

   - 1 Press the CURSOR UP ^ or DOWN V buttons until the words BLOCK CHANNELS are highlighted.
2 Press the CURSOR RIGHT > button to turn blocking ON or OFF for that channel.
3 Press the CH + or CH - button to select other channels you wish to block.
4 When finished, press the STATUS/EXIT button to remove the menu from the screen.

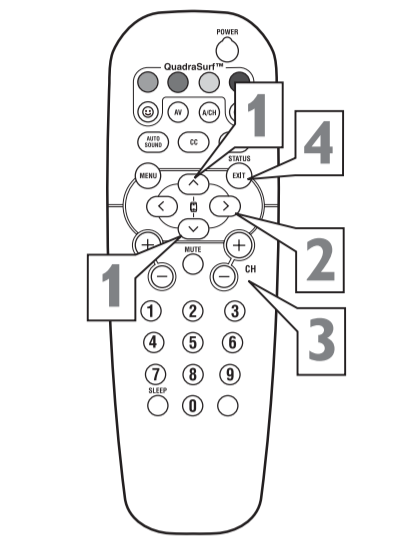
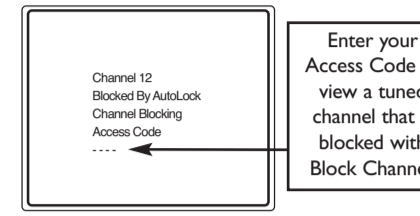
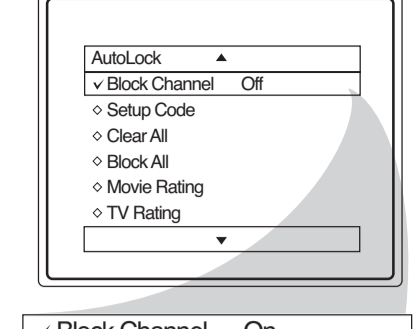


NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

21 BLOCK/CLEAR ALL CHANNELS AT THE SAME TIME

After blocking specific channels there may come a time when you want to block or clear all the channels at the same time. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

   - 1 Press the CURSOR UP ^ or DOWN V buttons to select either CLEAR ALL or BLOCK ALL.
2 If CLEAR ALL is selected, press the CURSOR RIGHT > button to clear all blocked channels.
3 When finished, press the STATUS/EXIT button to remove the menu from the screen.

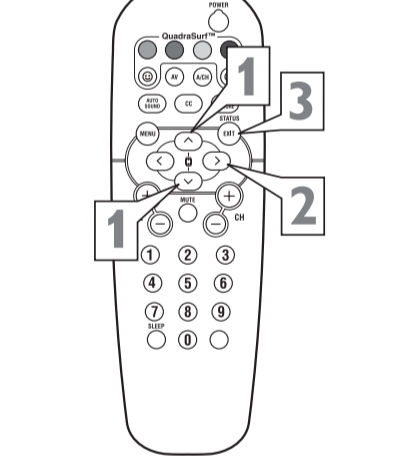
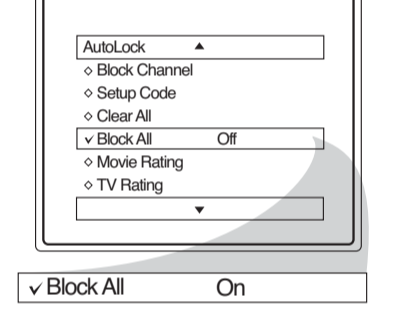
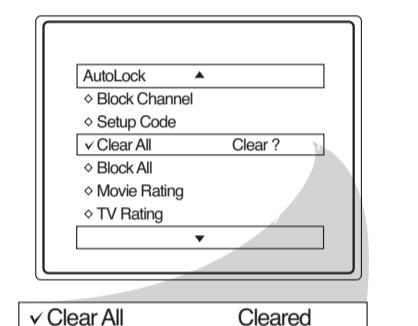


NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

22 MOVIE RATINGS

The AutoLock™ feature can block programming based on the Movie Industry ratings. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

   - 1 Press the CURSOR UP ^ or DOWN V buttons to highlight the words MOVIE RATING.
2 Press the CURSOR RIGHT > button to display the MOVIE RATING options (G, PG, PG-13, R, NC17, or X).
3 Press the CURSOR UP ^ or DOWN V buttons to highlight any of the Movie Rating options.
4 Use the CURSOR RIGHT > button to turn the rating option ON or OFF.

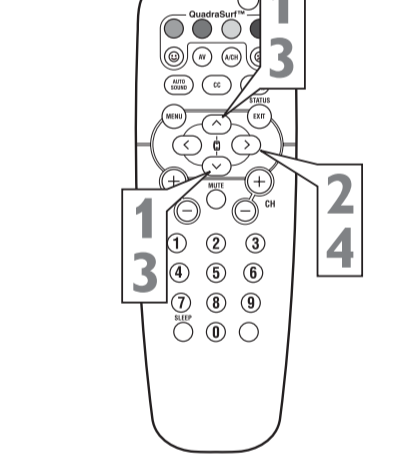
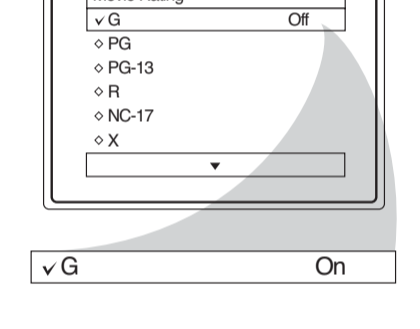
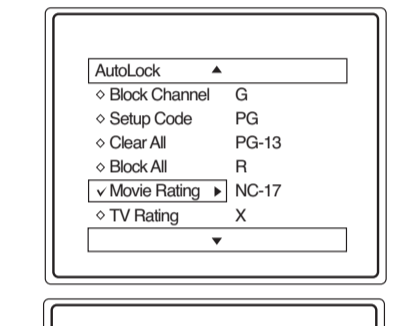


NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

23 TV RATINGS

The AutoLock™ feature can block programming based on the TV Industry ratings. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

   - 1 Press the CURSOR UP ^ or DOWN V buttons to highlight the words TV RATING.
2 Press the CURSOR RIGHT > button to display the TV RATING options (TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA).
3 Press the CURSOR UP ^ or DOWN V buttons to highlight any of the TV Rating options.
4 Press the CURSOR RIGHT > button to turn the TV-Y or TV-G rating ON or OFF.
5 Press the CURSOR UP ^ or DOWN V buttons to select one of the options (Block All, V, S, L, D, or FV).
6 Press the CURSOR RIGHT > button on the remote to turn the option ON or OFF.

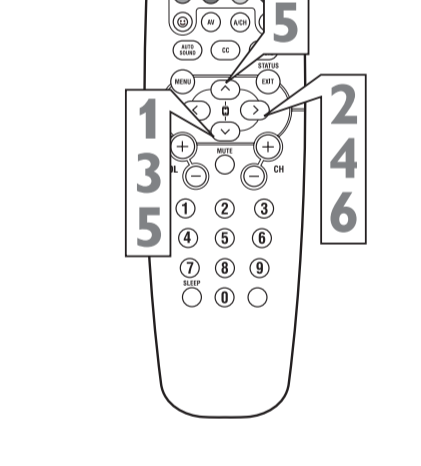
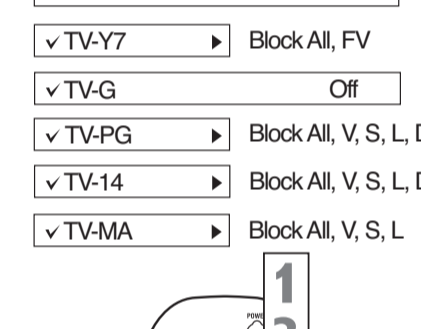
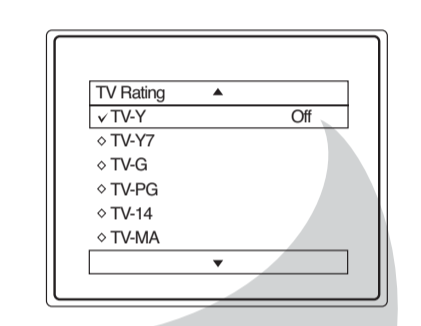


NOTE: Some TV RATING options also have sub-ratings. The ratings of TV-Y, TV-PG, TV-14, TV-MA can be customized to block V (violence), FV (fantasy violence), S (sexual situations), L (coarse language), or D (suggestive dialogue).

24 BLOCKING OPTIONS

AutoLock™ offers the viewer other blocking features as well. With these Blocking Options, the censoring can be turned ON or OFF. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

   - 1 Press the CURSOR UP ^ or DOWN V buttons until the words BLOCKING OPTIONS are highlighted.
2 Press the CURSOR RIGHT > button to display the Blocking Options (BLOCKING, UNRATED, or NO RATING) menu.
3 Press the CURSOR UP ^ or DOWN V buttons to highlight the desired feature.
4 When highlighted, each feature can be turned ON or OFF using the CURSOR LEFT < buttons on the remote.

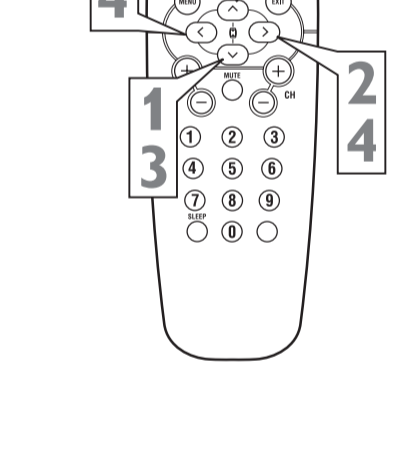
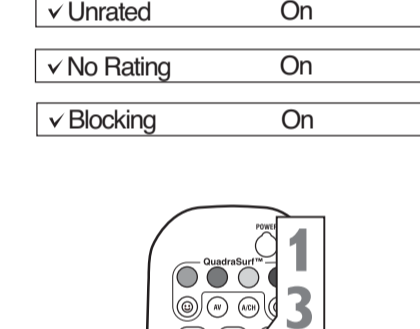
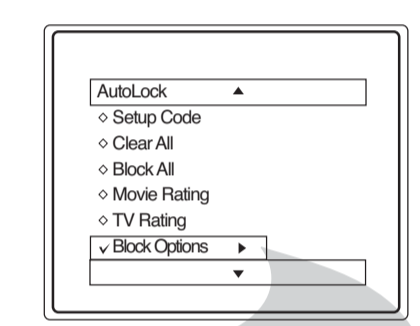


NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

25 CLOSED CAPTIONING

Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

   - 1 Press the CC button on the remote to display the current Closed Captioning setting.
2 Press the CC button repeatedly to cycle through the four Closed Captioning options (CC Off, CC1, CC2, CC Mute).
3 When finished, press the STATUS/EXIT button to remove the menu from the TV's screen.

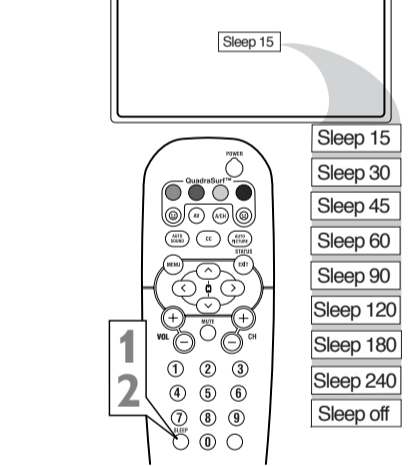
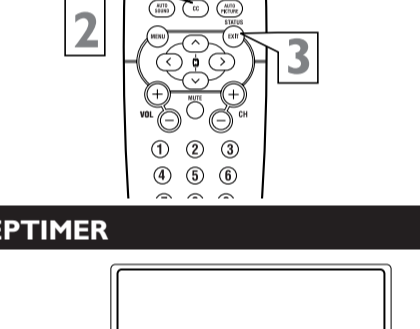
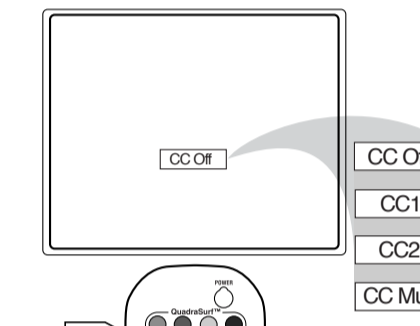


NOTE: The way you choose to set the Picture Menu Controls will become your PERSONAL setting.

26 AUTO PICTURE

Whether you're watching a movie or a sporting event, your TV has automatic video control settings matched for your current program source or content.

   - 1 Press the AUTO PICTURE button on the remote control.
2 Press the AUTO PICTURE button repeatedly to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTIMEDIA picture settings.
3 When finished, press the STATUS/EXIT button to remove the menu from the TV's screen.

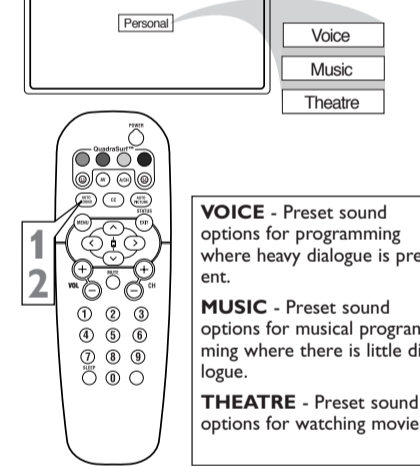
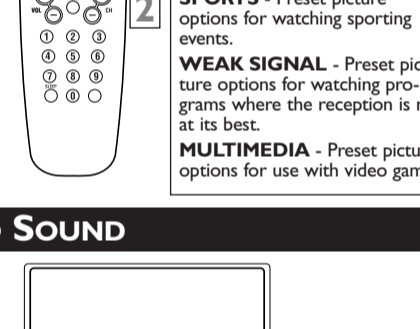
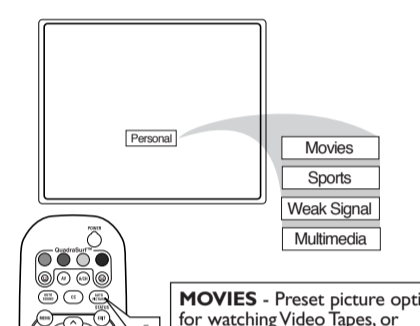


NOTE: The way you choose to set the Sound Menu Controls will become your PERSONAL setting.

27 QUADRASURF

The QuadraSurf™ control allows you set up four different personal channel SURF lists using the colored buttons (on the remote control), each holding up to ten channels in its "quick viewing" list.

   
- 1 Press the CHANNEL (+) or (-) buttons (or the NUMBER buttons) to select a channel to add to one of the SURF lists.
2 Press the SMILEY button on the remote control to ADD the channel to one of the SURF lists.
3 Press the corresponding COLORED (Red, Green, Yellow or Blue) button to add the channel to that button's Surf list.
4 Press the COLORED Quadra Surf button until the desired channel appears.
5 While the "Smiley" face channel indicator is displayed, press the FROWNIE button.
6 Press the FROWNIE button again to confirm your decision to remove the channel from the Surf list.

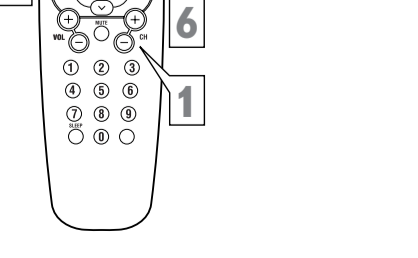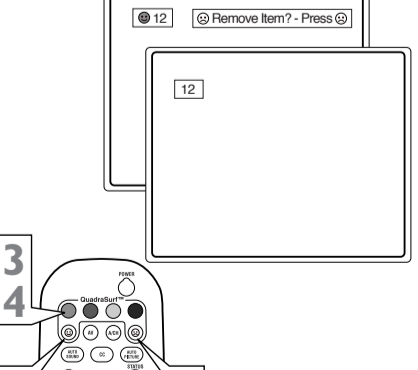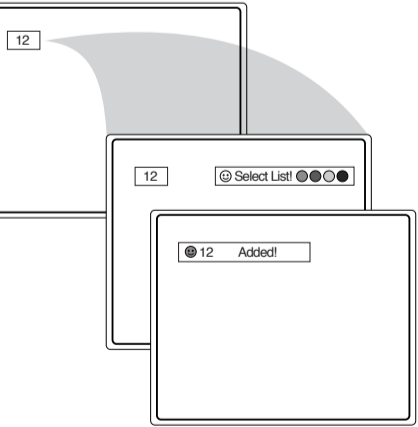

28 QUADRASURF

The Quadra Surf buttons on your remote control allow you to store up to 10 channels per button (40 total). You can even program the A/V input channels for each button making them a "source" button.

 - 1 Press one of the pre-programmed COLORED buttons on the remote.
2 While the colored "smiley" face still appears on the screen, press the same COLORED button on the remote to tune the second channel programmed for that specific surf list.
3 Repeatedly pressing the same COLORED button while the "smiley" face appears will tune all the programmed channels.
4 Repeat steps 1-3 for the other three COLORED buttons.
5 Any time the "smiley" face appears with the channel number, pressing the "frownie" face button will allow you to remove it from the list.

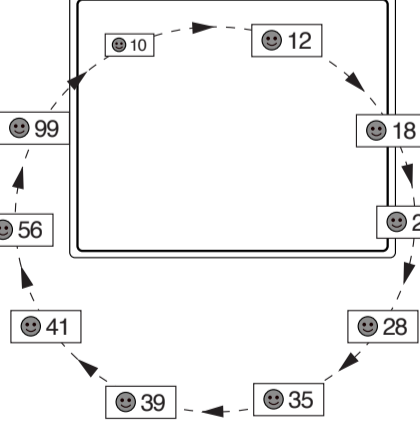

NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

29 TROUBLESHOOTING

- No Power
- Check the TV power cord.
- Check the fuse.
No Sound
- Check the VOLUME buttons.
- Check the MUTE button.
Remote Does Not Work
- Check the batteries.
- Clean the remote control and the remote control sensor window.
TV Displays Wrong Channel or No Channels Above 13
- Repeat channel selection.
- Add the desired channel numbers into the TV's memory.

30 PHILIPS LIMITED WARRANTY

90 Days Labor & One (1) Year Parts & Two (2) Years Display
PHILIPS CONSUMER ELECTRONICS warrants this product against defect in material or workmanship...
PHILIPS LIMITED WARRANTY SERVICE IN CANADA...
PHILIPS LIMITED WARRANTY SERVICE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>