



14PV385/07

VIDEO *Plus+*



PHILIPS

OPERATING INSTRUCTIONS









Thank you for buying a Philips TV-Video Combi. This TV-Video Combi (TVCR) is one of the most sophisticated and easy-to-use TV-Video Combis on the market. Please take the time to read this operating manual before using your TV-Video Combi. It contains important information and notes regarding operation. The TV-Video Combi should **not be turned on immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity. Wait at least **three hours** after transporting the device. The TV-Video Combi needs this time in order to become acclimatised to its new environment (temperature, air humidity, etc.).







This TV-Video Combi is used for the recording and playback of VHS videocassettes. Cassettes with the VHS-C label (VHS cassettes for camcorders) may only be used with a suitable adapter.

We hope you enjoy your new TV-Video Combi.

Important notes regarding operation

-  **Danger: High voltage!**
There is a risk of an electrical shock!
-  **To reduce the risk of fire or electric shock, do not expose this device rain or moisture!**
-  The TV-Video Combi does not contain any components that can be repaired by the customer. Please leave all maintenance work for qualified personnel.
-  As soon as the TV-Video Combi is connected to the power supply, some components are in constant operation. To switch off the TV-Video Combi completely you must disconnect it from the power supply.
-  Make sure that air can circulate freely through the ventilation slots on the TV-Video Combi. Do not place the device on an unsteady base.
-  Make sure that no objects or liquids enter the TV-Video Combi. Do not place vases or the like on the TV-Video Combi. If liquid is spilt into it, immediately disconnect the TV-Video Combi from the power supply and call After-sales Service for advice.
-  Do not place any combustible objects on the device (candles, etc.).
-  Make sure that children do not place any foreign objects within the openings or ventilation slots.

-  These operating instructions have been printed on non-polluting paper.
-  Deposit old batteries at the appropriate collection points.
-  Please make use of the facilities available in your country for disposing of the packaging of the TV-Video Combi in a way that helps to protect the environment.
-  This electronic device contains many materials that can be recycled. Please enquire about the possibilities for recycling your old device.

VIDEO Plus+®

VIDEO Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEO Plus+ system is manufactured under licence from Gemstar Development Corporation.

So that you can identify your machine for service questions or in the event of theft, enter the serial number here. The serial number (PROD. NO.) is printed on the type plate fixed at the back of the device.

MODEL NO.	14PV385/07
PROD. NO.

This product complies with the requirements of Directive 73/23/EEC +89/336/EEC +93/68 EEC.

Specifications

Voltage: 220-240V/50Hz
Power consumption: 52W
Power consumption (Standby): less than 5W
Rewind time: less than 260 seconds (cassette E-180)
Dimensions in cm (WxDxH): 37.9x38.0x40.1
Number of video heads : 2
Recording/playback time:
3 hours (SP) (cassette E-180)
6 hours (LP) (cassette E-180)
Weight without packing in kg: 10.5


Supplied accessories

- Operating instructions
- Remote control and 2 batteries



IN BRIEF

The remote control

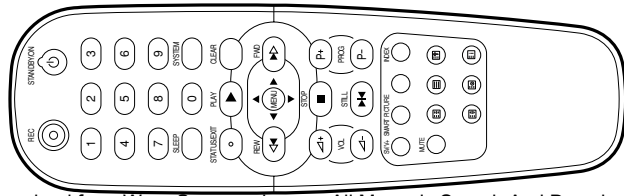


- REC** To record the TV channel selected at this moment or press repeatedly to start a One-Touch Recording.
- STANDBY/ON** To switch off or on, interrupt menu function.
- 0..9** Press to select channels at TVCR.
- SLEEP** To select the switch-off time in 30 minutes intervals.
- SYSTEM** Doesn't work on this model.
- STATUS/EXIT** To access or remove the TVCR's on-screen status display. To exit on-screen menus.
- CLEAR** To delete last entry. To clear a programmed recording (TIMER). To reset the elapsed time counter in the playback, recording or stop mode.
- STILL** To stop the tape and play back a picture step by step. (except for during fast forwarding and fast rewinding)
- MENU** To call up main menu of TVCR.
- FWD** When tape playback is stopped, press to fast forward the tape at high speed. During playback, press to fast forward the tape while the picture stays on the screen. To store or confirm entry in the menu. Press to adjust the controls of TVCR menu.
- REW** When tape playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stays on the screen. To return the cursor in the menu. Press to adjust the controls of TVCR menu.
- PLAY** To play back a tape, select an item in the menu of TVCR.
- STOP** To stop the tape, select an item in the menu of TVCR.

- VOL** To adjust the volume.
- PROG P+** To select the programme number. During playback, press to adjust the tracking.
- SVN/+** Red button / To programme recordings with VIDEO Plus+® or to alter / clear programmed TIMER recordings. Select Fasttext function when you are in Fasttext mode.
- SMART PICTURE** Green button / To call up preset picture settings. Select Fasttext function when you are in Fasttext mode.
- Yellow button** Select Fasttext function when you are in Fasttext mode.
- INDEX** Blue button / Search for the previous/next recording code on the tape in combination with **REW** / **FWD**. Select Fasttext function when you are in Fasttext mode.
- MUTE** To eliminate the TV's sound. Press again to restore the volume.
- TVCR** : Switch Fasttext on or off, or transparent mode
- ENL** : Enlarge font
- SSP** : Select Fasttext sub-page
- HI** : Recall hidden information
- SP** : Stop page changes
- ST** : Go back to start page



 Front of your TVCR



STANDBY/ON: To switch off or on, interrupt menu function.

Volume: In connection with the button $\boxed{+}$ $\boxed{-}$ to adjust the volume.

P- **Programme number minus:** previous programme number

P+ **Programme number plus:** next programme number

Record: To record the programme currently selected.

Playback: To play a recorded cassette.

Pause/Stop, eject cassette: To stop the tape: If this key is depressed while in STOP, the cassette is then ejected from the machine.

When tape playback is stopped, press to fast forward the tape at high speed.

When tape playback is stopped, press to rewind the tape at high speed.


Sockets on the front:

Write socket / AUDIO input socket: To connect a camcorder or a video game machine (audio).

Yellow socket / VIDEO input socket: To connect a camcorder or a video game machine (video).

Small socket / socket for headphones: To connect headphones.

Back of your TVCR

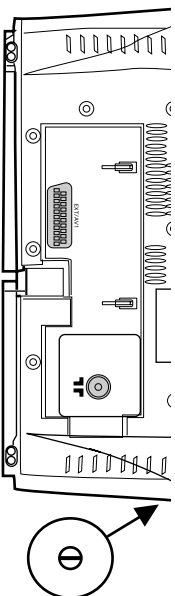

Aerial input socket: To connect the aerial cable.

EXT/AV1 Scart socket : To connect a satellite receiver, decoder, video recorder, etc

Power switch: To switch the TVCR off.

Caution: If you switch off using the power switch, TIMER-recordings are impossible!

The control lights at the front of machine

STANDBY ● **Standby light:** lights up when the TVCR has been switched on by means of the main switch.

RECORD ● **Recording light:** lights up during recording.

FAST blink: RECORDING PAUSE; TIMER RECORDING NOT STAND-BY.

SLOW blink: TIMER RECORDING is stored in a timer block.

Table of Contents

1. Connecting the TV-Video Combi4	6. Manual recording11
Important for the United Kingdom4	General information11
Preparing the remote control for operation4	Recording without automatic switch-off11
Connecting the cable4	Recording with automatic switch-off (OTR One-Touch-Recording)11
Connecting additional devices4	Preventing accidental erasing11
2. Important notes for operation5	Lining up recordings (assemble cut) . . .11
Navigation in the screen menu5	Selecting the recording speed (SP or LP)12
3. Installing your TV-Video Combi5	Automatic controlled recording from a satellite receiver (RECORD LINK) .12
Preparation for use5	7. Programming a recording (TIMER) . . .13
Decoder allocation6	General information13
Manual TV channel search6	Programming a recording (with the VIDEO Plus+® system)13
Using the satellite receiver6	Programming a recording (without the VIDEO Plus+ system)14
Automatic Tuning7	Problems and solutions for programmed recordings15
Sorting TV channels manually7	How to check or delete a programmed recording (TIMER) . . .15
Setting the clock7	How to change a programmed recording (TIMER)15
4. TV set functions8	8. Other functions16
Selecting a TV channel8	Switching the status display off or on .16
Selection of the scart socket8	Continuous playback16
Selection of the front A/V sockets8	Blue Background on or off16
Volume control8	Parental control (Child lock)16
Picture settings8	9. Before you call an engineer17
How do I read Fasttext?8	
Special Fasttext functions8	
SMART Picture9	
Switch off function (SLEEP TIMER) . . .9	
5. Playback9	
Playing back cassettes9	
Playing back NTSC cassettes9	
Displaying current tape position9	
Searching for a tape position with picture(scanning)10	
Still picture10	
Searching for tape position without picture(forward wind and rewind) . . .10	
Index search10	
Manual Tracking10	

Interference

The Department of Trade and industry operates a Radio Investigation Service to help TV licence holders improve reception of BBC and ITC programmes where these are being spoilt by interference.

1. Connecting the TV-Video Combi

Important for the United Kingdom

This apparatus is fitted with a BS1362 5 Amp inside an approved moulded 13 Amp plug. To replace a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 5A, ASTA or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

The severed plug must be destroyed to avoid a possible shock hazard, or should it be inserted into a 13A socket elsewhere.

How to connect a plug:

The wires in the mains lead are coloured in accordance with the following code:

BLUE- 'NEUTRAL' ('N')

BROWN- 'LIVE' ('L')

4. The BLUE wire must be connected to the terminal which is marked with the letter 'N' or coloured BLACK.
5. The BROWN wire must be connected to the terminal which is marked with the letter 'L' or coloured RED.
6. Do not connect either wires to the earth terminal in the plug which is marked with the letter 'E' or by the safety earth symbol \perp or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead-not simply over the two wires

Preparing the remote control for operation


The remote control and its batteries are packed separately in the original TV-Video Combi packaging. You must install the batteries in the remote control before use.



1. Take the remote control and the enclosed batteries (2 batteries).
2. Open the remote control's battery compartment and place the batteries in it as shown in the

picture and close the battery compartment. The remote control is now ready to use. Its range is approximately 7 metres.

Connecting the cable

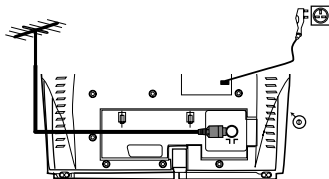

1. Insert the aerial cable plug into the AERIAL at the back of the TV-Video Combi.
2. Connect the mains cable to the wall socket.
3. If the little red standby light (STANDBY ●) at the front panel of the set is not lit, please switch on the set using the main power switch. The power switch (⏻) is located on the left side panel of the set.
4. The following screen will appear on the TV.

PLEASE CONNECT AERIAL OR
CABLE TO THE TVCR


THEN...
PUSH P+ KEY

OR...
FOR PLAY ONLY PUSH PLAY

You can find more details in chapter 'Preparation for use'.

Connecting additional devices

You can connect additional devices such as decoders, satellite receivers, camcorders, etc. to the EXT1/ AV1 socket.

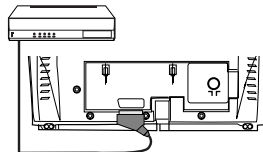

The respective scart socket is usually marked 'AV' or 'TV' on the decoder or satellite receiver.

Selection of the scart socket

- To select the Scart socket, please enter 0,0,1, with the keys on the remote control. AV1 appears on the screen.

Selection of the front A/V sockets

- To select the front A/V sockets, please enter 0,0,2, with the keys on the remote control. 'AV2' appears on the screen.

2. Important notes for operation

Switching on

You can switch on the TV-Video Combi with **[STANDBY/ON ⏻]**.

If you press **[PLAY ▶▶▶▶]**, **[STOP ■▼]**, **[PROG P+]**, **[PROG P-]**, **[FWD ▶▶▶▶]**, **[REW◀◀◀◀]** or **[0.9]** while the set is in Stand-by, the power will be automatically turned on.


Note that the keys **[0.9]** will be inactive for about 5 seconds just after having switched the TV-Video Combi off.

Power outage/ no power

Channel information remains saved for up to 1 year, the time and timer information is saved for up to 1 minute.

menu. The individual functions are selected, via the remote control as follows:

Call up the menu: with **[MENU]**.

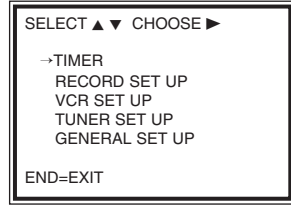

To select: with **[PLAY ▶▶▶▶]** or **[STOP ■▼]**.

To enter or change your selection: with the number buttons **[0.9]** or with **[PLAY ▶▶▶▶]** or **[STOP ■▼]**.

To save or confirm: with **[FWD ▶▶▶▶]**.

To cancel: with **[CLEAR]**.

To end: with **[STATUS/EXIT]**.

Navigation in the screen menu

You can check/change many functions and settings of your TV-Video Combi via on-screen

3. Installing your TV-Video Combi


Preparation for use

This chapter shows you how to prepare the TV-Video Combi for use. The TV-Video Combi automatically seeks out and stores all available TV channels.

Connecting additional devices

After you have connected additional devices (satellite receiver, etc.) through the aerial cable, switch them on. The automatic channel search will recognise them and save them.


1. After you have connected the aerial or cable, confirm the picture on the TV screen with **[PROG P+]**.
2. The automatic TV channel search starts.
3. The clock setting display appears on the TV screen.

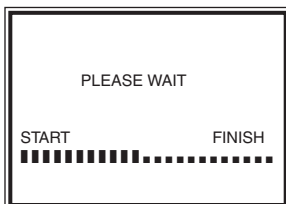

The TV-Video Combi does not find any TV channels during the search

- Check the cable connection of the aerial (aerial socket), TV-Video Combi.
- The TV-Video Combi searches the entire frequency range in order to find and save the largest possible number of TV channels. It is possible that the TV channels in your country are broadcast in a higher frequency range. As soon as this range is reached during the search, the TV-Video Combi will find the TV channels.

4. Check 'TIME'. If required, change the time with the number buttons **[0.9]**.

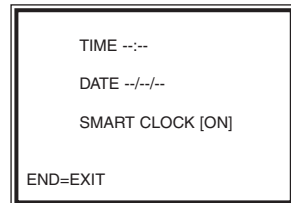

5. Check 'DAY', 'MONTH' and 'YEAR'. If required, change them with the number buttons **[0.9]**.
6. When all information is correct, save by pressing **[STATUS/EXIT]**.
The preparation for use is now complete.

Satellite receiver

If you are connecting a satellite receiver, please read the section 'Using the satellite receiver'.


Decoder

If you are connecting a decoder, you must install it as described in the next section.

Decoder allocation

Some TV channels transmit encoded TV signals which can only be viewed with a purchased or rented decoder. You can connect such a decoder to this TV-Video Combi. The following function will automatically activate the connected decoder for the desired TV channel.

1. Use **[P+] [P-]** or **[0.9]** to select the programme number which you would like to allocate the decoder to.
2. Press **[MENU]**. The main menu will appear.
3. Use **[PLAY ▶▶▶]** or **[STOP ■▼]** to select 'TUNER SET UP'. Then press **[FWD ▶▶▶▶]**.
4. Use **[PLAY ▶▶▶]** or **[STOP ■▼]** to select 'MANUAL TUNING'. Then press **[FWD ▶▶▶▶]**.
5. Use **[PLAY ▶▶▶]** or **[STOP ■▼]** to select 'DECODER'.

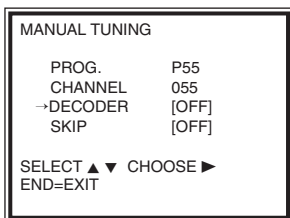

6. Use **[FWD ▶▶▶▶]** to select 'ON' (Decoder switched on).
7. To end, press **[STATUS/EXIT]**.

The decoder has now been allocated to this programme number.

How can I switch off the decoder?


Use **[FWD ▶▶▶▶]** to select 'OFF' (Decoder switched off).

Manual TV channel search

In some cases it can occur that all TV channels are not found and saved during the first installation. In this case, the missing or coded TV channels must be searched for and stored manually.

1. Press **[MENU]**. The main menu will appear.
2. Use **[PLAY ▶▶▶]** or **[STOP ■▼]** to select 'TUNER SET UP'. Then press **[FWD ▶▶▶▶]**.

3. Use **[PLAY ▶▶▶]** or **[STOP ■▼]** to select 'MANUAL TUNING'. Then press **[FWD ▶▶▶▶]**.

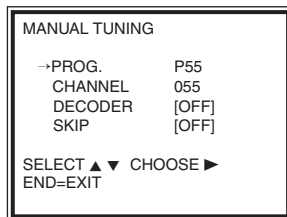

4. Select 'PROG.' with **[PLAY ▶▶▶]** or **[STOP ■▼]**. Then press **[FWD ▶▶▶▶]**.
5. With **[PLAY ▶▶▶]** or **[STOP ■▼]** or **[0.9]**, select the desired programme number that you want to use for the TV channel, e.g. 'P01'. Then press **[FWD ▶▶▶▶]**.
6. Select 'CHANNEL' with **[PLAY ▶▶▶]** or **[STOP ■▼]**, and confirm with **[FWD ▶▶▶▶]**. Then enter the desired channel with **[0.9]**.

If you set 'SKIP' on for a channel, this channel will be ignored when going through the channels with **[P+] [P-]**.

I don't know the channels for my TV stations

In this case, press **[PLAY ▶▶▶]** or **[STOP ■▼]** in 'CHANNEL' to start the automatic channel search. A changing channel number will appear on the TV screen. Continue the automatic search until you have found the desired TV channel.

7. Save the TV channel with **[FWD ▶▶▶▶]**.
8. To search for other TV channels, start again at step 4.
9. To end, press **[STATUS/EXIT]**.


Using the satellite receiver

You can receive channels from the satellite receiver via the scart socket EXT1/ AV1. To do this, select the channel number 'AV1' by pressing 0,0,1, with the keys **[0.9]** on the remote control. You will have to select the channel you want to receive on the satellite receiver itself.

Automatic Tuning

During installation, all available TV channels are searched for and saved. If the channel assignments of your cable or satellite TV provider change or if you are re-installing the TV-Video Combi, e.g. after moving house, you can start this procedure again. This will replace all the TV channels already saved with the new ones.

1. Press **[MENU]**. The main menu will appear.
2. Select 'TUNER SET UP' with **[PLAY ▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶]**.
3. Select 'AUTO TUNING' with **[PLAY ▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶]**.

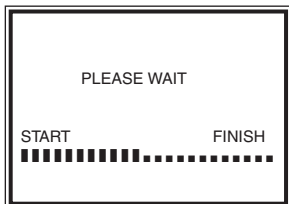

4. The automatic TV channel search starts. This allows the TV-Video Combi to save all available TV channels. This procedure may take several minutes.
5. When the TV channel search is complete, 'COMPLETED' will briefly appear on the TV screen.

Sorting of TV channels from P01 to P06 will be performed automatically as follows.

P01: BBC1	P04: CH4
P02: BBC2	P05: CH5
P03: ITV	P06: SKY NEWS


Sorting TV channels manually

After you have performed the automatic channel search you may not agree with the sequence in which the individual TV channels have been allocated to the programme positions (programme numbers) of the TV-Video Combi. You can use this function to individually sort the TV channels already saved.

The clock resets automatically

If you save a TV channel that transmits PDC on programme number 'P01', date and time will constantly be updated. As a result, time changes, i.e. daylight savings time, will be set automatically.

1. Press **[MENU]**. The main menu will appear.
2. Select 'TUNER SET UP' with **[PLAY ▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶]**.
3. Select 'MOVE' with **[PLAY ▶▶▶]** or **[STOP ■▼]**, and confirm with **[FWD ▶▶▶▶]**.
4. With **[PLAY ▶▶▶]** or **[STOP ■▼]**, select the saved TV channel that you want to change.

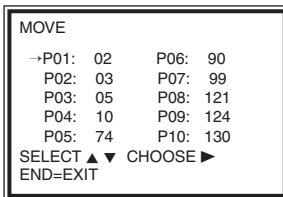


5. Confirm with **[FWD ▶▶▶▶]**.
6. Move the selected channel with **[PLAY ▶▶▶]** or **[STOP ■▼]** to the programme number you want to assign.
7. Confirm with **[FWD ▶▶▶▶]**.
8. To assign other TV channels to a programme number, repeat steps 4 to 7.
9. To end, press **[STATUS/EXIT]**.

Setting the clock

If the display shows an incorrect time or '--:--', the time and date must be reset manually. If a TV channel that transmits PDC or Fasttext is stored under programme number 'P01', time/date will automatically be taken from the PDC information (SMART CLOCK).

1. Press **[MENU]**. The main menu will appear.
2. Select 'GENERAL SET UP' with **[PLAY ▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶]**.
3. Select 'CLOCK' with **[PLAY ▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶]**.

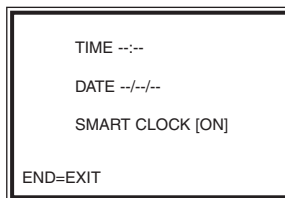

4. Check the time in 'TIME'. If required, please change the time with **[0.9]**.
5. Check 'DAY', 'MONTH' and 'YEAR' in the same way.
6. Choose 'SMART CLOCK' ON or OFF with **[FWD ▶▶▶▶]**.
7. To end, press **[STATUS/EXIT]**.

Time/date is displayed incorrectly despite manual setting

With Smart Clock, time/date is taken from the TV channel saved on 'P01'. If you wish to switch this automatic time correction off, select 'OFF' for Smart Clock. You can reactivate this function at anytime by selecting 'ON' for Smart Clock.

4. TV set functions

Selecting a TV channel

Select the desired TV channel (= the programme number) with **[PROG P+]** **[PROG P-]** or with **[0..9]** on the remote control.

Selection of the scart socket

To select the Scart socket, please enter 0,0,1, with the keys on the remote control. AV1 appears on the screen.

Selection of the front A/V sockets

To select the front A/V sockets, please enter 0,0,2, with the keys on the remote control. 'AV2' appears on the screen.

Volume control

You can adjust the volume using **[VOL ▲/+]**, **[VOL ▼/-]** on the remote control.


If you would like to change the volume on the machine, press **[▲]** or **[▼]** on the TV-Video Combi.

If you want to mute the sound temporarily (e.g.:during a telephone call), press **[MUTE]** on the remote control. When you press **[MUTE]** again, the sound will return at its original volume level.

Picture settings

The picture can be adjusted according to your personal preferences. These settings are automatically stored after exiting the main menu.

1. Press the **[MENU]**. The main menu will appear.
2. Select 'PICTURE CONTROL' with **[PLAY ▶-▲]** **[STOP ■-▼]** and confirm with **[FWD ▶▶-▶]**..
3. Select an item using **[PLAY ▶-▲]** or **[STOP ■-▼]**, and then modify with **[REW ◀◀-◀]** or **[FWD ▶▶-▶]**.

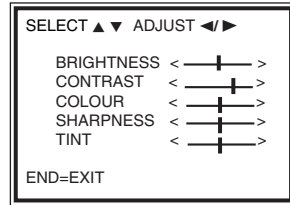

4. To end, press **[STATUS/EXIT]**.

'TINT' appears only when receiving NTSC signals from another source.

How do I read Fasttext?

Many TV channels transmit Fasttext information along with their TV channels. With this TV-Video Combi you can retrieve this information and display it on the screen using the built-in Fasttext decoder.

1. Press **[F]** to switch the Fasttext decoder on. Your TV-Video Combi will now show Fasttext for the TV channel you have selected. Press **[F]** again to show Fasttext in transparent mode.
2. If you want to select another page, type in the number of the page with the number buttons **[0..9]** on the remote control.

With the colour buttons on your remote control you can directly select the page numbers shown at the bottom of the TV screen. The button **[1]** takes you back to the start page.

3. Press **[F]** to switch the Fasttext decoder off.

Special Fasttext functions

In Fasttext mode you can use the special Fasttext functions.

- [F]**: Enlarge font
- [C]**: Select Fasttext sub-page
- [P]**: Recall hidden information
- [S]**: Stop page changes
- [1]**: Go back to start page

SMART picture

You can change the picture setting during playback.

1. Press **[SMART PICTURE]** to show the current picture setting.
2. Press **[SMART PICTURE]** again to select the picture setting of your choice.
 - 'NATURAL': best all-purpose-setting to watch a well-recorded tape (natural picture).
 - 'SPORTS': accentuate the details. Valuable to watch high quality tapes or recorded sport events.
 - 'MOVIE': to get the best picture when you play a movie.
 - 'WEAK SIGNAL': for rented tapes. It reduces the noise, making the picture more enjoyable.
 - 'VIDEO GAMES': best setting when playing a video game.

Switch-off function (SLEEP TIMER)

You can programme your set to switch-off automatically after a predetermined period.

1. Press **[SLEEP]**.
2. Press **[SLEEP]** repeatedly to extend the time until switch-off in 30 minute increments. The screen will show the time remaining until switch-off, e.g.: '+0:30'
The machine now counts backwards to the switch-off time.

The maximum time period to be set until switch-off is 2 hours.

If you would like to turn this function off, press **[SLEEP]** on the remote control several times until switch-off appears. '---:--' will appear on the screen. To check the time until switch-off, press **[SLEEP]** on the remote control. If a recording is in process, switch-off function will be cancelled.

5. Playback

Playing back cassettes

You can operate the TV-Video Combi using the remote control or the buttons on the set. Your TV-Video Combi can only record and play standard VHS cassettes.

1. Put a cassette into the cassette slot. The cassette is inserted automatically.

DIGITAL STUDIO PICTURE CONTROL

Philips has developed a system which produces the best possible playback quality. For old and often-used video cassettes, this system reduces interference. For new or high quality cassettes, it emphasises the details.

Picture/ sound quality is poor

When playing back rental videos or older, poorer quality cassettes, it may not be possible to completely filter out picture and sound interference. This is not a fault in your machine. Read the section 'Manual tracking'.

2. Press **[PLAY ▶▶]** to view the tape.
3. To stop the playback, press **[STOP ■▼]** or **[STOP/EJECT]** on the TV-Video Combi.
4. To eject the cassette, press **[STOP/EJECT]** when the TV-Video Combi stops the playback.

Do I need to change the playback speed when playing back LP recordings?

During playback, the correct speed will automatically be selected. For more information, please read the section 'Selecting the recording speed (SP or LP)' in the chapter 'Manual recording'.

Automatic switch-off of special functions

Many functions (e.g. pause, still picture) switch themselves off automatically after a short time in order to protect the cassette and to save energy.

Playing back NTSC cassettes

This TV-Video Combi can also play back cassettes that have been recorded in SP [Standard Play] or SLP [Super Long Play] mode in the NTSC standard (for example, American cassettes). However, this only works on PAL-television sets that are suitable for a picture frequency of 60Hz.

Displaying current tape position

The following information is displayed on the screen: e.g.: 0:02:45 shows the counter in hours, minutes and seconds.

SP/LP: will show the recorded speed of your cassette.

'REM 0:06': will show the remaining time left on the tape in hours and minutes.

When you play back an NTSC cassette, the TV-Video Combi will show 'REM -:-'.

How can I set the counter to '0:00:00'?

You can set the counter to '0:00:00' with **[CLEAR]**. When you put a cassette in the TV-Video Combi, the counter will automatically reset to '0:00:00'.

The counter does not move

This occurs when there are no recordings on a portion of a tape. This is not a fault in your TV-Video Combi.

The screen shows '-0:01:20'

If you rewind a cassette from the tape position '0:00:00', the counter will show for instance, '-0:01:20' (the cassette was rewound to 1 minute and 20 seconds before '0:00:00').

'-:--' is displayed in the 'REM' counter

This counter will automatically recognise the length of the tape. In addition, when you put in a cassette, the TV-Video Combi will first calculate the time played back. Therefore, '-:--' appears first and only after the tape has been running for a few seconds, the correct remaining time will be shown.

Searching for a tape position with picture (scanning)

1. During playback, press **[REW <<-<]** (reverse) or **[FWD >>->]** (forward).
2. If you want to search in super high speed, press **[REW <<-<]** or **[FWD >>->]** once more. (This function will not operate for a cassette recorded in SP mode in the NTSC standard.)
3. Press **[PLAY >>->]** to resume playback.

Still picture

1. During playback, press **[STILL >>|]** to stop the tape and display a still picture.
2. Press **[PLAY >>->]** to resume playback.

Scanning and Still picture interfere with the picture quality. The sound is switched off. This is not a fault in your TV-Video Combi.

Searching for tape position without picture (forward wind and rewind)

1. Stop the tape with **[STOP ■-v]**.
2. Press **[REW <<-<]** (reverse) or **[FWD >>->]** (forward).
3. To stop the tape, press **[STOP ■-v]**.

Index search

Every time a tape is recorded, an index marking is written on the tape.

These marked positions can be found again quickly and easily later.

1. To search for the previous marking, press **[INDEX >|]** and then **[REW <<-<]**.
2. For the next marking, press **[INDEX >|]** and then **[FWD >>->]**.
3. As soon as the TV-Video Combi finds this marking, it automatically switches to playback.

Manual tracking

To manually adjust the tracking during playback, press **[PROG P+]** **[PROG P-]** or **[P+]** **[P-]**.

Tracking will return to Automatic Tracking Adjustment when you press **[STOP ■-v]** and **[PLAY >>->]**, or insert a tape.

To remove vertical jitter in a Still picture, press **[P+]** **[P-]**.

6. Manual recording

General information

Use **'Manual recording'** to make a spontaneous recording (for example, a programme currently being shown).

If you want to start and stop a recording manually, read the section **'Recording without automatic switch-off'**.

If you want to start a recording manually but have it stopped automatically, read the section **'Recording with automatic switch-off'**. (e.g. not to record to the end of the tape)

Read the section **'Automatic controlled recording from a satellite receiver (RECORD LINK)'**, if you want a recording to be controlled automatically by a satellite receiver.

Recording without automatic switch-off

1. Insert a cassette.
2. Use **[P+]** **[P-]** or **[0.9]** to select the programme number you want to record, for example, 'P01'.
3. To start recording, press **[REC ●]**.
4. To stop recording, press **[STOP ■-▼]**.

The message 'PROTECTED CASSETTE CANNOT RECORD' appears briefly on the screen, then the cassette is ejected.

A cassette without its security tab had been inserted. Cover the hole with adhesive tape or insert a new cassette.

Recording with automatic switch-off (OTR One-Touch-Recording)


1. Insert a cassette.
2. Use **[P+]** **[P-]** or **[0.9]** to select the programme number you want to record.
3. Press **[REC ●]**.
4. Each time you press **[REC ●]** you will add 30 minutes to the recording time.
5. To stop recording, press **[STOP ■-▼]**.

Preventing accidental erasing

All cassettes (except rental and pre-recorded cassettes) have a security tab on the back of the cassette.

To prevent recording over important recordings (erasing), you can remove this security tab.

If you later decide to record on a protected cassette, simply cover the hole with adhesive tape or slide the tab to the right.

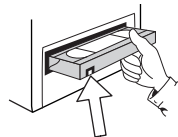

Lining up recordings (assemble cut)


When you add a further recording to a cassette, which already has a recording on it, a short blank (flicker) can appear between the old and the new recording or the picture itself can flicker. To help reduce these from occurring, proceed as follows:

1. Find the tape position of the old recording where you want to insert the new recording.
2. Look at the last minute of the old recording (playback).
3. Press **[STILL ▶◀]** at the tape position where the new recording is to go and press **[REC ●]**.
4. Now start recording as usual by pressing **[REC ●]** on the remote control.
5. Stop recording with **[STOP ■-▼]**.

Selecting the recording speed (SP or LP)

LP allows to double the recording duration on tape (for example six hours instead of three hours on an E180 cassette).

1. Press **MENU**. The main menu will appear.
2. Select 'RECORD SETUP' using **PLAY ▶▶▶** or **STOP ■▼** and confirm with **FWD ▶▶▶▶▶**.
3. Select 'RECORD SPEED' using **PLAY ▶▶▶** or **STOP ■▼**.

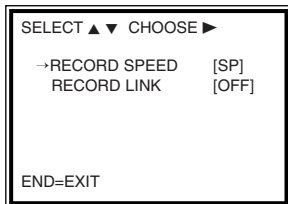

4. Select the required recording speed with **FWD ▶▶▶▶▶**.

'SP'/'LP'/'AUTO'


'SP': Standard Play (normal recording speed) offers the usual first-class picture quality.
'LP': Long Play (half recording speed, double recording time). 6 hours can be recorded on a 3-hour cassette (E180) with a somewhat reduced picture quality.
'AUTO': Automatic Long Play. If there is not enough space on the tape to record a programmed recording in standard speed, the recording is automatically done in 'LP' (Long Play). Otherwise, the recording speed will be 'SP' (Standard Play).

5. To end, press **STATUS/EXIT**.

Automatic controlled recording from a satellite receiver (RECORD LINK)

This function automatically starts recording on the switched-off TV-Video Combi when a video signal is recognised through the connected scart cable. If your satellite receiver has a programming function, the recording will start automatically (as long as the satellite receiver is switched on).

1. Press **MENU**. The main menu will appear.
2. Select 'RECORD SET UP' with **PLAY ▶▶▶** or **STOP ■▼** and confirm with **FWD ▶▶▶▶▶**.
3. Select 'RECORD LINK' with **PLAY ▶▶▶** or **STOP ■▼**.

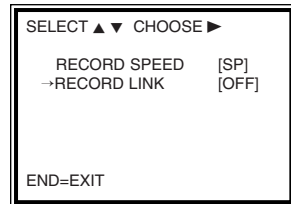

4. Select function 'ON' with **FWD ▶▶▶▶▶**.

Switching off 'RECORD LINK'

To switch off the function, select 'OFF' with **FWD ▶▶▶▶▶**.

5. To end, press **STATUS/EXIT**.
6. Insert a cassette.
7. Programme the satellite receiver with the required information (programme number of the TV channel, start time, end time). If necessary, please see the operating instructions for your satellite receiver.
8. Switch off the TV-Video Combi with **STANDBY/ON**.

The TV-Video Combi is now ready to record. The beginning and end of the recording is controlled via EXT1/ AV1 socket.

7. Programming a recording (TIMER)

General information

Use a TIMER programming to automatically start and stop a recording at a later time or date. The TV-Video Combi will switch to the right programme number and begin recording at the correct time. With this TV-Video Combi, you can pre-programme up to eight recordings within a period of one year. To make a programmed recording, your TV-Video Combi needs to know:

- * the date you want to make the recording
- * the programme number of the TV channel
- * the start and stop time of the recording
- * PDC on or off

This information is saved in a 'TIMER' block.

What is 'PDC'?

'PDC' (Programme Delivery Control) is used to control the start and duration of TV channel recordings. If a TV programme starts earlier or ends later than scheduled, the TV-Video Combi will turn on and off at the correct time.

What do I need to know about 'PDC'?

Usually the PDC time is the same as the start time. But if your TV guide shows a PDC time which is different from the programme's scheduled start time, e.g. 20.10 (PDC 20.14), you must enter the PDC time exactly to the minute. If you want a start time different from the PDC time, you must switch PDC off.

Programming a recording (with the VIDEO Plus+® system)

VIDEO Plus+®

Thanks to this programming system, you no longer need to tediously enter the date, programme number, start and end time. All the information needed for programming is contained in the PlusCode number.

You can find this PlusCode number in most TV listing magazines written next to the concerned programme.


1. Press **[SVV+]** on the remote control.

Error message: 'FULL'

- If this error message appears after pressing **[SVV+]**, then all TIMER blocks are already programmed. No more recordings can be programmed. If you want to clear a programmed recording (TIMER block), select the programme number on TIMER LIST menu and press **[CLEAR]**.


2. Enter the entire PlusCode number. This number is up to 9 digits long and can be found next to the start time of the TV programme in your TV listing magazine. [e.g: 1-234-5 or 1 234 5]

If you make a mistake, you can clear your input with **[CLEAR]**.

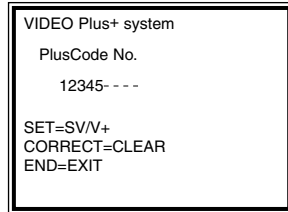

3. Press **[SVV+]**.

4. Select 'ONCE', 'DAILY' or 'WEEKLY' recording with **[PLAY ▶▶]** or **[STOP ■▼]**. Then press **[FWD ▶▶▶▶]**.

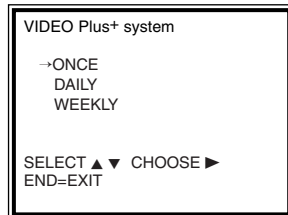

Selecting ONCE/DAILY/WEEKLY recordings

- 'ONCE': Recording once
- 'DAILY': Repeated daily recordings (Monday to Friday)
- 'WEEKLY': Repeated weekly recordings (every week on the same day)

5. The decoded data appears after confirmation. You can go back to change the data. Select the corresponding input field using **[FWD ▶▶▶▶]** or **[CLEAR]**. Change the data with **[0..9]**.

'- ' appears at PROG. .

- The programme number of the TV channel has not yet been assigned to the PlusCode number. Using the number buttons [0..9] on the remote control, select the corresponding programme number (name) of the TV channel.

The following message appears on the screen: 'ERROR'

- The entered PlusCode number is incorrect. Correct your input or end with [STATUS/EXIT].
- Check the time/date (see chapter 'Installing your TV-Video Combi', section 'Setting the clock').
- A daily recording was entered for the wrong day. Daily programming can only be used for recordings to be made from Monday to Friday.

Switching on 'PDC'

- Select 'PDC' using [FWD ►►►►] or [CLEAR]. Press '1' to switch off 'PDC' or press '2' to switch on 'PDC'.

6. When all inputs are correct, press [STATUS/EXIT]. The programming information is stored in a TIMER block.

The following message appears on the screen: 'TIMER NOT COMPLETED'

- The channel is wrong.


7. Insert a cassette with an intact security tab (unprotected).

8. Switch off with [STANDBY/ON ◊].

The programmed recording will only function when the TV-Video Combi is switched off with [STANDBY/ON ◊].

Programming a recording (without the VIDEO Plus+ system)

1. Press [MENU]. The main menu will appear.
2. Select 'TIMER' with [PLAY ►►] or [STOP ■►▼]. Then press [FWD ►►►►].
3. Select 'ONCE', 'DAILY' or 'WEEKLY' recording with [PLAY ►►►] or [STOP ■►▼]. Then press [FWD ►►►►].

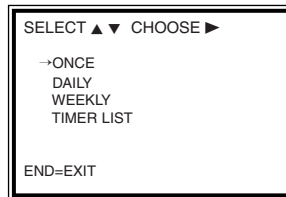

Selecting ONCE/DAILY/WEEKLY recordings

- 'ONCE': Recording once
- 'DAILY': Repeated daily recordings (Monday to Friday)
- 'WEEKLY': Repeated weekly recordings (every week on the same day)

Error message: 'FULL'

- If this error message appears after you select 'ONCE', 'DAILY' or 'WEEKLY' on TIMER menu and press [FWD ►►►►], then all TIMER blocks are already programmed. No more recordings can be programmed. If you want to clear or check a programmed recording (TIMER block), select the programme number on TIMER LIST menu and press [CLEAR].

4. Select the desired TIMER block with [0..9].
5. Enter the Start time (START), End time (STOP), Programme number (PROG.), PDC information and the Date (DATE) with [0..9].

Programming a recording from the external sources

You can also programme recording from an external source via the Scart socket AV1 or the front A/V connectors AV2.

6. When all inputs are correct, press [STATUS/EXIT]. The programming information is stored in a TIMER block.
7. Insert a cassette with an intact security tab (unprotected).
8. Switch off with [STANDBY/ON ◊]. The programmed recording will only function when the TV-Video Combi is switched off with [STANDBY/ON ◊].

Problems and solutions for programmed recordings

Cassette was ejected as soon as the **[STANDBY/ON ○]** button was pressed

- A cassette without the security tab was inserted. Undo the erase protection (chapter 'Manual recording', section 'Preventing accidental erasing') or insert a different cassette.

Cassette is ejected during recording

- The end of the tape was reached during recording.

Error message:


- If you forgot to insert a cassette, 'INSERT CASSETTE FOR TIMER RECORDING' will appear.

The TV-Video Combi does not react

- While a programmed recording is being made, you cannot operate your TV-Video Combi manually. If you want to cancel the programmed recording, press **[STOP/EJECT]** on the front panel.

How to check or delete a programmed recording (TIMER)

1. Press **[MENU]**. The main menu will appear.
2. Select 'TIMER' with **[PLAY ▶▶▶]** or **[STOP ■▼]**. Then press **[FWD ▶▶▶▶]**.
3. Select 'TIMER LIST' with **[PLAY ▶▶▶]** or **[STOP ■▼]**, and confirm with **[FWD ▶▶▶▶]**.

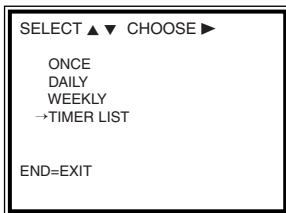

4. Select TIMER block with **[FWD ▶▶▶▶]**.


TIMER block disappeared when I pressed **[FWD ▶▶▶▶]**.

You have checked all the programmed recordings. If you want to check them again, repeat steps 1 to 4.

5. To cancel the recording, press **[CLEAR]**.
6. To end, press **[STATUS/EXIT]**.
7. Switch off with **[STANDBY/ON ○]**.

How to change a programmed recording (TIMER)

1. Press **[MENU]**. The main menu will appear.
2. Select 'TIMER' with **[PLAY ▶▶▶]** or **[STOP ■▼]**. Then press **[FWD ▶▶▶▶]**.
3. Select 'ONCE', 'DAILY' or 'WEEKLY' recording with **[PLAY ▶▶▶]** or **[STOP ■▼]**. Then press **[FWD ▶▶▶▶]**.
4. Select a TIMER block with **[0..9]**. (The flashing number indicates an empty TIMER block.)

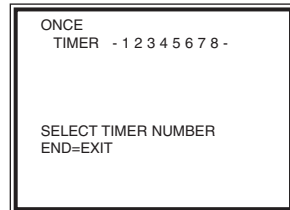


5. Press **[CLEAR]** to delete information and input correct information with **[0..9]**.
6. To end, press **[STATUS/EXIT]**.
7. Switch off with **[STANDBY/ON ○]**.

7. Other functions

Switching the status display off or on

Along with the on screen menu, the status display also displays information on the current operating status (counter, playback, recording, TV channel, etc.) on the TV screen. You can switch off the information about the operating status so that the status display is not recorded when copying videocassettes.

1. Press **[MENU]**. The main menu will appear.
2. Select 'VCR SET UP' with **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶▶]**.
3. Select 'STATUS DISPLAY' with **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]**.

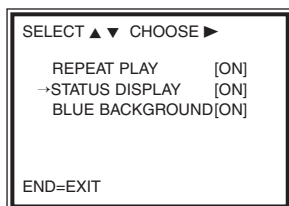

Which settings can I choose?


'ON': Shows the status display for a few seconds.
'OFF': Switches off the status display.

4. Select 'ON' or 'OFF' with **[FWD ▶▶▶▶▶]**.
5. To end, press **[STATUS/EXIT]**.

Continuous playback

This function can be used to play a cassette over and over again. When the end of the cassette is reached, it will rewind and start from the beginning again. This function is activated or deactivated as follows.

1. Press **[MENU]**. The main menu will appear.
2. Select 'VCR SET UP' using **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶▶]**.
3. Select 'REPEAT PLAY' with **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]**.

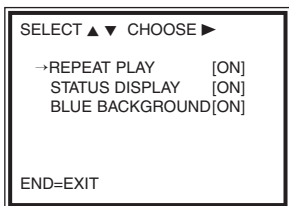

4. Select 'ON' with **[FWD ▶▶▶▶▶]**.

If you select 'OFF', continuous playback will be switched off.

5. To end, press **[STATUS/EXIT]**.


6. Insert a cassette.

7. Start the continuous playback with **[PLAY ▶▶▶▶▶]**. Your TV-Video Combi will automatically rewind and start playing the tape from the beginning when it recognises a non-recorded part longer 10 seconds.

Blue Background on or off

If you want the TV screen to be solid blue when a weak signal is received, set BLUE BACKGROUND to 'ON'. The screen will be blue and the sound will be muted. Or, if you want to receive the weak signal, set BLUE BACKGROUND to 'OFF'.

1. Press **[MENU]**. The main menu will appear.
2. Select 'VCR SET UP' using **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]** and confirm with **[FWD ▶▶▶▶▶]**.
3. Select 'BLUE BACKGROUND' with **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]**.

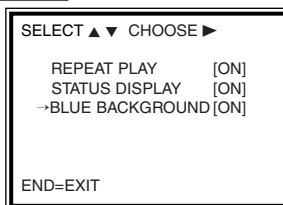

4. Select 'OFF' (no blue background) or 'ON' (blue background on) with **[FWD ▶▶▶▶▶]**.
5. To end, press **[STATUS/EXIT]**.

Parental control (Child lock)

This function protects your TV-Video Combi from unwanted use. All button functions on the front of the machine are blocked.

Programmed recordings will be started (in spite of the parental control) and cannot be interrupted.

1. Press **[MENU]**. The main menu will appear.
2. Use **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]** to select 'GENERAL SET UP'. Then press **[FWD ▶▶▶▶▶]**.
3. Use **[PLAY ▶▶▶▶▶]** or **[STOP ■▼]** to select 'CHILD LOCK'.
4. Use **[FWD ▶▶▶▶▶]** to select 'ON'.

If a button at the front of the machine is pressed while parental control is active, 'CHILD LOCK ACTIVE' will appear on the screen for a few seconds.

8. Before you call an engineer

If, contrary to expectation, you have any problems using this TV-Video Combi, it may be caused by the following reasons.

Your TV-Video Combi does not respond to any button being pressed:

- There is no power supply: check the power supply.
- Parental control is on: switch the parental control off.
- A programmed recording is currently being made: if desired, cancel the programmed recording. Please see the section 'Problems and solutions for programmed recordings' in chapter 'Programming a recording (TIMER)'.
- There is a technical problem: disconnect from the mains power supply for 5 minutes, then power-up again.

If this doesn't help, you could reset your TV-Video Combi to the default factory settings.

Resetting devices to default factory settings

* **Attention:** all the information stored (time and date, TIMER) will be cleared.

1. Switch the TV-Video Combi to stand-by.
2. Press and hold [REC] and [PROG P+] at the same time for 2 seconds or more.

Cassette is jammed in the TV-Video Combi:

- Don't use force. Pull out the mains plug for the moment. Then, call an engineer.

Remote control does not work:

- Remote control not pointed toward the TV-Video Combi: point it at the TV-Video Combi.
- There is a technical problem: take out the batteries, wait for 10 seconds and place them back.
- Batteries have run out: change the batteries.

No picture when you play back a cassette:

- There is no recording on the cassette: change the cassette.

Poor picture quality when you play back a cassette:

- Your TV is not properly adjusted.
- The cassette is badly worn or of poor quality: use new cassette.
- Tracking is not properly adjusted: turn to section 'Manual tracking'.
- Magnetism from nearby appliances and geomagnetism might affect the colour of the TV picture. Move the TV-Video Combi away from such sources. The TV-Video Combi will re-adjust itself automatically. If you want to initiate an immediate readjustment, unplug the TV-Video Combi from the mains and plug it in again approximately 30 minutes later.

No recording possible:

- The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- A cassette was inserted that does not have the security tab (cannot be used to record): cover the hole with adhesive tape or use a cassette with an intact security tab. For more information, please see the section 'Preventing accidental erasing' in chapter 'Manual recording'.
- 'PDC' switched on but 'PDC time' wrong: enter 'PDC time' exactly to the minute. Have your aerial checked.

The wrong TV channel has been selected after you have programmed a recording using the VIDEO Plus+® system:

1. Enter the PlusCode number.
2. Confirm with [FWD] >>> >>> .
3. Check the programme number/channel name in the 'PROG.' input field.
4. If this does not correspond to the desired TV channel, select the input field and change the programme number/channel name.
5. Confirm with [STATUS/EXIT] .

Smart Clock does not work

- You have stored on programme number 'P01' a TV channel that does not transmit Fasttext. Store on 'P01' a TV channel that transmits Fasttext.
- Poor Fasttext reception. Store a TV channel on 'P01' with good Fasttext reception.
- You have not activated the Smart Clock function. Switch the function 'ON'.

You can also call the **customer service centre** in your country.

The telephone numbers can be found on the back of this operating manual. Have the model number (MODEL NO.) and the production number (PROD. NO.) of your TV-Video Combi ready.

PHILIPS NORGE AS

Sandstuveien 70,
PO Box 1, Manglerud
N-0612 Oslo

NORWAY

Phone: 2274 8250

PHILIPS AUSTRIA GMBH

Triesterstrasse 64
1101 Wien

AUSTRIA

Tel: 0810 001 203

PHILIPS PORTUGUESA, S.A.

Consumer Information Centre
Rua Dr. António Loureiro Borge, nr. 5
Arquiparque, Miraflores
P-2795 L-A-VEHLA

PORTUGAL

Phone: 021-4163063

OY PHILIPS AB

Linnoitustie 11,
02600 Espoo

FINLAND

puh. 09 615 80 250

PHILIPS INFO CENTER

Alexanderstrasse 1
20099 Hamburg

GERMANY

Tel: 0180-53 56 767

PHILIPS CE, The Philips Centre,

420 - 430 London Road,
Croydon, Surrey
CR9 3 QR

UNITED KINGDOM

Phone: 0208-665-6350

PHILIPS KUNDTJÄNST

Kista Entré
Knarrarnäsgatan 7
164 85 Stockholm

SWEDEN

Tel: (0)8 598 52 250

SERVICE CONSOMMATEURS PHILIPS

BP 0101
75622 Paris Cédex 13

FRANCE

Phone: 0825-889 789

PHILIPS KUNDECENTER

Frederikskaj 6,
1780 København V

DANMARK

Tlf.: 80 88 28 14

PHILIPS POLSKA

Al. Jerozolimskie 195B
02-222 Warszawa

POLSKA

TEL.: (022)-571-0-571

PHILIPS ELECTRONICS IRELAND LIMITED

Consumer Information Centre
Newstead, Clonskeagh

DUBLIN 14

Phone: 01-7640292

PHILIPS REPRESENTATION OFFICE

Ul. Usacheva 35a
119048 MOSCOW

RUSSIA

Phone: 095-937 9300

INFOLINKA PHILIPS

Safránkova 1
150 00 Praha 5

CZECH REPUBLIC

TEL.: (02)-330 99 330

PHILIPS CONSUMER ELECTRONICS

Servizio Consumatori
Via Casati 23
20052 Monza - Milano

ITALY

Phone: 199 118899

PHILIPS INFO CENTER

Fegistrasse 5
8957 Spreitenbach

SUISSE

Tel.: 0844-800 544

PHILIPS Iberia, S.A.

C/Martinez Villergas, 49
28027 MADRID

SPAIN

Phone: 902-11 33 84

PHILIPS MAGYARORSZÁG KFT.

Fehérvári út 84/a.
Budapest 1119

HUNGARY

Phone: (01)-382-1700

PHILIPS CUSTOMER CARE CENTER

Twee Stationsstraat 80/
80 Rue des Deux Gares
1070 BRUSSEL/BRUXELLES

BELGIUM (for BENELUX)

Tel: 070-222303

ΦΙΛΙΠΣ ΕΛΛΑΣ ΑΕΒΕ
25ΗΣ ΜΑΡΤΙΟΥ 15
177 78 ΤΑΥΡΟΣ
ΑΘΗΝΑ
Τηλ. 00800 3122 1280

PHILIPS CONSUMENTENLIJN
Postbus 102 5600 AC Eindhoven
NEDERLAND
Tel.: 0900-8406



www.philips.com

3143 025 21851

0EMN02461/T64505Z/PA1**** Downloaded from Www.Somanuals.com. All Manuals Search And Download.

EN

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>