

Register your product and get support at
www.philips.com/welcome


AE3300




EN User manual

PHILIPS

 
1

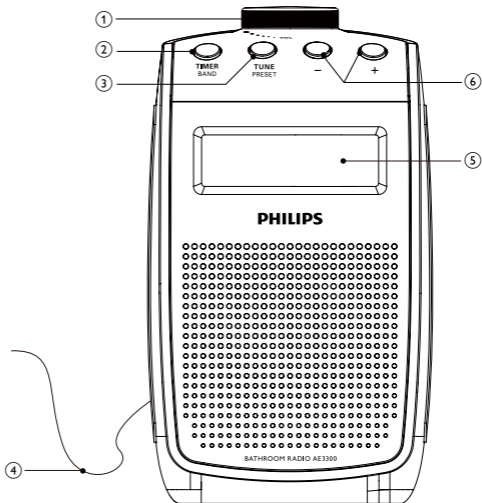

2

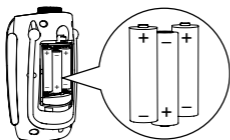 

3

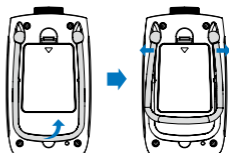 

1 Important

Safety

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Clean only with dry cloth.
- ⑥ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑦ Only use attachments/accessories specified by the manufacturer.
- ⑧ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- ⑨ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑩ Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

2 Your Bathroom Radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can:

- know the time
- listen to FM/MW radio stations

What's in the box

Check and identify the contents of your package:

- Main unit
- User manual

Overview of the main unit 1

① **⏻/VOL**

- Turn on/off radio.
- Adjust volume.
- Scan and store radio stations automatically.
- Tune to the previous/next radio station.
- Select the previous/next preset radio station.
- Adjust hour/minute digits.

② **TIMER/BAND**

- Set time.
- Activate or deactivate timer.
- Select FM or MW band.

③ **TUNE/PRESET**

- Tune to a radio station.
- Program preset radio stations.

④ **Antenna**

- Improve radio reception.

⑤ **Display panel**

- Show the time/radio information.

⑥ +/-

- Select the previous/next preset radio station.
- Adjust hour/minute digits.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Install battery 2



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of product damage! When the apparatus is not used for long periods, remove the battery.
- Batteries contain chemical substances, so they should be disposed of properly.

- 1 Open the battery compartment.
 - 2 Insert 3 AA batteries (not supplied) with correct polarity (+/-) as indicated.
 - 3 Close the battery compartment.
-

Placement 3


You can place the unit on a flat surface or hang it in your bathroom through the strap.



 
Tip

- The strap is detachable.
-

Set time


- 1 Press  to turn off the radio.
 - 2 Press and hold **TIMER/BAND**.
↳ The hour digits begin to blink.
 - 3 Press +/- to set the hour.
 - 4 Press **TIMER/BAND** to confirm.
↳ The minute digits begin to blink.
 - 5 Press +/- to set the minute.
 - 6 Press **TIMER/BAND** to confirm.
-

Turn on



- 1 Press  to turn on the radio.

4 Listen to radio

Select FM/MW band

- 1 Press  to turn on the radio.
 - 2 Press and hold **TIMER/BAND** to switch between FM/MW band.
-

Tune to a radio station



- 1 Press  to turn on the radio.
 - 2 Press **TUNE/PRESET** to start tuning.
↳ **[FM]** or **[MW]** begins to blink.
 - 3 Rotate  clockwise or counter-clockwise to tune to a radio station.
 - 4 Press **TUNE/PRESET** again to confirm.
-

Program radio stations automatically



Note

- You can program a maximum of 20 preset FM radio stations and 20 preset MW radio stations.

- 1 Press  to turn on the radio.
- 2 Press and hold  for 2 seconds.
↳ All available stations are programmed in the order of waveband reception strength.
↳ The first programmed radio station broadcasts automatically.

Program radio stations manually



Note

- You can program a maximum of 20 preset FM radio stations and 20 MW radio stations.

- 1 Press to turn on the radio.
- 2 Tune to a radio station.
- 3 Press and hold **TUNE/PRESET**.
↳ The number begins to blink.
- 4 Rotate clockwise or counter-clockwise to select a preset number.
- 5 Press **TUNE/PRESET** to confirm.
- 6 Repeat steps 2 - 5 to program more stations.



Tip

- To overwrite a programmed station, program another station in its place.

Select a preset radio station

 

- 1 Press to turn on the radio.
- 2 Press +/- to select a preset radio station.

Set the sleep timer

You can set the clock radio to turn off automatically after a certain period of time.

- 1 Press **TIMER/BAND** repeatedly to select time (in minutes).
↳ The apparatus turns off automatically after the set period of time.

To turn off the sleep timer:

- 1 Press **TIMER/BAND** repeatedly until **[OFF]** (off) appears or press .
↳  is displayed when sleep timer is on and disappears when it is off.

5 Product information



Note

- Product information is subject to change without prior notice.

Tuner

Tuning range	FM: 87.5 - 108 MHz MW: 531 - 1602 kHz
Tuning grid	50 KHz (FM); 9 KHz (MW)
Number of presets	FM: 20 MW: 20

General

Power supply	3 x AA battery
Maximum power output	300 mW
Operation Power Consumption	100 mW
Dimensions	
- Main Unit (H x W x D)	155 x 89 x 62 mm

Weight

- With Packing

0.41 kg

- Main Unit

0.25 kg

6 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the battery is installed properly.
- Replace the exhausted battery.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

No sound

- Adjust the volume.

Clock/timer setting erased

- Replace the exhausted battery.
- Reset the clock/timer.

No response from the unit

- Take out the batteries and turn on the unit again.

Meet Philips at the Internet
<http://www.philips.com/welcome>



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

AE3300_00_UM_V1.1



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>