


Register your product and get support at
www.philips.com/welcome

AJL303/12




EN User manual

1

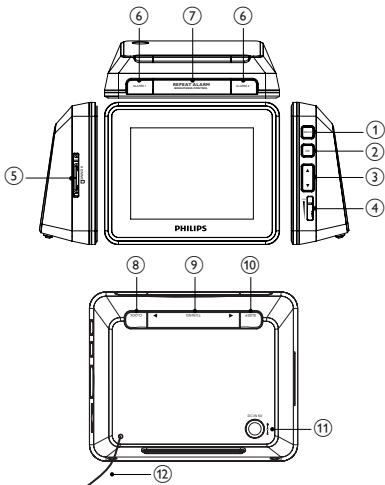

2

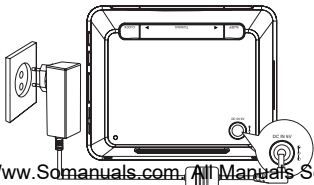

1 Important

Important safety instructions


- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.

- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑰ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.

This user manual has been printed on non-polluting paper.

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company.

This electronic equipment contains a large number of materials that can be recycled. If you are disposing of an old machine, please take it to a recycling center.

Please observe the local regulations regarding disposal of packaging materials, exhausted batteries and old equipment.

Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Electronics may void the user's authority to operate the equipment.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this clock radio, you can enjoy FM radio as well as the audio and picture files stored in a memory card.

You can set two separate alarm timings. For the alarm sound, you can select the audio files stored in the internal memory or a memory card.

What's in the box

Check and identify the contents of your package:

- Main unit
- AC power adaptor
- User manual
- Quick start guide

Overview of the main unit (see 1)

① MENU

- Access home menu.
- Access previous menu.

② OK

- Confirm an entry or a selection.
- For clock: play/pause slideshow.
- For radio: play/mute radio play.
- For music: play/pause the selected item.
- For photo slideshow: play/pause/zoom.

③ ▲, ▼

- Move cursor up/down.
- For clock/photo: rotate photo clockwise/anti-clockwise.
- For radio: change preset number.
- For music: select different play modes.

④ VOL

- Adjust the volume level.

⑤ SD/MMC

- SD/MMC card slot

⑥ ALARM 1/ALARM 2

- Set, activate or deactivate alarm.

⑦ REPEAT ALARM/BRIGHTNESS CONTROL

- Repeat the alarm.

- ⑧ **CLOCK**
 - Press to change clock position on the screen.
 - Press and hold to set clock.
- ⑨ **TUNING** ◀▶
 - Tune to radio stations.
 - For photo/music: select the previous/next item.
- ⑩ **SLEEP**
 - Set, activate or deactivate sleep timer.
- ⑪ **DC IN 5V**
 - Power supply socket.
- ⑫ **Antenna**

3 Get started



Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your clock radio. The model number and serial number are on the back of your clock radio. Write the numbers here:

Model No. _____

Serial No. _____

Connect power



Caution

- Risk of electric shock! When you disconnect the power supply, always pull the plug from the socket. Never pull the cord.
- Connect the supplied AC adaptor to the set and to the AC outlet. (see [2])

Select on-screen display language

- 1 Press **MENU**.
↳ The home menu appears.
- 2 Select [**Settings**], then press **OK**.
↳ The setting menu appears.
- 3 Select [**Language**], then press **OK**.
- 4 Select an option, then press **OK** to confirm.
- 5 Press **MENU** to exit the setting menu.

Set time and date

- 1 Press **MENU**.
- 2 Select [**Settings**] -> [**Clock**] -> [**Set time**], then press **OK**.
- 3 Press ▲▼ to set the hour, then press **OK** to confirm.
- 4 Press ▲▼ to set the minute, then press **OK** to confirm.
- 5 Select [**Set date**], then press **OK**.
- 6 Press ▲▼ to set the day, then press **OK** to confirm.
- 7 Press ▲▼ to set the month, then press **OK** to confirm.
- 8 Press ▲▼ to set the year, then press **OK** to confirm.
- 9 Press **MENU** to exit the setting menu.

4 Use your clock radio

Display clock

- 1 Press **MENU**.
 - 2 Select **[Clock]**, then press **OK**.
 - ↳ The current time and alarm status are displayed on a background of photos from the internal memory.
 - To stop the slideshow, press **OK**. Press again to resume slideshow.
 - To change the background photo, press **TUNING ◀▶**.
 - To change the clock position on the screen, press **CLOCK**.
-

Listen to FM radio

- 1 Press **MENU**, then select **[Radio]**.
- 2 Press **TUNING ◀▶** to tune to a radio station.

To search for a radio station automatically:

- 1 Press and hold **TUNING ◀▶**.
 - ↳ The radio tunes to a station with strong reception automatically.
- 2 Repeat step 1 if necessary until you find the desired station.
 - To tune to a weak station, press **TUNING ◀▶** until you have found optimal reception.



Tip

- Extend or adjust the antenna for optimum reception.
-

Turn off radio

To turn off the radio, press **OK**. Press again to turn on the radio.

Download from www.Somanuals.com. All Manuals Search And Download

Program radio stations

You can store up to 20 FM radio stations in the memory manually or automatically.

Manual programming

- 1 Tune to a station.
 - 2 Press and hold **OK** for about 2 seconds.
 - ↳ The preset number flashes.
 - 3 Press **▲▼** to allocate a number from 1-20 to this station.
 - 4 Press **OK** to confirm.
 - 5 Repeat steps 1-4 to store other stations.
-

Automatic programming

Automatic programming starts from preset 1. Any previous presets are erased.

- 1 Press **MENU**.
 - 2 Select **[Settings]** -> **[Auto tune]**, then press **OK**.
 - ↳ All available stations are programmed.
 - ↳ After all stations are stored, the first preset station automatically plays.
-

View photos

- 1 Insert an SD/MMC card into the **SD/MMC** card slot.
 - ↳ The home menu appears.
- 2 Select **[Photo]** from the home menu.
 - ↳ Thumbnail previews of the photos stored in the card are displayed.
- 3 Press **OK**.
 - ↳ A slideshow of the stored photos starts from the photo

Download from www.Somanuals.com. All Manuals Search And Download
• To pause, press **OK**. Press again to resume play.

- To select the previous/next photo, press **TUNING** ◀▶.
- To rotate clockwise, press ▼.
- To rotate counter-clockwise, press ▲.
- To display clock while viewing photos, press **CLOCK**.

Listen to SD/MMC card audio

- 1 Insert an SD/MMC card into the **SD/MMC** card slot.
 - ↳ The home menu appears.
- 2 Select **[Music]** from the home menu.
- 3 Select a folder/file, then press **OK**.
 - ↳ The file is played.
 - To pause, press **OK**. Press again to resume play.
 - To select the previous/next item, press **TUNING** ◀▶.
 - To select different play modes: Repeat one, Repeat all, and shuffle, press ▲▼.
 - To set the current music as sleep music, press and hold **SLEEP**.

Set the alarm timer



Note

- Before you start, ensure that the clock is set correctly.


You can set two separate alarm timings. For the alarm sound, you can select the audio files stored in the internal memory or a memory card.

- 1 Press **ALARM 1/ALARM 2**.
 - ↳ The Alarm 1/ALarm 2 icon and the clock digits are displayed
- 2 Press ▲▼ to set the hour, then press **OK** to confirm.
- 3 Press ▲▼ to set the minute, then press **OK** to confirm.
 - ↳ At the set time, the alarm sounds and the volume increase

Stop the alarm

- When the alarm sounds, press any button except **REPEAT ALARM/BRIGHTNESS CONTROL**.
-

Repeat the alarm

- When the alarm sounds, press **REPEAT ALARM/BRIGHTNESS CONTROL**.
 - ↳  flashes.
 - ↳ The alarm repeats once every 9 minutes.
-

Switch off the alarm

- To switch off the alarm, press **ALARM 1/ALARM 2** repeatedly until  changes to .



Tip

- When the alarm sounds, if no button is pressed, the alarm continues for 30 minutes.

Set sleep timer

The clock radio can switch to standby automatically after a set period of time (measured in minutes). You can select the audio that is activated during this period.

Activate radio

- 1 Tune to a radio station.
- 2 Press **SLEEP** repeatedly to select a time.
 - ↳ The radio turns off after the set period of time.

Activate SD/MMC card audio

- 1 Repeat steps 1-3 (see 'Listen to SD/MMC card audio').
 - 2 Press **SLEEP** repeatedly to select a time.
↳ The audio play stops after the set period of time.
-

Activate preset sleep music

- 1 In clock or photo mode, press **SLEEP** repeatedly to select a time.
 - 2 Press **▲▼** to select sleep music.
 - [Relaxation 1]
 - [Relaxation 2]
 - [Relaxation 3]↳ The music play stops after the set period of time.
-

Deactivate sleep timer

- Press **SLEEP** repeatedly until **[OFF]** is displayed.

5 Adjust settings

Change time format

- 1 Press **MENU**.
 - 2 Select **[Settings]** -> **[Clock]** -> **[Format]**.
 - 3 Press **OK** to toggle between **[12 hour]** and **[24 hour]**.
 - 4 Select **[Date format]**.
 - 5 Press **OK** to toggle between **[DD - MM - YYYY]** and **[YYYY - MM - DD]**.
-

Select clock style

- 1 Press **MENU**.
- 2 Select **[Clock style]**.

- 3 Press **OK**, then select an option.
 - **[Format]**: select digital or analog clock
 - **[Color]**: select clock color
- 4 Press **MENU** to exit the setting menu.



Tip

- If you select analog clock, the clock color remains white when it is in the middle of the screen.

Select alarm music and photo

- 1 Press **MENU**.
- 2 Select **[Settings]** -> **[Alarm 1]/[Alarm 2]**.
- 3 Press **OK**, then select an option.
 - **[Alarm music]**: select alarm music.
 - **[Alarm photo]**: select alarm photo.



Tip

- In photo or music mode, press and hold **ALARM 1/ALARM 2** to save the current photo/music as the alarm photo/music.

Activate auto dim timer

- 1 Press **MENU**.
- 2 Select **[Settings]** -> **[Auto dim timer]** -> **[Auto dim]**.
- 3 Press **OK** to select **[ON]**.
- 4 Select **[Start]**, then press **OK**.
- 5 Press **▲▼** to set the hour, then press **OK** to confirm.
- 6 Press **▲▼** to set the minute, then press **OK** to confirm.

↳ The time at which auto dim starts is set.

7 Select **[End]**.

8 Repeat steps 5-6 to set the end time.

↳ The time at which auto dim ends is set.

Select slideshow settings

1 Press **MENU**.

2 Select **[Settings]** -> **[Slideshow]**.

3 Press **OK**, then select an option.

- **[Slideshow sequence]**: display photos sequentially or randomly
 - **[Slideshow effect]**: select slideshow effects
 - **[Slideshow frequency]**: select slideshow intervals.
-

Play photo with music

1 Press **MENU**.

2 Select **[Settings]** -> **[Photo with music playback]**.

3 Press **OK** to select **[ON]**.

Restore original settings

1 Press **MENU**, then select **[Settings]** -> **[Restore default settings]**.

2 Press **OK**.

↳ A confirmation box is displayed.

6 Product information



Note

- Product information is subject to change without prior notice.

AC power	Input: 100 - 240 V, 50/60 Hz Output: 5 V, 800 mA
Power consumption	4 W
Standby power consumption	<0.45 W
Dimensions - Main unit (W x H x D)	100 x 82 x 33 mm
Weight - With packing - Main unit	385 g 137 g
Tuning range	87.5-108 MHz
Tuning grid	100 KHz

7 Troubleshooting



Caution

- Never remove the casing of this clock radio.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this clock radio, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.Philips.com/support). When you contact Philips, ensure that your clock radio is nearby and the model number and serial number are available (see 'Get started').

No power

- Ensure that the AC power adaptor is connected properly.
- Ensure that there is power at the AC outlet.

No sound

- Adjust the volume.

Poor radio reception

- Fully extend the antenna.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power adaptor has been disconnected.
- Reset the clock/timer.



© 2008 Koninklijke Philips Electronics N.V.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>